


#### Trademarks and Permissions



**HUAWEI, HUAWEI** and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

#### NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

# Contents

<b>1 Getting to Know Your Phone .....</b>	<b>1</b>
Your Phone .....	1
Keys and Functions .....	2
Screen Icons .....	4
<b>2 Getting Started .....</b>	<b>6</b>
Installing the SIM Card and the Battery.....	6
Removing the Battery and the SIM Card.....	6
Installing a microSD Card.....	7
Charging the Battery.....	7
Using the Trackpad .....	8
Accessing a Function Menu .....	8
Accessing Shortcut Icons .....	9
Organizing the Main Menu .....	9
Automatically Switching Between Profiles.....	10
Phone Lock.....	10
Mass storage .....	11
PIN and PUK .....	12
Locking the Keypad .....	13
Entertainment.....	13
<b>3 Call Functions.....</b>	<b>14</b>
Making a Call.....	14
Answering a Call.....	15

<b>4 Text Input .....</b>	<b>16</b>
Changing the Text Input Mode.....	16
Traditional Input Mode.....	17
Predictive Input Mode.....	17
Number Input Mode.....	17
Switching Between Input Methods.....	17
Entering a Symbol .....	18
<b>5 Messaging .....</b>	<b>19</b>
Writing and Sending a Text Message .....	19
Writing and Sending a Multimedia Message.....	19
<b>6 Phonebook .....</b>	<b>22</b>
Creating a Contact.....	22
Searching for a Contact .....	22
Setting the Preferred Storage Location.....	22
Copying Contacts .....	23

<b>7 Video Recorder</b> .....	<b>23</b>
<b>8 Video Player</b> .....	<b>24</b>
<b>9 Sound Recorder</b> .....	<b>25</b>
<b>10 Answer machine</b> .....	<b>26</b>
<b>11 FM Radio</b> .....	<b>27</b>
<b>12 Audio Player</b> .....	<b>28</b>
<b>13 Ebook Reader</b> .....	<b>29</b>
<b>14 Camera</b> .....	<b>30</b>
<b>15 Java Applications</b> .....	<b>31</b>
<b>16 WAP</b> .....	<b>33</b>
Network Settings.....	33
Connecting to a Network.....	34
<b>17 Bluetooth</b> .....	<b>34</b>
Using a Bluetooth Headset.....	35
Transferring Data .....	35
<b>18 STK</b> .....	<b>36</b>
<b>19 Chat Functions</b> .....	<b>36</b>
<b>20 Warnings and Precautions</b> .....	<b>37</b>

# 1 Getting to Know Your Phone



 



## Your Phone






 
 
 
 
 




The following figure shows the appearance of your phone and is provided only for your reference.





- |   |                 |    |  |
|---|-----------------|----|--|
| 1 | Earpiece        | 11 | Input switch key                             |
| 2 | Screen          | 12 | Enter key                                    |
| 3 | Left soft key   | 13 | Delete key                                   |
| 4 | Call/Answer key | 14 | Message key                                  |
| 5 | Menu key        | 15 | End/Power key                                |
| 6 | Keypad          | 16 | Right soft key                               |
| 7 | alt key         | 17 | Trackpad                                     |
| 8 | A/a key         | 18 | Headset jack                                 |
| 9 | Space key       | 19 | Charger jack/Universal serial bus (USB) port |



 






## Keys and Functions

Press...	To...
	<ul style="list-style-type: none"> <li>• Make a call in standby mode.</li> <li>• Answer an incoming call.</li> <li>• View call logs in standby mode.</li> </ul>
	<ul style="list-style-type: none"> <li>• Power on or power off the phone (by pressing and holding the key for about 3s).</li> <li>• End or reject a call.</li> <li>• Return to the standby mode.</li> </ul>
	<ul style="list-style-type: none"> <li>• Access the main menu in standby mode.</li> <li>• Select a highlighted item.</li> </ul>
	<ul style="list-style-type: none"> <li>• Access <b>Phonebook</b> in standby mode.</li> <li>• Return to the previous menu.</li> </ul>
	<ul style="list-style-type: none"> <li>• Access the main menu in standby mode.</li> <li>• Display shortcut icons on a submenu screen.</li> </ul>
	Access <b>Messaging</b> in standby mode.






Press...	To...
	<ul style="list-style-type: none"> <li>• Touch with Up () ,Down () , Left () , Right () directional to select the desired quick icon option in standby mode.</li> <li>• Press to access a menu or function in menu operation mode.</li> <li>• During a call, touch with Up () , Down () directional to adjust the volume.</li> <li>• On calculator mode, touch with Up () ,Down () , Left () , Right () to function as "+", "-", "×" or "÷", and press to function "=".</li> </ul>
	<ul style="list-style-type: none"> <li>• Enter numbers, letters, and symbols.</li> <li>• Call the voicemail in standby mode (by pressing and holding the <b>1</b> key for about 3s).</li> <li>• Select a submenu (by pressing the corresponding number key).</li> </ul>
	<ul style="list-style-type: none"> <li>• Access <b>Audio player</b> in standby mode (by pressing and holding the key for about 3s).</li> <li>• Enter a space in text editing mode.</li> </ul>
	<ul style="list-style-type: none"> <li>• Lock the keypad in standby mode (by pressing and holding the key for about 3s).</li> <li>• Switch between input methods in text editing mode.</li> </ul>

Press...	To...
	<ul style="list-style-type: none"> <li>• Activate or deactivate the <b>Meeting</b> profile in standby mode (by pressing and holding the key for about 3s).</li> <li>• Switch between the upper case and the lower case in text editing mode.</li> </ul>
	<ul style="list-style-type: none"> <li>• Access the <b>FM radio</b> in standby mode (by pressing and holding the key for about 3s).</li> <li>• Display the <b>Select symbol</b> list in text editing mode.</li> </ul>

## Screen Icons

Icon	Indicates...
	Signal strength.
	New text messages.
	New multimedia messages.
	Call forwarding enabled.
	Missed calls.
	Answering machine enabled.
	New voicemail messages.
	Enabled alarms.
	Keypad locked.

 


Icon	Indicates...
	Battery power level.
	<b>General</b> or <b>Indoor</b> activated.
	<b>Meeting</b> profile activated.
	<b>Outdoor</b> profile activated.
	Headset connected to the phone.

## 2 Getting Started


### Installing the SIM Card and the Battery

When installing a SIM card, ensure that the golden contact area on the SIM card is facing downward and that the beveled edge of the SIM card is properly aligned with that of the SIM card slot.

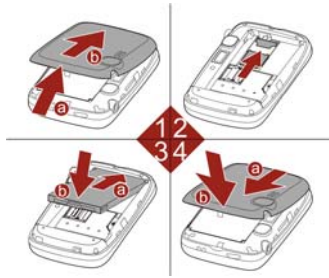


### Removing the Battery and the SIM Card

 Before removing the battery and the SIM cards, ensure that your phone is powered off.

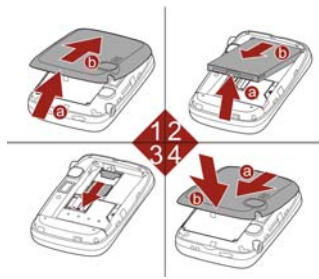

### Installing a microSD Card

 You can install a microSD card to expand the memory capacity of your phone. When installing a microSD card, ensure that the golden contact area on the microSD card is facing downward.

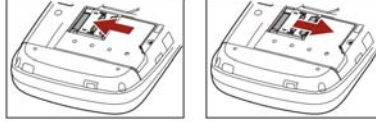

### Charging the Battery



1. Connect the smaller end of the USB cable to the charger jack of the phone and the larger end to the charger.
2. Connect the charger to a power socket.
3. Wait until the battery is fully charged.  
During the charging, the charging icon is displayed in

animation. When the charging icon becomes static, it indicates that the battery is fully charged.

4. Disconnect the charger from the power socket and then from the phone.

## Using the Trackpad

 






Your phone provides an optical trackpad that can be used as follows:


- Slide up, down, left, or right on  to highlight an item.
- Press  to select a highlighted item.




To adjust the trackpad sensitivity, in standby mode, select **Menu > Settings > Phone settings > Touch Pad Settings > Sensitive setting**.



## Accessing a Function Menu

1. In standby mode, press  (**Menu**).
2. Slide on  to highlight the desired function menu.
3. Press  (**Options**) and then select **Go to**, or directly press  to display the selected menu.
4. Slide up or down on  to select a submenu.
5. Press  (**OK**) or press  to display the submenu.

6. Press  (**Back**) to return to the previous menu or exit the function menu.




To return to the standby mode directly, press .



### Accessing Shortcut Icons


1. Slide left or right on  to select the desired shortcut icon in standby mode.
2. Press  to access the shortcut.

### Organizing the Main Menu

The main menu can be organized based on your personal preferences. For example, you can hide or move a function menu.

1. In standby mode, press  (**Menu**) to access the main menu.
2. Select a function menu, and then press  (**Options**) for the following options:
  - **Go to:** to access the selected menu.
  - **Hide:** to remove the selected menu from the main menu screen.  
To show the menu again, in standby mode, select **Menu > Settings > Phone settings > Mainmenu settings**, select the desired menu, and then press  (**Show**).
  - **Move:** to change the location of the selected menu on the main menu screen.

On the main menu, slide on  to highlight the desired menu, select **Options > Move**, slide on  to move the selected menu to the desired location, and then press



 (**OK**) to confirm.

- **Back:** to return to the main menu.

 You cannot hide **Settings** from the main menu screen.

### Automatically Switching Between Profiles

Your phone can be set to activate different profiles at a specified time. The phone can automatically switch between profiles for a maximum of three times each day according to the settings.


1. In standby mode, select **Menu > User Profile > ProfileSwitchTiming**.
2. Scroll to a clock.
3. Press  (**Edit**) to set the status and time, and assign a profile.
4. Press  (**Done**) to save the settings.

### Phone Lock

The phone lock protects your phone from unauthorized use. By default, the phone lock function is disabled. Once it is enabled, the phone code will be required each time the phone is powered on.

To enable the phone lock function, do the following:

1. In standby mode, select **Menu > Settings > Security settings > Phone lock**.

2. Enter the phone code, and then press  (**OK**).

You can change the default phone lock code (**1234**) to any string of four to eight digits.

To change the phone lock code, do the following:

1. In standby mode, select **Menu > Settings > Security settings > Change password > Phone password**.

2. Enter the old password.

3. Enter the new password twice.

Do remember your phone lock code. If you forget the code, contact the service provider.

## **Mass storage**

When the phone is connected to a PC through the USB cable, the option of **Mass storage** is displayed on the phone screen.

When you select **Mass storage**, you can manage the files stored on the phone and the microSD card.

The microSD card and the phone memory appear as removable disks on the PC. You can perform the following operations:

1. Double-click a disk to open it.

2. Copy, paste, or delete the files on the disk.

3. Disconnect the phone from the PC.




- Ensure that you connect and disconnect the USB cable properly.
- Do not format the phone memory on a PC; otherwise, the phone memory may get permanently damaged.
- The USB cable can be used to transfer data and charge your phone.

## PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) is used to unlock the blocked PIN. Both the PIN and the PUK are provided with the SIM card. For details, contact your service provider.

To enable the **SIM lock** function, do the following:

1. In standby mode, select **Menu > Settings > Security settings > SIM lock**.




2. Enter the PIN of SIM card, and then press  (**Ok**).


If you enter wrong PINs for a specified number of times consecutively, the phone asks you to enter the PUK.



If you enter wrong PUKs for a specified number of times consecutively, the SIM card becomes permanently invalid. In that case, contact your service provider for a new SIM card.



## Locking the Keypad

In standby mode, press and hold  for about 3s to lock the keypad. To unlock the keypad, press  (**Unlock**), and then  (**Ok**).

If the **Auto keypad lock** function is enabled, the keypad is locked automatically when the phone is idle for a preset period in standby mode. To enable the **Auto keypad lock** function, select **Menu > Settings > Security settings > Auto keypad lock**, select a preset duration, and then press  (**OK**) to confirm the selection.

 When the keypad is locked, you can press  to answer an incoming call or make an emergency call.












## Entertainment

- **Camera:** to take photos.
- **Image viewer:** to view the photos stored on the phone or the microSD card.
- **Audio player:** to play the audios stored on the phone or the microSD card.
- **Video player:** to play the videos stored on the phone or the microSD card.
- **Sound recorder:** to record audios.
- **Video recorder:** to record videos.
- **FM radio:** to listen to radio programs.

- **Ebook reader:** to read the ebooks stored on the phone or the microSD card.
- **Games:** to play games.
- **FaceBook** and **MSN:** to send and receive instant messages.






 
## 3 Call Functions



### Making a Call




1. In standby mode, enter a phone number.
  - To make an international call, press  to enter the plus sign (+), and then enter the country or region code, area code, and phone number in sequence.
  - To dial an extension number, enter the phone number, press  to enter **P** or press  then  to enter **W**, and then enter the extension number.
2. Press  to dial the number from the SIM card.
3. Press  to end the call.
  - You can also make calls from call history, contacts, and messages.
  - During a call, press  or  to adjust the volume, you can also touch with Up () , Down () directional to adjust the volume, or press  to turn on loudspeaker.

## Answering a Call

When there is an incoming call, you can do the following:

- Press  to answer the call.
- Press  (**Option**), and then select **Answer** to answer the call.
- Press  to reject the call.
- Press  (**Silent**) to silence the phone. Then press  (**Reject**) to reject the call, or press  (**Option**), and then select **Answer** to answer the call.


If the **Any key** answer function is enabled, you can press any key except  and  to answer an incoming call.

 If the **Any key** answer function is enabled, you can press any key except  and  to answer an incoming call.







You can set the **Any key** answer function in **General**, **Outdoor**, **Headset** or **Bluetooth**. For example, select **Menu > User Profile > General > Customize > Answer mode > Any key** to enable the **Any key** answer function for the **General** profile.

## 4 Text Input

### Changing the Text Input Mode

The icon of the current text input mode is displayed in the upper left corner of the screen. You can press  to switch between the following modes.

  Icon	Text Input Mode
<b>abc</b>	Traditional input mode
<b>eZi abc</b>	Predictive input mode
<b>123</b>	Number input mode





- Press  (**Clear**) or  once to delete the character to the left of the cursor. Press and hold  (**Clear**) for about 3s to clear all the characters at a time, or press and hold  to delete the characters one by one.
- In any text input mode, press  to enter a space.
- In any text input mode, press  to start a new paragraph.

### Traditional Input Mode

In traditional input mode, you can press the key labeled with the desired letter to enter the letter on the key.

### Predictive Input Mode

In predictive input mode, do the following to enter a word:



1. Press each key once in sequence to spell the desired word.  
As you enter, the phone attempts to predict the desired word and displays candidate words.
2. Slide on  to scroll to the desired word.  
Slide left or right on  to move the highlight; slide up or down on  to turn a page.
3. Press  to enter desired word.

### Number Input Mode

In number input mode, press the number key labeled with the desired digit.


### Switching Between Input Methods



To quickly switch between the input methods, do the following:


- Press  to switch between the traditional input mode, predictive input mode and number input mode.
- Press  to switch between upper case and lower case.




## Entering a Symbol

In any text input mode, to enter a symbol with the QWERTY keypad, do the following:




 
Using  to Enter a Symbol

- To enter only one symbol, press  once and then the key labeled with the desired symbol.
- To enter multiple symbols, press  twice and then the keys labeled with the desired symbols.


Using  to Enter a Symbol

1. Press  to display the symbol list.
2. Slide on  to scroll to the desired symbol.
3. Press  to enter the desired symbol.

### Writing and Sending a Text Message

1. Select **Menu** > **Messaging** > **Write message**.
2. Write the message.
3. Press  or press  (**Options**) and then select **Send to**.
4. Select **Enter recipient** to manually enter the recipients' phone numbers, or select **Add from Phonebook** to add the desired contacts from the phonebook.
5. Press  to send the message, or press  (**Options**) for the following options:
  - **Send**: to send the message to the recipient.
  - **Save**: to save the message to **Drafts** and exit the message editing screen.




 
### Writing and Sending a Multimedia Message

1. Select **Menu** > **Message** > **Write message**.
2. Write the message.
3. Press  (**Options**) for the following options:
  - **Switch to MMS**: to change from a text message to a multimedia message.


If you select **Add picture**, **Add sound**, **Add video**, or **Add subject**, the message automatically changes from a text message to a multimedia message.

- **Add picture**: to add a picture to the message.
- **Add sound**: to add an audio to the message.
- **Add video**: to add a video to the message.
- **Add subject**: to add a subject to the message.


You can also add slides to the message, preview the message, and set the playing interval between two slides.

4. After editing the message, press  or press  (**Options**) and then select **Send to**.
5. Select **Enter recipient** to manually enter the recipients' phone numbers, or select **Add from Phonebook** to add the desired contacts from the phonebook.
6. Press  to send the message; or press  (**Options**) for the following options:
  - **Send**: to send the message.
  - **Change to To**: to send the message to recipients.
  - **Change to Cc**: to copy the message to recipients.
  - **Change to Bcc**: to blind copy the message to recipients.
  - **Save to Drafts**: to save the message to **Drafts**.




- 
- You can contact your service provider for the availability of the Multimedia Messaging Service (MMS) and the method for subscribing to the service.
  - Your phone supports a multimedia message of a maximum size of 300 KB.
  - Exercise caution when opening multimedia messages. Objects in multimedia messages may contain viruses (such as malicious software) that can damage your phone.

### Creating a Contact



1. Select **Menu** > **Phone Book** > **Add new contact**.
2. Select **To SIM** or **To phone** for saving the contact.
3. Edit the contact.
4. Press  to save the contact.

### Searching for a Contact

1. Select **Menu** > **Phone Book**.
2. Enter several letters of the name until the desired contact appears, or slide up or down on  to scroll to the desired contact.

### Setting the Preferred Storage Location





To set the preferred storage location where the new contacts are stored, do the following:

1. Select **Menu** > **Phone Book**.
2. Press  (**Options**), and then select **Phonebook settings** > **Preferred storage**.
3. Select **SIM**, **phone** or **Both**.
4. Press  (**OK**) to confirm the selection.





## Copying Contacts

You can copy the contacts to the phone or SIM card.

### Copying One Contact







1. Select **Menu > Phone Book**.
2. Slide up or down on  to scroll to the desired contact.
3. Press  (**Options**), and then select **Copy**.
4. Select the storage location **To phone**, **To SIM**, or **To file** where the contact will be copied.
5. Press  (**OK**), and then press  (**Yes**) to confirm the operation.

### Copying Multiple Contacts

1. Select **Menu > Phone Book**.
2. Press  (**Options**), and then select **Phonebook settings > Copy contacts**.
3. Slide up or down on  to scroll to the desired option, such as **SIM to phone** or **Phone to SIM**.
4. Press  (**OK**), and then press  (**Yes**) to confirm the operation.  
All contacts will be copied to the desired storage.

## 7 Video Recorder


To record a video, do the following:


1. Select **Menu > Video recorder**.
2. Press  to start recording.  
During video recording, you can perform the following operations:
  - Press  to access relevant settings.
  - Press  to pause or continue.
  - Slide left or right on  to adjust brightness.
  - Slide up or down  to zoom in or out.
  - Press  to stop recording and save the video as prompted.

## 8 Video Player




 

The video player can play downloaded or recorded videos that are saved in **File Manager > Phone > Video** or **File Manager > Memory card > Video**.

To play a video, do the following:

1. Select **Menu > Video player**.
2. Slide up or down on  to scroll to a video.





Press  (**Options**), and then select **Play** to start playing the video.

When the video is being played, you can perform the following operations:

- Slide up or down on  to adjust the volume.
  - Slide left or right on  to rewind or fast-forward the video.
  - Press  to pause or continue.
3. Press  (**Stop**) to stop playing the video.
-  The video player supports the files in .mp4 and .3gp formats. Files in other formats may fail to be played.

## 9 Sound Recorder

The sound recorder provided by your phone can function as a digital recorder. To record an audio, do the following:

1. Select **Menu > Sound recorder**.
2. Press  (**Options**), and then select **New record** to record an audio.  
During the recording, press  (**Pause/Cont.**) or  to pause or continue.
3. Press  (**Stop**) to stop recording and save the recorded audio as prompted.


# 10 Answer machine

When the answer machine is enabled, a caller will be notified that you cannot answer the call at the moment and can leave a voicemail message. To enable the answer machine, do as follows:

1. Select **Menu > Answer machine > Settings**.
2. Set **Auto answer** to **On**.
3. Set **Record duration**.
4. Set **Greeting file** to **Default** or **From files** as required.
5. Set **Remote access** to listen to the voicemail messages using another phone.  
Set **Status** to **On**, input a number key, \* key or # key in **Hot key**, and then input a confirmation number from 1 to 4 digits string in **Password**.







After the **Remote access** setting, you can listen to voicemail messages on your phone using another phone.

Set up a call between the other phone and your phone, press the hot key that has been set on your phone after an alert tone is heard, and then input the password following the interactive voice response (IVR).

-  The phone displays a message on the standby screen if there is a new voicemail message. You can also manually access the voicemail messages by selecting **Menu > Answer machine > Leaving messages**.

 
# 11 FM Radio


The headset functions as an antenna. Before you listen to the FM radio, connect the headset to the phone. To ensure that you can listen to radio programs with good audio quality, do not plug out the headset or bind the headset cable.

1. Connect the headset to the phone.
2. In standby mode, select **Menu > FM radio**, or press and hold  for about 3s.  
During the playing of a radio program, you can perform the following operations:
  - Press  to turn on or off the radio.
  - Slide down on  to adjust the volume.
  - Slide left or right on  to adjust the frequency at a precision of 0.1 MHz.
  - Press the number key to switch to the corresponding channel based on the settings in **Channel list**.
  - Press the button on the headset cable to switch between channels.
  - Press  (**Options**), and then select **Record** to record a radio program.
  - Press  (**Options**) to view or edit the channel list, manually enter a frequency, automatically search for and save channels, and configure relevant settings.




 

## 12 Audio Player


You can use the audio player to listen to music on your phone. To enjoy the enhanced audio effect, it is recommended that you listen to music using the headset. The music files are loaded from **My music** on the phone or on the microSD card.


1. In standby mode, select **Menu > Audio player**, or press and hold  for about 3s to access the menu.

2. Press  to start playing music.

When the music is being played, you can perform the following operations:

- Press  or  to adjust the volume..
- Slide left or right on  to switch between songs.
- Press the button on the headset cable to switch between songs.
- Press  (**List**) to view the song list, and then press  (**Options**) to configure relevant settings.





3. Press  to pause or continue.

 The audio player supports the files in .mp3, .AMR and .aac formats. Files in other formats may fail to be played.










# 13 Ebook Reader

Your phone supports ebooks in .txt format.

1. Select **Menu > Ebook reader** to access the bookshelf.  
The phone automatically adds the ebooks stored in **Ebook** on the phone or on the microSD card to the bookshelf.
  2. Select an ebook.
  3. Press  (**Options**) for the following options:
    - **Open ebook:** to start reading the ebook.
    - **Global settings:** to set the font size, scroll type, encoding, alignment, and other relevant settings.
  4. Press  (**Back**) to stop reading the ebook.
-  • When reading an ebook, slide up and down on  to turn pages.
- It is recommended that you store ebooks in **Ebook** on the phone or on the microSD card. When you open an ebook stored in other folders other than **Ebook**, the phone automatically moves the ebook to **Ebook**, so that you can find it easily the next time you read.


## 14 Camera

The phone provides you a 1.3-megapixel complementary metal-oxide-semiconductor (CMOS) camera for photo shooting.

1. Select **Menu** > **Camera** to launch the camera.
2. On the screen for taking a photo, you can perform the following operations:
  - Press  to view photos or configure relevant settings.
  - Slide left or right on  to adjust brightness.
  - Slide up or down on  to zoom in or out.
  - Press the **1**, **2**, **4**, **6**, or **7** key to configure the corresponding settings quickly.
  - Press  to switch to the simple mode.
3. Focus the camera on the scene, and then press  to take a photo.
4. Press  (**Options**) to **Send** or **Delete** the photo, or press  (**Back**) to save the captured photo.



# 15 Java Applications

Java allows you to install Java applications provided by third-party operators to enrich your phone use experience.

- Not all the Java applications are compatible with your phone. If you have trouble in installing or running a Java application, press  to return to the standby screen, and then remove the application from your phone.
- Ensure that the General Packet Radio Service (GPRS) is available when you install the Java applications that require network connections.


## Installing a Java Application

To install a Java application on your phone, do the following:

1. Save the Java installation files in .jar or .jad format to **Phone** or **Memory card**.
2. Select a Java installation file, press  (**Options**), and then select **Install** to start the installation.
3. Press  (**Yes**) to confirm the certification information.
4. Select a location to install the Java application: **Phone** or **Memory card**.  
When the installation is successful, the message "**Installed**" is displayed.

### Using a Java Application

1. Select **Menu** > **Java** > **Java**.


2. Select an installed application, and then press  **(Options)**.

3. Select **Launch** to access the application.


### Deleting a Java Application

To delete or remove a Java application from your phone, do the following:

1. Select **Menu** > **Java** > **Java**.

2. Select an installed application, and then press  **(Options)**.

3. Select **Delete** to delete the application.

4. Press  **(Yes)** to confirm the certification information.

When the deletion is successful, the message "**Deleted**" is displayed.



You can access Wireless Application Protocol (WAP) sites and use WAP-based services on your phone. To access WAP sites on your phone, you need to subscribe to the corresponding service from your service provider and set the relevant parameters on your phone.


For details about the services and charges, contact your service provider.

## Network Settings

Before accessing WAP sites, you need to set your data account and WAP parameters on your phone.





### Setting a Data Account

1. Select **Menu** > **Settings** > **Connectivity** > **Data account**.
2. Press  (**Options**), and then select **Add**.
3. Set the parameters based on the information obtained from your service provider.
4. Press  (**Done**) to save the settings.


 If the data account provided by your service provider already exists, you do not need to create a data account.

### Setting the WAP Profile

1. Select **Menu** > **Services** > **Internet service** > **Settings** > **Profiles**.
2. Select **Add new**.


3. Set the parameters based on the information obtained from your service provider.
  4. Press  (**Done**) to save the settings.
  5. Select your service provider, press  (**Options**), and then select **Activate**.
-  If the profile supported by your service provider already exists, select the profile, press  (**Options**), and then select **Activate**.

### Connecting to a Network

1. Select **Menu** > **Services** > **Internet service** > **Input address**.
2. Enter the address of a WAP site.
3. Press  (**Options**), and then select **Done** to access the WAP site.



## 17 Bluetooth

Through Bluetooth, you can exchange data between your phone and other Bluetooth devices, and use a Bluetooth headset.

-  Before using the Bluetooth function, configure the Bluetooth settings.


## Using a Bluetooth Headset

No Bluetooth headset is delivered in the product package. If a Bluetooth headset is required, you can buy one.

1. Select **Menu > Bluetooth > Power**. Press  (**On**) to turn on Bluetooth.
2. Select **Search audio device** to search for available Bluetooth devices.
3. Select the desired Bluetooth headset, and then press  (**Pair**).
4. Enter the password for pairing the Bluetooth headset with the phone.

After the phone is connected to the headset, the headset icon is displayed on the standby screen, indicating that you can use the headset.

## Transferring Data

1. Select **Menu > Bluetooth > Power**. Press  (**On**) to turn on Bluetooth.
2. Select **My device > Search new device** to search for available Bluetooth devices.
3. Pair the phone with the desired device.  
When a Bluetooth device is connected to the phone for the first time, you need to enter a pairing password for verification.
4. After pairing, exchange data between the phone and the Bluetooth device.

## 18 STK

The SIM Tool Kit (STK) function is available only if it is provided by your SIM card. STK is a value-added service provided by your operator, which enable you to send text messages, view news, and use other applications. For further details, contact your network operator.


## 19 Chat Functions

The built-in chat programs, Facebook and MSN, on your phone allow you to send instant messages and files on the move.

To launch Facebook, do the following:

1. Select **Menu > Facebook > Start**.
2. Enter your email account and password.

The method for launching MSN is similar to that for launching Facebook.

-  • Check your GPRS settings before using the chat programs.
- Insert a microSD card before saving the chat history.



## 20 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

### Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

### Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

### Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause

an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

#### Traffic Security

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device

may hurt you owing to the strong force when the air bag inflates.

- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

#### Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 40°C while the device is being charged. Keep the ambient temperature

between 0°C to 40°C for using the device powered by a battery.

#### Prevention of Hearing Damage

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

#### Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

#### Accessories

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

#### Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.

- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
- Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or reference instruction supplied with your device.

## Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.

- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

#### Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

#### Certification Information (SAR)

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit also adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue. The highest SAR value for this device

type when tested at the ear is 0.765 W/kg, and when properly worn on the body is 0.395 W/kg.

#### FEDERAL COMMUNICATIONS COMMISSION

#### INTERFERENCE STATEMENT

This device complies with FCC Rules Part 15. Operation is subject to the following two conditions: .

This device may not cause harmful interference, and .

.This device must accept any interference received, including interference that may cause undesired operation.

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

This mobile device meets guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try



to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:**

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

Body-worn operations are restricted to belt-clips, holsters or similar accessories that have no metallic component in the assembly and must provide at least 1.5 cm separation between the device and the user's body.

**RF exposure warning:**

The equipment complies with FCC RF exposure limits set forth for an uncontrolled environment.

SAR Value: GSM 850MHz: 1.45 W/kg  
PCS 1900MHz: 0.550 W/kg

EU Regulatory Conformance

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the Web site [www.huaweidevice.com/certification](http://www.huaweidevice.com/certification).

**CE 0678**

Version: 01 NO: