
Copyright © Huawei Technologies Co., Ltd. 2012. All rights reserved.

Trademarks and Permissions



HUAWEI, **HUAWEI**, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

Contents

1 Getting to Know Your Phone	1
Your Phone.....	1
Keys and Functions.....	2
Screen Icons.....	5
2 Getting Started	6
Installing the SIM Card and the Battery	6
Removing the Battery and the SIM Card	6
Installing and Removing a microSD Card.....	7
Charging the Battery.....	7
Navigating the Main Menu	8
Automatically Switching Between Profiles	8
Phone Lock.....	9
Mass Storage	10
PIN and PUK.....	10
Locking and Unlocking the Keypad.....	11
Other Applications.....	12
3 Voice Services	12
Making a Call.....	12
Answering a Call.....	13
4 Text Input	15
Changing the Text Input Mode	15

 
Entering a Word.....	16
Entering a Number	16
Entering a Symbol.....	16
Using the Fn Key.....	17
5 Messaging	18
Sending a Text Message	18
Sending a Multimedia Message	18
6 Phonebook	19
Creating a Contact.....	19
Searching for a Contact	19
Setting the Preferred Storage	20
Copying Contacts.....	20
7 Video Recorder	21
8 Video Player	21
9 Sound Recorder	22
10 Ebook Reader	23
11 Camera.....	24
12 Audio Player.....	25
13 FM Radio	26
14 Java Applications.....	27
Installing a Java Application	28
Running a Java Application	28
Removing a Java Application.....	29

15 Wi-Fi (Optional)	29
16 Services	30
Creating a Data Account	30
Connecting to the Internet	31
17 Bluetooth	31
Connecting a Bluetooth Headset to Your Phone	32
Transferring Data	32
18 SNS Applications	33
19 STK	34
20 Weather	34
21 Warnings and Precautions	35

1 Getting to Know Your Phone

Your Phone

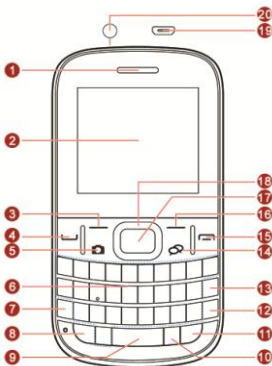


The following figure shows the appearance of your phone.


 








 












- | | | | |
|---|-----------------|----|--------------------------------------|
| 1 | Earpiece | 11 | Input method switching key |
| 2 | Screen | 12 | Enter key |
| 3 | Left soft key | 13 | Delete key |
| 4 | Call/Answer key | 14 | Social networking services (SNS) key |

5	Camera key	15	End/Power key
6	Keypad	16	Right soft key
7	Fn key	17	OK/Confirm key
8	A/a key	18	Navigation keys
9	Space key	19	Charger jack/Universal serial bus (USB) port
10	Sym key	20	Headset jack
















Keys and Functions

Press...	To...
	<ul style="list-style-type: none"> • Make a call from subscriber identity module (SIM) card in standby mode. • Answer a call. • View call logs in standby mode.
	<ul style="list-style-type: none"> • Power the phone on or off (press and hold the key for about 3 seconds). • End or reject a call. • Return to standby mode. • Turn off the screen display.
	Select the option displayed in the lower left corner of the screen.

Press...	To...
	<ul style="list-style-type: none"> • Switch between Widget and Shortcuts in standby mode. • Select the option displayed in the lower right corner of the screen.
	<p>Access SNS in standby mode.</p>
	<p>Access Camera in standby mode.</p>
	<p>Confirm a selection.</p>
	<ul style="list-style-type: none"> • Scroll through the main menu (press , , , or ). • Scroll to the desired shortcut icon in standby mode (press , , , or ).
 through  through 	<ul style="list-style-type: none"> • Enter numbers, letters, and symbols. • Call voicemail in standby mode (press and hold the 1 key for about 3 seconds). • Select an option labeled with the corresponding number.
	<p>Enter a space in editing mode.</p>
	<ul style="list-style-type: none"> • Lock the keypad in standby mode (press and hold the key for about 3 seconds). • Switch between text input methods in editing mode.

Press...	To...
	Switch between the upper and lower cases in editing mode.
	Display the Select symbol list in editing mode.
	Activate or deactivate the Meeting profile in standby mode (press and hold the key for about 3 seconds).

Screen Icons

Icon	Indicates...
	Signal strength.
	New text messages.
	New multimedia messages.
	Call forwarding enabled.
	Missed calls.
	Alarms enabled.
	Keypad locked.
	Battery level.
	Ring only enabled.
	Vib. Only enabled.
	Vib. and ring enabled.
	Vib. then ring enabled.
	Silent profile activated.
	Headset connected.
	Bluetooth turned on.

2 Getting Started

Installing the SIM Card and the Battery

When installing a SIM card, ensure that the gold contact area faces down, and that the beveled edge of the SIM card aligns with that of the SIM card slot.




Removing the Battery and the SIM Card

 
 
Before removing the battery and the SIM card, ensure that your phone is powered off.



Installing and Removing a microSD Card

 
 
 Before installing or removing a microSD card, power the phone off. When the phone is powered back on, it indicates whether the microSD card has been correctly installed.

You can expand your phone's memory capacity by installing a microSD card. When installing a microSD card, ensure that the gold contact area faces down.

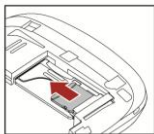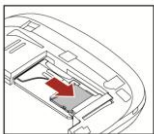



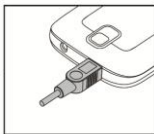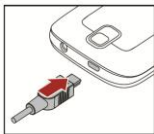


 



Charging the Battery

1. Connect the small end of the USB cable to the phone's charger jack and the large end to the charger.
2. Connect the charger to a power outlet.



3. Wait until the battery is fully charged.
While the battery is charging, the charging icon blinks. When the charging icon stops blinking, the battery is fully charged.
4. Unplug the charger from the power outlet and the USB cable from the phone.

Navigating the Main Menu



1. In standby mode, press  (**Menu**) to access the main menu.
2. Use  to scroll to the desired application, and press  to access the application.
3. Press  or  to scroll to the desired option, and press  (**OK**) or  to access the option.
4. Press  (**Back**) to return to the previous screen or press  to return to standby mode.

Automatically Switching Between Profiles

You can configure your phone to activate different profiles at different times. The phone can automatically switch between profiles according to your settings.

To automatically switch between profiles:


1. Select **Menu** > **User profiles** > **Profile switch timing**.
2. Scroll to a clock.

-
3. Press  (**Edit**) to set the profile to activate at a specified time.
 4. Press  (**Done**) to save the settings.



Phone Lock

The phone lock protects your phone from unauthorized use. The preset password to unlock your phone is **1234**. By default, the phone lock is disabled. Once you enable the phone lock, you must enter the password each time you power on the phone.

To enable the phone lock:

1. Select **Menu > Settings > Security settings > Phone security > Phone lock**.
2. Enter the preset password, and press  (**OK**).

To change the preset password:

1. Select **Menu > Settings > Security settings > Phone security > Change password**.
2. Enter the preset password, and press  (**OK**).
3. Enter a new password, and press  (**OK**).

The password must be a numeric string between four and eight digits.

4. Enter the new password again to confirm it.

If you forget the password, contact your service provider.

Mass Storage

When you have connected your phone to a computer using the USB cable, you can select **Mass storage** to manage the files stored in the phone memory or microSD card using the computer's file manager application.

The phone memory and its microSD card are displayed as removable disks on the computer. You can perform the following operations:

- Double-click a disk to open it.
- Copy, paste, or delete files.
- Disconnect the phone from the computer.



- Ensure that you connect and disconnect the USB cable correctly.
- Do not run the formatting command on the computer to format the phone memory; doing so may get permanently damage the phone memory.
- You can transfer data and charge the battery by connecting the phone to the computer with the USB cable.

PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use.

If you incorrectly enter the PIN a specified number of times, the PIN is blocked and the phone prompts you to enter the PIN

unlocking key (PUK). If this occurs, enter the PUK to unblock the blocked PIN.




If you incorrectly enter the PUK a specified number of times, the SIM card will become permanently invalid, and you must contact your service provider for a new SIM card.

Both the PIN and the PUK are provided with the SIM card. For details, contact your service provider.


To enable the PIN lock:

1. Select **Menu > Settings > Security settings > SIM security > PIN lock**.
2. Enter the PIN, and press  (OK).


Locking and Unlocking the Keypad

To lock the keypad, press and hold  in standby mode for about 3 seconds. To unlock the keypad, press  (Unlock), then  (OK).

If the **Auto keypad lock** function is enabled, the phone will automatically lock the keypad after being idle in standby mode for a pre-defined period.

To enable the **Auto keypad lock** function, select **Menu > Settings > Security settings > Auto keypad lock**, scroll to a desired duration, and press  (OK) to select the duration.



When the keypad is locked, you can press  to answer a call or make an emergency call.


Other Applications

As well as being a communication device, your phone also provides you with the following applications:

- **Calculator:** perform basic calculation.
- **Stopwatch:** time a process.
- **Ebook reader:** read ebooks.
- **Calendar:** view and add events or appointments on your calendar.
- **Tasks:** view and add tasks.
- **Alarm:** set alarms.
- **Fun & Games:** play games.
- **Java:** run Java applications.

3 Voice Services


Making a Call

1. In standby mode, enter a phone number.
 - To make an international call, press  to enter the plus sign (+). Then enter the country or region code, area code, and phone number.

- To call an extension, enter the switchboard number, press



to enter **P**, and enter the extension number.

2. Press  to dial the number.

3. Press  to end the call.





- You can also make calls from call logs, contacts, and messages.



- During a call, you can press  or  to adjust the in-call volume.


 
Answering a Call

When you receive an incoming call:



- Press  or  (**Answer**) to answer the call.

- Press  to reject the call.

- Press  (**Silent**) to mute the ringtone, and press  (**Reject**) to reject the call.


- Press  (**Silent**) to mute the ringtone, and press  (**Answer**) to answer the call.

If the **Any key** answer function is enabled, you can press any

key except  and  to answer a call.







4 Text Input

Changing the Text Input Mode

The current text input mode indicator is displayed in the upper left corner of the screen. Press  to switch between text input modes.

Indicator	Text Input Mode
Abc	Traditional input mode
SAbc	Predictive input mode
123	Number input mode



- Press  (**Clear**) or  to delete the last character entered, or press and hold  (**Clear**) for about 3 seconds to delete all the characters entered.
- Press  to enter a space.
- Press  to start a new paragraph.
- Press  to switch between upper case and lower case.





Entering a Word





To enter a word in traditional input mode, press the keys labeled with the letters that spell the word.


To enter a word in predictive input mode:

1. Press each key once according to the spelling sequence of the desired word.

The phone then displays candidate words associated with the keystroke sequence.

2. Press , , , or  to scroll to the desired word.







You can also press  or  to scroll left or right, and  or  to turn to the previous or next page.

3. Press  to enter the selected word.



Entering a Number

In number input mode, press the desired number key.

Entering a Symbol



1. Press  in any input mode to display the symbol list.
2. Press , , , or  to scroll to the desired symbol.
3. Press  to enter the symbol.

Using the Fn Key


- To enter only one symbol or digit, press  once and then the key labeled with the desired symbol.
- To enter multiple symbols or digits, press  twice and then the keys labeled with the desired symbols or digits.


5 Messaging


Sending a Text Message


1. Select **Menu** > **Messaging** > **Write message**.
2. Write the message.
3. Press , and enter a recipient's phone number or add a recipient from **Phonebook**.
4. Press  to send the message.

Sending a Multimedia Message

1. Select **Menu** > **Messaging** > **Write message**.
2. Write the message.
3. Press  (**Options**) for the following options:
 - **Switch to MMS:** change from a text message to a multimedia message.
If you select **Add picture**, **Add sound**, **Add video**, or **Add subject**, the phone changes a text message to a multimedia message automatically.
 - **Add picture:** add a picture to the message.
 - **Add sound:** add an audio file to the message.
 - **Add video:** add a video file to the message.
 - **Add subject:** add a subject to the message.

4. Press , and enter a recipient's phone number or add a recipient from **Phonebook**.

 

5. Press  to send the message.

-  • Contact your service provider to determine the availability of the Multimedia Messaging Service (MMS) and how to subscribe to the service.
- Your phone supports multimedia messages up to 300 KB.
 - Open multimedia messages with caution. Objects in multimedia messages may contain viruses and malicious software that can damage your phone.

6 Phonebook



Creating a Contact

1. Select **Menu** > **Phonebook** > **Add new contact**.
2. Select **To SIM** or **To phone**.
3. Edit the contact information.



4. Press  (**Options**) and select **Save**, or press  to save the contact.

Searching for a Contact

1. Select **Menu** > **Phonebook**.

-
2. Enter the first letter of the contact name in the search box.
Contacts whose names start with this letter will be displayed.
 3. Press  or  to scroll to the desired contact.




Setting the Preferred Storage

1. Select **Menu > Phonebook**.
2. Press  (**Options**), and select **Phonebook settings > Preferred storage**.
3. Scroll to **SIM**, **Phone**, or **Both** as desired.
4. Press  (**OK**) to select the preferred storage.


Copying Contacts





You can copy contacts to the phone, SIM card, or file.

Copying One Contact

1. Select **Menu > Phonebook**.
2. Press  or  to scroll to the desired contact.
3. Press  (**Options**), and select **Copy**.
4. Select **To phone**, **To SIM**, or **To file** to copy the contact to the desired location.

Copying Multiple Contacts

1. Select **Menu > Phonebook**.
2. Press  (**Options**), and select **Phonebook settings > Copy contacts**.







 
-
3. Press  or  to scroll to the desired option, such as **SIM to phone**, or **Phone to SIM**.
 4. Press  (**OK**), and then press  (**Yes**) to copy the contacts to the desired location.

7 Video Recorder

To record a video:

1. Select **Menu > Multimedia > Video recorder**.

In video recording mode:




- Press  to configure video settings.
- Press  to start recording.
- Press  or  to adjust the exposure.
- Press  to zoom in.
- Press  to zoom out.
- Press  to stop recording and save the video.

8 Video Player







The video player plays downloaded or recorded video files, which are stored in the **Videos** folder of your phone memory or


microSD card. The folder can only be accessed through the **File manager** application.

To play a video file:

1. Select **Menu > Multimedia > Video player**.
2. Press  and  to scroll to the desired video file.
3. Press  to play the video file.

When the video file is playing:

- Press  or  to adjust the volume.
 - Press  or  to rewind or fast-forward.
 - Press  to pause or continue.
4. Press  to stop playing the video file.


 The video player supports files in .mp4 and .3gp formats.

9 Sound Recorder


The sound recorder functions as a digital recorder.

To record audio:

1. Select **Menu > Multimedia > Sound recorder**.

-
2. Press  (**Options**), and select **New record** to start recording.

While recording, you can press  (**Pause** or **Cont.**) to pause or continue.

3. Press  (**Stop**) to stop recording and save the recorded audio.

10 Ebook Reader

 
Your phone supports ebooks in .txt format.


To read an ebook:

1. Select **Menu** > **Organizer** > **Ebook reader** to display the bookshelf.

The phone adds ebooks stored in the **Ebook** folder to the bookshelf automatically.



2. Scroll to the desired ebook.

3. Press  (**Options**), and select **Open ebook** to start reading the ebook.

You can also press  (**Options**), and select **Global settings** to configure settings such as **Font size**, **Scroll by**, **Auto scroll**, and **Alignment**.

4. Press  (**Back**) to stop reading.













- When reading an ebook, press  and  to turn to the previous or next page.
- Ebooks are stored in the **Ebook** folder of your phone or microSD card.

11 Camera

The phone features a built-in 2.0-megapixel complementary metal-oxide-semiconductor (CMOS) camera.

To take a picture:

1. Select **Menu > Multimedia > Camera**, or press  in standby mode.
2. On the viewfinder screen:
 - Press  to view pictures or configure camera settings.
 - Press  or  to adjust the exposure.
 - Press  or  to zoom in or zoom out.
 - Press the **1** key to set the picture size.
 - Press the **2** key to set the picture quality.
 - Press the **4** key to set the white balance.
 - Press the **6** key to set the self-timer.
 - Press the **7** key to set continuous shooting.

-
- Press  to switch to simplified mode.
 - 3. Frame the picture you want to take on the viewfinder screen, and press  to take the picture.
 - 4. Press  to save the picture, or press  (**Options**), and select **Delete** to delete the picture.


12 Audio Player

The audio player plays audio files stored in the **My music** folders of your phone memory or microSD card. For the best audio quality, use the headset provided.







To play an audio file:

1. Select **Menu > Multimedia > Audio player**.



The phone automatically updates the playlist.


2. Press  to start playing the playlist.

When playing the playlist:

- Press  or  to adjust the volume.
- Press  or  to switch between audio files.
- Press and hold  or  to rewind or fast-forward.

-
- Press the button on the headset cable to switch between audio files.

- Press  (**List**) to view the playlist, and then  (**Options**) to configure the playlist settings.

- Press  to pause or continue.








13 FM Radio


 
 
The headset cable also functions as the FM radio antenna when the radio is turned on. To ensure good radio reception, do not disconnect the headset from the phone or bend the headset cable excessively.

To listen to the radio:

1. Connect the headset to the phone.
2. Select **Menu** > **Multimedia** > **FM radio**.

When listening to the radio:


- Press  to pause or continue.
- Press  or  to adjust the volume.
- Press  or  to adjust the frequency in increments of 0.1 MHz.
- Press and hold  or  to go to the previous or next channel in the saved channel list.

-
- Press  (**Options**), and select **Auto search** to search for and save channels automatically.
 - Press a number key to switch to the corresponding channel in the saved channel list.
 - Press the button on the headset cable to switch between channels.
 - Press  (**Options**), and select **Record** to record the current radio program.
 - Press  (**Options**) to configure settings such as viewing or editing the channel list, manually setting a frequency, and searching for and saving channels automatically.



14 Java Applications

You can install third-party Java applications to expand your phone's application and game capabilities.




- Not all Java applications are compatible with your phone. If you have trouble installing or running a Java application, press  to return to standby mode, and remove the application from your phone.
- Certain Java applications require network connections. Therefore, ensure that the General Packet Radio Service (GPRS) connection is properly set up on your phone.


 
Installing a Java Application

1. Select a Java installation file in .jar or .jad format from **Phone** or **Memory card**, press  (**Options**), and select **Install** to start the installation.
2. Press  (**Yes**) to confirm the certification information.
3. Select **Phone** or **Memory card** to install the Java application. When the installation is complete, the message "**Installed**" is displayed.

Running a Java Application

1. Select **Menu** > **Fun & Games** > **Java**.
2. Scroll to the desired Java application.
3. Press  (**Options**), and select **Launch** to run the Java application.

Removing a Java Application

1. Select **Menu** > **Fun & Games** > **Java**.
2. Scroll to the desired Java application.
3. Press  (**Options**), and select **Delete** to delete the application.
4. Press  (**Yes**) to confirm the certification information. When the Java application is removed, **Deleted** is displayed.



You can only remove Java applications you have installed.

15 Wi-Fi (Optional)

You can use your phone's Wi-Fi feature to access Wireless Application Protocol (WAP) sites without configuring your data account and WAP settings.

To access WAP sites with Wi-Fi, select **Menu** > **Connectivity** > **WLAN**.

After Wireless Local Area Network (WLAN) is enabled, select **Options** for the following:

- **Connect:** connect to the selected WLAN.
- **Add:** add a WLAN manually.
- **Define access point:** view or edit the WLAN list.

- **WLAN status:** view your phone's Media Access Control (MAC) address.
- **Disable WLAN:** turn off Wi-Fi.
- **Power Save Mode:** select a power saving mode.
- **Refresh:** display available WLANs.

16 Services



You can use your service provider's network to access WAP sites and use WAP-based services. To browse WAP pages using your service provider's network, you must subscribe to the data service from your service provider and configure your phone's relevant settings.

Contact your service provider for details about the data service and charges.

Creating a Data Account

Before accessing WAP sites on your phone, create your data account and configure the WAP settings.


Setting the Connection Profile

1. Select **Menu** > **Connectivity** > **Data account**.
2. Press  (**Options**), and select **Add PS account**.
3. Configure the relevant settings based on the information provided by your service provider.
4. Press  (**OK**) to save the settings.




If the data account provided by your service provider is already set up on your phone, you do not need to create a new data account.

Setting Up the Data Account

1. Select **Menu** > **WAP** > **Settings** > **Data account**.
2. Select your service provider, and press  (**OK**).

Connecting to the Internet

1. Select **Menu** > **WAP** > **Input address**.
2. Enter the Uniform Resource Locator (URL) of the desired WAP site.
3. Press  (**Options**), and select **Go to** to access the WAP site.


17 Bluetooth

Your phone supports Bluetooth. You can transfer data between your phone and other Bluetooth devices, and talk on the phone using a Bluetooth headset.



You can turn on Bluetooth by configuring Bluetooth settings.

Connecting a Bluetooth Headset to Your Phone

1. Select **Menu** > **Connectivity** > **Bluetooth** > **Power** > **On** to turn on Bluetooth.
2. Select **Search audio device** to search for available Bluetooth headsets.
3. Scroll to the desired Bluetooth headset, and press  (**Pair**).

When you pair your phone with the device for the first time, a password is required.

4. Enter the password to pair the Bluetooth headset with your phone.
When the Bluetooth headset is connected to your phone, the headset icon is displayed on the standby screen, indicating that the headset is ready for use.



A Bluetooth headset is not included in the product package and must be purchased separately.

Transferring Data

1. Select **Menu** > **Connectivity** > **Bluetooth** > **Power** > **On** to turn on Bluetooth.
2. Select **My device** > **Search new device** to search for available Bluetooth devices.

-
3. Scroll to the desired Bluetooth device, and press **(Pair)**.



4. Transfer data between your phone and the Bluetooth device.

18 SNS Applications

You can send and receive instant messages and files with our five built-in SNS applications: **Facebook chat**, **Facebook**, **Messenger**, **Gtalk**, and **Twitter**. Depending on your phone's operating system version, these applications are provided as either pre-set links or clients.



- Check your GPRS settings before using SNS applications.
- To save chat history, ensure that a microSD card is installed.

To log on to Twitter:

Select **Menu** > **Fun & Games** > **Java** > **Twitter**, or press



and select **Twitter**.



Log on to **Facebook chat**, **Facebook**, **Messenger**, or **Gtalk** in a similar fashion.




19 STK

The SIM Tool Kit (STK) function is provided only by some service providers. It allows you to send text messages, read news, and use other applications. For details, contact your service provider.

20 Weather

Your phone supports AccuWeather.com, an application that provides you with the most accurate and up-to-date weather information for your chosen city.

To launch the weather application:

1. Select **Menu** > **Organizer** > **Weather**, or press  (Widget) in standby mode, and then press . By default, the first widget is weather.
2. Press  (**Options**) to select **Update**, **Select City**, **Delete City**, **Settings** and **More Info**.



Check that you have installed a SIM card before using this application.

21 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause

an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.

-
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
 - Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.

-
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
 - Keep the ambient temperature between 0°C and 40°C while the device is being charged. Keep the ambient temperature between 0°C to 40°C for using the device powered by a battery.

Prevention of Hearing Damage

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

Accessories

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.

-
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
 - Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
 - Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
 - Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
 - If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
 - If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
 - If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.

-
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
 - Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or reference instruction supplied with your device.

Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.

-
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
 - Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
 - Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Certification Information (SAR)

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 0.930 W/kg, and when properly worn on the body is 1.26 W/kg.

The SAR limit also adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue. The highest SAR value for this device type when tested at the ear is 0.930 W/kg, and when properly worn on the body is 1.26 W/kg.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by

turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

Disposal and Recycling Information



This symbol on the device (and any included batteries) indicates that they should not be disposed of as normal household garbage. Do not dispose of your device or batteries

as unsorted municipal waste. The device (and any batteries) should be handed over to a certified collection point for recycling or proper disposal at the end of their life.

For more detailed information about the recycling of the device or batteries, contact your local city office, the household waste disposal service, or the retail store where you purchased this device.

The disposal of this device is subject to the Waste from Electrical and Electronic Equipment (WEEE) directive of the European Union. The reason for separating WEEE and batteries from other waste is to minimize the potential environmental impacts on human health of any hazardous substances that may be present.

Reduction of Hazardous Substances

This device is compliant with the EU Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) Regulation (Regulation No 1907/2006/EC of the European Parliament and of the Council) and the EU Restriction of Hazardous Substances (RoHS) Directive (Directive 2002/95/EC of the European Parliament and of the Council). For more information about the REACH compliance of the device, visit the Web site www.huaweidevice.com/certification. You are recommended to visit the Web site regularly for up-to-date information.

EU Regulatory Conformance

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the website
www.huaweidevice.com/certification.



Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

Notice: This device may be operated in all member states of the EU.

France: Outdoor use limited to 10 mW e.i.r.p. within the band 2454-2483.5 MHz.

Italy: For private use, a general authorisation is required if WAS/RLAN's are used outside own premises. For public use, a general authorisation is required.

Norway: This subsection does not apply for the geographical area within a radius of 20 km from the centre of Ny-Ålesund.

Version: 01 NO:6011131