

GSM Mobile Phone

HUAWEI

G6609

User Guide

Copyright © Huawei Technologies Co., Ltd. 2011.
All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders under licenses.

Trademarks and Permissions



HUAWEI, **HUAWEI**, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and may not be activated or may be limited by local network operators or network service providers. Thus the descriptions herein may not exactly match the product or its accessories you purchase.

Huawei Technologies Co., Ltd reserves the right to change or modify any information or specifications contained in this manual without prior notice or obligation.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

Import and Export Regulations


Customers shall comply with all applicable export or import laws and regulations and will obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

Contents

1 Introduction	1
SIM Card	1
MicroSD Card	2
Charging the Battery.....	2
Your Phone	3
Keys and Functions	5
Screen Icons.....	7
2 Getting Started	8
Phone Lock.....	8
PIN and PUK	8
Automatically Switching Between Profiles.....	9
File Management.....	9
Other Applications.....	9
3 Voice Services	11
Making a Call.....	11
Answering a Call.....	12
4 Text Input.....	13
Changing the Text Input Mode.....	13
Using the FN Key	13
Entering Words	14
Entering Digits	14
Entering Symbols.....	14

5 Messaging	16
Creating and Sending a Text Message	16
Creating and Sending a Multimedia Message.....	16
6 Email.....	17
Creating an Email Account	17
Creating and Sending an Email	18
7 Contacts	18
Creating a Contact	18
Searching for a Contact	19
Setting a Speed Dial Number	19
8 Multimedia	19
Camera	20
Media Player	21
Sound Recorder.....	22
FM Radio	22
Photo Editor.....	23
Ebook Reader	23
9 Connectivity	25
USB	25
Bluetooth.....	25
10 Warnings and Precautions	27

1 Introduction

 All the figures in this guide are provided only for your reference. The actual appearance and display depends on your phone.

SIM Card

Insert your SIM card before using your phone. Remove the SIM card and the battery only after powering off your phone.

The following figures show the installation of the SIM card.



MicroSD Card

Your phone supports a microSD card with a capacity of up to 16 GB.

The following figure shows the installation of the microSD card.



Charging the Battery

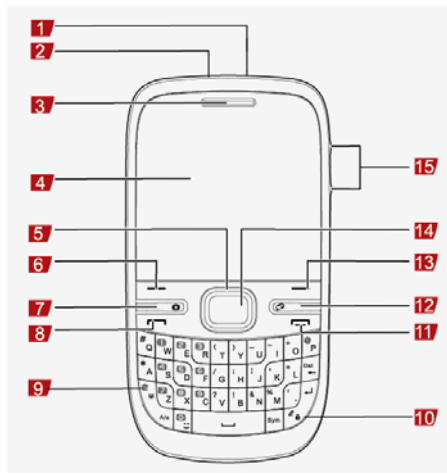 
1. Connect the larger end of the USB cable to the charger.
2. Connect the charger to an AC power socket.
3. Connect the smaller end of the USB cable to the charger jack on the phone.




 


4. Wait until the battery is fully charged.
During the charging, the charging icon is displayed in animation. When the charging icon becomes static, it indicates that the battery is fully charged.
5. Disconnect the charger from the phone.
6. Disconnect the charger from the AC power socket.

 

 
 




Your Phone






The following figure shows the appearance of your phone and it is for your reference only.



















- | | |
|--|---|
| 1 Headset jack | 9 FN key |
| 2 Charger/ USB port | 10 Keypad locked key |
| 3 Earpiece | 11 End/Power key  |
| 4 Screen | 12 Email key  |
| 5 Navigation keys | 13 Right soft key |
| 6 Left soft key | 14 Confirm key |
| 7 Camera key  | 15 Volume/Scroll key  |

Keys and Functions

Press ...	To ...
	<ul style="list-style-type: none"> • Make a call. • Answer an incoming call. • View call logs in standby mode.
	<ul style="list-style-type: none"> • Power on or power off the phone (by pressing and holding the key for about 3s). • End a call or reject an incoming call. • Return to the standby mode.
	<ul style="list-style-type: none"> • Access the main menu in standby mode. • Select the option displayed in the lower left corner of the screen.
	Select the option displayed in the lower right corner of the screen.
	Access Camera .
	Access Email .
	Confirm a selection.
	<p>Access functions assigned to the navigation keys in standby mode.</p> <p>To customize navigation keys as the shortcuts to different functions, select Menu > Settings > Phone settings > Dedicated key.</p>

Press ...	To ...
	<ul style="list-style-type: none"> • Activate or deactivate the Meeting profile in standby mode by pressing and holding the upper part of the key for about 3s. • Switch between the upper case and the lower case in text input mode by pressing the lower part of the key. • Employ the FN key in text input mode by pressing the upper part of the key.
	<ul style="list-style-type: none"> • Lock the screen and the keyboard in standby mode by pressing and holding the lower part of the key for about 3s. • Move the cursor to the next line in text input mode by pressing the upper part of the key.
	<ul style="list-style-type: none"> • Enter the * key in standby mode. • Enter the A/a letter in text input mode.
	<ul style="list-style-type: none"> • Enter the # key in standby mode. • Enter the Q/q letter in text input mode.
	<ul style="list-style-type: none"> • Enter digits, letters, and icons. • Call the voicemail in standby mode by pressing and holding the 1 key for about 3s. • Speed-dial phone numbers in standby mode by pressing and holding the keys 2–9 for about 3s.

Screen Icons

Icon	Indicates ...
	Signal strength.
	The keyboard is locked.
	Battery power level.
	WLAN connected.
	General profile.
	Meeting profile.
	Outdoor profile.
	Silent profile.
	The Bluetooth function is enabled.
	The earphone is plugged in.
	Missed call(s).
	A new text message is received.
	A new multimedia message is received.
	A new email is received.
	An alarm is activated.
	A microSD card is inserted into the phone.

2 Getting Started

Phone Lock

The phone lock is used to protect your phone from unauthorized use and restore factory settings. If the phone lock function is enabled, you need to enter the phone code every time you power on the phone. By default, the phone lock function is disabled.

The phone code is set to **1234** by default. You can select **Menu > Settings > Security settings > Change password** to change the phone code to any numeric string of four to eight digits.

Do remember your phone code. If you forget it, please contact the service center.

PIN and PUK


The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) can unlock the blocked PIN. Both the PIN and the PUK are delivered with the SIM card. For details, contact your service provider.

If you enter wrong PINs for a specified number of times consecutively, the phone prompts you to enter the PUK.

If you enter wrong PUKs for a specified number of times consecutively, the SIM card becomes invalid permanently. In this case, contact your service provider for a new one.

Automatically Switching Between Profiles

You can set the phone to activate different profiles at different times. The phone can automatically switch between profiles according to your settings.

1. Select **Menu** > **Settings** > **User profiles** > **Profile auto switch**.
2. Select a clock.
3. Set the status, time, and repetition days, and then assign a profile.
4. Press  (**Done**) to save the settings.

File Management

The **File manager** manages the multimedia files saved in the phone memory or on the microSD card. Through the **File manager**, you can view the sizes and creation dates of ebooks, images, photos, videos, and audios, and open the multimedia files.



Other Applications

 

- Calendar: to view dates and set events.
- Tasks: to view and add tasks.
- Alarm: to set alarms.
- World clock: to view and set the world clock.
- Calculator: to perform basic calculation.
- Currency converter: to set an exchange rate and perform currency conversion.

- Stopwatch: to time a process.
- Ebook reader: to read ebooks.
- Java: to download and install java applications.
- Games: to play games.

3 Voice Services






 

Making a Call

1. In standby mode, enter the phone number.
 - To make an international call, enter the international long-distance code (+), country code or region code, area code, and phone number in sequence.
 - To call an extension number, enter the phone number, **P** or **W**, and extension number in sequence.
2. Press  to dial the number.
3. Press  to end the call.

- If you enter **P** between the phone number and the extension number, after the phone number is connected, the phone automatically dials the extension number.
- If you enter **W** between the phone number and the extension number, after the phone number is connected, the phone prompts you to choose whether to dial the extension number.
- During a call, you can press  and  to adjust the volume.
- If your phone supports two SIM cards and if the dual-SIM mode is enabled, select the SIM card you want to use according to the prompt on the screen.

Answering a Call

When there is an incoming call, you can do as follows:

- Press ,  or  to answer the call.
- Press  or  to reject the call.
- If the any-key answer function is enabled, you can press any key except  and  to answer the call.

4 Text Input






Changing the Text Input Mode

The indicator of the current text input mode is displayed in the upper left corner of the screen. You can press the lower part of





to change the text input mode.



- Press  to delete the character on the left of the cursor. Press and hold  for about 3s to clear all the characters.
- Press  to enter a space.
- Press the upper part of  to move the cursor to the next line.
- Press the lower part of  to switch to the upper case or the lower case.

Using the FN Key

Press the upper part of  and then press a key labeled with the number or symbol to enter the corresponding number or symbol labeled in the upper left part of the key.


Press the upper part of  twice consecutively, and then press keys labeled with numbers or symbols to enter corresponding numbers or symbols labeled in the upper left part of the keys continuously.

Entering Words




To enter a word, press the keys according to the spelling sequence of the word.

Entering Digits


- In "123" text input mode, you can directly press a number key labeled with the desired digit.
- In any text input mode except "123", press the upper part

of , and then press the key labeled with the desired digit.

Entering Symbols

1. Press  to display the symbol list.
2. Press  to scroll to the desired symbol.
3. Press  to enter the symbol.



In any text input mode, press the upper part of , and then press the keys labeled with the commonly used symbols to enter the symbols.

5 Messaging

- Contact your service provider for the availability of the Multimedia Messaging Service (MMS) and the method of subscribing to the service.
- Open multimedia messages with caution. Objects in multimedia messages may contain viruses that can damage your phone, such as malicious software.
- Your phone may support two SIM cards and if the dual-SIM mode is enabled, select the SIM card you want to use according to the prompt on the screen.

 
Creating and Sending a Text Message

1. Select **Menu** > **Messaging** > **Write message**.
2. Edit the text message.
3. Press to add the recipient(s).
You can enter the phone number of the recipient(s) or add the recipient(s) through **Phonebook**.
4. Press to send the message.

Creating and Sending a Multimedia Message

1. Select **Menu** > **Messaging** > **Write message**.
2. Select **Options** > **Switch to MMS**.

3. Edit the content of the message.


You can press  (**Options**), and then add pictures, sounds, videos, and the subject to multimedia messages.

4. Select **Options** > **Send to**.

Add the phone numbers or email address(es) to be sent. You can also select it from the phonebook

5. Press  (**Options**) and select **Send**.

6 Email

-  • Contact your service provider for the availability of the email service and the method of subscribing to the service.
- Open emails with caution. Objects in emails may contain viruses that can damage your phone, such as malicious software.

Creating an Email Account

For the details about the settings of the email account, contact your email service provider.

If the email account you need has been configured by default, you can enter your user name and password to access the email. You can also activate mobile access to your account from email server web sites from your PC.

1. Select **Menu > Email**.
If there is no email account, the phone will prompt you to create an email account.
2. Select the email server you need.
3. Enter the email address and the password.
4. Press to save the account.

Creating and Sending an Email


Before sending or receiving emails, you need to create and an email account.


1. Select **Menu > Email** and then your desired email account.
2. Select **Options > Write Email**.
3. Select **To** to add the email address of a recipient.
4. Select **Subject** to edit the email subject.
5. Select **Content** to edit the text contents of the email.
6. After editing the email, Select **Options > Send** to send the email.

7 Contacts

Creating a Contact


1. Select **Menu > Contacts > Add new contact**.
2. Select **To SIM** or **To phone** for saving the contact.

 Your phone may support two SIM cards and if the dual-SIM mode is enabled, you need to select **To SIM1** or **To SIM2**.

3. Edit the content.
4. Press  to save the contact.

Searching for a Contact

1. Select **Menu** > **Contacts**.
2. Enter the contact name, or the first several letters of a contact name.

3. Press  to scroll to the desired contact.

Setting a Speed Dial Number




 
 
1. Select **Menu** > **Contacts**.
2. Select **Options** > **Contacts settings** > **Speed dial**
3. Set **Status** to **On**.
4. Select **Set numbers**, select a number, and then assign it to a phone number.

8 Multimedia

Camera



 
 
 

 
Taking a photo

To take a photo, you can do as follows.

1. Select **Menu > Media > Camera**.
2. Press  switch to the camera mode.
3. Press  to take a photo.
4. Press  to adjust the focus.
5. Press  to configure relevant settings or to view the photo album.
6. After taking the picture, press  to delete, forward or edit the picture.

Recording a video

To record a video, you can do as follows.

1. Select **Menu > Media > Camera**.
2. Press  switch to the recorder mode.
3. Press  to start recording a video clip.
During the recording, you can do as follows:
 - Press  to zoom in.
 - Press  to zoom out.
 - Press  or  to pause or continue.
4. Press  to stop recording the video clip.

Media Player

Creating a new Playlist

1. Select **Menu > Media > Media player > Playlists**.
2. Select **Options > New** and then name the playlist.
3. Select **Options > Done** to complete the creation of the new playlist.

Adding Audio or Video Files to the Playlist

1. Select **Menu > Media > Media player > Playlists**.
2. Select the playlist to which you want to add audio or video files.
3. Select **Options > Open** and then **Options > Add** to select an audio or video file.
4. Select **Add marked** to add the selected audio or video file to the playlist.

 
Playing an Audio or Video File


1. Select **Menu > Media > Media player > Playlists** and then the playlist to which you want to add audio or video files.
2. Select **Options > Open** and then select the audio or video file you want to play.
3. Select **Options > Play** to play the selected audio or video file.


Sound Recorder

1. Select **Menu > Media > Sound recorder.**

2. Select **Options > New record.**

During the recording, press  to pause or continue.

3. Press  (**Stop**) to stop recording the audio clip and save it.

4. Press  (**Options**), and then select from the following options.

- **List:** to view all the recorded audio clips.
- **Play:** to play the saved audio clip.



FM Radio

 

The headset cable functions as an antenna as well. To ensure good reception of radio programs, do not disconnect the headset from the phone or severely bend the headset cable.



1. Connect a compatible headset to the phone.

2. Select **Menu > Media > FM radio.**

3. On the **FM radio** screen, you can do as follows:

- Press  to record the program, and then press  (**Stop**) to stop recording.

During the recording, you can press  or  to pause or continue.

- Press  and  to adjust the volume.

 
 
- Press  (**Options**) to configure relevant settings.
- Press  (**Back**) to exit the **FM radio** screen and play the program in the background.

 
Photo Editor

1. Select **Menu > Media > Photo editor**.
2. Select **Photo artist** or **Image tiles**.
3. Edit the image.
You can adjust the image size and add text, a frame, or an icon to the image.
4. Select **Options > Save as** to save the image.

Ebook Reader

Your phone supports ebooks in .txt formats.


You should store ebooks in the **Ebook** folder in the phone memory or on the microSD card. If you open an ebook in another folder, the phone automatically moves the ebook to the **Ebook** folder so that you can find the ebook easily when reading next time.

1. Select **Menu > Tools > Ebook reader** to display the bookshelf.
2. Select an ebook.
3. Press  (**Options**) for following options:
 - **Global settings:** to set the font size, scrolling type, scrolling speed, or switch to the full screen mode.
 - **Open ebook:** to open the ebook.

4. Press  (**Back**) to exit the ebook.

USB

After connecting your phone to the PC by using the USB cable, your phone can be used as a USB mass storage device. You can save files to the corresponding folders that are automatically created in the phone memory or on the microSD card.

 Only Windows 2000, Windows XP and Windows Vista operating systems are supported.

Bluetooth


Through Bluetooth, you can synchronize data between a PC and your phone, exchange data with other Bluetooth devices, and use a Bluetooth headset.

You can configure Bluetooth-related settings only after enabling the Bluetooth function.

Select **Menu > Settings > Connectivity > Bluetooth > Power**, and then select **On** to enable the Bluetooth function.

Using a Bluetooth Headset

No Bluetooth headset is delivered in the product package. If a Bluetooth headset is required, you can buy one yourself.

1. Select **Search audio device** to search for the Bluetooth headset.
2. After the search, press  (**Pair**).

3. Enter the password for pairing the phone with the Bluetooth headset.

After the phone sets up a connection with the headset, the headset icon is displayed on the standby screen and you can use the headset.

Transferring Data

Select **My device** > **Search new device** to search for available Bluetooth devices, and then pair the phone with the desired device. After pairing, you can transfer data between the phone and the Bluetooth device.

When a Bluetooth device sets up a connection with the phone for the first time, you need to enter a pairing password for authentication.

10 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause

an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device

may hurt you owing to the strong force when the air bag inflates.

- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 40°C while the device is being charged. Keep the ambient temperature

between 0°C to 40°C for using the device powered by a battery.

Prevention of Hearing Damage

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

Accessories

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.

- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
- Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local

regulations or reference instruction supplied with your device.

Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may

be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.

- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Certification Information (SAR)

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit also adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue. The highest SAR value for this device type when tested at the ear is X.XXX W/kg, and when properly worn on the body is Y.YYY W/kg.

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.(15.19a)

This device complies with FCC Rules Part 15. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
This device must accept any interference received, including interference that may cause undesired operation.

This mobile device meets guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in

accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

Body-worn operations are restricted to belt-clips, holsters or similar accessories that have no metallic component in the assembly and must provide at least 1.5 cm separation between the device and the user's body.

RF exposure warning:

The equipment complies with FCC RF exposure limits set forth for an uncontrolled environment.

SAR Value: Head: 0.500 W/kg
Body: 1.410 W/kg
Wi-Fi: 0.024 W/kg

EU Regulatory Conformance

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
For the declaration of conformity, visit the Web site www.huaweidevice.com/certification.

CE 0682

Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

Version: 01 NO.: X