



# **HUAWEI G6610V**

---

## **GSM Mobile Phone**

# **User Guide**

Copyright © Huawei Technologies Co., Ltd. 2010.  
All rights reserved.

## Trademarks and Permissions



**HUAWEI**, **HUAWEI**, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd. Other trademarks, product, service and company names mentioned are the property of their respective owners.

## NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

# Table of Contents

|  |           |
|--|-----------|
| <b>1 Getting to Know Your Phone .....</b>      | <b>1</b>  |
| Your Phone.....                                | 1         |
| Keys and Functions .....                       | 2         |
| Screen Icons .....                             | 3         |
| <b>2 Getting Started.....</b>                  | <b>4</b>  |
| Installing the SIM Card and the Battery .....  | 4         |
| Removing the SIM Card and the Battery .....    | 5         |
| Installing the microSD Card .....              | 5         |
| Charging the Battery .....                     | 6         |
| Using Function Menus.....                      | 6         |
| Phone Lock .....                               | 7         |
| PIN and PUK.....                               | 7         |
| Locking the Keypad .....                       | 8         |
| <b>3 Call Function .....</b>                   | <b>8</b>  |
| Making a Call.....                             | 8         |
| Answering a Call .....                         | 9         |
| <b>4 Text Input .....</b>                      | <b>9</b>  |
| Changing the Text Input Mode .....             | 9         |
| Entering a Word.....                           | 10        |
| Entering a Digit .....                         | 10        |
| Entering a Symbol .....                        | 10        |
| <b>5 Messaging .....</b>                       | <b>11</b> |
| Writing and Sending a Text Message .....       | 11        |
| Writing and Sending a Multimedia Message ..... | 11        |

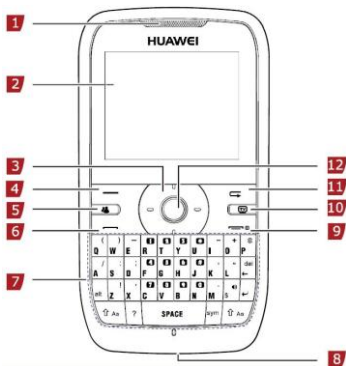 
|                                       |           |
|---------------------------------------|-----------|
| <b>6 Email .....</b>                  | <b>12</b> |
| Creating an Email Account .....       | 12        |
| Activating an Email Account .....     | 13        |
| Writing and Sending an Email .....    | 13        |
| <b>7 Contacts .....</b>               | <b>14</b> |
| Creating a Contact .....              | 14        |
| Searching for a Contact .....         | 14        |
| <b>8 Multimedia .....</b>             | <b>15</b> |
| Camera .....                          | 15        |
| Video Recorder .....                  | 15        |
| Video Player .....                    | 16        |
| Audio Player .....                    | 17        |
| Sound Recorder .....                  | 17        |
| FM Radio .....                        | 18        |
| Scheduling FM Program Recording ..... | 19        |
| Slide Show .....                      | 19        |
| <b>9 TV .....</b>                     | <b>19</b> |
| TV .....                              | 19        |
| <b>10 Bluetooth .....</b>             | <b>20</b> |
| Synchronizing Data .....              | 20        |
| Using a Bluetooth Headset .....       | 21        |
| Transferring Data .....               | 21        |
| <b>11 Fun &amp; Game .....</b>        | <b>21</b> |
| MSN .....                             | 22        |
| Nimbuzz .....                         | 22        |

|   |           |
|---|-----------|
| <b>12 WAP .....</b>                     | <b>22</b> |
| Network Settings .....                  | 23        |
| Connecting to the Network.....          | 24        |
| <b>13 Warnings and Precautions.....</b> | <b>24</b> |

# 1 Getting to Know Your Phone



 


 
## Your Phone

 
 


The following figure shows the appearance of your phone and is provided only for your reference.









- |   |                 |    |                      |
|---|-----------------|----|----------------------|
| 1 | Earpiece        | 7  | Keypad               |
| 2 | Screen          | 8  | Charger/Headset jack |
| 3 | Navigation keys | 9  | End/Power key        |
| 4 | Left soft key   | 10 | TV key               |
| 5 | MSN key         | 11 | Right soft key       |
| 6 | Call/Answer key | 12 | Confirm key          |

## Keys and Functions














| Press ...  | To ...   |
|--|--|
|   | <ul style="list-style-type: none"><li>• Make a call.</li><li>• Answer an incoming call.</li><li>• View call logs in standby mode.</li></ul>  |
|   | <ul style="list-style-type: none"><li>• Power on or power off the phone (by pressing and holding the key for about 3s).</li><li>• End a call or reject an incoming call.</li><li>• Return to the standby mode.</li></ul> |
|   | <ul style="list-style-type: none"><li>• Display <b>Menu</b> in standby mode.</li><li>• Select a highlighted item.</li></ul>  |
|   | <ul style="list-style-type: none"><li>• Display <b>Phonebook list</b> in standby mode.</li><li>• Return to the previous menu.</li></ul>  |
|   | <ul style="list-style-type: none"><li>• Display <b>Menu</b> in standby mode.</li><li>• Confirm a selection.</li></ul>  |
|  | <ul style="list-style-type: none"><li>• Scroll through the submenus on a menu screen or the options on an option screen.</li><li>• Access the functions assigned to the keys as shortcuts in standby mode.</li></ul>     |

| Press ...   | To ...   |
|---|--|
|   | <ul style="list-style-type: none"> <li>• Enter digits, letters, and symbols.</li> <li>• Call the voicemail in standby mode by pressing and holding the <b>1</b> key for about 3s.</li> <li>• Speed-dial phone numbers in standby mode by pressing and holding the keys <b>2–9</b> for about 3s.</li> <li>• Select a submenu item labeled with the corresponding number.</li> </ul> |
|  | <p>Enable or disable the <b>Silent</b> mode in standby mode (by pressing and holding the key for about 3s).</p>  |
|  | <ul style="list-style-type: none"> <li>• Shortcuts to MSN.</li> </ul>  |
|  | <ul style="list-style-type: none"> <li>• Shortcuts to TV.</li> </ul>   |

## Screen Icons

| Icon  | Indicates ...                                     |
|---|---|
|   | Signal strength                                   |
|  | GPRS signal.                                      |
|  | The <b>Ring only</b> alert type is activated.     |
|  | The <b>Vib.only</b> alert type is activated.      |
|  | The <b>Vib.and ring</b> alert type is activated.  |
|  | The <b>Vib.then ring</b> alert type is activated. |

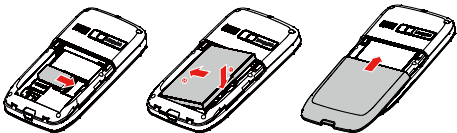 


| Icon  | Indicates ...                              |
|---|--|
|  | The Bluetooth function is enabled.         |
|  | The <b>Headset</b> profile is activated.   |
|  | Missed call(s).                            |
|  | The call forwarding function is enabled.   |
|  | A new text message is received.            |
|  | A new multimedia message is received.      |
|  | A new email is received.                   |
|  | A new broadcast message is received.       |
|  | A new push message is received.            |
|  | An alarm or the schedule is activated.     |
|  | The keypad is locked.                      |
|  | A microSD card is inserted into the phone. |
|  | Battery power level.                       |

## 2 Getting Started

### Installing the SIM Card and the Battery

Ensure that the golden contact area on the SIM card is facing downwards, and the beveled edge is properly aligned with that of the SIM card slot.



## Removing the SIM Card and the Battery

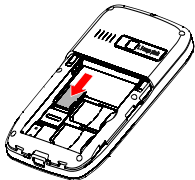 
Before removing the SIM card, ensure that your phone is powered off.



## Installing the microSD Card

You can insert a microSD card to expand the memory capacity of your phone. Before removing a microSD card, ensure that your phone is powered off.

When installing a microSD card, ensure that the golden contact area on the microSD card is facing downwards, and the beveled edge of the microSD card is properly aligned with that of the card slot.




 

 
 

 
 
No microSD card is delivered in the product package. If a microSD card is required, you can buy one.

## Charging the Battery

1. Connect the charger to the charger jack on the phone.
2. Connect the charger to an AC power socket.
3. Wait until the battery is fully charged.  
During charging, the charging icon is displayed in animation. When the charging icon becomes static, it indicates that the battery is fully charged.
4. Disconnect the charger from the phone.
5. Disconnect the charger from the AC power socket.

## Using Function Menus

1. In standby mode, press  (**Menu**) or .

2. Press  to select the desired function menu.
  3. Press  (**OK**) or  to display the selected menu.
  4. Press  to select a submenu.
  5. Press  (**OK**) or  to display the submenu.
  6. Press  (**Back**) to return to the previous menu or exit the function menu.
- To return to the standby screen, press .

## Phone Lock

The phone lock protects your phone from unauthorized use. By default, the phone lock function is disabled. You can change the default phone lock code (**1234**) into any string of 4–8 digits.

Do remember your phone lock code. If you forget it, contact the service center.


 

## PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) can unlock the blocked PIN. Both the PIN and the PUK are delivered with the SIM card. For details, contact your service provider.


 
If you enter wrong PINs for a specified number of times consecutively, the phone prompts you to enter the PUK.

If you enter wrong PUKs for a specified number of times consecutively, the SIM card becomes invalid permanently. In this case, contact your service provider for a new one.

## Locking the Keypad

 
In standby mode, press  for about 3s to lock the keypad. To unlock the keypad, you can press  (**Unlock**) and then  in succession.

If the **Auto keypad lock** function is enabled, when the phone is idle for a preset period in standby mode, the keypad is locked automatically.


 When the keypad is locked, you can press  to answer an incoming call.

# 3 Call Function

## Making a Call


 

 
1. In standby mode, enter the phone number.
  - To make an international call, enter the international long-distance code, country code or region code, area code, and phone number in sequence.
  - To call an extension number, enter **P** or **W** between the phone number and the extension number.
2. Press  to dial the number.

 
 
3. Press  to end the call.

- You can also make a call through call logs, contacts, and messages.
- During a call, you can press  to adjust the volume.

## Answering a Call

When there is an incoming call, you can do as follows:

 
 
- Press  to answer the call.
- Press  (**Options**), and then select **Answer** to answer the call.
- Press  or  (**Reject**) to reject the call.

If the any-key answer function is enabled, you can press any key except  and  to answer an incoming call.




 

# 4 Text Input

## Changing the Text Input Mode

The indicator of the current text input mode is displayed in the upper left corner of the screen. You can press

 or  to change the text input mode.




- Press  once to delete the character on the left of the cursor. Press and hold  for about 3s to clear all the letters.
- Press  to enter a space.
- Press  to enter \$.
- Press  to move the cursor to the next line.

 


## Entering a Word

To enter a word, press the keys according to the spelling sequence of the word.


## Entering a Digit

- In "123" input mode, you can directly press a number key labeled with the desired digit.
- In any text input mode (except "123"), press  and then press the key labeled with the desired digit.

## Entering a Symbol

 
1. Press  to display the symbol list.
2. Press  to scroll to the desired symbol.
3. Press  to enter the symbol.



Press  and then press the keys labeled with the commonly used symbols to enter the symbols.

## 5 Messaging

 

### Writing and Sending a Text Message

1. Select **Menu > Messages > Text message > Write message**.
2. Write the message.
3. Press  (**Options**) and select Done for the following options:
  - **Send only**: to enter a phone number or select a recipient from the contact list, and then send the message.
  - **Save and send**: to add a recipient, and then send and save the message.
  - **Send to many**: to add several recipients at a time, and then send the message.
  - **Send by group**: to add all members of a group as recipients, and then send the message.

### Writing and Sending a Multimedia Message

1. Select **Menu > Messages > MMS > Write message**.



2. Select **To**, **Cc**, or **Bcc**.  
Add phone numbers or email addresses to be sent, carbon copied, or blind carbon copied to.
  3. Select **Subject**.  
Edit the subject of the message.
  4. Select **Edit content**.  
Edit the content of the message. You can add pictures, audio and video clips, attachments, and bookmarks to the multimedia message.
  5. Press  (**Done**) for the following options:
    - **Send only**: to send the multimedia message.
    - **Save and send**: to send and save the multimedia message.
-  • Contact your service provider for the availability of the Multimedia Messaging Service (MMS) and the procedure for subscribing to this service.
- Open multimedia messages with caution. Objects in multimedia messages may contain viruses, such as malicious software, that can damage your phone.

## 6 Email

 
Before sending or receiving emails, you need to create and activate an email account.

 
### Creating an Email Account

1. Select **Menu > Email > Email accounts**.

2. Press  (**Options**), and then select **New account**.

3. Set the related parameters in sequence.

 
After setting an item, press  (**Options**), and then select **Next** to proceed to set other items.

4. Press  (**Options**), and then select **Done** to save the email account.

## Activating an Email Account

1. Select **Menu > Email > Email accounts**.

2. Select an email account.

3. Press  (**Options**), and then select **Activate**.

## Writing and Sending an Email

1. Select **Menu > Email > Write email**.

2. Select **To**, **Cc**, or **Bcc** to add the email address of a recipient.

 
3. Select **Subject** to edit the email subject.


4. Select **Attachments** to add an attachment.

A maximum of three attachments can be added to an email.

5. Set the email priority.

6. Select **Content** to edit the text content of the email.

7. After editing the email, press  (**Done**).

 
8. Press  (**OK**) for the following options:

- **Send** : to send the email.

 
- **Send and save:** to send and save the email.



## 7 Contacts

### Creating a Contact

1. Select **Menu > Phonebook > Add new contact**.
2. Select **To SIM** or **To phone** for saving the contact.
3. Edit the contact.
4. Press  (**OK**) to save the contact.

### Searching for a Contact

1. Select **Menu > Phonebook > Search contact**.
2. Enter the contact name.
3. Press  (**Options**), and then select **Search**.

 



 You can also select **Menu > Phonebook > Quick search**. Then enter the first letter of the contact name and press  to scroll to the desired contact.

# 8 Multimedia

 

## Camera





 
Select **Menu > Multimedia > Camera** to launch the camera.

In camera mode, you can do as follows:

- Press  to view pictures or perform the relevant settings.
- Press  to adjust brightness.
- Press the **1** key to set the picture effect.
- Press the **2** key to set the white balance.
- Press the **4** key to set the self-timer.
- Press the **5** key to set the continue shot.
- Press the **6** key to set the scene mode.
- Press the **7** key to set the image quality.
- Press the **8** key to set the image size.
- Press  or  to take a picture.



## Video Recorder






 

1. Select **Menu > Multimedia > Video recorder**.
2. Press  to set the relevant parameters.
3. Press  to start recording a video clip.  
During the recording, you can do as follows:

- Press  to zoom in.
  - Press  to zoom out.
  - Press  to adjust the brightness.
  - Press  to pause or continue.
4. Press  to stop recording.

## Video Player

1. Select **Menu > Multimedia > Video player.**


2. Press  to scroll to the desired video clip.
3. Press  to play the video clip.  
When the video is being played, you can do as follows:






 
- Press  or  to adjust the volume.
  - Press  to fast forward or rewind.
  - Press  to pause or continue.
  - Press  to play the video in full screen and press  again to exit full screen.
4. Press  to stop playing the video clip.

## Audio Player

 
 

 
You can add music files to the **My Music** folder on the phone or the microSD card.

1. Select **Menu > Multimedia > Audio player**.
2. Select a music file.

3. Press  to play the music.  
When the music is being played, you can do as follows:

- Press  or  to adjust the volume.
  - Press  to play the previous or next music.
  - Press  to pause or continue.
  - Press  to stop playing the music.
4. Press  to exit the screen of audio player.


 
## Sound Recorder

 

1. Select **Menu > Multimedia > Sound Recorder**.
2. Press  (**Options**), and then select **Record** to record an audio clip.  
During the recording, you can press  or  to pause or continue.
3. Press  (**Stop**) to stop recording.






 
## FM Radio

The headset cable functions as an antenna as well. To ensure good reception of radio programs, do not disconnect the headset from the phone or severely bend the headset cable.

1. Connect a compatible headset to the phone.
2. Select **Menu > Multimedia > FM radio**.
3. On the **FM radio** screen, you can do as follows:


- Press  to record the program, and then press  (**Stop**) to stop recording.

During the recording, you can press  or  to pause or continue.

- Press  or  to adjust the volume.
- Press  to change the channels.
- Press  to activate or deactivate the search mode.
- Press  to switch off the FM radio.
- Press  (**Options**) to set the speaker, view and set the channel list, adjust the frequency, or select other options.

## Scheduling FM Program Recording

1. Select **Menu** > **Multimedia** > **Schedule FM record**.

2. Press  to select a schedule.

3. Perform the corresponding settings.

4. Press  (**Done**) to save the settings.

## Slide Show

1. Select **Menu** > **Multimedia** > **Slide show**.

 
2. Select a folder, which contains pictures displayed in a slide show.

3. Perform the corresponding settings.

4. Press  (**Done**) to save the settings.





# 9 TV

## TV

Select **Menu** > **TV**. In TV mode, press  to view the list and you can do as follows:

- Choose the right TV country or region.
- Choose the TV search: the channels will be automatically searched, and saved in the TV channels list.
- Press the **1** key to enter the Brightness adjustment mode.



- Press the **2** key to enter the Contrast adjustment mode.
- Press the **3** key to enter the Color adjustment mode.
- Press the **4** key to enter the Definition adjustment mode.
- Press the **5** key to switch auto / manual mode.
- In auto / manual mode, press  to go to the previous / next existing channel.
- Press  to adjust Brightness/ Contrast / Color / Definition.
- Press  or  to adjust the volume.

## 10 Bluetooth

Through Bluetooth, you can synchronize data between a PC and your phone, exchange data with other Bluetooth devices, or use a Bluetooth headset.

 
### Synchronizing Data

Before synchronizing data between a PC and your phone, ensure that the PC supports the Bluetooth function.

1. Select **Menu > Bluetooth > Power**. Then select **On** to enable the Bluetooth function.
2. Start the Bluetooth driver on the PC.
3. Pair the PC with the phone.  
After pairing, you can synchronize data between the PC and the phone.

## Using a Bluetooth Headset

No Bluetooth headset is delivered in the product package. If a Bluetooth headset is required, you can buy one.

1. Select **Menu > Bluetooth > Power**. Then select **On** to enable the Bluetooth function.
2. Select **Inquiry audio device** to search for the Bluetooth headset.
3. After searching, press  (**Connect**).
4. Enter the password for pairing the Bluetooth headset. After the phone sets up a connection with the headset, the headset icon is displayed on the standby screen and you can use the headset.

## Transferring Data

1. Select **Menu > Bluetooth > Power**. Then select **On** to enable the Bluetooth function.
2. Select **My device > Inquiry new device** to search for available Bluetooth devices and then pair the phone with the desired device.  
When a Bluetooth device sets up a connection with the phone for the first time, a pairing password needs to be entered for authentication.
3. After pairing, you can transfer data between the phone and the Bluetooth device.


# 11 Fun & Game


## MSN

To access the MSN sites through your phone, you need to input the MSN user name and the password on your phone.

### Start the MSN

1. Select **Menu** > **Fun & Games** > **MSN** > **Start**.

2. Press  to select the username, mailbox and the password to input.


3. Press  to enter the contents


4. Press  (**Sign in**) to login in MSN.

 
## Nimbuzz

### Start the Nimbuzz

1. Select **Menu** > **Fun & Games** > **Java** > **Nimbuzz**.

2. Press  to select the username, mailbox and the password to input.

3. Press  to enter the contents

4. Press  to login in.

# 12 WAP

 
 
 
You can access WAP sites and use WAP-based services on your phone. Before accessing the WAP sites through your phone, you need to subscribe to the corresponding service from the service provider and set the relevant parameters on your phone.

For details about the WAP-based services and the charges, contact your service provider.

 
 
## Network Settings

 
To access the WAP sites through your phone, you need to set the data account and WAP parameters on your phone.

### Setting the Connection Profile

 
1. Select **Menu** > **Services** > **Data account**.
2. Select the network type, and then press  (**OK**).
3. Select the service provider, and then press  (**Edit**).
4. Set the account information.
5. Press  (**Done**) to save the settings.

### Setting the WAP

1. Select **Menu** > **Services** > **WAP** > **Settings** > **Edit account** > **Add new**.
2. Select the service provider, and then press  (**OK**).
3. Select **Edit account**, and then press  (**OK**).

4. Set the account information.
5. Press  (**Done**) to save the settings.
6. Activate the account.

## Connecting to the Network

1. Select **Menu > Services > WAP > Input address**.
2. Enter a URL address.
3. Press  (**Options**), and then select **Done** to access the address.

# 13 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

### Electronic Device

Power off your device if using the device is prohibited. Do not use the device when it causes danger or interference with electronic devices.

### Medical Device

- Power off your device and follow the rules and regulations set forth by the hospitals and health care facilities.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential

interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

- Some wireless devices may affect the performance of the hearing aids. For any such problems, consult your service provider.

## Potentially Explosive Atmospheres

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or fire, resulting in bodily injuries or even deaths. Do not switch on the device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. Also, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmosphere that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) if this device can be safely used in their vicinity.

## Traffic Security

Observe local laws and regulations while using the device. Also, if using the device while driving a vehicle, please comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Switch off your device before boarding an aircraft. Using wireless devices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be considered illegal.

## Operating Environment

- Do not use or charge the device in dusty, damp or dirty places or places with magnetic fields. Otherwise, the circuit may not function properly.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device

accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.

- On a thunder and stormy day, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 45°C while the device is being charged. Keep the ambient temperature between -10°C to 55°C for using the device powered by battery.

## Preventing Hearing Damage

Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

## Safety of Children

Please comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may prove dangerous, as it may present a choking hazard. Make sure that small children are kept away from the device and accessories.



## Accessories

Use only the accessories delivered by manufacturer. Using accessories of other manufacturers or vendors with this device model might invalidate any approval or warranty applicable to the device, might result in the non-operation of the device, and might be dangerous.

## Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and talk time are shorter than normal, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause fire or the charger may not function properly.
- Do not connect two poles of the battery with conductors such as metal materials, keys or jewelries. Otherwise, the battery may be short-circuiting and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, make sure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If the battery is damaged, or the color changes or gets abnormally heated while you charge or store the

battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.

- If the power cable is damaged (for example, the lead is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to electric shock, short-circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.

## Clearing and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery and charger from water or vapor. Do not touch the device and charger with a wet hand. Otherwise, it may lead to short-circuit or malfunction of the device and electric shock to the user.
- Do not place your device, battery, or charger in places where it can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, or charger in a very hot or cold place. Otherwise, they may not function properly and may lead to a fire or an explosion.

- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may get damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, manufacturer is not liable to pay for damages as the device and accessories are not covered by warranty.

## Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

## Certification Information (SAR)

This mobile device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the mobile device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization ICNIRP and include safety measures designed to ensure safety for all users, regardless of age and health.

Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 0.475 W/kg, and when properly worn on the body is 1.47 W/kg.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.

## FCC Statement

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications made to this device not expressly approved by manufacturer name: Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Version: V100R001\_01 NO.: 6010301