



# **HUAWEI G7050**

---

**GSM Mobile Phone**

## **User Guide**


Copyright © Huawei Technologies Co., Ltd. 2010. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders under licenses.

## Trademarks and Permissions



**HUAWEI, HUAWEI,** and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

## Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of the local network, and may not be activated or may be limited by local network operators or network service providers. Thus, the descriptions herein may not exactly match the product or its accessories you purchase.

Huawei Technologies Co., Ltd. reserves the right to change or modify any information or specifications contained in this manual without prior notice or obligation.

## NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED “AS IS”. EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

## Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and will obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

# Contents

 
<b>1 Getting to Know Your Phone .....</b>	<b>1</b>
Your Phone .....	1
Keys and Functions .....	2
Screen Icons.....	3
<b>2 Installation and Charging .....</b>	<b>4</b>
Installation .....	4
Charging the Battery.....	5
<b>3 Getting Started .....</b>	<b>6</b>
Using the Stylus.....	6
Using the Widget Bar .....	6
Calibrating the Screen .....	7
USB .....	7
Phone Lock.....	7
PIN and PUK.....	7
Locking the Screen and the Keypad.....	8
Changing the Wallpaper .....	8
Entertainment.....	8
<b>4 Voice Services.....</b>	<b>10</b>
Making a Call .....	10
Answering a Call .....	10
<b>5 Text Entry .....</b>	<b>12</b>
Text Entry Screen .....	12
Entering Numbers.....	13
Entering Words .....	13
Entering Digits.....	13

Entering Symbols .....	13
<b>6 Phonebook.....</b>	<b>14</b>
Creating a Contact .....	14
Searching for a Contact .....	14
<b>7 Messaging.....</b>	<b>15</b>
Creating and Sending a Text Message.....	15
<b>8 Email .....</b>	<b>16</b>
Creating and Activating an Email Account .....	16
Creating and Sending an Email .....	17
<b>9 Camera.....</b>	<b>18</b>
Accessing the Camera Screen .....	18
Taking a Picture .....	18
<b>10 Video recorder .....</b>	<b>20</b>
Accessing the Video Recorder Screen.....	20
Recording a Video File .....	20
<b>11 Media player .....</b>	<b>22</b>
Access the Media player Screen.....	22
<b>12 Image viewer.....</b>	<b>23</b>
Accessing the Image Viewer Screen .....	23
<b>13 FM Radio .....</b>	<b>24</b>
Accessing the FM Radio Screen.....	24
<b>14 Ebook.....</b>	<b>25</b>
<b>15 Bluetooth .....</b>	<b>26</b>
Transferring Data.....	26
Using a Bluetooth Headset .....	26
<b>16 Warnings and Precautions .....</b>	<b>28</b>

# 1 Getting to Know Your Phone

## Your Phone

The following figure shows the appearance of your phone and it is for your reference only.

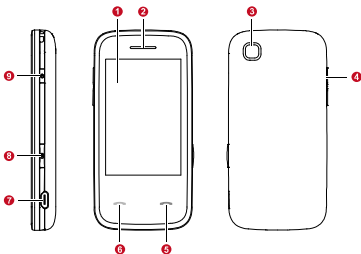






- |   |                   |   |   |
|---|-------------------|---|---|
| 1 | Screen            | 6 | Send key  |
| 2 | Earpiece          | 7 | Charger/Universal serial bus (USB)/Headset jack |
| 3 | Camera            | 8 | Shortcut button for the camera                  |
| 4 | Volume/Scroll key | 9 | Power key                                       |
| 5 | End key           |   |   |
















If an accessory of the phone is not included in the packing box, it might be provided as a giveaway or you need to purchase it separately.

## Keys and Functions

Press ...	To ...
	<ul style="list-style-type: none"><li>• Make a call</li><li>• Answer an incoming call.</li><li>• View call logs in standby mode.</li></ul>
	<ul style="list-style-type: none"><li>• End a call.</li><li>• Return to the standby mode.</li><li>• Turn off the background music in standby mode (by pressing it).</li></ul>
	<ul style="list-style-type: none"><li>• Power on or power off the phone (by pressing and holding the key for about 3s).</li><li>• Lock the keypad by pressing the key for about 1 second.</li></ul>
	<ul style="list-style-type: none"><li>• Access the camera screen.</li></ul>
	<ul style="list-style-type: none"><li>• Scroll up and down the submenus on a menu screen or the options on an option screen.</li><li>• Adjust the volume in standby mode, during a call, during music playing, or during FM radio listening.</li></ul>

## Screen Icons

 
Icon	Indicates ...
	Signal strength and line.
	The keypad is locked.
	The keypad is unlocked
	A new short message is received.
	Alarms.
	Headset profile.
	Battery power level. The current battery power is full.
	The <b>General</b> profile is activated.
	The <b>Silent</b> profile is activated.
	The <b>Meeting</b> profile is activated.
	The <b>Outdoor</b> profile is activated.
	The <b>My profile</b> profile is activated.
	The Bluetooth function is enabled.



## 2 Installation and Charging


### Installation


#### Removing the Back Cover

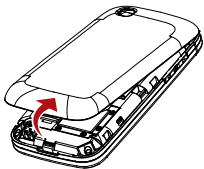

#### Installing the SIM Card

 
When installing the subscriber identity module (SIM) card, ensure that the golden contact area on the SIM card is facing downward and that the beveled edge of the SIM card is properly aligned with that of the SIM card slot.

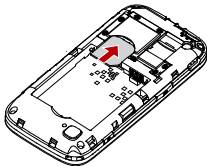

 Your phone may support two SIM cards. In this case, you can insert two SIM cards into the phone at one time, and select **Dual SIM open** to enable the dual-SIM mode.


## Installing a microSD Card

 Your phone supports a microSD card with a capacity of up to 16 GB. The following figure shows the installation of the microSD card.

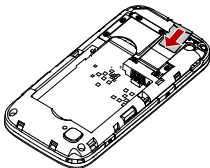

If no microSD card is included in the packing box, a microSD card might be provided as a giveaway or you need to purchase a microSD card separately.

## Installing the Battery

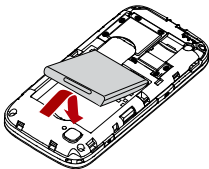 

## Charging the Battery

Connect the charger to the charger jack on the phone.

Connect the charger to a power socket.

The charging starts, with the charging icon displayed in an animated state.



If the battery power is exhausted when you charge the battery, the charging icon might appear on the screen a few minutes after the charger is connected to the power socket.

When the charging icon becomes static, indicating that the battery is fully charged, disconnect the charger from the power socket.

Disconnect the charger from the phone.

## 3 Getting Started


### Using the Stylus

Your phone uses a touchscreen. You can use the stylus tip to touch the screen to perform an operation or edit text.

You can perform various operations and settings on the phone by tapping and dragging.

- **Tap:** You can use the stylus tip to touch the screen once to access a menu or select an item.
- **Drag:** You can use the stylus tip to tap and hold an icon in the main menu or on the widget bar, and then move the icon. You can also use the stylus tip to touch and move on the screen to scroll through a menu or a Wireless Application Protocol (WAP) page.

### Using the Widget Bar

In standby mode, tap  to display the widget bar.

Drag a widget from the widget bar to the desktop, and then perform the corresponding operation directly.

## Calibrating the Screen

The phone responds to the touch of the stylus tip on the screen accurately after screen calibration.

In standby mode, select **Menu > Settings > Pen calibration**.

Use the stylus tip to tap the cross marks that appear on the screen in sequence as prompted to complete screen calibration.



During the calibration, tap the center of each cross mark accurately to ensure that the phone can respond to your tap and text entry on the screen correctly after the calibration.

## USB

When the phone is connected to a PC through a USB cable, the following options are displayed on the phone screen: **Mass storage**.

When you select **Mass storage**, you can read the files stored on the phone and the microSD card.

## Phone Lock

The phone lock protects your phone from unauthorized use. Typically, the phone lock code is provided with the phone. The preset phone lock code is **1234**. If the phone lock is enabled, when you power on the phone, you are prompted to enter the phone lock code.

Do remember your phone lock code. If you forget it, contact the service center.

## PIN and PUK


The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) is used to unlock the blocked PIN. Both the PIN and the PUK are provided with the SIM card. For details, contact your service provider.

If you enter wrong PINs thrice consecutively, the phone prompts you to enter the PUK.

If you enter wrong PUKs ten times consecutively, the SIM card becomes permanently invalid. In this case, contact your service provider for a new SIM card.

## Locking the Screen and the Keypad

To set the phone to automatically lock the screen and the keypad when the phone is in standby mode for a specific period, select **Menu > Settings > Security setup > Auto keypad lock**, and then on the **Auto keypad lock** screen, select a period (**None, 5 sec, 30 sec, 1 min, or 5 min**).

To unlock the screen and the keypad, press and slide  on the screen.

## Changing the Wallpaper

To change the wallpaper, do as follows:

Select **Menu > Settings > Phone settings > Display > Wallpaper**.

Select a picture.

You can select a picture preset in the system, saved in the phone memory, or saved on the microSD card.

Press **OK** to set the picture as the wallpaper.


## Entertainment

- **Games:** to provide games.
- **Media player:** to play the video files stored on the phone or the microSD card.
- **Camera:** to take pictures.
- **Image viewer:** to view images.
- **Video recorder:** to record video files.
- **Photo editor:** to edit photos.

- **Sound recorder:** to record audio clips.
- **FM radio:** to receive and play radio programs.
- **Ebook reader:** to read the ebooks stored on the phone or the microSD card.


## 4 Voice Services


### Making a Call




In standby mode, tap  to access the on-screen keypad.

Tap the on-screen keypad to enter the phone number.

To make an international call, tap the \* key twice consecutively to enter a plus sign (+). Then enter the country or region code, area code, and phone number in sequence.

Tap  to dial the number.

Press  to access the phonebook.

-  • You can also make a call through call logs, contacts, and messages.
- During a call, you can press  or  to adjust the volume.
- If your phone supports two SIM cards and if the dual-SIM mode is enabled, select the **Select SIM > Dual SIM card** you want to use according to the prompt on the screen.

### Answering a Call

When there is an incoming call, you can do as follows:

- Tap **Answer** to answer the call.
- Or Select **Options > Answer** to answer the call.
- Tap **Silent** to silence the speaker.
- Select **Option > Call background sound** to select a background sound (e.g. restaurant, pub, motorcycle etc.) to imitate the environment where you are.

- Press **Reject** to reject the call.



# 5 Text Entry

## Text Entry Screen



QWERTY input    Alphanumeric input    Handwriting input

- 1    Text entry area.
- 2    To clear the last entered character (by tapping it once) or to clear all the entered characters at a time (by tapping and holding it).
- 3    To move the cursor to the next line.
- 4    To hide or show the virtual keypad.
- 5    To switch between the QWERTY, Alphanumeric and handwriting input mode.
- 6    To switch between the letter and symbol keypad.
- 7    To switch the desired input method among the supported input methods of current editor.
- 8    To switch between the abc and ABC input mode. .
- 89    Handwriting input area

## Entering Numbers


Tap the icon of the current text entry mode in the right of the bottom of the screen to change the mode to **123**.

Use the stylus to write the desired numbers, or use the stylus to select the numbers.


## Entering Words

To enter a word, press the keys according to the spelling sequence of the word.

## Entering Digits

- In "123" input mode, you can directly press a number key labeled with the desired digit.
- In any text input mode except "123", press  and then press the key labeled with the desired digit.


## Entering Symbols

Press  to display the symbol list.

## 6 Phonebook

### Creating a Contact

In standby mode, select **Menu > Phonebook > Add new contact**.

 If your phone supports two SIM cards and if the dual-SIM mode is enabled, you need to select **To SIM1** or **To SIM2**.

Edit the contact.

Select **Options** and tap **Done**. When the phone asks you whether to save the contact, tap **Yes**.

### Searching for a Contact

Select **Menu > Contacts**.

Enter the contact name, or the first several letters of a contact name.

Scroll to the contact.

## 7 Messaging



- If your phone supports two SIM cards and if the dual-SIM mode is enabled, select the SIM card you want to use according to the prompt on the screen.

### Creating and Sending a Text Message

In standby mode, select **Messaging** > **Write message**.

Enter the message contents.

Tap **Options**, and then select **Send to**.

Tap **Enter recipient** to enter the phone number of the recipient, or tap **Add from phonebook**, and then select the recipient on the **Phonebook list** screen.

Tap **OK** to send the message.

## 8 Email



- Contact your service provider for the availability of the email service and the method of subscribing to the service.
- Open emails with caution. Objects in emails may contain viruses that can damage your phone, such as malicious software.
- Emails received or sent through the phone must be less than 100 KB.
- The phone can only display no more than 1000 characters.

### Creating and Activating an Email Account

For the details about the settings of the email account, contact your email service provider.

If the email account you need has been configured by default, you can enter your user name and password to access the email. You can also activate mobile access to your account from email server web sites from your PC.

#### Creating an Email Account

Select **Menu > Email > Email accounts**.

Select **Options > New account** to create a new account.

Configure the relevant settings in sequence.

After setting an item, select **Options > Next** to proceed to another item.

Select **Options > Done** to save the email account.

#### Activating an Email Account

Select **Menu > Email > Email accounts**.

Select your email account.

Select **Options** > **Activate** to activate the email account.

## Creating and Sending an Email

Before sending or receiving emails, you need to create and activate an email account.

Select **Menu** > **Email** > **Write email**.

Select **To**, **Cc**, or **Bcc** to add the email address of a recipient.

Select **Subject** to edit the email subject.

Select **Attachments** to add an attachment.

A maximum of three attachments can be added to an email.

Set the email priority.

Select **Content** to edit the text contents of the email.






 




After editing the email, press **Done**.

Press **OK**, and then select **Send**.


## Accessing the Camera Screen

In standby mode, select **Menu > Camera**.

In **Camera** menu, you can do as follows:


- Press  to adjust the exposure compensation.
- Press  To zoom in and zoom out.
- Press  to exit the camera screen.
- Press  to take a picture.
- Press  to access the **Options** screen to perform camera-related settings.
- Press  to set continuous shooting.
- Press  to set the self-timer.
- Press  to set the white balance.
- Press  to set the image quality.
- Press  to set the image size.

## Taking a Picture

In standby mode, press .

Select a scene for taking a picture, and then perform the corresponding settings as required.



Focus the camera on the scene, and then press  to take the picture. Select **Options**, tap **Send** to send the picture or tap **Delete** to delete the picture.











# 10 Video recorder

## Accessing the Video Recorder Screen

 
Select **Menu > Video recorder**.


In voice recorder menu, you can do as follows:




- Press  to adjust the exposure compensation
- Press  to zoom in or zoom out.
- Press  to return to the previous menu.
- Press  to start recording.
- Press  to access the **Options** screen to perform video recorder–related settings.
- Press  to set the white balance.
- Press  to set the night mode.
- Press  to set the image quality.

## Recording a Video File

In standby mode, select **Menu > Video recorder**.

Tap  to start recording a video file.

To stop recording, tap . When the phone asks you whether to save the video file, tap **Yes** to save it or tap **No** to delete it.








 



-  • During the recording, you can tap  or press right and left keys to adjust the exposure compensation. You can also tap  or press up and down keys to zoom in and zoom out.
- You can save recorded video files on the microSD card


only.

# 11 Media player

## Access the Media player Screen

In standby mode, select **Menu** > **Media player**, and select the song or the video file to be played. You can do as follows.

- Press  to switch to the previous song or video file.
- Press and hold  to fast-forward the song or video file.
- Press  to switch to the next song or video file.
- Press  to start playing a song or a video.
- Press  to pause the song or video file.
- Press  to stop the song or video file.
- Press  to exit the **Media player** screen, and enter flash screen to continue to play the MP3.
- Press  To access the **Options** screen to perform media player settings.
- Press  to return to the previous menu.
- Press  or  to adjust the volume.






 Playing the video files that are damaged or whose formats are not supported might cause malfunctions of the phone. Therefore, do not open the video files with unknown origins.

# 12 Image viewer

## Accessing the Image Viewer Screen

In standby mode, select **Menu > Image viewer**.

Select an image and you can do as follows.




- Press  to view the image in full screen.
- Press  to send the image by SMS or MMS.
- Press  to send the image by Bluetooth
- Press  to edit the image.
- Press  to delete the image.


# 13 FM Radio





## Accessing the FM Radio Screen

Before using the frequency modulation (FM) radio, connect the headset to the phone. The headset cable also functions as an antenna. To ensure good reception of radio programs and nice audio quality, do not bend the headset cable.

In standby mode, select **Menu > FM radio**. In the **FM radio** menu, you can do as follows:

- Press  to switch to the previous channel in the channel list.
- Press  to adjust the frequency leftwards by 0.1 MHz according to the tuning mode you have selected.
- Press  to adjust the frequency rightwards by 0.1 MHz according to the tuning mode you have selected.

Press  to switch to the next channel in the channel list.

- Press  to start recording the current radio program.
- Press  to turn on or off the FM radio.
- Press  To return to the previous menu.
- Press  to access the Options screen to perform FM radio-related settings.

# 14 Ebook

Your phone supports ebooks in .txt formats.

You should store ebooks in the **Ebook** folder in the phone memory or on the microSD card.


1. Select **Menu > Ebook reader** to display the bookshelf.

The phone automatically adds the ebooks stored in the phone memory or on the microSD card to the bookshelf.

2. Select an ebook.

3. Press **Options** for following options:

- **Global settings:** to set the font, scrolling type, encoding, and alignment, or switch to the full screen mode.
- **Open ebook:** to open the ebook.

When reading an ebook, you can press  to turn on or off the automatic page turning.

4. Press **Back** to close the ebook.

# 15 Bluetooth

Your phone support Bluetooth. Through Bluetooth, you can transfer data between your phone and other Bluetooth devices. You can also talk on the phone by using a Bluetooth headset.



You can enable the Bluetooth function after performing Bluetooth settings.

## Transferring Data

In standby mode, select **Menu > Connectivity > Bluetooth**. On the **Bluetooth** screen, set **Power** to **On**.

Select **My device > Search new device** to search for other Bluetooth devices within a valid range and pair a device with your phone.

If the device is found for the first time, a password is required for authentication.

If a device is paired with your phone, you can transfer data between your phone and the device.

## Using a Bluetooth Headset

In standby mode, select **Menu > Connectivity > Bluetooth**. On the **Bluetooth** screen, set **Power** to **On**.

Tap **Search audio device**.

In the list of the Bluetooth devices that are found, select the Bluetooth headset to be used, and then tap **Connect** to connect it to the phone.

During the connection, a password might be required for pairing the Bluetooth headset with the phone. After the headset is paired, you can select the desired service from the service list.



- You can listen to MPEG-1 Audio Layer 3 (MP3) files through a stereo Bluetooth headset only. If you use a

monaural headset, you can only talk on the phone without holding the phone.

- Some Bluetooth headsets require preset passwords. If you want to pair such a headset with your phone, you need to enter the password.



# 16 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

## Electronic Device

Power off your device if using the device is prohibited. Do not use the device when it causes danger or interference with electronic devices.

## Medical Device

- Power off your device and follow the rules and regulations set forth by the hospitals and health care facilities.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.
- Some wireless devices may affect the performance of the hearing aids. For any such problems, consult your service provider.

## Potentially Explosive Atmospheres

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or fire, resulting in bodily injuries or even deaths. Do not switch on the device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and

distribution areas, and chemical plants. Also, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmosphere that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) if this device can be safely used in their vicinity.

## Traffic Security

Observe local laws and regulations while using the device. Also, if using the device while driving a vehicle, please comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Switch off your device before boarding an aircraft. Using wireless devices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be considered illegal.

## Operating Environment

- Do not use or charge the device in dusty, damp or dirty places or places with magnetic fields. Otherwise, the circuit may not function properly.

- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a thunder and stormy day, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 45°C while the device is being charged. Keep the ambient temperature between -10°C to 55°C for using the device powered by battery.

## Prevention of Hearing Damage

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

## Safety of Children

Please comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may prove dangerous, as it may present a choking hazard. Make sure that small children are kept away from the device and accessories.

## Accessories

Use only the accessories delivered by manufacturer. Using accessories of other manufacturers or vendors with this device model might invalidate any approval or warranty applicable to the device,

might result in the non-operation of the device, and might be dangerous.

## Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and talk time are shorter than normal, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause fire or the charger may not function properly.
- Do not connect two poles of the battery with conductors such as metal materials, keys or jewelries. Otherwise, the battery may be short-circuiting and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, make sure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If the battery is damaged, or the color changes or gets abnormally heated while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the lead is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to electric shock, short-circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.

## Clearing and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery and charger from water or vapor. Do not touch the device and charger with a wet hand. Otherwise, it may lead to short-circuit or malfunction of the device and electric shock to the user.
- Do not place your device, battery, or charger in places where it can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion. When the temperature is lower than  $0^{\circ}\text{C}$ , performance of the battery is affected.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, or charger in a very hot or cold place. Otherwise, they may not function properly and may lead to a fire or an explosion.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may get damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, manufacturer is not liable to pay for damages as the device and accessories are not covered by warranty.

## Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

## Certification Information (SAR)

This mobile device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the mobile device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit also adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue. The highest SAR value for this device type when tested at the ear is 1.110W/kg, and when properly worn on the body is 0.872 W/kg.

## Disposal and Recycling Information



This symbol on the device (and any included batteries) indicates that they should not be disposed of as normal household garbage. Do not

dispose of your device or batteries as unsorted municipal waste. The device (and any batteries) should be handed over to a certified collection point for recycling or proper disposal at the end of their life. For more detailed information about the recycling of the device or batteries, contact your local city office, the household waste disposal service, or the retail store where you purchased this device.

The disposal of this device is subject to the Waste from Electrical and Electronic Equipment (WEEE) directive of the European Union. The reason for separating WEEE and batteries from other waste is to minimize the potential environmental impacts on human health of any hazardous substances that may be present.

### Reduction of Hazardous Substances

This device is compliant with the EU Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) Regulation (Regulation No 1907/2006/EC of the European Parliament and of the Council) and the EU Restriction of Hazardous Substances (RoHS) Directive (Directive 2002/95/EC of the European Parliament and of the Council). For more information about the REACH compliance of the device, visit the Web site [www.huaweidevice.com/certification](http://www.huaweidevice.com/certification). You are recommended to visit the Web site regularly for up-to-date information.

### **FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. The operation is subject to the condition that this device does not cause harmful interface.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the

instructions, may cause harmful interference to radio communications. There is no guarantee, however, that interference does not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Warning:** Changes or modifications made to this equipment not expressly approved by manufacturer may void the FCC authorization to operate this equipment.

The equipment complies with FCC RF exposure limits set forth for an uncontrolled environment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

This mobile device meets guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines.

SAR Vaule: Head: 1.110 W/kg

Body: 0.872 W/kg



## EU regulatory conformance

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the Web site  
[www.huaweidevice.com/certification](http://www.huaweidevice.com/certification).

# C E0682

Notice: Please observe the national local regulations in the location where product is to be used. This product may be restricted for use in some or all countries of European Union.

Version: 01 NO.xxxxxxx