


#### Trademarks and Permissions



**HUAWEI HUAWEI** and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

The *Bluetooth*<sup>®</sup> word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Huawei Technologies Co., Ltd. is under license.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

#### NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

# Contents

 
<b>1 Getting to Know Your Phone .....</b>	<b>1</b>
Your Phone .....	1
Keys and Functions .....	2
Main Screen Icons .....	2
<b>2 Getting Started .....</b>	<b>4</b>
Installing the SIM Card and Battery.....	4
Removing the Battery and the SIM Card.....	4
Installing and Removing a microSD Card.....	5
Charging the Battery.....	5
Calibrating the Screen .....	6
Accessing Applications.....	6
Navigating with the Main Menu .....	7
Phone Lock.....	8
Mass Storage.....	8
PIN and PUK .....	9
Locking the Screen.....	10
<b>3 Voice Services .....</b>	<b>11</b>
Making a Call.....	11
Answering a call .....	11
<b>3 Text Input .....</b>	<b>13</b>
Changing the Text Input Mode.....	13
Entering a Word .....	14

Entering Numbers .....	14
Entering Symbols.....	15
<b>4 Messaging .....</b>	<b>15</b>
Writing and Sending a Text Message .....	15
Writing and Sending a Multimedia Message.....	16
<b>5 Voice Mail .....</b>	<b>18</b>
<b>6 Phonebook .....</b>	<b>18</b>
Creating a Contact .....	18
Searching for a Contact .....	19
Setting the Preferred Storage.....	19
Copying Contacts .....	19
Contact Group.....	20
<b>7 Multimedia .....</b>	<b>22</b>
Camera .....	22
Video Recorder.....	22
Media Player .....	23
Image Viewer .....	25
FM Radio .....	25
Sound Recorder.....	26
Mobile TV.....	27
<b>8 WAP Browser .....</b>	<b>28</b>
Editing a Data Account .....	28
Connecting to a WLAN .....	29
Configuring WAP Settings.....	29
Accessing a Website.....	30

<b>9 Bluetooth</b> .....	<b>30</b>
Connecting a Bluetooth Headset to Your Phone.....	30
Transferring Data .....	31
<b>10 File Manager</b> .....	<b>32</b>
<b>11 Tools</b> .....	<b>32</b>
Alarms.....	32
Calendar.....	32
Tasks .....	33
Calculator .....	33
<b>12 Java</b> .....	<b>33</b>
Installing a Java Application.....	34
Running a Java Application.....	34
Removing a Java Application.....	34
<b>13 Chat Functions</b> .....	<b>35</b>
<b>14 Warnings and Precautions</b> .....	<b>36</b>




 
 

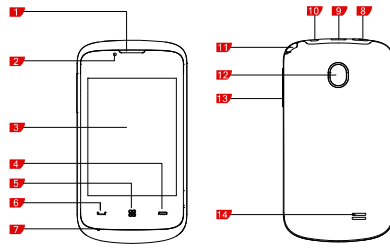
# 1 Getting to Know Your Phone

## Your Phone



















- |                   |  |
|-------------------|--|
| 1 Earpiece        | 8 Power key  |
| 2 Indicator light | 9 Charger jack/micro<br>Universal serial bus (USB)<br>port |
| 3 Screen          | 10 Headset jack  |
| 4 Back key        | 11 Telescopic antenna                                      |
| 5 Home key        | 12 Camera  |
| 6 Call/Answer key | 13 Volume keys   |
| 7 Microphone      | 14 Speaker   |

## Keys and Functions

Press...	To...
	<ul style="list-style-type: none"> <li>• Make a call.</li> <li>• Answer a call.</li> </ul>
	<ul style="list-style-type: none"> <li>• End or reject a call.</li> <li>• Return to standby mode.</li> </ul>
	Access the main menu in standby mode.
	<ul style="list-style-type: none"> <li>• Power the phone on or off (press and hold this key for about 3 seconds).</li> <li>• End or reject a call.</li> <li>• Return to standby mode.</li> <li>• Lock the screen in standby mode. And when the screen is locked, press the key to access the unlock interface.</li> </ul>
	Increase the volume (press  ) or decrease the volume (press  )


## Main Screen Icons

Icon	Indicates...
	Signal strength.

 
Icon	Indicates...
	Media player enabled.
	Wireless local area network (WLAN) connected.
	New text messages.
	New multimedia messages.
	Call forwarding enabled.
	Missed calls.
	Alarms enabled.
	Battery level.
	<b>General</b> or <b>My style</b> profile activated.
	<b>Meeting</b> profile activated.
	<b>Outdoor</b> profile activated.
	<b>Silent</b> profile activated.
	Headset connected.
	Bluetooth turned on.
	microSD card installed.

## 2 Getting Started

### Installing the SIM Card and Battery

 
 When installing the SIM card, ensure that the chip of SIM 1 faces down and the chip of SIM 2 faces up.

Before installing the subscriber identity module (SIM) card, ensure that the battery is removed.

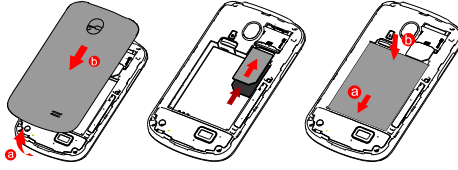


### Removing the Battery and the SIM Card

Before removing the battery and the SIM card, ensure that your phone is powered off. And before removing the SIM card, ensure that the battery is removed.

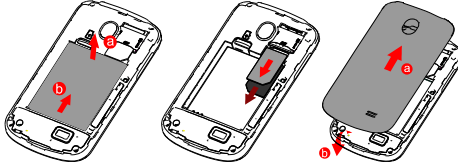 




## Installing and Removing a microSD Card

 
 Before installing or removing a microSD card, power the phone off. When the phone is powered back on, it indicates whether the microSD card has been installed correctly.

You can expand your phone's memory capacity by installing a microSD card. When installing a microSD card, ensure that the gold contact area faces down.

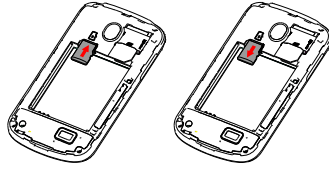


## Charging the Battery



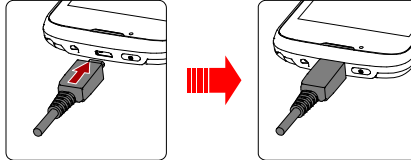



1. Connect the small end of the USB cable to the phone's charger jack and the larger end to the charger.
2. Connect the charger to a power socket.



3. Wait until the battery is fully charged.  
While the battery is charging, the charging icon blinks. When the charging icon is stops blinking, the battery is fully charged.
4. Unplug the charger from the power socket and the USB cable from the phone.



### Calibrating the Screen

Press and hold  when power on the phone, forced calibration will be started. Once calibrated, the phone responds more accurately to your touch on the screen.

1. In standby mode, tap  and select  > **Phone settings** > **Pen calibration**. During the calibration, a series of icons are displayed on the screen.
  2. During the calibration, a sequence of  are displayed on the screen. Tap the center of each  that appears on the screen to complete the calibration.
-  During the calibration, tap each  in a normal way to ensure that the phone will respond accurately to your touch.




### Accessing Applications

In standby mode, flick your finger left or right to access the following applications.

- **Dialer**  
Make a call, send a message, add a contact, or replace an existing contact from a call record.
- **Messaging**  
Write a text message or a multimedia message. Read the current messages. Tap the relevant icon below the current message to write, reply to, or delete a message.
- **Phonebook**  
Add a new contact or a new group. Edit a contact or a group. You can also make a call or send a message to a contact.
- **Media player**  
Access the media player. You can tap  to configure the relevant settings, and tap  to play audio clips.
- **Widgets**  
Tap **Widgets** to access the widget tab.

## Navigating with the Main Menu



To navigate with the main menu:

1. In standby mode, tap .
2. Flick your finger left or right, and tap the desired application.
3. Flick your finger up or down, and tap the desired option.
4. Tap **Back** to return to the previous screen, press  to return to the main menu in an application screen or press  to return to standby mode in the main menu.



## Phone Lock

The phone lock protects your phone from unauthorized use. The preset phone unlock code is **1234**. By default, the phone lock is disabled. Once the phone lock is enabled, you must enter the phone unlock code each time you powered on the phone.

To enable the phone lock:

1. Tap  and select  > **Security settings** > **Phone security** > **Phone lock**.
2. Tap the text box to access the on-screen keypad.
3. Enter the phone code, and tap **OK**.

To change the present phone unlock code:

1. Tap  and select  > **Security settings** > **Phone security** > **Change password**.
4. Tap the text box to access the on-screen keypad.
5. Enter the present phone unlock code, tap **OK**.
6. Enter a new phone unlock code, and tap **OK**.
7. Enter the new phone unlock code again to confirm it.

## Mass Storage

When the phone is connected to a personal computer (PC) using a USB cable, **Mass storage** is displayed on the phone screen.

In **Mass storage mode**, you can manage the files stored on the phone and its microSD card from PC's file manager utility.

The phone and its microSD card are displayed as removable disks on the PC. You can perform the following operations:

- Double-click a disk to open it.
- Copy, paste, or delete files.
- Disconnect the phone from the PC.





- Ensure that you connect and disconnect the USB cable properly.
- Do not run the formatting command on the PC to format the phone memory; doing so may permanently damage the phone memory.
- You can transfer data and charge the battery by connecting the phone to the PC with the USB cable.

## PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) unlocks a blocked PIN. Both the PIN and the PUK are provided with the SIM card. For details, contact your service provider.

To enable the PIN lock:




1. Tap  and select  > **Security settings** > **SIM 1 security** or **SIM 2 security** > **PIN lock**.
2. Tap the text box to access the on-screen keypad.
3. Enter the PIN, and tap **OK**.

If you enter the incorrect PIN a specified number of times the phone prompts you to enter the PUK. If you enter the incorrect PUK a specified number of times, the SIM card will become



permanently invalid. If this occurs, contact your service provider for a new SIM card.



## Locking the Screen

To lock the screen, press  in standby mode.

To unlock the keypad, slide  to . You can also slide  to the up/ left/ right side to access the relevant application.









If the **Screen auto lock** function is enabled and the phone is in standby mode for a preset period, the phone automatically locks the keypad.

To enable the **Screen auto lock** function, tap  and select  > **Phone settings** > **Display** > **Screen auto lock**, and select the desired duration.

 When the screen is locked, you can press  to answer a call.


## 3 Voice Services


### Making a Call

1. Tap  and select  to access the onscreen keypad.
  2. Enter a phone number.
    - To make an international call, tap  key twice to enter the plus sign (+). Then enter the country or region code, area code, and phone number.
    - To call an extension number, enter the phone number, tap  three times to enter **P**, or four times to enter **W**, and enter the extension number.
  3. Press  to dial the number.
  4. Press  to end the call.
-  • You can also make a call from **Call logs**, **Phonebook**, or **Messaging** screen.
  - During a call, you can press  to adjust the in-call volume.

### Answering a call

When there is an incoming call, do the following:


- Press  or tap **Answer** to answer the call.

- Tap **Options** and select **Answer** to answer the call.
- Press  or tap **Reject** to reject the call.
- Tap **Silent** to mute the ringtone.












## 3 Text Input

### Changing the Text Input Mode

The current text input mode indicator is displayed in the upper left corner of the screen. Tap  on the input screen to switch between text input modes.



Indicator	Text Input Mode
<b>s ABC, s abc and s Abc</b>	Predictive input mode
<b>123</b>	Number input mode

- Tap  to hide the on-screen keyboard and tap the text box to access the on-screen keyboard.
- Tap  once to delete the last character entered, or tap and hold  to delete all the characters.
- Tap and hold , then tap  to switch between the alphanumeric input screen and the QWERTY input screen.
- On the QWERTY input screen, tap  to start a new paragraph and tap  to enter a space.
- On the alphanumeric input screen, tap  to access the number/symbol keypad and tap  to enter a space.









### Entering a Word

To enter a word on the QWERTY input screen, tap the keys labeled with the letters that spell the word.


### Entering Numbers

- On the QWERTY input screen, tap  to access the number/symbol keypad, and enter the desired numbers.
- On the alphanumeric input screen, tap  to access the number/symbol keypad, and enter the desired numbers.
- In number input mode, tap the desired number keys.





## Entering Symbols


- On the QWERTY input screen, tap  to access the symbol/number keypad to display commonly used symbols. If the symbol you want is not shown, tap    to access the complete symbol keypad to display all available symbols.
- On the alphanumeric input screen, tap  to access the symbol keypad, tap    to access the complete symbol keypad to display all available symbols.

## 4 Messaging





 By default, messages are stored in SIM card.


### Writing and Sending a Text Message


1. Tap  and select  > **Write message > Text message.**
2. Write the text message.
3. Tap phone number input box to enter the recipient's phone number. To add a recipient from the phonebook, tap **Options > Send**, tap  or tap  directly. To add multiple recipients, repeat this step.

4. Tap  to send the message directly or tap **Options** for the following options:
  - **Send**: sends the message to the recipient.
  - **Add recipient**: allows you to add the recipient.
  - **Insert symbol**: allows you to insert symbols.
  - **Input method**: allows you to change the input method.
  - **Input method settings**: allows you to configure the relevant settings of input method.
  - **Insert template**: allows you to add SMS templates to the message.
  - **Advanced**: allows you to insert numbers or names in the phonebook to the message.
  - **Save**: saves the message to **Drafts** and exits the **Write message** screen.



## Writing and Sending a Multimedia Message



1. Tap  and select  > **Write message** > **Multimedia message**.
2. Write the multimedia message.
3. Tap phone number input box to enter the recipient's phone number. To add a recipient from the phonebook, tap **Options** > **Send**, tap  or tap  directly. To add multiple recipients, repeat this step.

4. Tap  to send the message directly or tap **Options** for the following options:
- **Send:** sends the message to the recipient.
  - **Add recipient:** allows you to add the recipient.
  - **Insert symbol:** allows you to insert symbols.
  - **Input method:** allows you to change input method.
  - **Input method settings:** allows you to configure the relevant settings of input method.
  - **Header info:** allows you to select the **Cc** or **Bcc** function or to add a subject.
  - **Add picture:** adds a picture to the message.
  - **Add sound:** adds an audio clip to the message.
  - **Add video:** adds a video clip to the message.
  - **Preview MMS:** allows you to preview the message.
  - **Slide options:** adds a presentation slide to the message or sets the playing interval between presentation slides.
  - **Advanced:** allows you to insert numbers or names in the phonebook to the message.
  - **Save:** saves the message to **Drafts** and exits the **Write message** screen.

-  Contact your service provider to determine the availability of the Multimedia Messaging Service (MMS) and how to subscribe to the service.
- Your phone supports multimedia messages up to 300 KB.
- Open multimedia messages with caution. Objects in multimedia messages may contain viruses and malicious software that can damage your phone.

## 5 Voice Mail

1. Tap  and select  > **Message settings** > **Text message** > **SIM 1** or **SIM 2** > **Voicemail server**.
2. Tap the voicemail number, or select **Options** > **Call**.

 You can also call voicemail by tapping  in standby mode. Then tap and hold the **1** key.



## 6 Phonebook

### Creating a Contact



1. Tap  and select  > **Add new contact**.

2. Enter the contact information.
3. Save the contact.

### Searching for a Contact

1. Tap  and select .
2. Enter the first letter of the contact name in the search bar. Contacts who have names that start with that letter will be displayed.



### Setting the Preferred Storage

1. Tap  and select  > **Options** > **Phonebook settings** > **Preferred storage**.
2. Scroll to **SIM 1**, **SIM 2**, **Phone**, or **All** as desired.
3. Tap **OK**.

### Copying Contacts



You can copy contacts to the phone, the SIM card, or a file.

#### Copying One Contact

1. Tap  and select .
2. Enter the first letter of the contact name in the search bar. Contacts who have names that start with that letter will be displayed.
3. Tap the desired contact.
4. Select **Options** > **Copy**.

5. Select **To phone, To SIM 1, To SIM 2,** or **To file** to copy the contact to the desired location.



### Copying Multiple Contacts

1. Tap  and select  > **Options > Phonebook settings > Copy contacts.**
2. Tap the desired option, such as **From phone, From SIM 1** or **From SIM 2.** Then tap the destination option, such as **To phone, To SIM 1** or **To SIM 2.**
3. Tap the desired contacts to mark them, and tap **Options > Copy marked.**
4. Tap **Yes** to copy contacts to the desired location.



### Contact Group

You can create a contact group, such as family, classmates, or workmates, and add relevant contacts to the group. The members in the group share certain features, such as **Caller ringtone** and **Caller picture.**

To create a contact group:

1. Tap  > **Phonebook,** then tap  > **Groups > Add new group.**
2. Set **Group name, Caller picture,** and **Caller ringtone.**
3. Select **Options > Save.**

To add contacts to a contact group:

1. Tap  > **Phonebook,** then tap  > **Groups.**
2. Scroll to the contact group, and select **Options > View members.**













3. Tap **Add** and select the desired contact from **Phonebook** stored in the phone.
4. Tap **Options > Add marked** to add the contacts to the contact group.  
Tap **Options > Add members** to add multiple contacts to the contact group, repeat steps 3 and 4.

## Camera



The phone features a built-in 0.3-megapixel complementary metal-oxide-semiconductor (CMOS) camera.









 




To take a picture:

1. Tap  and select .
2. On the viewfinder screen, tap  to configure the relevant settings:
  - Tap  to adjust the exposure value.
  - Tap  to set **Scene mode**.
  - Tap  to set **Self-timer**.
3. Focus the camera and tap  to take a picture.
4. Tap  to delete the picture or forward it.
5. Tap  to exit the camera interface or tap  to return to the standby mode.

## Video Recorder

To record a video clip:

1. Tap  and select .















2. Tap  and  to switch **Video recorder**.
3. In video recording mode, tap  to configure the relevant settings:
  - Tap  to adjust the exposure value.
  - Tap  to set **Scene mode**.
  - Tap  to set **White balance**.
  - Tap  to set **Effects**.
  - Tap  to set **Record limit**.
  - Tap  to do advance settings like **Storage, Video quality, Contrast, Anti-flicker** and **Restore default settings**.
4. Tap  to start recording.
5. Tap  and  to pause or continue.
6. Tap  to stop recording and save the video clip.

## Media Player


The media player plays audio and video clips stored in the phone memory or on the microSD card.

If you want to hear the audio clips with enhanced quality sound, listen to them using the headset.

To play a clip:

1. Tap  and select .
2. Select an audio or video clip, and tap  to start playing the clip.  
When the clip is being played, you can:
  - Press  to adjust the volume.Tap  and  to advance or go back to the previous one or to the next clip.  
When playing a song, tap and hold  and  to fast forward and fast backward.
  - Tap  or  to pause or continue.
3. Tap  to:
  - **Current playlist:** allows you to view the current playlist.
  - **Go to library:** allows you to go back to the media player interface.
  - **Settings:** allows you to make player settings, audio settings and video settings.
  - **Details:** allows you to view more information of currentfile.
4. Tap  to return to the previous screen, press  to return to the main menu or press  to return to standby mode.

All audio and video clips can be automatically added to **Media player** when you first use this function.

 **Media player** only supports audio and video clips in .mp4, .3gp and .avi formats.

## Image Viewer

Tap  then select  to access Image viewer.

The image viewer allows you to manage all pictures stored in the phone memory or on the microSD card.

Tap  to:



- View, rename, and delete a picture.
- View picture information.
- Set the picture browsing style.
- Send a picture as MMS or via Bluetooth.
- Use a picture as the home screen wallpaper or lock screen wallpaper
- Sort pictures by name, type, time, or size.
- Delete all pictures.
- Select the preferred storage for pictures.

Tap  to view pictures in landscape mode.







 
## FM Radio

The headset cable also functions as an antenna when the frequency modulation (FM) radio is turned on. To ensure good radio reception, do not disconnect the headset from the phone or severely bend the headset cable.

To listen to the radio:

1. Connect the headset to the phone.
2. In standby mode, tap  and select .



When listening to the radio, you can:






- Tap  to turn the FM radio on or off.
- Press  to adjust the volume.
- Tap  or  to switch between channels in the saved channel list.
- Tap  to switch the headset mode and the loud speaker mode.
- Tap  to view the channel list.
- Tap  to configure settings, such as viewing or editing the channel list, manually setting a frequency and automatically searching for channels.

## Sound Recorder

The sound recorder functions as a digital recorder.




To record an audio clip:



1. Tap  and select .

2. Tap  to start recording.  
While the recording, you can tap  to pause or  to continue.
3. Tap  to stop recording and tap **Yes** to save the recorded clip as instructed.  
Tap  to configure settings, such as adding a new recorded clip, viewing the list of recorded clips, and setting the format or preferred storage for recorded clips.

## Mobile TV

To ensure reception of TV programs, pull out the TV & FM radio antenna.

1. In standby mode, tap  and select , select your country in **Select location** interface.
2. In channel list interface, tap **Options** to:
  - **Play**: allows you to play the current channel.
  - **Search**: allows you to reselect the country.
  - **Rename**: allows you to rename the channel.
  - **Delete**: allows you to delete the channel.
  - **Settings**: allows you to configure relevant settings of mobile TV.
3. When watching the TV, you can do the following:
  - Press  to adjust the volume.
  - Tap the playing screen to return to the channel list.

- Tap  to return to the main menu or tap  to return to standby mode.



## 8 WAP Browser

You can use your phone to access Wireless Application Protocol (WAP) sites and use WAP-based services. To browse WAP pages, you must subscribe to corresponding service from your service provider and configure your phone's relevant settings. For details about services and charges, contact your service provider.

You do not need to configure your data account and WAP settings to access WAP sites.



### Editing a Data Account

Data accounts supported by your service provider already exist. To edit a data account:

1. Tap  and select  > **Data accounts** > **SIM 1** or **SIM 2**.
2. Select a data account.
3. Select **Options** > **Edit**.
4. Configure the relevant settings based on the information provided by your service provider.
5. Tap **Options** > **Save**.



## Connecting to a WLAN(optional)

1. Tap  and select .
2. Turn on Wi-Fi.  
If this is the first time you are connecting to a WLAN, you are prompted to turn on Wi-Fi.  
If this is not the first time you are connecting to a WLAN, go to the next step.
3. Select the desired WLAN.  
If you have turned on **WLAN**, your phone automatically searches for available WLANs.
4. Tap **Options**, for the following options:
  - **Connect**: connects to the selected WLAN.
  - **Add**: manually adds a WLAN.
  - **Define access point**: allows you to view and edit WLAN list.
  - **WLAN status**: allows you to view your phone's Media Access Control (MAC) address.
  - **Disable WLAN**: turns off **WLAN**.
  - **Settings**: configures relevant settings of WLAN.
  - **Power save mode**: select relevant power save mode.
  - **Refresh**: searches for available WLAN.

## Configuring WAP Settings



To configure WAP settings:

1. Tap  and select .
2. Tap **Settings** > **Data account** > **SIM 1** or **SIM 2**.

3. Select an account.
4. Tap **OK**.


### Accessing a Website

To access a website:

1. Tap  and select  > **Search or input URL**.
2. Enter the URL of the desired website.
3. Tap **Options** > **Done**.

## 9 Bluetooth

Your phone supports Bluetooth. You can transfer data between your phone and other Bluetooth devices, and talk on the phone using a Bluetooth headset.

 You can turn on Bluetooth by configuring Bluetooth settings.


### Connecting a Bluetooth Headset to Your Phone

To connect a Bluetooth headset to your phone, do the following:

1. Tap  and select  > **Power** > **On** to turn on Bluetooth.



2. Select **Search audio device** to search for available Bluetooth headsets.
3. Scroll to the desired Bluetooth headset and tap **Pair**.
4. Enter the password to pair the Bluetooth headset with your phone.

When the Bluetooth headset is connected to your phone, the headset icon is displayed on the standby screen, indicating that you can use the headset.

 A Bluetooth headset is not included in the product package and you must purchase it separately.


## Transferring Data

To transfer data, do the following:

1. Tap  and select  > **Power** > **On** to turn on Bluetooth.
2. Select **My device** > **Search new device** to search for available Bluetooth devices.
3. Scroll to the desired Bluetooth device and tap **Pair**.  
When you pair your phone with the device for the first time, a password is required.
4. Transfer data between your phone and the Bluetooth device.

## 10 File Manager

Your phone provides a file manager. You can use **File manager** to organize files stored on your phone and microSD card. You can also use the manager to view the pictures, listen to music, and watch videos.



To access **File manager**, tap  and select .

## 11 Tools

### Alarms



You can set up to five alarms on your phone.

To set an alarm:

1. Tap  and select .
2. Scroll to the desired alarm, enable the alarm, and set the alert time, repeat mode and alert type.  
Once the alarm is enabled, the alarm icon is displayed on the standby screen.



### Calendar

You can add events to the calendar to keep track of important events.

To access **Calendar**, tap  and select .



## Tasks


You can add tasks to the phone. You can also view, edit, and delete tasks as needed.

To access **Tasks**, tap  and select .



Once a task is added, the phone rings at the preset time as a reminder of the task.

## Calculator



To access **Calculator**, tap  and select .

Enter the numbers to add, subtract, multiply, or divide by tapping the corresponding keys. Tap  to obtain the result.

# 12 Java

To access **Java**, tap  and select .


You can install third-party Java applications to expand your phone's application and game capabilities.

-  • Not all Java applications are compatible with your phone. If you have trouble installing or running a Java application, press  to return to the standby mode, and remove the application from your phone.
- Certain Java applications require network connections. Therefore, ensure that your phone has network access.


### Installing a Java Application

1. Select a Java installation file in .jar or .jad format from **Phone** or **Memory card**, tap **Options**, and select **Install** to start the installation.
2. Tap **Yes** to confirm the certification information.
3. Select **Phone** or **Memory card** to install the Java application. When the installation is complete, the message "Installed" is displayed.

### Running a Java Application

1. Tap  and select the Java application.
2. Scroll to the desired Java application.
3. Select **Options** > **Launch** to run the Java application.


### Removing a Java Application

1. Tap  and select the Java application.
2. Select and hold the desired Java application.
3. Select it again and the message "Uninstall?" is displayed, select **Yes**.

# 13 Chat Functions

The built-in social networking service (SNS) applications **Facebook** and **Twitter** on your phone allow you to send instant messages and files any time.

To use **Facebook**:

1. Tap  and select **Facebook**.
2. Enter your registered email address and password.
  - Check that your phone has Internet access before you using the chat applications.
  - Before saving the chat history, ensure that a microSD card has been inserted.
  - Follow the same procedure to use **Twitter**.

# 14 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

## Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

## Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

## Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause



an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

#### Traffic Security

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device

may hurt you owing to the strong force when the air bag inflates.

- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

#### Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 40°C while the device is being charged. Keep the ambient temperature

between 0°C to 40°C for using the device powered by a battery.

#### Prevention of Hearing Damage

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

#### Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

#### Accessories

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

#### Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.

- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
- Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or reference instruction supplied with your device.

- Notice: For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

#### Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may

be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.

- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

#### Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

#### Certification Information (SAR)

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 0,589 W/kg, and when properly worn on the body is 1,290 W/kg.

The SAR limit also adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue. The highest SAR value for this device type when tested at the ear is 0,393 W/kg, and when properly worn on the body is 1,300 W/kg.

#### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

#### EU Regulatory Conformance

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the Web site [www.huaweidevice.com/certification](http://www.huaweidevice.com/certification).

CE 0678

Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

**Norway:** This subsection does not apply for the geographical area within a radius of 20 km from the centre of Ny-Ålesund.



To protect your hearing, avoid listening to audio at loud levels for prolonged periods of time.



Please visit [www.huaweidevice.com/worldwide/support/hotline](http://www.huaweidevice.com/worldwide/support/hotline) for recently updated hotline and email address in your country or region.

Version: 01 NO.: