

User Guide

Glory

Welcome to HUAWEI

Model: H867G

TracFone part number: H02230TXH

Contents

1	Read Before Proceeding	1
1.1	Safety Precautions.....	1
1.2	Personal Information and Data Security	2
1.3	Legal Notice.....	3
2	Getting Started.....	6
2.1	Appearance	6
2.2	Setting Up Your Mobile Phone	7
2.3	Power On or Off Your Mobile Phone	10
2.4	Using the Touchscreen.....	11
2.5	Locking and Unlocking the Screen	12
2.6	Home Screen.....	13
2.7	Applications and Widgets	17
2.8	Using a microSD Card.....	18
3	Calling.....	19
3.1	Making a Call.....	19
3.2	Answering or Rejecting a Call.....	20
3.3	Other Operations During a Call	21
4	People.....	22
4.1	Opening the People Application	22
4.2	Importing Contacts from a SIM Card	22
4.3	Adding a Contact	23
4.4	Adding a Contact to Your Favorites.....	23
4.5	Searching for a Contact.....	23
4.6	Editing a Contact	23
4.7	Communicating with Your Contacts.....	24
4.8	Deleting a Contact	24
4.9	Backing Up and Synchronizing Contacts.....	25
4.10	Managing Groups	25

4.11	Joining and Separating Contacts.....	26
4.12	Sending Contacts	27
5	Text Input.....	27
5.1	Displaying the Keyboard.....	27
5.2	Choosing an Input Method.....	27
5.3	Using the Android Keyboard.....	28
5.4	Using the Swype Keyboard	29
5.5	Editing Text.....	30
5.6	Using the Landscape Keyboard.....	30
5.7	Customizing Your Keyboard Settings	30
6	Messaging	31
6.1	Opening Messaging.....	31
6.2	Creating and Sending a Text Message	31
6.3	Creating and Sending a Multimedia Message	31
6.4	Opening and Viewing a Multimedia Message.....	32
6.5	Replying to a Message	32
6.6	Searching for a Message.....	33
6.7	Customizing Message Settings	33
7	Getting Connected.....	33
7.1	Mobile Networks	33
7.2	Wi-Fi®.....	34
7.3	Controlling Data Usage.....	34
7.4	Browser.....	35
7.5	Bluetooth®	37
8	Email.....	38
8.1	Adding an Email Account.....	38
8.2	Switching Between Email Accounts.....	39
8.3	Viewing an Email Message.....	39
8.4	Saving an Email Attachment.....	39
8.5	Creating and Sending an Email Message	39

8.6	Replying to an Email Message	40
8.7	Deleting an Email Account.....	40
8.8	Changing Email Account Settings	40
9	Entertainment	41
9.1	Taking Photos and Recording Videos	41
9.2	Using the Gallery	42
9.3	Listening to the FM Radio.....	43
10	Google Services	44
10.1	Creating a Google Account.....	44
10.2	Gmail	45
10.3	Talk	46
10.4	Maps	48
10.5	YouTube	49
10.6	Play Store	49
11	Synchronizing Information	50
11.1	Managing Your Accounts.....	51
11.2	Customizing Your Account Synchronization.....	52
12	Using Other Applications	53
12.1	All Backup.....	53
12.2	Calendar	54
12.3	File Manager.....	56
12.4	Clock.....	58
12.5	Calculator.....	59
12.6	Notes	59
13	Managing Your Mobile Phone	59
13.1	Setting the Date and Time	59
13.2	Setting the Display	60
13.3	Setting Ringers	60
13.4	Setting Phone Services	61

13.5	Adjusting the Speech Rate	62
13.6	Protecting Your Mobile Phone	62
13.7	Managing Applications.....	63
13.8	Resetting Your Mobile Phone	64
14	Appendix.....	65
14.1	FAQs.....	65
14.2	Warnings and Precautions.....	66

1 Read Before Proceeding

1.1 Safety Precautions

Please read the safety precautions carefully to ensure the correct use of your mobile phone.



Do not crash, throw, or puncture your mobile phone. Avoid the falling, squeezing, and bending of your mobile phone.



Do not use your mobile phone in a moist environment, such as the bathroom. Prevent your mobile phone from being soaked or washed in liquid.



Do not switch on your mobile phone when it is prohibited to use phones or when the phone may cause interference or danger.



Do not use your mobile phone while driving.



Follow any rules or regulations in hospitals and health care facilities. Switch off your mobile phone near medical apparatus.



Switch off your mobile phone in aircraft. The phone may cause interference to control equipment of the aircraft.



Switch off your mobile phone near high-precision electronic devices. The phone may affect the performance of these devices.



Do not attempt to disassemble your mobile phone or its accessories. Only qualified personnel are allowed to service or repair the phone.



Do not place your mobile phone or its accessories in containers with a strong electromagnetic field.



Do not place magnetic storage media near your mobile phone. Radiation from the phone may erase the information stored on them.



Do not put your mobile phone in a high-temperature place or use it in a place with flammable gas such as a gas station.



Keep your mobile phone and its accessories away from children. Do not allow children to use your mobile phone without guidance.



Use only approved batteries and chargers to avoid the risk of explosions.



Observe any laws or regulations on the use of wireless devices. Respect others' privacy and legal rights when using your wireless device.



Strictly follow the relevant instructions of this manual while using the USB cable. Otherwise your mobile phone or PC may be damaged.

1.2 Personal Information and Data Security

The use of some functions or third-party applications on your device could result in your personal information and data being lost or becoming accessible to others. Several measures are recommended to help you protect personal and confidential information.

- Place your device in a safe area to prevent it from unauthorized use.
- Set your device screen to lock and create a password or unlock pattern to open it.

- Periodically back up personal information kept on your SIM/UIM card, memory card, or stored in your device memory. If you change to a different device, be sure to move or delete any personal information on your old device.
- If you are worried about viruses when you receive messages or emails from a stranger, you can delete them without opening them.
- If you use your device to browse the Internet, avoid websites that might pose a security risk to avoid theft of your personal information.
- If you use services such as Wi-Fi tether or Bluetooth, set passwords for these services to prevent unauthorized access. When these services are not in use, turn them off.
- Install or upgrade device security software and regularly scan for viruses.
- Be sure to obtain third-party applications from a legitimate source. Downloaded third-party applications should be scanned for viruses.
- Install security software or patches released by Huawei or third-party application providers.
- Some applications require and transmit location information. As a result, a third-party may be able to share your location information.
- Your device may provide detection and diagnostic information to third-party application providers. Third party vendors use this information to improve their products and services.
- If you have concerns about the security of your personal information and data, please contact mobile@huawei.com.

1.3 Legal Notice

Copyright © Huawei Technologies Co., Ltd. 2013. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd. and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders.

Trademarks and Permissions



and **HUAWEI** are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Android is a trademark of Google Inc.

The *Bluetooth*[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Huawei Technologies Co., Ltd. is under license.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and therefore may not be activated or may be limited by local network operators or network service providers. Thus the descriptions herein may not match exactly the product or its accessories you purchase.

Huawei Technologies Co., Ltd. reserves the right to change or modify any information or specifications contained in this manual without prior notice and without any liability.

Third-Party Software Statement

Huawei Technologies Co., Ltd. does not own the intellectual property of the third-party software and applications that are delivered with this product. Therefore, Huawei Technologies Co., Ltd. will not provide any warranty of any kind for these third-party software and applications. Neither will Huawei Technologies Co., Ltd. provide support to customers who use these third-party software and applications, nor be responsible or liable for the functions of these third-party software and applications.

Third-party software and applications services may be interrupted or terminated at any time. Huawei Technologies Co., Ltd. does not guarantee that any content or service would be maintained for any period during its availability. Third-party service providers provide content and services through network or transmission tools outside of the control of Huawei Technologies Co., Ltd. To the greatest extent permitted by applicable law, it is explicitly stated that Huawei Technologies Co., Ltd. shall not compensate or be liable for services provided by third-party service providers, or the interruption or termination of third-party contents or services.

Huawei Technologies Co., Ltd. shall not be responsible for the legality, quality, or any other aspects of any software installed on this product, or for any uploaded or downloaded third-party works, such as texts, images, videos, or software. Customers

shall bear the risk for any and all effects, including incompatibility between the software and this product, which result from installing software or uploading or downloading the third-party works.

This product uses the open-source Android™ platform. Huawei Technologies Co., Ltd. has made necessary changes to the platform. Therefore, this product may not support all the functions that are supported by the standard Android platform or may be incompatible with third-party software. Huawei Technologies Co., Ltd. shall not be liable for any of such situation.

DISCLAIMER OF WARRANTIES

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

LIMITATIONS OF LIABILITY

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL HUAWEI TECHNOLOGIES CO., LTD. BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF HUAWEI TECHNOLOGIES CO., LTD. ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS DOCUMENT SHALL BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.

Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and be responsible to obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

Privacy Policy

Please refer to our privacy policy on our websites for the information about how we protect your personal information.

2 Getting Started

- ⓘ All the pictures in this guide are for your reference only. Your phone's actual display features may be different to those described here, depending on its software version.

2.1 Appearance

2.1.1 Key Functions at Your Fingertips

-
- Press and hold to power on your mobile phone.
 - When your mobile phone is powered on, press and hold this button to display the options menu. You can then choose to power off the phone or perform shortcut operations.
 - Press to lock the screen when your mobile phone is active.



Touch to open the menu on an active screen.



- Touch to return to the Home screen.
- Touch and hold to display recently used applications.

 


- Touch to return to the previous screen or exit the application you are running.
 - Touch to hide the keyboard.
-

2.2 Setting Up Your Mobile Phone

2.2.1 Installing the SIM Card


There are two steps to install the SIM card:

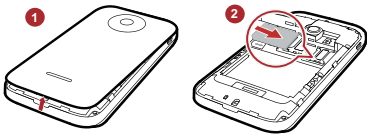

1. Remove the battery cover.
2. Insert the SIM card.


2.2.2 Installing the microSD Card

 Your mobile phone is already equipped with a large-volume built-in embedded MultiMediaCard (eMMC). If you want to expand your phone memory, you can also insert a microSD card.

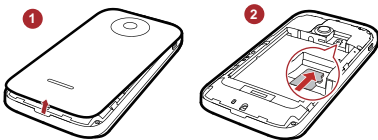

1. Remove the battery cover.
2. Insert the microSD card into the card slot as shown in the diagram.

 
2.2.3 Installing the Battery

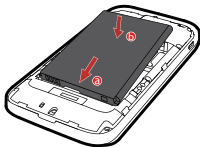


1. Angle the edge labeled **a** (with the contacts) into the bottom end of the battery compartment.
2. Push the edge labeled **b** into the compartment until the battery clicks firmly into place.

2.2.4 Charging the Battery

 Before charging the battery, ensure that it has been properly installed on your phone.

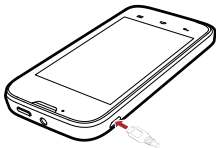


1. Connect the USB cable that came with your mobile phone to the charger.
2. Connect the other end of the USB cable to your mobile phone. Then, to start charging, plug the charger into an electrical outlet.

If you charge your mobile phone while it is powered on, the battery icon on the notification bar indicates the charging status. When the battery icon changes to , your mobile phone is fully charged.

Status Indicator

 The color of the status indicator tells you the status of your mobile phone's battery.



Green: Fully charged (when connected to charger).

Orange: Charging in progress (when connected to charger).

Red: Battery low.



2.2.5 Important Information About the Battery

- If the battery has not been used for a long time, you may not be able to power on your mobile phone immediately after you begin charging the battery. Allow the battery to charge for a few minutes with the phone powered off before attempting to power the phone on.
- As it ages, the battery's performance will degrade, in particular it will not hold charge as it did when it was new. When the battery life becomes noticeably shorter than usual after being charged properly, replace the battery with a new one of the same type.
- Using data services increases the power consumption of the phone and will therefore reduce the length of time that the phone can be used between battery charges.
- The time required to fully charge the battery depends on the ambient temperature and the age of the battery.
- When the battery power is low, the phone will alert you and display a message. When the battery power is almost exhausted, your phone will power off automatically.

2.2.6 Power Saving Tips


The longevity of battery power depends on the network to which you connect, and how you use your mobile phone.

Try the following to conserve battery power:

- When your mobile phone is not in use, turn off the screen backlight.
- Reduce the time it takes for your screen backlight to turn off when your phone is idle.
- Lower the screen brightness.
- Turn off Bluetooth when you are not using it. Only make your phone visible to other Bluetooth devices when you need to establish a Bluetooth connection.
- Turn off Wi-Fi when you are not using it.
- Turn off your phone's GPS receiver when you are not using it.
- Lower the volume.
- Close power-draining programs, when you do not need them.
- Turn off the data service.

2.3 Power On or Off Your Mobile Phone

2.3.1 Powering Your Mobile Phone On

Press and hold . If you have protected your mobile phone with a personal identification number (PIN), enter it before using the mobile phone.

2.3.2 Setting Up Your Mobile Phone

The first time you power on your mobile phone, the phone displays a setup wizard to help you set up the phone.

The setup wizard helps you:

- Create or sign in to your account
- Make some initial decisions about how you want to use your mobile phone

2.3.3 Powering Off Your Mobile Phone

1. Press and hold  to display the options menu.

2. Touch **Power off**.

If **Quick Pwr On** is enabled, the mobile phone will enter deep sleep mode. If **Quick Pwr On** is disabled, touch **OK** to power off the phone.

2.3.4 Turning On Fast Boot

1. Touch  > **Settings**.
2. Touch the button next to **Quick Pwr On**.

 Do not turn on **Quick Pwr On** while on an airplane.

2.3.5 Restarting Your Mobile Phone

1. Press and hold  to display the options menu.
2. Touch **Restart**.
3. Touch **OK**.

2.3.6 Using Airplane Mode

Some locations may require you to turn off your phone's wireless connections. Rather than powering off your phone, you can place it in **Airplane mode**.

1. Press and hold  .
2. Touch **Airplane mode** in the options menu.

2.4 Using the Touchscreen

2.4.1 Touchscreen Actions



Touch: Tap the screen with your finger to select an item, confirm a selection, or start an application.



Touch and hold: Touch an item with your finger and do not release it until the mobile phone responds. For example, to open the options menu for the active screen, touch and hold the screen until the menu appears.



Flick: Move your finger either vertically or horizontally across the screen.



Drag: Touch and hold the desired item with your finger. To move an item, drag the item to any part of the screen. You can drag an icon to move or delete it.


2.4.2 Rotating Your Mobile Phone Screen

The orientation of most screens will change to landscape or portrait view when you rotate your phone sideways.


- On the Home screen, touch  > **Settings** > **Display** > **Auto-rotate screen** to disable this function.

 
2.5 Locking and Unlocking the Screen


2.5.1 Locking the Screen

- When your phone is on, press  to lock the screen. When the screen is locked, you can still receive messages and calls.
- If your phone is idle for a while, the screen will lock automatically.

 
2.5.2 Unlocking the Screen


1. Press  to wake up the screen.
2. Drag the unlocking icon to the small open lock, the screen is unlocked.

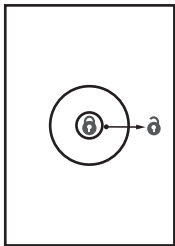





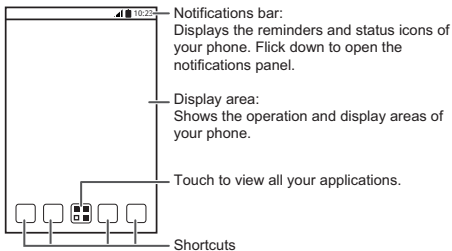





















-  If you have set up a screen unlock pattern, you will be prompted to draw the pattern on the screen to unlock it.















2.6 Home Screen



-  Touch and hold a shortcut until the mobile phone vibrates, you can then drag it to your desired location or move it to the trash. You can also drag an icon from another area of the screen to the shortcut position.

2.6.1 Notification and Status Icons


	Signal strength		No signal
	Connected to GPRS mobile network		GPRS in use
	Connected to EDGE mobile network		EDGE in use
	Connected to 3G mobile network		3G in use
	Roaming		Airplane mode
	Bluetooth on		Receiving location data from GPS
	Vibration mode		Ringer silenced
	Call muted		Charging battery
	Battery full		Battery extremely low
	Call in progress		Missed call
	Alarm enabled		New mail from Gmail
	New text message		Problem with text or multimedia message delivery
	New chat message		New email

	New voicemail		Connected to a PC
	Open Wi-Fi network available		Upcoming event
	Uploading		Downloading
	Phone storage space is getting low		Sign-in or synchronization problem
	Preparing the microSD card		More undisplayed notifications
	Synchronizing data		Synchronization failed
	Connected to a VPN		Disconnected from a VPN

2.6.2 Notification Panel

Your mobile phone will notify you when you receive a new message or there is an upcoming event. The notification panel also informs you of alarms and settings. Open the notification panel to see your network operator or to view a message, reminder, or event notification.

 
Opening the Notification Panel

1. When a new notification icon appears on the notification bar, place your finger on the notification bar and flick down to open the notification panel.
2. On the panel, you can:
 - Touch a notification to open the corresponding application.
 - Flick left or right on a notification to delete it.
 - Touch the cross sign (×) to clear all notifications.
 - Touch  to display the settings screen.


Closing the Notification Panel

Touch and hold the bottom of the panel. Then flick up to close it.

2.6.3 Viewing Other Parts of the Home Screen

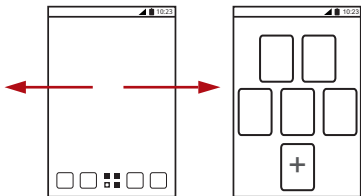


Flick your finger left or right across the Home screen.

Touch  to view thumbnails of the Home screen and its extensions. Touch a thumbnail to open the screen.

2.6.4 Customizing the Home Screen

Adding a New Home Screen Item

1. On the Home screen, touch  to display the application list.
2. Press and hold an application icon, and then drag the icon to a blank area on the Home screen.


Moving a Home Screen Item






1. Touch and hold the item on the Home screen that you want to move until your mobile phone vibrates.
2. Without lifting your finger, drag the item to the desired position on the screen, and then release it.

Removing an Icon from the Home Screen


1. Touch and hold an item on the Home screen that you want to remove until your mobile phone vibrates.
2. Without lifting your finger, drag the item to the trash can. Wait until the item and the trash can turn red.
3. Release the item.

2.6.5 Service Shortcuts


1. Open the notification bar.
2. Touch  at the top of the screen to switch data services on or off.

 You can also touch , ,  or  to turn the corresponding services on or off.


2.6.6 Changing the Wallpaper

1. On the Home screen, touch  > **Wallpaper**.
2. Touch the following menu items to select a picture and set it as the wallpaper:
 - **Gallery**
 - **Live Wallpapers**
 - **Wallpapers**





2.6.7 Changing the Theme

On the Home screen, touch  > **Theme settings** to select a theme.

2.7 Applications and Widgets

The Application screen holds icons for all of the applications on your phone. You can touch  on the Home screen to open the application screen.

2.7.1 Moving Icons on the Application Screen

1. On the application screen, touch .
 2. Touch and hold the icon you want to move on the application screen.
 3. Without lifting your finger, drag the icon to the desired location, and then release it.
-  To move more icons, repeat steps 2 and 3.
4. Touch  or  to save.