



HUAWEI T156

GSM Mobile Phone

USER GUIDE

Copyright © 2008 Huawei Technologies Co., Ltd.

 


HUAWEI and other Huawei trademarks are the trademarks or registered trademarks of Huawei Technologies Co., Ltd. in the People's Republic of China and certain other countries. All other trademarks mentioned in this manual are the property of their respective holders. The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute the warranty of any kind, express or implied.



 




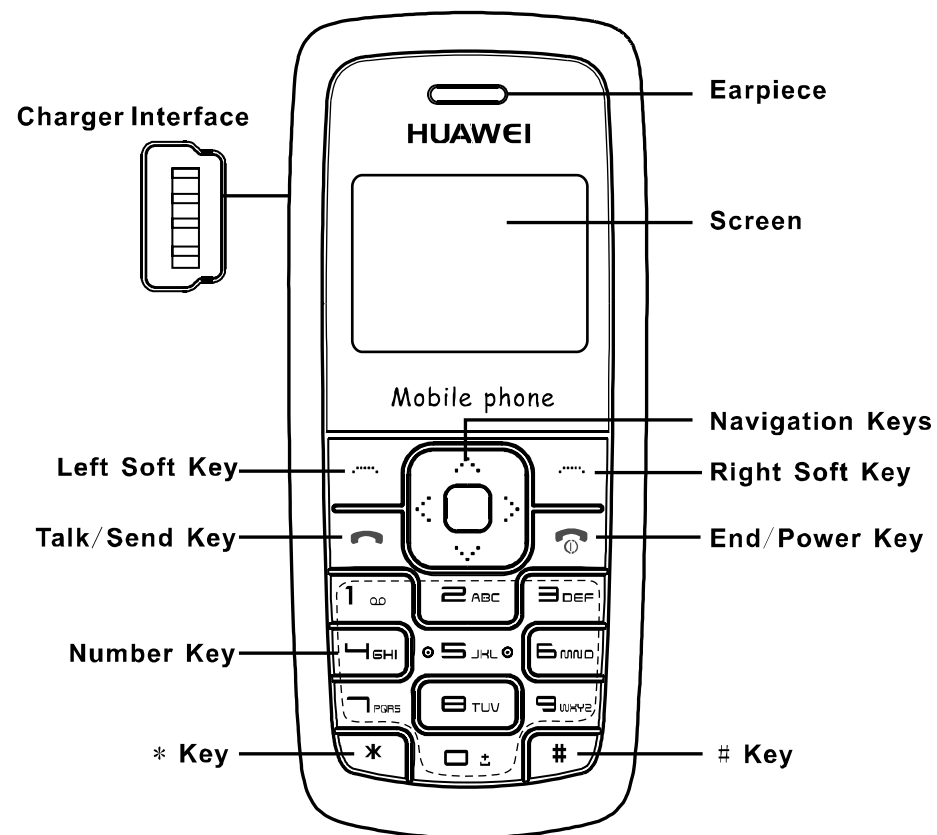



Huawei Technologies Co., Ltd.






Address: Huawei Industrial Base, Bantian, Longgang, Shenzhen 518129, People's Republic of China
Tel: +86-755-28780808 **Global Hotline:** +86-755-28560808
E-mail: mobile@huawei.com **Website:** www.huawei.com

Your Phone
















Keys and Functions

Press...	To...
	<ul style="list-style-type: none"> View the dialed calls in the standby mode. Make or answer a call.
	<ul style="list-style-type: none"> Power on or off the phone (by pressing and holding it). End a call or reject an incoming call. Return to the standby .
	Select the option displayed on the lower left corner of the screen.
	Select the option displayed on the lower right corner of the screen.
	<ul style="list-style-type: none"> Display the Inbox interface  , the Alarm clock interface  , the Call Records interface  , and the Calculator interface  in the standby mode.
	<ul style="list-style-type: none"> During a call, you can press  to increase the volume and press  to decrease the volume.

Press...	To...
	<ul style="list-style-type: none"> Enter numbers, letters and symbols. Speed-dial phone numbers in the standby mode (by pressing and holding the 2-9 keys).
	<ul style="list-style-type: none"> Enter the number of a contact quickly in the standby mode (by pressing one or more of the 1-9 keys and then pressing #). Enter the voice mailbox in the standby mode (by pressing and holding the 1 key).
	<ul style="list-style-type: none"> Enter the * symbol. After entering a telephone number and holding this key (then you will see "P" on the screen), enter the extension number. Display the list of punctuations in the editing mode.
	<ul style="list-style-type: none"> Enter the # symbol. Select a text input mode in the editing mode. Lock the keypad in the standby mode (by pressing and holding this key). If the keypad is already locked, press  and then press this key to unlock the keypad.

Screen Icons

Icon	Description
	It indicates the signal strength.
	There are new messages.
	The phone is roaming.
	Call forward is activated.
	Alarm is activated.
	Keypad is locked.
	It indicates the battery charge level.
	The Standard profile is activated.
	The Conference profile is activated.
	The Outdoor profile is activated.
	The Mute profile is activated.
	The Customize profile is activated.
	There are missed calls.

Menu Tree


Short Message	Contacts	Call Records
Create message	Browse	Received calls
Inbox	Create	Dialed calls
Outbox	Delete all records	Missed calls
Draftbox	Memory status	Delete all
Voicemail	Speed dial	Call duration
Broadcast message		
Storage status		
Settings		
Delete all		
Settings	Applications	
Profiles	Alarm clock	
Display settings	Memo	
Phone settings	Calculator	
Call settings	Calendar	
Network settings	Stopwatch	
Security settings		
Restore factory settings		

 
Installing the SIM Card and Battery

Consult the network operator whether a SIM card is needed.
Make sure that the golden area on the SIM card is facing downwards and the cut-off edge is correctly aligned with the card holder.



 
Removing the Battery and SIM Card

If the phone is powered on, press and hold  for about three seconds to power it off. Then remove the battery and SIM card as follows. Press down the plastic film on the right of the SIM card holder and then take out the SIM card.

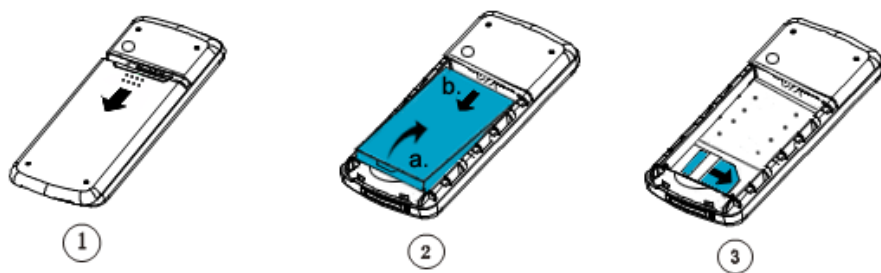



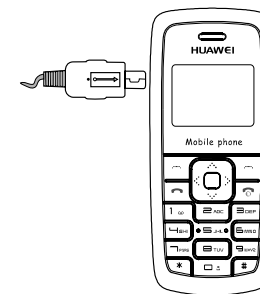


Charging the Battery


1. Connect the charger to the charger interface on the side of your phone.
Make sure that the arrow on the charger connector faces the left side of the phone.



2. Connect the charger to an AC power socket.
3. During the charging, the charging icon is displaying in animation.
4. When the charging icon becomes static, the battery is fully charged. Disconnect the charger from the AC power socket.
5. Disconnect the charger from the phone.



Using the Function Menu


1. In the standby mode, press  (**Menu**) to display the **Menu** interface.
2. Press  to scroll to a menu item.
3. Press  (**Select**) to display the menu.
4. Display the submenu in either of the ways:
 - Press  to scroll to a submenu item and press  (**Select**) to display the submenu.

- Press the number key corresponding to the number of a submenu to display it.
5. Press  (**Back**) to return to the previous menu or quit the function menu.


 

To return to the standby mode, Press .

Making a Call







1. In the standby mode, enter a phone number.
- To make an international call, press and hold  to enter the international long distance code of "+". Then enter the number to be dialed, in the format of "country code + region code + phone number".
- To call a number with an extension, press and hold  to insert "P" between the phone number and the extension number.

2. Press  to dial the number.

3. Press  to end the call.

- Note**
- When the phone is locked, enter the lock code to unlock the phone first; otherwise, you can make emergency calls or answer calls only.
 - In the standby mode, press  to view the dialed calls. Select a record and press  to dial.
 - Select a contact from the phonebook and press  to dial.

Answering a Call

When there is an incoming call, you can press  or  (**Accept**) to answer it, or press  (**Reject**) or  to reject it. If the **Anykey answer** function is activated, you can press any key except  and  to answer an incoming call.

Phone Lock

The phone lock protects your phone from unauthorized use. The default phone lock code is 0000. You can change it into any numeric string of 4 to 8 digits.

If the phone lock function is enabled, you need to enter the correct phone lock code when the phone is powered on or in the standby mode.



PIN and PUK



The personal identity number (PIN) protects your SIM card from unauthorized use. The PIN unlocking key (PUK) can unblock the blocked PIN. Both PIN and PUK are delivered with the SIM card. For details, consult your service provider.

If you enter wrong PINs for a specified number of times consecutively, the phone asks you to enter the PUK code.

If you enter wrong PUKs for a specified number of times consecutively, the SIM card is invalidated permanently. Contact your service provider for a new card.


Locking the Keypad

In the standby mode, press and hold  to lock the keypad. When the keypad is locked, you can press  to answer an incoming call or make emergency calls.






You can press  and  to unlock the keypad.

When the **Keypad lock** function is enabled, if there is no operation on the phone for a preset period in the standby mode, the keypad is locked automatically.

Changing the Text Input Modes




The indicator of the current text input mode is displayed on the screen. In the editing mode, press  to change the input mode.

Note

- In the editing mode, press  (**Delete**) once to delete the letter on the left of the cursor. Press and hold  (**Delete**) to delete all the letters at a time.
- In the "Eng" input mode, press  to enter a space. In the "ABC" or "abc" input mode, press  once to enter a space, twice to enter "0".
- In the "ABC" or "abc" input mode, press  repeatedly to select and enter the commonly used punctuations.

Entering English (Eng)


In the "Eng" input mode, do the following to enter the English letters:

1. Press each key only once according to the spelling sequence of the desired word. Then the phone displays the commonly used word according to the numeric sequence of key presses.
2. Press  to scroll to the desired word.
3. Press  to switch the selected characters between upper case and lower case.
4. Press  to enter the word.

Entering English (ABC and abc)

In the "ABC" or "abc" input mode, you can press a key labeled the desired letters once to enter the first letter on the key, twice to enter the second letter on the key, and so on.



 
If the letter you want to enter is on the same key as the previous one, you can enter the letter only after the cursor appears again or after

you press  to move the cursor to the next space.

Entering Numbers

- In the "123" input mode, press a key labeled the desired number.
- In the "ABC" or "abc" input mode, press a numeric key repeatedly until the desired number appears on the screen.

Entering Symbols

1. In any input mode, press  to display a symbol list.
2. Press  to scroll to the desired symbol.
3. Press  to enter the selected symbol.

Warnings and Precautions

Electronic Device

- Power off your phone near high-precision electronic devices. The phone may affect the performance of these devices.
- Such devices include hearing aids, pacemakers, fire alarm systems, automatic gates, and other automatic-control devices. If you are using an electronic medical device, consult the device manufacturer to confirm whether the radio wave affects the operation of this device.
- Pacemaker manufacturers recommend that a minimum separation of 15cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hospital

Pay attention to the following points in hospitals or health care facilities:

- Do not take your phone into the operating room (OR), intensive care unit (ICU), or coronary care unit (CCU).
- Do not use your phone at places for medical treatment where phone use is prohibited.
- When using your phone near someone who is suffering from a heart disease, turn down the ring tone volume or vibration properly so that it does not affect the person.

Area with Inflammables and Explosives

In any area with inflammables and explosives, power off your phone and do not take out, install or charge the battery, to avoid explosion and fire. Areas with inflammables and explosives include, but are not limited to:

- Gas station
- Area for storing fuels (such as the bunk under the deck of a ship)
- Device/Vehicle for transporting and storing fuels or chemical products
- Area with chemical substances and particles (such as: granule, dust, metal powder) in the air
- Area with the sign of "Explosives"
- Area with the sign of "Power off bi-direction wireless equipment"
- Area where it is generally suggested to stop the engine or a vehicle

Traffic Safety

- Please observe local laws and regulations on phone use. Do not use your phone while driving to avoid traffic accident.
- Secure the phone on its holder. Do not place the phone on the seat or other places where it can get loose in a sudden stop or collision.
- Use the phone after the vehicle stops at a safe place.
- If your phone supports the hands-free function, or the phone can be used with earphones, or there is any vehicle-mounted equipment with the hands-free function, use them in emergency.
- Do not place the phone over the air bag or in the air bag outspread area. Otherwise, the phone may hurt you owing to the strong force when the air bag inflates.
- Observe the rules and regulations of airline companies. When boarding or approaching a plane, power off the phone and take out the battery. In areas where phone use is prohibited, power off the phone. Otherwise, the radio signal of the phone may disturb the plane control signals. Power off your phone before boarding an aircraft.

Storage Environment

- Do not place magnetic storage media such as magnetic cards and floppy disks near the phone. Radiation from the phone may erase the information stored on them.
- Do not put your phone, battery, or other accessories in containers with strong magnetic field, such as an induction cooker and a microwave oven. Otherwise, circuit failure, fire, or explosion may occur.
- Do not leave your phone, battery, or charger in a very hot or cold place. Otherwise, malfunction of the products, fire, or explosion may occur.
- Keep the ambient temperature between 0°C and 45°C while the battery is being charged. Keep the ambient temperature between -20°C and 60°C for storing the battery. If the ambient temperature is too low (especially below 0°C) or too high, the capacity and life of the battery will be reduced.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the phone.
- Do not subject your phone, battery, and charger to serious collision or shock. Otherwise, battery leakage, phone malfunction, overheat, fire, or explosion may occur.
- Do not put your phone in the back pocket of your trousers or skirt, to avoid phone damage while seated.

Children Safety

- Put your phone, battery, and charger in places beyond the reach of children. Do not allow children to use the phone, battery, or charger without guidance.
- Do not allow children to put the battery in mouth, for electrolyte in the battery is poisonous.

- Do not allow children to touch the small fittings. Otherwise, suffocation or gullet jam can be caused if children swallow the small fittings.

Operating Environment

- The phone, battery, and charger are not water-resistant. Keep them dry. Protect the phone, battery and charger from water or vapor. Do not touch the phone with a wet hand. Otherwise, short-circuit and malfunction of the product or electric shock may occur.
- Do not use the phone in dusty, damp and dirty places or places with magnetic field. Otherwise, malfunction of the circuit may occur.
- Do not power on or off the phone when it is near your ears to avoid negative impact on your health.
- When carrying or using the phone, keep the antenna at least one inch (2.5 centimeters) away from your body, to avoid negative impact on your health caused by radio frequency leakage.
- If you feel uncomfortable (such as falling sick or qualm) after playing games on your phone for a long time, please go to see a doctor immediately.
- On a thunder stormy day, do not use your phone outdoors or when it is being charged.
- Do not touch the antenna when a call is going on. Touching the antenna may affect call quality and cause the phone to operate with more power. As a result, the talk time and standby time are shortened.
- The phone may interfere with nearby TV sets, radios and PCs.
- In accordance with international standards for radio frequency and radiation, use phone accessories approved by the manufacturer only.


- While using the mobile phone, observe the local laws and regulations, and respect others' privacy and legal rights.

Clearing and Maintenance

- Before you clean or maintain the phone, power off the phone and disconnect it from the charger. Otherwise, electric shock or short-circuit of the battery or charger may occur.
- Do not use any chemical detergent, powder, or other chemical agent (such as alcohol and benzene) to clean the phone and the charger. Otherwise, part damage or a fire can be caused. You can clean the phone and the charger with a piece of soft antistatic cloth that is a little wet.
- Do not scratch the shell of the phone. Otherwise, the shed coating may cause skin allergy. Once it happens, stop using the phone at once and go to see a doctor.
- Keep the plug dry when you clean it, to prevent fire.
- If the phone or any of its fittings does not work, turn to the locally authorized service center for help.
- Do not dismantle the mobile phone or accessories. Only an authorized service center is allowed to maintain the mobile phone.

Environment Protection

- Please observe the local regulations regarding the disposal of your packaging materials, exhausted battery and old phone and please promote their recycling. Do not dispose of exhausted battery or old phone in municipal waste or fire. Otherwise, explosion may occur.
- This HUAWEI device complies with Directive 2002/95/EC on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

- : This symbol indicates that the equipment carrying this mark must NOT be thrown into general waste but should be collected separately and properly recycled under local regulations.

Emergency Call

You can use your phone for emergency calls. However, connections in all conditions cannot be guaranteed. You should never rely solely on the phone for essential communications.

Battery

- Use the battery approved by the manufacturer only. Otherwise, explosion may occur.
- Do not dispose of the battery in fire. Otherwise, the battery may ignite or explode.
- Do not connect two poles of the battery with conductors such as cables, jewelries or any other metal material. Otherwise, the battery is short-circuited and it may burn your body.
- Do not disassemble the battery or solder the battery poles. Otherwise fluid leakage, overheat, fire, or explosion may occur.
- If there is battery leakage, smoke, or strange smell, stop using the battery and keep it away from open flame to avoid fire or explosion. Then turn to an authorized maintenance engineer for help.
- If the battery fluid contacts your skin or cloth, wash with clean water immediately to avoid irritation to the skin.
- If the battery fluid gets into eyes, do not rub your eyes. Otherwise, your eyes can be hurt. Wash with clean water and go to see a doctor immediately.
- If there is battery deformation, color change or abnormal heating while you charge or store the battery, take it out immediately and stop using it. Otherwise, battery leakage, overheat, explosion, or fire may occur.

- When installing the battery, do not push the battery by force lest battery fluid leak out or the battery crack.
- Do not take out the battery when the phone is turned on.
- If you do not use the battery for a long time, store it in normal temperature after charging.

Charger

- Use the charger approved by the phone manufacturer only. Any violation of this rule may result in fire or malfunction of the charger.
- Do not short-circuit the charger. Short-circuiting the charger may cause fire or malfunction of the charger.
- If the power cord is damaged (for example, the lead is exposed or broken), or the plug becomes loose, stop using the cable at once. Otherwise, electric shock, short-circuit of the charger, or fire may occur.
- Keep the charger dry. Once water or other liquid leaks into the charger, electrical leakage or other faults may occur.
- Do not use the charger in a dusty and damp environment. Keep the power cord away from any heating appliance.
- Ensure the charger is properly plugged into the power socket properly when charging the battery. Improper insertion may result in electric shock, fire, or explosion. To unplug the charger, pull the plug off rather than tear the power cord.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage can cause fire or malfunction of the charger.
- Do not place any heavy object on the power cord of the charger. Do not damage, change, or pluck the power cord. Otherwise electric shock or fire may occur.

- When you are charging the battery with the charger, do not touch the plug, power cord or the charger with a wet hand. Otherwise, electric shock can be caused.
- Once the liquid such as water leaks into the charger, remove the plug of the charger from the socket immediately. Otherwise, overheating, fire and other malfunction may occur.

Certification Information (SAR)

THIS DEVICE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO FREQUENCY ELECTROMAGNETIC FIELD.

Your mobile phone is a low-power radio transmitter and receiver. When it is turned on, it emits low levels of radio frequency energy (also known as radio waves or radio frequency fields).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, e.g. ICNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (Institute of Electrical and Electronics Engineers Inc.), through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure for the public. The levels include a safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the mobile phone while operating can be well below the value. This is because the mobile phone is designed to use the minimum power required to reach the network.

All models of Huawei's mobile phone are designed to meet radio frequency exposure guidelines. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it

does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (that is, at the ear and worn on the body) as required by the FCC for each model. For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when the handset is positioned a minimum of 15 mm from the body with an accessory that contains no metal part. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The SAR limit adopted by the USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 1.523 W/kg and when properly worn on the body is 0.403 W/kg.

The SAR limit adopted by the CNIRP is 2.0 W/kg over one gram of tissue. The value guarantees a safe distance to protect mobile phone users and the difference caused by measurement errors. Under different test requirements and frequency, the value varies.