 


Getting to Know Your Phone

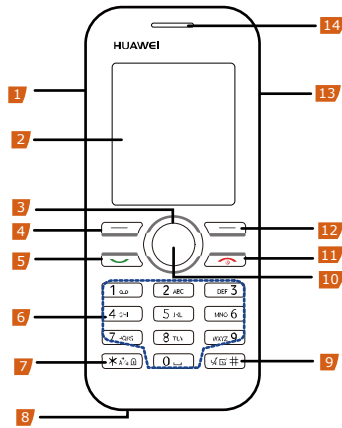 


- | | | |
|-----------------|--------------|-------------------|
| 1 Headset Jack | 2 Screen | 3 Navigation |
| 4 Left Soft Key | 5 Dial Key | 6 Number Keys |
| 7 * Key | 8 Microphone | 9 # Key |
| 10 OK Key | 11 End Key | 12 Right Soft Key |
| 13 Charger | 14 Earpiece | |

- ☐ The four navigation keys include the up navigation key, down navigation key, left navigation key, and right navigation key.

Getting Started

 
Loading the SIM Card and the Battery

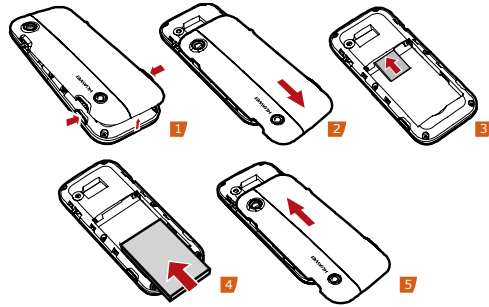
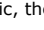


Charging the Battery

To charge the battery, do as follows:

1. Connect the charger to the charger interface on the phone.

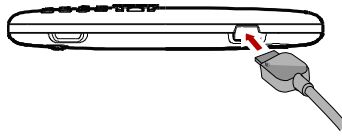






















2. Connect the charger to an AC power socket.
During the charging,  appears on the upper right corner of the screen in an animated status.
3. Wait until the phone is fully charged.
If  becomes static, the battery is fully charged.
4. Disconnect the charger from the power socket.



- Do not use a damaged battery or charger.
- When you start to charge a completely discharged battery, the charging indicator may appear on the screen several minutes later.


Screen Icons

Icon	Description	Icon	Description
	Indicates the signal strength.		Indicates the battery level.
	An alarm clock is set.		Silent Mode
	OTA Provision		Calls forwarding

Ico n	Description	Ico n	Description
	Headset Mode		Normal Mode
	Activity Mode		Meeting Mode
	Missed call		SMS
	MMS		Push messages
	Voice mail		Broadcast message
	No vibrancy Ringtone		Only Ringtone
	Vibrancy		Vibrancy Ringtone
	Handset 2G		

Using the Shortcut Keys

In standby mode, the following shortcut keys are provided on the phone.

- Press the up navigation key to access the **Camera** screen.
 - Press the down navigation key to access the **New SMS** screen.
 - Press the left navigation key to access the **My files** screen.
 - Press the right navigation key to access the **Browser** screen.
-  You can define the preceding shortcut keys by yourself.
- Press the OK key to access the function list.







- Press and hold the **1** key to call the voice mail center and listen to the voice messages.
- Press and hold a number key from **2** to **9** to speed-dial a phone number.
- Press and hold the ***** key to lock the keypad; press the OK key and the ***** key in sequence to unlock the keypad.
- Press and hold the **#** key to switch between the **Silent** and **Normal** profiles.
- Press the dial key to access the **Dialed** screen.


Menu Tree

Camera	Browser	Calls
Resolution	Homepage	Missed
Self timer	Enter URL	Received
Night mode	Bookmarks	Dialed
Image quality	Internet settings	
Shutter tone		
Go to my files		
Organiser &	Messaging	My files
STK	Write message	Pictures
FM radio	SMS	Ringtones
Alarms	MMS	Music
Calendar	Send to Album	Other
Calculator	Message	Memory status
	Call voice mail	
	Push messages	
	Broadcast	
	Message	
Profiles	Contacts	Settings
Normal	Add new contact	Phone settings
Silent	Call	Display settings
Meeting	Edit before call	Message settings
Activity	Send SMS	Call settings
Headset	Send MMS	Contact settings
	Delete	Security
	Copy	Connectivity
	Mark	
	Mark all	
	Settings	

Text Input Modes

The indicator of the current input mode is displayed on the upper left corner of the screen. You can press * Key to change the input mode.

Indicator	Text Input Mode	Indicator	Text Input Mode
Abc  ABC  abc 	Smart English	Abc ABC abc	Alphabetical Text
Abc  ABC  abc 	Smart Spanish	123	Numbers

-  In editing mode, press right soft key (**Clear**) once to delete the letter on the left of the cursor. Alternatively, press and hold right soft key to clear all letters rapidly one by one. If there is no letter to delete, you can press right soft key (**Back**) to return to the previous menu.

Entering English

Smart English Input

You can enter English letters as follows:

1. Corresponding to the sequence of the word, press the key labeled with the desired letter once.
Then the phone displays the commonly used words according to the numeric sequence of key presses.

2. Press the up/down scroll key to view words.
3. Press left soft key or OK key to enter the desired word.

- Press **1** key once to enter a full stop.
- Press **0** key to enter a space and press and hold it to enter 0.
- Press **#** Key to display the symbol list. Then you can enter symbols.

Alphabetical Text Input

The alphabetical text input allows you to enter uppercase or lowercase English letters. You can press the key labeled with the desired letter once to enter the first letter on the key, twice to enter the second letter on the key, and so on.

- Press **1** key repeatedly to enter a commonly used punctuation.
- Press **0** key once to enter a space, twice to enter 0.

Entering Spanish

You can enter Spanish words in the Spanish input mode. Spanish input mode is similar to English input mode. For details, see "Entering English".

Entering Numbers

- In "123" input mode, press number keys to enter numbers.
- In "Abc" input modes, press a number key repeatedly until the number appears.

- In "Smart English", "Smart Spanish" input mode, press and hold the key until the number appears.

Entering Symbols

In any input mode, you can enter a symbol as follows:

1. Press # Key to display the symbol list.
2. Press the scroll keys to select a symbol.
3. Press OK key or left soft key to enter the symbol.

Writing and Sending a Message

To write and send a text message, do as follows:

1. Choose **Menu > Messaging > Write message > SMS**.

You can also access the create message menu by pressing and holding the left scroll key in standby mode.

2. When writing a message, press left soft key (**Options**) to select the following options: **Send, Insert symbol, Insert template, Insert contact details, Save to drafts, Input options, Add new word**.

You can press the OK key to send an SMS directly


Reading a Message

To read a message stored in **Inbox**, do as follows:

1. Choose **Menu > Messaging > SMS > Inbox**.
2. Press the up/down scroll key to choose a message.
3. Press OK key to read the message, or press left soft key (**Options**) to select the following options: **Read, Reply, Call, Forward, Save number, Delete, Mark/Unmark, Mark all/Unmark all**, and **Memory status**.

Writing and Sending a Multimedia Message

1. Choose **Menu > Messaging > Write Message > MMS**.
2. Select **To, Cc, Bcc, Subject** or **Content**.

- **To:** Select an entry from the **Recipients**, you can press OK key or choose **Options > Edit** to enter a phone number.
 - **Cc:** You can press OK key or choose **Options > Edit** to enter a phone number.
 - **Bcc:** You can press OK key or choose **Options > Add from contacts** to select a phone number.
 - **Subject:** Enter text as subject.
 - **Content:** Select **Content** to edit the pages.
-  The capacity of an MMS can be up to 300 KB, including the attached file and slide.

Viewing a Multimedia Message

Do as follows to view messages stored in **Inbox**:

1. Choose **Menu > Messaging > MMS > Inbox**.
2. Press the up/down scroll key to view messages.
3. Press OK key to view details or press left soft key (**Options**) to select the following items: **Reply MMS, Reply SMS, Forward, Delete, Move to folder, Folders, Edit before call, Save contact, Sort, Mark, Unmark, Unmark all, Mark all**, and **Memory status**.

Taking a Photo

In standby mode, choose **Menu > Camera** to access the preview mode.


☑ The phone can memorize the interface it displayed at the last time.

1. Press left soft key (**Options**) for the following options: **Resolution, Self timer, Night mode, Image quality, Shutter tone, Go To My Files.**
2. Focus the lens on the scene and press OK key to take a photo.
Then you can preview the image and save it.
3. Press left soft key (**Options**) to select one of the following operations: **Send by MMS, Set as Wallpaper, Delete, Send to Album.**

☑ When focusing the lens in the resolution of 320 × 240 or 160 × 128, press the right scroll key to zoom in; press the left scroll key to zoom out; press the up scroll key to decrease the luminance; and press the down scroll key to increase the luminance.

Switching On/Off the Radio

1. Insert the headset into the headset jack properly, and keep the headset cable straight for a better effect.
2. In standby mode, choose **Menu > Organiser & Tools > FM radio.**
After loading, the phone plays a program.
3. Press left soft key (**Options**) to perform the following operations:

- **Manual tuning:** The phone searches for channels with the frequency from 87.5 MHz to 108 MHz.
 - **Minimize:** The FM screen can be minimized to return to the standby screen.
 - **Save:** To save the frequency.
 - **Channel list:** Edit, delete and select a channel on the channel list.
 - **Activate speaker/Activate headset:** Switch between the loudspeaker and the headset by pressing and holding the * key in standby mode.
 - **Auto tuning:** The phone automatically searches for channels and saves them to the channel list.
 - **Set frequency:** Directly enter the frequency of a certain channel that you know. Then the phone can receive signals.
 - **Switch off:** To switch off the radio.
-  • In the FM main screen, you can switch between radio channels by pressing number keys 0–9, or through the button on the headset.
- On the FM screen, press OK key to search for frequencies in sequence. Search for an effective frequency upon each press.

WAP

Browsing Pre-set Web Pages

On the homepage, select a link from the page. Then press OK key to browse the page. When browsing, you can press the scroll keys to select a link you want to

access. The selected link is highlighted. Press OK key to access the link.

Other Operations for the Homepage

After selecting **Options** from the homepage, you can perform the following operations: **Homepage, Forward, Bookmarks, Enter URL, Recent pages, Save page, Save item, Refresh, Saved pages, Exit, Settings.**

Enter URL

Access the **Enter URL** screen, and then you can enter the address of the page to be accessed. You can select **Goto, Edit, Delete** or **Delete all** from **Options** to perform corresponding operations upon the entered website address.

Bookmarks

With this option, you can save and edit the information of the websites that you often access.

Some bookmarks have been preset by Vodafone for you on the phone. Select any one of them, and then press left soft key (**Options**) to perform the following operations: **Goto, Add, Edit, Delete.**

Internet Settings

These are preset for you to use the Vodafone service. If you need to modify them, open the Browser and select **Internet Settings.**

Warnings and Precautions

Electronic Device

- Power off your phone near high-precision electronic devices. The phone may affect the performance of these devices.
- Such devices include hearing aids, pacemakers, fire alarm systems, automatic gates, and other automatic control devices. If you are using an electronic medical device, consult the device manufacturer to confirm whether the radio wave affects the operation of this device.
- Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a front pocket.

Hospital

Pay attention to the following points at hospitals or health care facilities:

- Do not take your phone into the operating room (OR), intensive care unit (ICU), or coronary care unit (CCU).
- Do not use your phone at places for medical treatment where using a phone is prohibited.
- When using your phone near someone who is suffering from a heart disease, turn down the ringtone volume or vibration properly so that it does not affect the person.

Area with Inflammables and Explosives

In any area with inflammables and explosives, power off your phone and do not take out, install or charge the battery, to avoid explosion and fire. Areas with inflammables and explosives include, but are not limited to the following:

- Gas station
- Area for storing fuels (such as the bunk under the deck of a ship)
- Device/vehicle for transporting and storing fuels or chemical products
- Area with chemical substances and particles (such as granule, dust and metal powder) in the air
- Area with the sign of "Explosives"
- Area with the sign of "Power off bi-directional wireless equipment"
- Area where it is generally suggested to stop the engine of a vehicle

Traffic Safety

- Observe local laws and regulations on phone use. Do not use your phone while driving to avoid traffic accident.
- Secure the phone on its holder. Do not place the phone on the seat or other places where it can fall in a jerk or collision.
- Use the phone after the vehicle stops at a safe place.
- If your phone supports the hands-free function, or the phone can be used with earphones, or there is any vehicle-mounted equipment with hands-free function, use them in emergency.

- Do not place the phone over the air bag or in the air bag outspread area. Otherwise, the phone may hurt you owing to the strong force when the air bag inflates.
- Observe the rules and regulations of airline companies. When boarding or approaching an aircraft, power off the phone and take out the battery. In areas where using a phone is prohibited, power off the phone. Otherwise, the radio signal of the phone may interfere with the aircraft control signals. Power off your phone before boarding an aircraft.

Storage Environment

- Do not place magnetic storage media such as magnetic cards and floppy disks near the phone. Radiation from the phone may erase the information stored on them.
- Do not place your phone, battery, or other accessories in containers with strong magnetic field, such as an induction cooker and a microwave oven. Otherwise, circuit failure, fire, or explosion may occur.
- Do not leave your phone, battery, or charger in a very hot or cold place. Otherwise, malfunction of the products, fire, or explosion may occur.
- Keep the ambient temperature between 0°C and 45°C while the battery is being charged. Keep the ambient temperature between -20°C and 60°C for storing the battery. If the ambient temperature is too low (especially below 0°C) or too high, the capacity and life of the battery will be reduced.

- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects that can hurt you when you are using the phone.
- Do not subject your phone, battery, and charger to serious collision or shock. Otherwise, battery leakage, phone malfunction, overheat, fire, or explosion may occur.
- Do not put your phone in the back pocket of your trousers or skirt, to avoid phone damage while seated.

Children Safety

- Put your phone, battery, and charger at places beyond the reach of children. Do not allow children to use the phone, battery, or charger without guidance.
- Do not allow children to put the battery in mouth, for electrolyte in the battery is poisonous.
- Do not allow children to touch the small fittings. Otherwise, suffocation or gullet jam can be caused if children swallow the small fittings.

Operating Environment

- The phone, battery, and charger are not water-resistant. Keep them dry. Protect the phone, battery and charger from water or vapor. Do not touch the phone with a wet hand. Otherwise, short-circuit and malfunction of the product or electric shock may occur.
- Do not use the phone in dusty, damp and dirty places or places with magnetic field. Otherwise, malfunction of the circuit may occur.

- Do not power on or off the phone when it is near your ears to avoid negative impact on your health.
- When carrying or using the phone, keep the antenna at least one inch (2.5 cm) away from your body, to avoid negative impact on your health caused by radio frequency leakage.
- If you feel uncomfortable (such as falling sick or qualm) after playing games on your phone for a long time, consult a doctor immediately.
- On a thunder and stormy day, do not use your phone outdoors or when it is being charged.
- Do not touch the antenna when a call is going on. Touching the antenna may affect call quality and cause the phone to operate with more power. As a result, the talk time and standby time are shortened.
- The phone may interfere with nearby TV sets, radios and PCs.
- In accordance with international standards for radio frequency and radiation, use phone accessories approved by the manufacturer only.
- While using the mobile phone, observe the local laws and regulations, and respect others' privacy and legal rights.


Clearing and Maintenance

- Before you clean or maintain the phone, power off the phone and disconnect it from the charger. Otherwise, electric shock or short-circuit of the battery or charger may occur.
- Do not use any chemical detergent, powder, or other chemical agent (such as alcohol and benzene) to clean the phone and the charger. Otherwise, part

damage or a fire can be caused. You can clean the phone and the charger with a piece of soft antistatic cloth that is a little wet.

- Do not scratch the shell of the phone. Otherwise, the shed coating may cause skin allergy. Once it happens, stop using the phone at once and go to see a doctor.
- Keep the plug dry when you clean it, to prevent fire.
- If the phone or any of its fittings does not work, turn to the locally authorized service center for help.
- Do not dismantle the mobile phone or accessories. Only an authorized service center is allowed to maintain the mobile phone.

Environment Protection

- Please observe the local regulations regarding the disposal of your packaging materials, exhausted battery and old phone, and please promote their recycling. Do not dispose of exhausted battery or old phone in municipal waste or fire. Otherwise, explosion may occur.
- This HUAWEI device complies with Directive 2002/95/EC on the restriction of the use of certain hazardous substances in electrical and electronic equipment.
- : This symbol indicates that the equipment carrying this mark must not be thrown into general waste but should be collected separately and properly recycled under local regulations.

Emergency Call

You can use your phone for emergency calls. However, connections in all conditions cannot be guaranteed. You

should never rely solely on the phone for essential communications.

Battery

- Use the battery approved by the manufacturer only. Otherwise, explosion may occur.
- Do not dispose of the battery in fire. Otherwise, the battery may ignite or explode.
- Do not connect two poles of the battery with conductors such as cables, jewelries or any other metal material. Otherwise, the battery is short-circuited and it may burn your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, fluid leakage, overheat, fire, or explosion may occur.
- If there is battery leakage, smoke, or strange smell, stop using the battery and keep it away from open flame to avoid fire or explosion. Then turn to an authorized maintenance engineer for help.
- If the battery fluid contacts your skin or cloth, wash with clean water immediately to avoid irritation to the skin.
- If the battery fluid gets into eyes, do not rub your eyes. Otherwise, your eyes can be hurt. Wash with clean water and go to see a doctor immediately.
- If there is battery deformation, color change or abnormal heating while you charge or store the battery, take it out immediately and stop using it. Otherwise, battery leakage, overheat, explosion, or fire may occur.

- When installing the battery, do not push the battery by force lest battery fluid leaks out or the battery cracks.
- Do not take out the battery when the phone is turned on.
- If you do not use the battery for a long time, store it in normal temperature after being charged.

Charger

- Use the charger approved by the phone manufacturer only. Any violation of this rule may result in fire or malfunction of the charger.
- Do not short-circuit the charger. Short-circuiting the charger may cause fire or malfunction of the charger.
- If the power cord is damaged (for example, the lead is exposed or broken), or the plug becomes loose, stop using the cable at once. Otherwise, electric shock, short-circuit of the charger, or fire may occur.
- Keep the charger dry. Once water or other liquid leaks into the charger, electrical leakage or other faults may occur.
- Do not use the charger in a dusty and damp environment. Keep the power cord away from any heating appliance.
- Ensure the charger is properly plugged into the power socket when charging the battery. Improper insertion may result in electric shock, fire, or explosion. To unplug the charger, pull the plug off rather than tear the power cord.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage can cause fire or malfunction of the charger.

- Do not place any heavy object on the power cord of the charger. Do not damage, change, or pluck the power cord. Otherwise electric shock or fire may occur.
- When you are charging the battery with the charger, do not touch the plug, power cord or the charger with a wet hand. Otherwise, electric shock can be caused.
- Once the liquid such as water leaks into the charger, remove the plug of the charger from the socket immediately. Otherwise, overheating, fire and other malfunction may occur.

Certification Information (SAR)

THIS DEVICE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO FREQUENCY ELECTROMAGNETIC FIELD.

Your mobile phone is a low-power radio transmitter and receiver. When it is turned on, it emits low levels of radio frequency energy (also known as radio waves or radio frequency fields).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, e.g. ICNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (Institute of Electrical and Electronics Engineers Inc.), through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure for the general population. The levels include a safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the mobile phone while operating can be well below the value. This is because the mobile phone is designed to use the minimum power required to reach the network.

All models of Huawei's mobile phone are designed to meet radio frequency exposure guidelines. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (that is, at the ear and worn on the body) as required by the FCC for each model. For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when the handset is positioned a minimum of 15 mm from the body with an accessory that contains no metal part. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The SAR limit adopted by the USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 1.160W/kg, and when properly worn on the body is 1.150W/kg.

The SAR limit adopted by the CNIRP is 2.0 W/kg over one gram of tissue. The value guarantees a safe distance to protect mobile phone users and the difference caused by measurement errors. Under different test requirements and frequency, the value varies.

Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Operation is subject to the condition that this device does not cause harmful interface.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this equipment not expressly approved by HUAWEI may void the FCC authorization to operate this equipment.

