



HUAWEI T566

GSM Mobile Phone

USER GUIDE

Copyright © 2008 Huawei Technologies Co., Ltd.

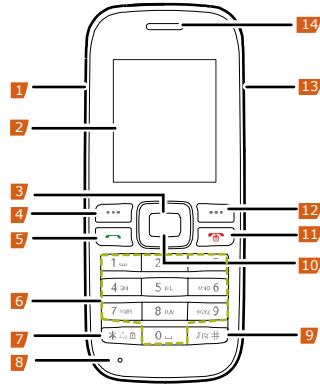 


HUAWEI and other Huawei trademarks are the trademarks or registered trademarks of Huawei Technologies Co., Ltd. in the People's Republic of China and certain other countries. All other trademarks mentioned in this manual are the property of their respective holders. The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute the warranty of any kind, express or implied.

Huawei Technologies Co., Ltd.

Address: Huawei Industrial Base, Bantian, Longgang, Shenzhen 518129, People's Republic of China
Tel: +86-755-28780808 **Global Hotline:** +86-755-28560808
E-mail: mobile@huawei.com **Website:** www.huawei.com

1 Getting to Know Your Phone



- | | | | |
|----|-------------------|----|----------------------|
| 1 | Headset jack | 2 | Screen |
| 3 | Navigation key | 4 | Left soft key |
| 5 | Dial key | 6 | Number keys |
| 7 | * key | 8 | Microphone |
| 9 | # key | 10 | OK key |
| 11 | End key | 12 | Right soft key |
| 13 | Charger interface | 14 | Earpiece/Loudspeaker |

Note The figures in this document are only for your reference. Though the actual product may be different, the functions of the product will remain the same.

2 Getting Started

Loading the SIM Card and the Battery







Charging the Battery





 

 


1. Connect the charger to the charger interface on the phone.
2. Connect the charger to an AC power socket.
3. During the charging process, the charging icon is in an animated status.


 

 

Note When you start to charge a completely exhausted battery, the charging icon may appear on the screen several minutes later.

4. When all bars of the charging icon are displayed and keep static, the battery is fully charged. Then you can disconnect the charger from the AC power socket.
5. Disconnect the charger from the phone.

3 Keys and Functions

















Note The four navigation keys are represented by  (up),  (down),  (left), and  (right) in this document.

Press...	To...
	<ul style="list-style-type: none"> • Access the Dialed screen in standby mode (by pressing it). • Make a call or answer an incoming call.
	<ul style="list-style-type: none"> • Power on or off the phone (by pressing and holding it). • End a call or reject an incoming call. • Return to the standby mode.
	Select the option displayed on the lower left corner of the screen.
	<ul style="list-style-type: none"> • Access the Browser screen in standby mode (by pressing it). • Select the option displayed on the lower right corner of the screen.
	<p>In standby mode,</p> <ul style="list-style-type: none"> • Press  to write a message. • Press  to access the My files screen. • Press  to start the Camera. • Press  to the Contacts screen.

Press...	To...
	<ul style="list-style-type: none"> • Display the main menu in standby mode. • Confirm a selection.
 ... 	<ul style="list-style-type: none"> • Enter numbers, letters, and symbols. • Call the voice mail center in standby mode (by pressing and holding the 1 key). • Speed-dial a phone number in standby mode (by pressing and holding the 2-9 key).
	<ul style="list-style-type: none"> • Enter the * symbol, + symbol, or P character by pressing it once, twice, three times. • Lock the keypad (by pressing and holding it). • Change input modes when editing texts.
	<ul style="list-style-type: none"> • Enter the # symbol. • Switch between the Silent and Normal profiles (by pressing and holding it).

4 Screen Icons

Note The screen icons are displayed on the upper area of the screen when the phone is in standby mode.

Icon	Description	Icon	Description
	Signal strength		Battery power level
	An alarm clock is enabled.		Silent profile
	OTA message		Calls forwarding
	Headset profile		Normal profile
	Activity profile		Meeting profile
	MMS		SMS
	Voice mail		Push messages
	Broadcast message		Vibrancy only, Vibrate and ring

5 Menu Tree


 
 
Camera	Browser	Calls
Resolution	Homepage	Missed
Self timer	Enter URL	Received
Night mode	Bookmarks	Dialed
Image quality	Internet settings	
Shutter tone	Music	
Go to my files	Search	
	Ringtones	
	Pictures	
	News	
	Sport	
	My Browser	
Organiser & Tools	Messaging	My files
STK	Write message	Pictures
FM radio	SMS	Ringtones
Alarms	MMS	Music
Calendar	Message templates	Other
Calculator	Call voice mail	Memory status
	Push messages	
	Broadcast message	
	Message settings	



Profiles	Contacts	Settings
Normal	Add new contact	Phone settings
Silent	Call	Display settings
Meeting	Edit before call	Message settings
Activity	Send SMS	Call settings
Headset	Send MMS	Contact settings
	Delete	Security
	Copy	Connectivity
	Mark	
	Mark all	
	Settings	
	Memory status	

6 Voice Services



Making a Call

Note When the phone is locked, you need to unlock the phone first. Otherwise, you can make only emergency calls and answer calls.


- Making a Call by Entering the Phone Number
In standby mode, press the number keys to enter a phone number, and then press  to make the call.
To make an international call, press  twice to enter +. Then enter the international long distance code, country code or region code, area code, and phone number in sequence.
To call a phone number with an extension, press  three times to insert P between the phone number and the extension number.

- Making a Call from the **Call Logs**
In standby mode, press  to access the **Dialed** screen. Scroll to the number you want to dial and press the dial key.
- Making a Call from **Contacts**
Scroll to the number you want to dial in **Contacts** and press the dial key.
- Making a Call from the **Inbox**
Select a message sent by the contact to be called in the inbox, and then press .








Answering a Call

When there is an incoming call, press  to answer it; press  (**Mute**) to mute the ringtone.

Rejecting or Ending a Call


Press  to reject or end a call.




Call Settings

1. Activate or deactivate the loudspeaker as follows:
Press  to activate or deactivate the loudspeaker of your phone.
2. Adjust the volume as follows:
During a call, press  or  to access the volume adjustment screen. Then, press  to raise the volume and press  to lower the volume.
3. Mute or unmute the microphone as follows:
Press  (**Mute**) to mute the microphone. Then the other party cannot hear your voice. If the microphone is muted, press  (**Unmute**) to unmute the microphone.



7 Text Entry

Text Input Modes


The indicator of the current input mode is displayed on the upper left corner of the screen. You can press  to change the input mode.

Indicator	Text Input Mode
Abc  , abc  , ABC 	Predictive
Abc, abc, ABC	Multi-tap
123	Numbers



Deleting the Text


In editing mode, press  (Clear) once to delete the letter to the left of the cursor. Alternatively, press and hold  (Clear) to clear all letters at one time.

Changing the Text Input Language

In editing mode, press  (Option) and choose **Input options > Input language**. Then select the text input language as required.

Predictive Text Input

1. Corresponding to the sequence of the word, press the key labeled with the required letter once.
Then the phone displays the commonly used words according to the sequence of key presses.
2. Press  or  to view words.

3. Press  to enter the desired word.

 


 
 

Multi-tap Text Input

The alphabetical text input allows you to enter uppercase or lowercase English letters. You can press the key labeled with the desired letter once to enter the first letter on the key, twice to enter the second letter on the key, and so on.

Entering Numbers

 
 
 
- In "123" input mode, press number keys to enter numbers.
- In other text input mode, press and hold the key until the number appears.

Entering Symbols

 

 
 
1. Press  to display the symbol list.
2. Press , , , or , to select a symbol.
3. Press  to enter the symbol.

Other Operations

■ In predictive text input mode

- Press  to enter a space; press and hold the  to enter 0.
- Press  to enter a period.

■ In multi-tap text input mode

- Press  once to enter a period; press  repeatedly to enter other symbols.
- Press  once to enter a space; press  twice consecutively to enter 0.

8 SMS

Writing and Sending a Text Message

1. Choose **Menu** > **Messaging** > **Write message** > **SMS**.
2. Edit a text message.
3. Press and select **Add from contacts** to add a phone number from contacts, or select **Enter phone number** to directly enter a phone number.
4. Press to send the text message.

Reading a Message


1. Choose **Menu** > **Messaging** > **SMS** > **Inbox**.
2. Press or to select a text message.
3. Press to read the text message.

9 MMS

Writing and Sending a Multimedia Message

1. Choose **Menu** > **Messaging** > **Write Message** > **MMS**.
2. Select **To**, **Cc**, or **Bcc**.
Press and choose **Options** > **Add from contacts** to add a phone number from contacts or choose **Options** > **Edit** to directly enter a phone number.
3. Select **Subject**.
Press and enter the subject of the multimedia message in **Subject**.

4. Select **Content**.



Press  and edit the text content of the multimedia message. You can also add images, ringtones, and music stored in **My files** to the multimedia message.


5. Choose **Options** > **Send** to send the multimedia message.

Note The capacity of a multimedia message can be up to 300 KB, including the attached file and slide.

Viewing a Multimedia Message

1. Choose **Menu** > **Messaging** > **MMS** > **Inbox**.

2. Press  or  to select a multimedia message.


3. Press  to read the multimedia message.



10 Radio






Switching On the Radio

1. Insert the headset into the headset jack properly, and keep the headset cable straight for better broadcasting effect.

 
2. Choose **Menu** > **Organiser & Tools** > **FM radio**.

3. Press  (**Options**) to select **Auto Tuning**.


4. After tuning, the phone displays the **Channel list**. Press  or  to scroll to the required channel.

You can also press  (**Back**) to return to the FM main screen. Then, press  or  to scroll to the required channel; press  or  to adjust the volume.






Operations On the FM Main Screen

- Press and hold  to switch between the loudspeaker and the headset.
- Press number keys 0–9 to switch between radio channels

Switching Off the Radio

1. Choose **Menu > Organiser & Tools > FM radio**.
2. Press  (**Options**) to select **Switch off**.

11 Camera

1. Choose **Menu > Camera** to access the preview mode.
2. Focus the lens on the scene. Press  to increase the luminance; press  to decrease the luminance. You can also press  (**Options**) and select other settings for taking a picture.
3. After you complete the settings, press  to take a picture. Then the picture is automatically saved in the **Pictures** folder.
4. Press  (**Options**) to perform the following operations:
 - **Send by MMS**: Send the picture through the MMS.
 - **Set as wallpaper**: Set the picture as the wallpaper.
 - **Delete**: Delete the picture.

12 WAP

It allows your phone to access the specified services provided by network service providers, and allows you to enjoy the mobile life easily. For example, you can browse the Internet and download your favorite pictures, ringtones, or music.

For more information about this function, consult your service provider.

13 Warnings and Precautions

Electronic Device

- Power off your phone near high-precision electronic devices. The phone may affect the performance of these devices.
- Such devices include hearing aids, pacemakers, fire alarm systems, automatic gates, and other automatic control devices. If you are using an electronic medical device, consult the device manufacturer to confirm whether the radio wave affects the operation of this device.
- Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a front pocket.

Hospital

Pay attention to the following points at hospitals or health care facilities:

- Do not take your phone into the operating room (OR), intensive care unit (ICU), or coronary care unit (CCU).
- Do not use your phone at places for medical treatment where using a phone is prohibited.
- When using your phone near someone who is suffering from a heart disease, turn down the ringtone volume or vibration properly so that it does not affect the person.

Area with Inflammables and Explosives

In any area with inflammables and explosives, power off your phone and do not take out, install or charge the battery, to avoid explosion and fire. Areas with inflammables and explosives include, but are not limited to the following:

- Gas station
- Area for storing fuels (such as the bunk under the deck of a ship)
- Device/vehicle for transporting and storing fuels or chemical products
- Area with chemical substances and particles (such as granule, dust and metal powder) in the air
- Area with the sign of "Explosives"
- Area with the sign of "Power off bi-directional wireless equipment"
- Area where it is generally suggested to stop the engine of a vehicle

Traffic Safety

- Observe local laws and regulations on phone use. Do not use your phone while driving to avoid traffic accident.
- Secure the phone on its holder. Do not place the phone on the seat or other places where it can fall in a jerk or collision.
- Use the phone after the vehicle stops at a safe place.
- If your phone supports the hands-free function, or the phone can be used with earphones, or there is any vehicle-mounted equipment with hands-free function, use them in emergency.
- Do not place the phone over the air bag or in the air bag outspread area. Otherwise, the phone may hurt you owing to the strong force when the air bag inflates.

- Observe the rules and regulations of airline companies. When boarding or approaching an aircraft, power off the phone and take out the battery. In areas where using a phone is prohibited, power off the phone. Otherwise, the radio signal of the phone may interfere with the aircraft control signals. Power off your phone before boarding an aircraft.

Storage Environment

- Do not place magnetic storage media such as magnetic cards and floppy disks near the phone. Radiation from the phone may erase the information stored on them.
- Do not place your phone, battery, or other accessories in containers with strong magnetic field, such as an induction cooker and a microwave oven. Otherwise, circuit failure, fire, or explosion may occur.
- Do not leave your phone, battery, or charger in a very hot or cold place. Otherwise, malfunction of the products, fire, or explosion may occur.
- Keep the ambient temperature between 0°C and 45°C while the battery is being charged. Keep the ambient temperature between -20°C and 60°C for storing the battery. If the ambient temperature is too low (especially below 0°C) or too high, the capacity and life of the battery will be reduced.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects that can hurt you when you are using the phone.
- Do not subject your phone, battery, and charger to serious collision or shock. Otherwise, battery leakage, phone malfunction, overheat, fire, or explosion may occur.
- Do not put your phone in the back pocket of your trousers or skirt, to avoid phone damage while seated.

Children Safety

- Put your phone, battery, and charger at places beyond the reach of children. Do not allow children to use the phone, battery, or charger without guidance.
- Do not allow children to put the battery in mouth, for electrolyte in the battery is poisonous.
- Do not allow children to touch the small fittings. Otherwise, suffocation or gullet jam can be caused if children swallow the small fittings.

Operating Environment

- The phone, battery, and charger are not water-resistant. Keep them dry. Protect the phone, battery and charger from water or vapor. Do not touch the phone with a wet hand. Otherwise, short-circuit and malfunction of the product or electric shock may occur.
- Do not use the phone in dusty, damp and dirty places or places with magnetic field. Otherwise, malfunction of the circuit may occur.
- Do not power on or off the phone when it is near your ears to avoid negative impact on your health.
- When carrying or using the phone, keep the antenna at least one inch (2.5 cm) away from your body, to avoid negative impact on your health caused by radio frequency leakage.
- If you feel uncomfortable (such as falling sick or qualm) after playing games on your phone for a long time, consult a doctor immediately.
- On a thunder and stormy day, do not use your phone outdoors or when it is being charged.
- Do not touch the antenna when a call is going on. Touching the antenna may affect call quality and cause the phone to


operate with more power. As a result, the talk time and standby time are shortened.

- The phone may interfere with nearby TV sets, radios and PCs.
- In accordance with international standards for radio frequency and radiation, use phone accessories approved by the manufacturer only.
- While using the mobile phone, observe the local laws and regulations, and respect others' privacy and legal rights.

Clearing and Maintenance

- Before you clean or maintain the phone, power off the phone and disconnect it from the charger. Otherwise, electric shock or short-circuit of the battery or charger may occur.
- Do not use any chemical detergent, powder, or other chemical agent (such as alcohol and benzene) to clean the phone and the charger. Otherwise, part damage or a fire can be caused. You can clean the phone and the charger with a piece of soft antistatic cloth that is a little wet.
- Do not scratch the shell of the phone. Otherwise, the shed coating may cause skin allergy. Once it happens, stop using the phone at once and go to see a doctor.
- Keep the plug dry when you clean it, to prevent fire.
- If the phone or any of its fittings does not work, turn to the locally authorized service center for help.
- Do not dismantle the mobile phone or accessories. Only an authorized service center is allowed to maintain the mobile phone.

Environment Protection

- Please observe the local regulations regarding the disposal of your packaging materials, exhausted battery and old phone, and please promote their recycling. Do not dispose of exhausted battery or old phone in municipal waste or fire. Otherwise, explosion may occur.
- This HUAWEI device complies with Directive 2002/95/EC on the restriction of the use of certain hazardous substances in electrical and electronic equipment.
- : This symbol indicates that the equipment carrying this mark must not be thrown into general waste but should be collected separately and properly recycled under local regulations.

Emergency Call

You can use your phone for emergency calls. However, connections in all conditions cannot be guaranteed. You should never rely solely on the phone for essential communications.

Battery

- Use the battery approved by the manufacturer only. Otherwise, explosion may occur.
- Do not dispose of the battery in fire. Otherwise, the battery may ignite or explode.
- Do not connect two poles of the battery with conductors such as cables, jewelries or any other metal material. Otherwise, the battery is short-circuited and it may burn your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, fluid leakage, overheat, fire, or explosion may occur.

- If there is battery leakage, smoke, or strange smell, stop using the battery and keep it away from open flame to avoid fire or explosion. Then turn to an authorized maintenance engineer for help.
- If the battery fluid contacts your skin or cloth, wash with clean water immediately to avoid irritation to the skin.
- If the battery fluid gets into eyes, do not rub your eyes. Otherwise, your eyes can be hurt. Wash with clean water and go to see a doctor immediately.
- If there is battery deformation, color change or abnormal heating while you charge or store the battery, take it out immediately and stop using it. Otherwise, battery leakage, overheat, explosion, or fire may occur.
- When installing the battery, do not push the battery by force lest battery fluid leaks out or the battery cracks.
- Do not take out the battery when the phone is turned on.
- If you do not use the battery for a long time, store it in normal temperature after being charged.

Charger

- Use the charger approved by the phone manufacturer only. Any violation of this rule may result in fire or malfunction of the charger.
- Do not short-circuit the charger. Short-circuiting the charger may cause fire or malfunction of the charger.
- If the power cord is damaged (for example, the lead is exposed or broken), or the plug becomes loose, stop using the cable at once. Otherwise, electric shock, short-circuit of the charger, or fire may occur.
- Keep the charger dry. Once water or other liquid leaks into the charger, electrical leakage or other faults may occur.

- Do not use the charger in a dusty and damp environment. Keep the power cord away from any heating appliance.
- Ensure the charger is properly plugged into the power socket when charging the battery. Improper insertion may result in electric shock, fire, or explosion. To unplug the charger, pull the plug off rather than tear the power cord.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage can cause fire or malfunction of the charger.
- Do not place any heavy object on the power cord of the charger. Do not damage, change, or pluck the power cord. Otherwise electric shock or fire may occur.
- When you are charging the battery with the charger, do not touch the plug, power cord or the charger with a wet hand. Otherwise, electric shock can be caused.
- Once the liquid such as water leaks into the charger, remove the plug of the charger from the socket immediately. Otherwise, overheating, fire and other malfunction may occur.

Certification Information (SAR)

THIS DEVICE MEETS THE GOVERNMENT'S
REQUIREMENTS FOR EXPOSURE TO RADIO
FREQUENCY ELECTROMAGNETIC FIELD.

Your mobile phone is a low-power radio transmitter and receiver. When it is turned on, it emits low levels of radio frequency energy (also known as radio waves or radio frequency fields).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, e.g. ICNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (Institute of

Electrical and Electronics Engineers Inc.), through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure for the general population. The levels include a safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the mobile phone while operating can be well below the value. This is because the mobile phone is designed to use the minimum power required to reach the network.

All models of Huawei's mobile phone are designed to meet radio frequency exposure guidelines. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (that is, at the ear and worn on the body) as required by the FCC for each model. For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when the handset is positioned a minimum of 20 mm from the body with an accessory that contains no metal part. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The SAR limit adopted by the USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 1.140 W/kg, and when properly worn on the body is 1.110 W/kg.

The SAR limit adopted by the CNIRP is 2.0 W/kg over one gram of tissue. The value guarantees a safe distance to protect

mobile phone users and the difference caused by measurement errors. Under different test requirements and frequency, the value varies.

Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Operation is subject to the condition that this device does not cause harmful interface.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Body Worn Operation Important safety information regarding radiofrequency radiation (RF) exposure To ensure compliance with RF exposure guidelines the device must be used with a minimum of 2.0 cm separation from the body. Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this equipment not expressly approved by HUAWEI may void the FCC authorization to operate this equipment.