

---

# Huawei eReader T62W

## User Guide

---

## Contents

1	Copyright Statement -----	1
2	Safety Precautions-----	1
3	Getting to know your E-book-----	1
3.1	Ereader Views -----	2
3.2	Buttons-----	4
3.3	Interfaces -----	4
3.4	Screen-----	5
3.5	Screen Icons-----	5
4	Getting Started -----	1
4.1	Power Level Display-----	1
4.2	Charging the Battery-----	1
4.3	Installing the USIM Card -----	2
4.4	Installing the Memory Card -----	3
4.5	Powering On or Off the Ereader -----	5
	i.    Power-On -----	5
	ii.   Power-Off-----	5
5	Homepage -----	1
6	Continue Reading -----	1
7	Favorites -----	1
8	My ebooks-----	1
9	My ePaper -----	1
10	ebooks Shop-----	1
11	eKiosk-----	1
12	Resource Center -----	1
12.1	My Music-----	1
12.2	My Picture-----	3

---

13	Consumption Information-----	1
13.1	Purchase & Subscribe -----	1
13.2	My Bill-----	1
14	Search-----	1
15	Settings -----	1
16	USB Connection-----	1
17	Warnings and Precautions-----	1
17.1	Electronic Device -----	1
17.2	Hospital-----	1
17.3	Areas with Inflammables and Explosives -----	1
17.4	Traffic Security -----	2
17.5	Storage Environment -----	2
17.6	Safety of Children-----	3
17.7	Operating Environment -----	3
17.8	Cleaning and Maintenance-----	3
17.9	Use of the Battery -----	4
17.10	Use of the Charger -----	5
17.11	Use of the USB Cable -----	6
17.12	Environment Protection -----	6

---

# 1 Copyright Statement

**Copyright © Huawei Technologies Co., Ltd. 2010. All rights reserved.**

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

## **Trademarks and Permissions**



**HUAWEI** and other Huawei trademarks are trademarks of Huawei Technologies Co., Ltd.

All other trademarks and trade names mentioned in this document are the property of their respective holders.

## **Notice**

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute the warranty of any kind, express or implied.

---

## 2 Safety Precautions

For safety purposes, carefully read through these safety precautions and observe them during operation. For more detailed description, see "Warnings and Precautions" in this document.

- Shut down the device where using wireless devices is prohibited or may cause interference or danger.
- Keep the device away from any appliances with strong electromagnetic field.
- Do not place magnetic storage media near the device. Radiation from the device may erase the information stored on them.
- Observe relevant regulations on using the device in hospitals or health care facilities. Shut down the device near places for medical treatment.
- Do not use the device in a very hot place or in a place where an inflammable or explosive material is stored. For example, do not use the device in a gas station.
- Power off your device before boarding an aircraft. Otherwise, the radio signal of the device may interfere with the aircraft control signals.
- Place the device and accessories in places beyond the reach of children. Do not allow children to use the device and accessories without guidance.
- Power off your ereader near high-precision electronic devices. The ereader may affect the performance of these devices.
- Use batteries and chargers approved by the ereader manufacturer.
- Do not dismantle the device and accessories. Only qualified maintenance personnel are allowed to repair the device.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.

---

# 3 Getting to know your E-book

This product supports the WCDMA (900/1900/2100 MHz) and GSM/GPRS/EGPRS (850/900/1800/1900 MHz) networks and supports automatic switchover between networks to enable users to have access to the wireless services at any time.

## **Description**

The services supported by the ereader should be supported by the networks where the ereader is located. For detailed information, consult your network provider.

## **Accessory Introduction**

Check that you have all the accessories in the package of this product. If any part is missing or any serious mistake with the *User Guide* that seriously affect your reading occurs, such page missing, contact the local dealer.

The following accessories are provided in the package:

- An ereader
- A charger
- A protective case
- A Universal Serial BUS (USB) cable
- A product specifications sheet
- A certificate of quality
- A headset
- A strip
- A screw plug spare and an RF plug spare
- A screw spare
- A 2 GB Transflash (TF) card
- A battery
- A Universal Subscriber Identity Module (USIM) card

### 3.1 Ereader Views



Front view and side view

 



Rear view



---

## 3.2 Buttons


Button	Description
PREV PAGE	Go to the previous page.
NEXT PAGE	Go to the next page.
BACK	Return to the previous interface
OK	Confirm the current operation
MENU	Press and hold to display menu; press to move to the left
HOME	Press and hold to return to homepage; press to move to the right
	Network switch
	Power button
+	Increase the volume
-	Decrease the volume
∧	Scroll up
∨	Scroll down

## 3.3 Interfaces

 
Interface	Description
Earphone	It is located at the bottom of the ereader and is used for connecting the headset to the ereader.
USB	It is located at the bottom of the ereader and is used for connecting the charger or the USB cable to the ereader.
USIM Card	It is located in the battery holder.
TF Card	It is located in the battery holder.

## 3.4 Screen



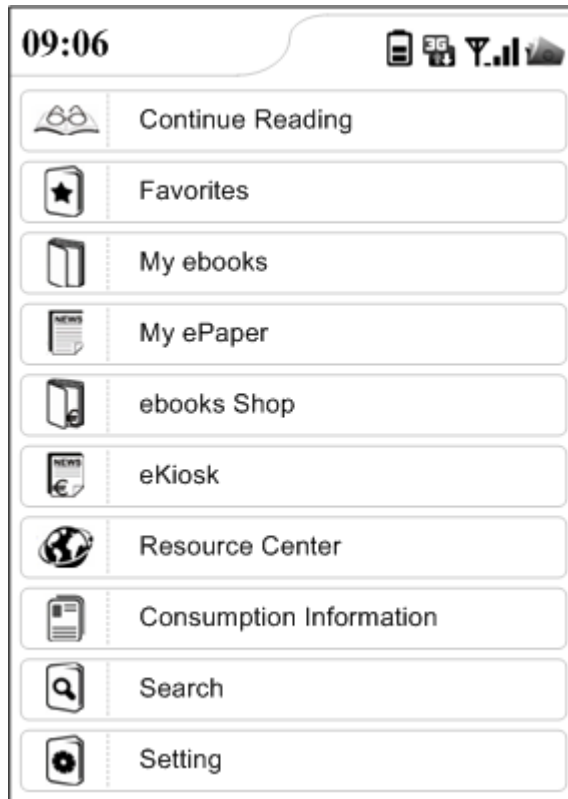



The following figure shows the screen of an ereader.



## 3.5 Screen Icons

Icon	Description
08:30	Indicates the time.
	Indicates the battery power level.

---

Icon	Description
	Indicates that the battery charging is in process.
	Indicates the network signal strength.
	Indicates that the current network is a WCDMA network.
	Indicates the Menu icon.
	Indicates the Save icon.
	Indicates the Back icon.

---

# 4 Getting Started

## 4.1 Power Level Display

The power level icon is at the upper right corner of the screen.

When the available power cannot support the usage, the ereader automatically shuts down.

Before charging the battery, read the following precautions carefully.

### **Notes:**

The battery should be charged for at least 2.5 hours for the first time.

During storage, the battery discharges and the battery power decreases slowly. Therefore, charge the battery before using the ereader.

The battery charging duration varies with the ambient temperature and the battery age.

The battery is rechargeable. However, the battery is a damageable part. If the standby time decreases significantly after the battery is fully charged, replace the battery.

Do not strike, shake, or throw the battery violently. Otherwise, the battery leakage, damage, overheating, explosion, or fire may occur.

## 4.2 Charging the Battery

Use the charger and battery approved by the ereader manufacturer. For details, contact local service center.

To charge a battery, do as follows:

1. Connect the power plug of the charger to a power socket.
2. Connect the charging connector of the charger to the ereader.
3. When the battery is being charged, the charging indicator is in orange.
4. When the battery is fully charged, the charging indicator turns green. Then remove the power plug of the charger from a power socket, and remove the charging connector of the charger from the ereader.

---

## 4.3 Installing the USIM Card

Install the USIM card before using the ereader. Carefully read through the following notes before using the USM card.

**Note:**

Keep the USM card out of the reach of children.

The USIM card and its electrode may be damaged due to scratching or bending. Exert caution when carrying, installing, or removing the USIM card.

To install the USIM card, do as follows:

1. Power off the ereader.
2. After ensure that the rear side of the ereader faces upwards, slide off the rear cover of the ereader.
3. Remove the battery.
4. Insert the USIM card into the USIM card holder. (The USIM card holder is on the right, while the TF card holder is on the left.)



## 4.4 Installing the Memory Card

The ereader supports up to 32 GB storage card (TF card).

To install the TF card, do as follows:

1. Power off the ereader.
2. After ensure that the rear side of the ereader faces upwards, slide off the rear cover of the ereader.
3. Remove the battery.
4. Insert the TF card into the TF card holder. (The USIM card holder is on the right, while the TF card holder is on the left.)



When you hear the clip sound, it indicates that the TF card is installed. Insert the card in the correct direction. Inserting the card in the wrong direction may damage the card. When removing the TF card, press the card downward. When you hear the clip sound, release the card. Then the TF card will automatically pop out.

Note: Use the storage card (TF card) provided by a qualified manufacturer.

---

## **4.5 Powering On or Off the Ereader**

### **i. Power-On**

When the ereader is in the power-off state, press and hold the power button to power on the ereader.

### **ii. Power-Off**


When the ereader is in the power-on state, press and hold the power button to start the power-off program. The ereader will be powered off after a short while.



---

# 5 Homepage

The following figure shows the default home page. Tap an icon to use the corresponding function.

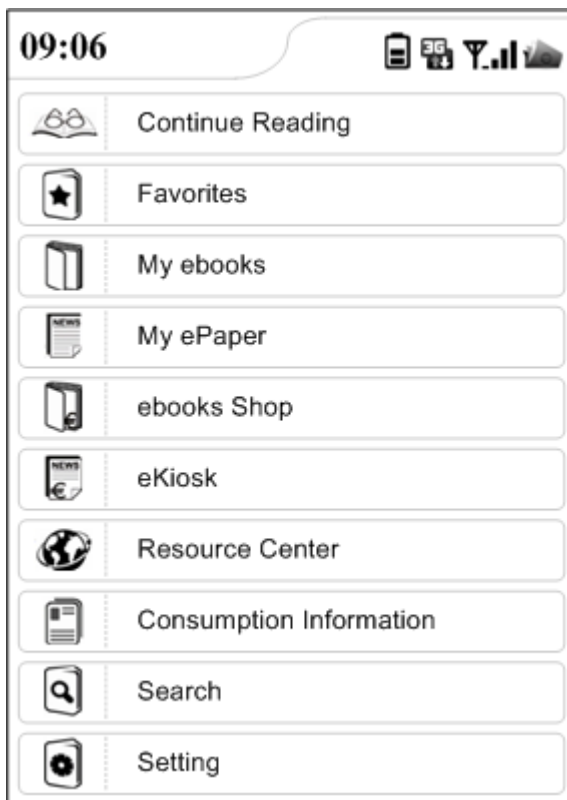


---


## 6 Continue Reading

Tap **Continue Reading** on the home page to display the latest online or local content that you read.

If you open the ereader for the first time or the ereader is restored to factory settings, the following information is displayed.

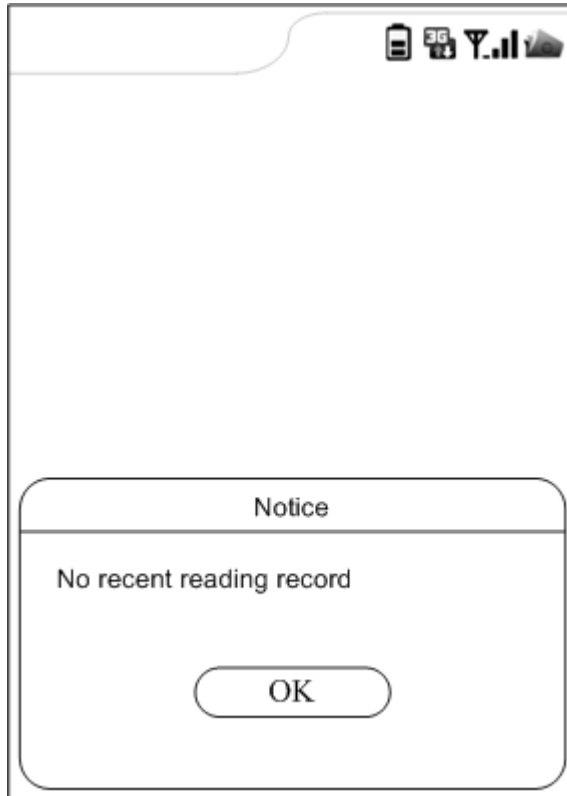


If you have read content recently, the following information is displayed.

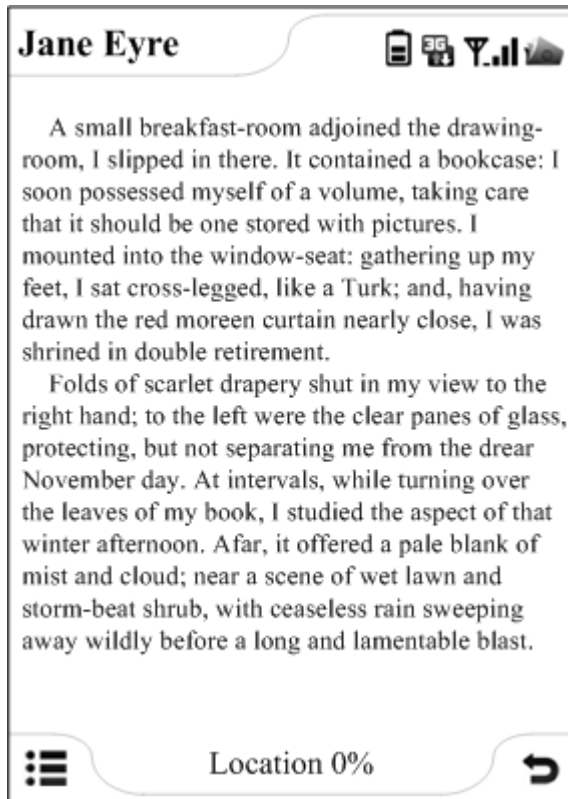

The relevant menus are as follows.

Menu	Description
Chapter List	List all chapters.
Next Chapter	Go to the next chapter.
Previous Chapter	Go to the previous chapter.
Add Bookmark	Add a bookmark. You can start reading from the bookmark upon next reading.

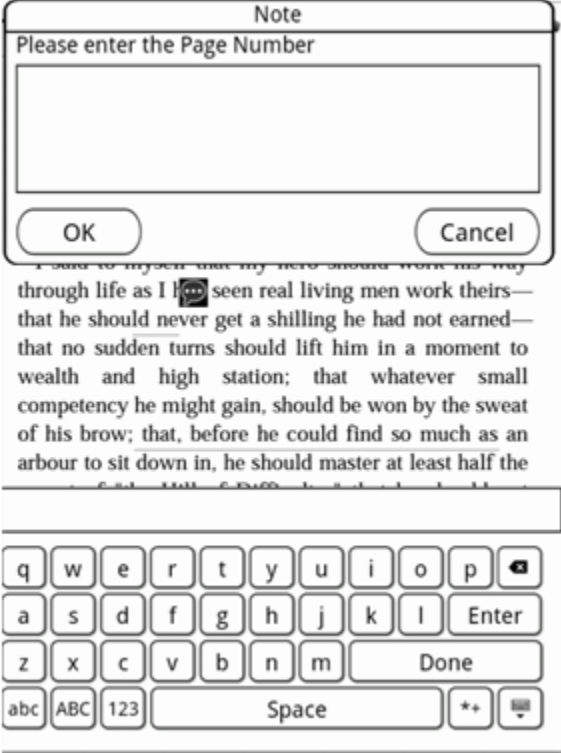
Menu	Description
Add Note	<p>Choose this menu and tap the desired place. Then a text box is displayed. After tapping the text box, a soft keyboard is displayed where you can enter your comments.</p>  <p>The screenshot shows a 'Note' dialog box with the title 'Note' and the prompt 'Please enter the Page Number'. Below the prompt is a large text input field. At the bottom of the dialog are two buttons: 'OK' and 'Cancel'. The dialog is overlaid on a page of text from a book. Below the dialog, a soft keyboard is visible with keys for letters, numbers, and symbols.</p>
Add Highlight	<p>Choose this menu and flick over the desired place. The words that are flicked are underlined, as shown in the following figure.</p> <p>he might gain, should be won by the sw ; that, before he could find so much as t down in, he should master at least half t</p>
View Notes Highlight	List the characters to which you added notes or highlights.
Go to	Go to the specified chapter.

---


<b>Menu</b>	<b>Description</b>
Font Size	Set the font size of the ebook.
Add to Favorites	Add this book to <b>Favorites</b> .

# 7 Favorites

 Tap **Favorites** on the homepage to display the **Favorites** page. The ebooks that you added locally and to the online bookstore are displayed on the **Local** and **Online** tab pages.

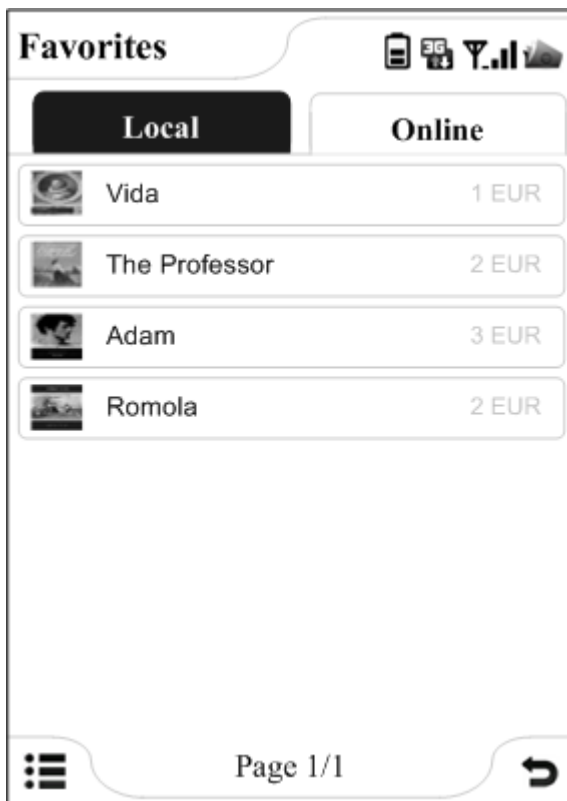

The relevant menus are as follows.

Menu	Description
Delete Items	Delete items from <b>Favorites</b> . Choose this menu, select items, and then tap  .
Delete All	Delete all items from <b>Favorites</b> .

---

## 8 My ebooks


Tap **My ebooks** on the homepage to display the **My ebooks** page. The **My ebooks** page lists all downloaded ebooks. You can read an ebook by tapping the book name.



The relevant menus are as follows.

Menu	Description
Search	Access the page for searching, enter the criteria, and then tap <b>Search</b> to start the search. The search can be based on the title, description, blurb, or contributor. For the detailed description, see 14 Search.

---

<b>Menu</b>	<b>Description</b>
Go to	Go to the specified ebook list page. The ebook content page cannot be displayed.
Delete Items	Delete ebooks from <b>My ebooks</b> . Choose this menu, select ebooks, and then tap  .
Delete All	Delete all ebooks from <b>My ebooks</b> .
Refresh	Refresh the folder.
Sort by Date	Sort ebooks in <b>My ebooks</b> by download date.
Sort by Name	Sort ebooks in <b>My ebooks</b> by book names.
Sort by Author	Sort ebooks in <b>My ebooks</b> by author names.



---

## 9 My ePaper

Tap **My ePaper** on the homepage to display the **My ePaper** page on which all subscribed ePapers are listed.




Tap an ePaper name to display the list of ePapers that you have subscribed and downloaded. The ePapers are named after dates. For example, you can select the ePaper **2010.03.15** to read the ePaper. You can also enter the period to search for an ePaper.



The relevant menus are as follows.

Menu	Description
Search	Access the page for searching, enter the criteria, and then tap <b>Search</b> to start the search. The search can be based on the title. For the detailed description, see 14 Search.
Go to	Go to the specified ePaper item in the ePaper list. The ePaper content page cannot be displayed.

---

 
<b>Menu</b>	<b>Description</b>
Delete Items	Delete an ePaper from <b>My ePaper</b> . Choose this menu, select ePapers, and then click  .
Delete All	Delete all ePapers from <b>My ePaper</b> .

# 10 ebooks Shop

Tap **ebooks Shop** on the homepage to display the **ebooks Shop** page. You can purchase online ebooks on this page.



The categories are displayed on the upper part of the **ebooks Shop** page. Each category are classified into the **Bestseller** and **All ebooks** sections.

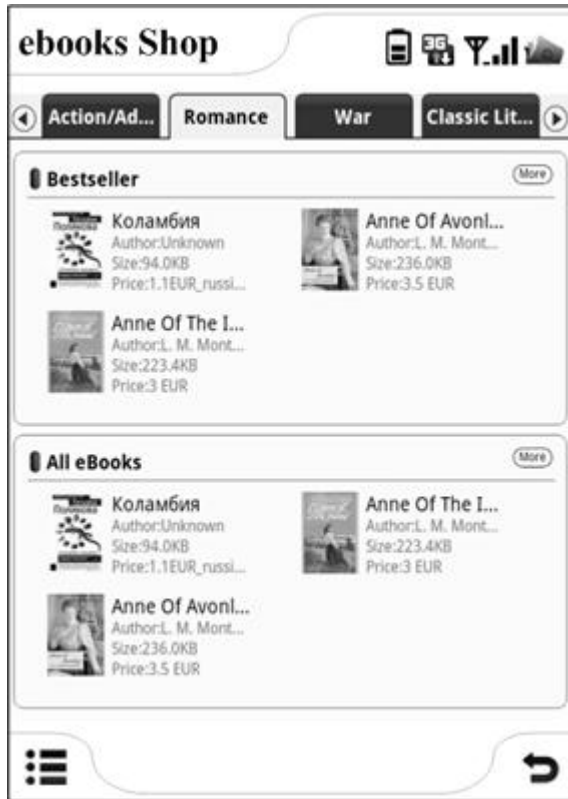

Tap **More** to display more ebooks of each section. Tap the name of an ebook to view the abstract of a book.

**Anne of Avonl...**

**Anne Of Avonlea**  
 Author:L. M. Montgomery  
 Publication date:2010-03-11+08:00  
 Format:ePub  
 File size:236.0KB

At sixteen Anne is grown up...almost. Her gray eyes shine like evening stars, but her red hair is s... [More](#)

[Download](#)

[Add to Favorites](#)

**ebook Education**

You won't believe the crazy things I'm learn  
 I'm learning how to juggle ,ride a unicycle too.

If you have not purchased this ebook, only the **Purchase** and **Add to Favorites** buttons are displayed. You can download this ebook only after you purchase this book by tapping **Purchase**.

If you have purchased this ebook, only the **Download** and **Add to Favorites** buttons are displayed. You can tap **Download** to download the ebook. Then you can read the ebook on **My ebooks**.

Tap **Add to Favorites** to add the ebook to **Favorites**.

The relevant menus are as follows.


Menu	Description
------	-------------

---

<b>Menu</b>	<b>Description</b>
Search	Access the page for searching, enter the criteria, and then tap <b>Search</b> to start the search. The search can be based on the title, description, blurb, or contributor. For the detailed description, see 14 Search.
Add to Favorites	Add this book to <b>Favorites</b> .
To ebooks Shops	Return to the <b>ebooks Shop</b> homepage.

# 11 eKiosk

Tap **eKiosk** on the homepage to display the **eKiosk** page. You can purchase online ePapers on this page.

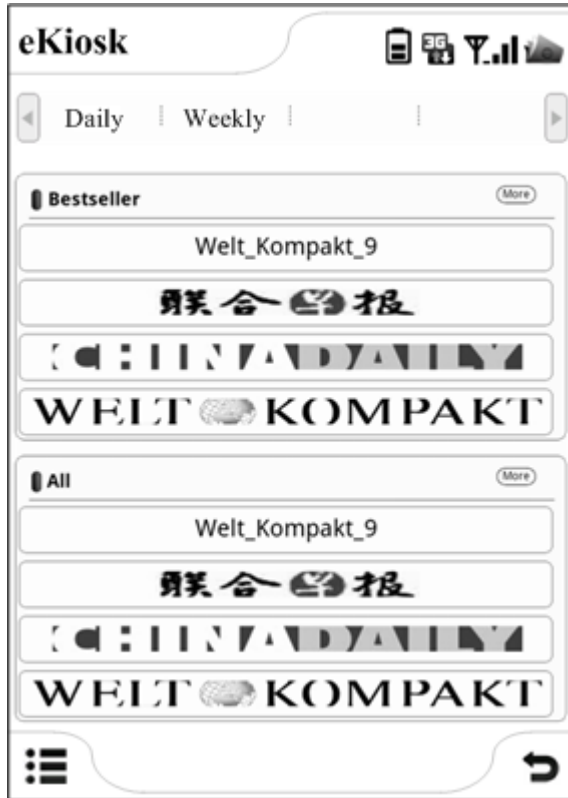

The categories are displayed on the upper part of the **eKiosk** page. Each category are classified into the **Bestseller** and **All** sections.





Tap **More** to display more ePapers of each section. Tap the name of an ePaper to view the abstract of an ePaper.



If you have not subscribed to this ePaper, only the **Subscribe** and **Archive** buttons are displayed. You can download this ePaper only after you subscribe to this ePaper by tapping **Subscribe**.

If you have subscribed to this ePaper, the **Download** button is also displayed. You can tap **Download** to download the ePaper. Then you can read the ePaper on **My ePaper**. You can also tap **Subscribe** to renew the ePaper.

Tap **Archive** to list the introduction to the sections of a ePaper.

The relevant menus are as follows.

Menu	Description
------	-------------

---

<b>Menu</b>	<b>Description</b>
Search	Access the page for searching, enter the criteria, and then tap <b>Search</b> to start the search. The search can be based on the title. For the detailed description, see 14 Search.
To eKiosk Main Page	Return to the <b>eKiosk</b> homepage.

---


# 12 Resource Center

Tap **Resource Center** to display the **Resource Center** page. The **Resource Center** page consists of **My Music** and **My Picture**.

## 12.1 My Music

Tap **My Music** on the **Resource Center** page to display the **My Music** page. The subfolders and files in the **My Music** folder under the TF card root directory are displayed. Locate the desired music file and tap the file name to play the music.


On the page for playing music, the information about the currently played file is displayed, such as the music name, baud rate, play duration, and total duration. By tapping the corresponding buttons on the touch screen, you can perform operations such as pause, play, fast forward, and fast rewind, and set parameters such as the loop mode, audio effect, and volume.

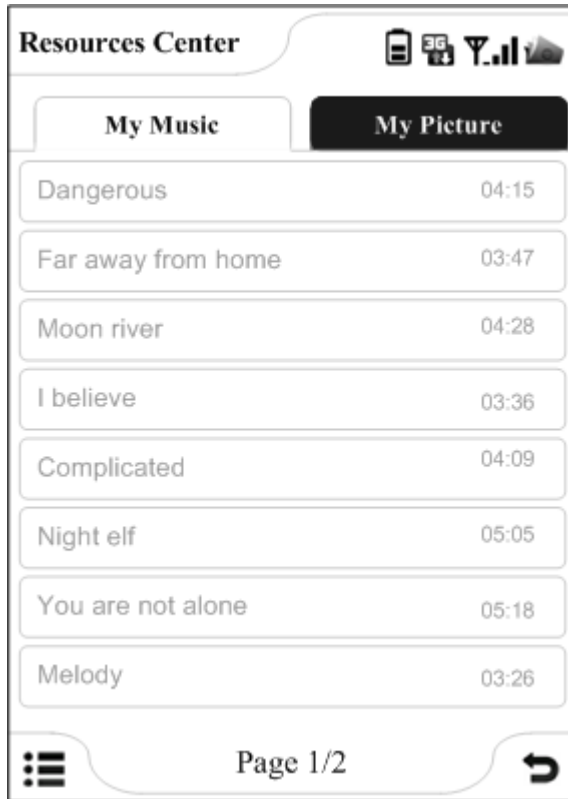

Buttons for displaying music are as follows.


Button	Description
PREV PAGE	Previous music.
NEXT PAGE	Next music.
BACK	Return to <b>My Music</b> .
OK	Play
+	Increase the volume.
-	Decrease the volume.

The relevant menus are as follows.

<b>Menu</b>	<b>Description</b>
Sort by date	Sort music in <b>My Music</b> by date.
Sort by artist	Sort music in <b>My Music</b> by artist.
Delete	Delete pieces of music from <b>My Music</b> . Choose this menu, select a piece of music, and then tap  .
Delete All	Delete all pieces of music from <b>My Music</b> .
Play by order	Refresh the folder.
Repeated playing	Repeatedly play the currently played music.
Looped playing	Cyclically play all pieces of music in <b>My Music</b> .
Close music	Shut down the music player.

## 12.2 My Picture

Tap **My Picture** on the **Resource Center** page to display the **My Picture** page. The subfolders and files in the **My Picture** folder under the TF card root directory are displayed. Locate the desired picture file and tap the file name to open the picture file. This product supports pictures in jpeg, gif, png, and bmp formats.

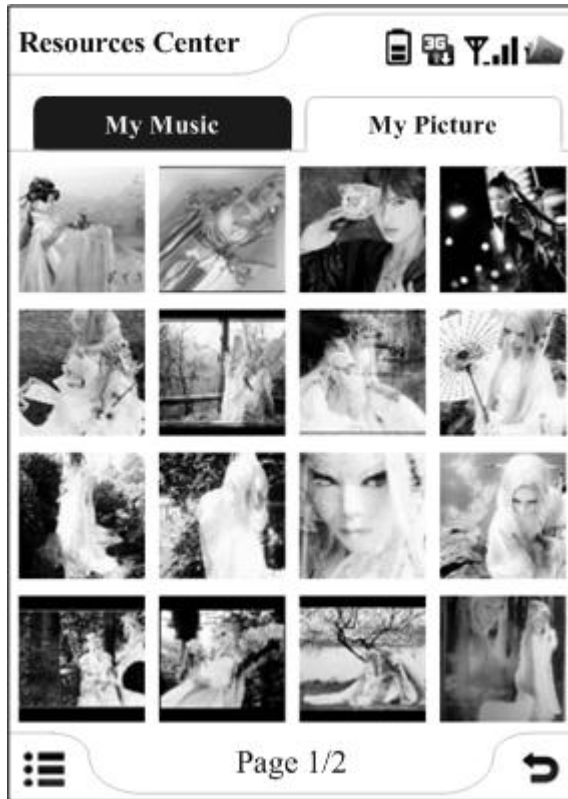


Buttons for displaying pictures are as follows.

Button	Description
PREV PAGE	Go to the previous picture.
NEXT PAGE	Go to the next picture.
BACK	Return to <b>My Picture</b> .
OK	Display the picture.

The relevant menus are as follows.

Menu	Description
------	-------------

---

<b>Menu</b>	<b>Description</b>
Delete	Delete pictures from <b>My Picture</b> . Choose this menu, select a picture, and then tap  .
Delete All	Delete all pictures from <b>My Picture</b> .




---

# 13 Consumption Information
 
## 13.1 Purchase & Subscribe

You can view your subscription and purchase records.

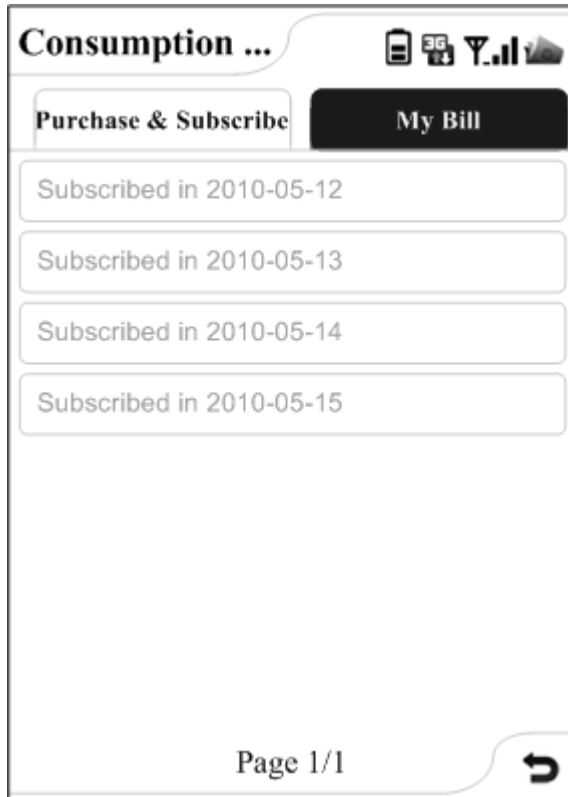

## 13.2 My Bill

Your bills on purchasing or subscribing to electronic contents are listed. You can query bills based on the period.

# Consumption ...



Purchase & Subscribe

My Bill

Start Date



End Date



Date	Item	Price
2010-05-25	sunzhao@sina.com	2.50
2010-05-20	sunzhao@sina.com	8.00
2010-05-04	sunzhao@sina.com	0.00
2010-05-04	sunzhao@sina.com	1.00
2010-04-30	sunzhao@sina.com	2.40
2010-04-29	sunzhao@sina.com	3.60
2010-04-22	sunzhao@sina.com	8.80



---

# 14 Search

Tap **Search** on the homepage to display the **Search** page, where you can search for content in local ebooks and ePapers.

- For ebooks, the search can be based on the title, description, blurb, or contributor.
- For ePapers, the search can be based on the title.




After tapping the text box, a soft keyboard is displayed.



---




# 15 Settings

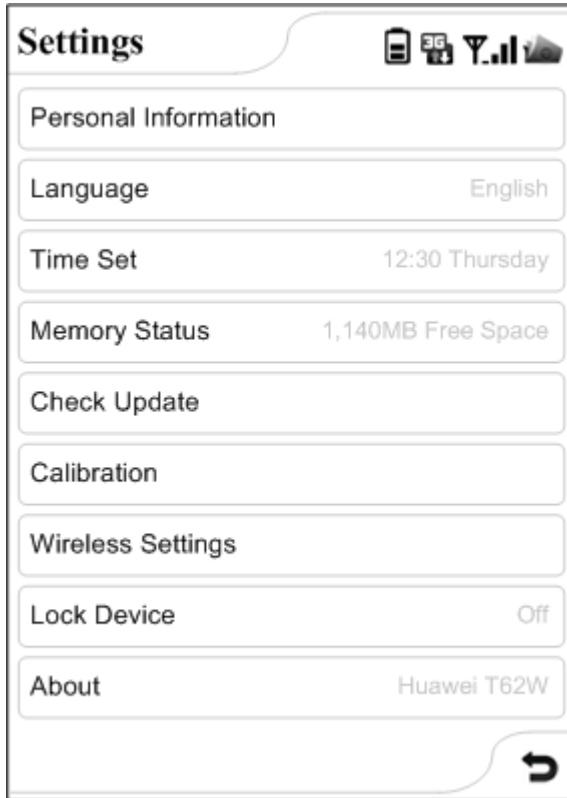You can change the settings of functions on the **Settings** page, such as the system time, language, and personal information.



The relevant menus are as follows.


Menu	Description
------	-------------

Menu	Description
Personal Information	<p>Modify personal information and personal password.</p> <ul style="list-style-type: none"> <li>● Personal information: you can modify information such as the name, gender, and birthday.</li> <li>● Personal password: The password here means the password set when you power on the ereader the first time after inserting the USIM card.</li> </ul> <p>After completing the settings, tap  to confirm the settings.</p>
Language	<p>Select the interface language. After completing the setting, tap  to confirm the setting.</p>
Time Set	<p>Set the time and date of the system. After completing the settings, tap  to confirm the setting.</p>
Memory Status	<p>Display the memory status of the local storage card and the TF card.</p>
Check Update	<p>If the parameter value is set to <b>ON</b>, after being connected to the network, the T62W automatically searches for the latest software version of the product and starts upgrade.</p>
Calibration	<p>Tap the five + signs on the touch screen to calibrate the screen.</p>
Wireless Settings	<p>Set the connection information of the following wireless networks:</p> <ul style="list-style-type: none"> <li>● WIFI</li> <li>● WCDMA</li> <li>● Bluetooth</li> </ul>
Lock Device	<p>Switch the screen to the screen saver.</p>
About	<p>Query the software version of the ereader.</p>

---

# 16 USB Connection

The ereader supports plug and play. After the ereader is connected to a computer by using a USB cable, a removable disk is created in **My Computer** on the computer. Then on the computer you can perform various file operations on the TF card, such as add and delete files. After ereader is connected to a computer, the following page is displayed. (You cannot perform operations such reading books before removing the connection cable.)

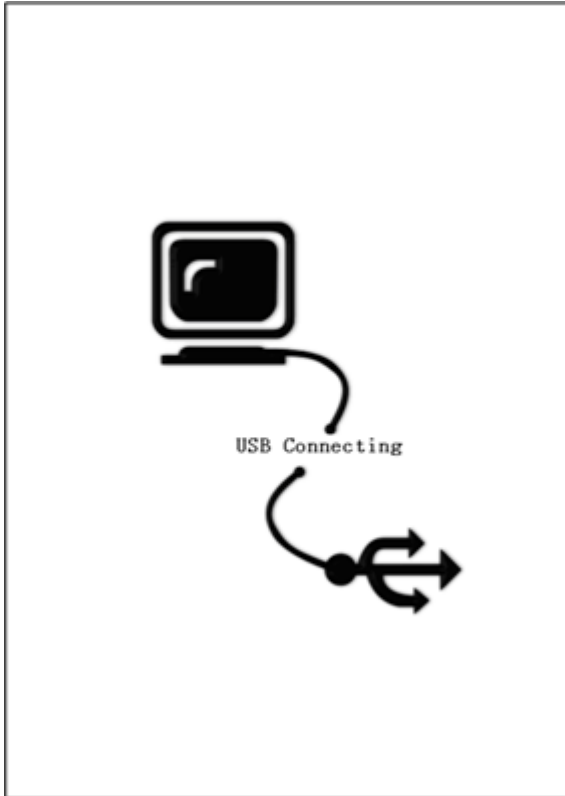

When the Windows OS is writing content to the card, the data is not written to the card immediately. It is written to a cache first. Therefore, choose **Unplug or Eject Hardware** before removing the USB cable.

---

After removing the USB cable, the homepage is automatically displayed. Then you can perform operations normally.



---

# 17 Warnings and Precautions

## 17.1 Electronic Device

Power off your device near high-precision electronic devices. The device may affect the performance of these devices.

Such devices include hearing aids, pacemakers, fire alarm systems, automatic gates, and other automatic-control devices. The radio waves generated by the equipment may interfere with the operation of electronic medical equipment. For the specific interference, contact the service centers of the medical equipment.

## 17.2 Hospital

Pay attention to the following points in hospitals or health care facilities:

- Do not take the device into operating rooms, intensive care units (ICUs), or coronary care units (CCUs).
- Shut down your device near places for medical treatment.
- Do not use your device at places for medical treatment where device use is prohibited.
- When using your device near someone who is suffering from a heart disease, turn down the ring tone volume or vibration properly so that it does not affect the person.

## 17.3 Areas with Inflammables and Explosives

In any area with inflammables and explosives, power off your device. Do not take out, install or charge the battery, to avoid explosion and fire.

Areas with inflammables and explosives include:

- Gas station
- Area for storing fuels (such as the bunk under the deck of a ship)
- Device/Vehicle for transporting and storing fuels or chemical products

- 
- Area where the air contains chemical substances and particles (such as granule, dust, metal powder)
  - Area indicated with the "Explosives" sign
  - Area indicated with the "Power off bi-direction wireless equipment" sign
  - Area where it is generally suggested to stop the engine of a vehicle

## **17.4 Traffic Security**

- Do not place the device over or near the air bag when you are driving a car. Otherwise, you may get seriously injured due to the strong force generated when the air bag gets inflated or breaks.
- Observe the rules and regulations of airline companies. When boarding or approaching a plane, power off the device and take out the battery. In areas where using the device is prohibited, power off the device. Otherwise, the radio signal of the device may interfere with the plane control signals.

## **17.5 Storage Environment**

- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Keep the device away from any household appliances with strong electromagnetic field, such as microwave oven, refrigerator, or mobile device. Otherwise, malfunction, fire, or explosion may occur.
- Do not leave your device, battery, or charger in a very hot or cold place. Otherwise, the malfunction of the products, fire, or explosion may occur.
- Do not place your device, battery, and charger in contact with serious collision or shock. Otherwise, the battery leakage, device malfunction, overheating, fire, or explosion may occur.

---

## 17.6 Safety of Children

- Place your device, battery, and charger in places beyond the reach of children. Do not allow children to use the device, battery, or charger without guidance.
- Do not allow children to touch the small components. Otherwise, suffocation or gullet jam can be caused if children swallow the small components.

## 17.7 Operating Environment

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery and charger from water or vapor. Do not touch the device and charger with a wet hand. Otherwise, short-circuit and malfunction of the device or electric shock may occur.
- Do not use the device in a dusty, damp, or dirty place or a place near a magnetic field. Otherwise, internal circuit faults may occur.
- Keep your device 1 inch (2.5 cm) away from your body to comply with international RF leakage requirements.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- Interference from the signals of the device may adversely affect usage of nearby devices such as televisions, radios, or computers.
- Use approved accessories and ensure that the accessories comply with international RF specifications.
- The working temperature of the phone is range from 0°C-50°C.

## 17.8 Cleaning and Maintenance

- Before you clean or maintain the device, power off the device and disconnect it from the charger. Otherwise, the electric shock or short-circuit of the battery or charger may occur.
- Do not use any chemical detergent, powder, or other chemical agent (such as alcohol

---

and benzene) to clean the device and the charger. Otherwise, part damage or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.

- Do not scratch or abrade the shell of the device. The shed painting may lead to skin allergy. If you have an allergy, stop using the device and seek help from your doctor.
- Clean the dust on the power plug and keep the power plug dry. Otherwise, the power plug may catch fire.
- If the device and accessories cannot function normally, contact the personnel in the local authorized service site for assistance.

## **17.9 Use of the Battery**

- Use the battery approved by the ereader manufacturer. Any violation of this rule may result in fire or malfunction of the battery.
- Do not place the battery in a fire. Otherwise, the battery may catch fire and explode.
- Do not connect two poles of the battery with conductors such as metal materials, keys or jewelries. Otherwise, the battery may be short-circuiting and it may burn your body.
- Do not disassemble the battery or solder the battery poles. Otherwise the fluid leakage, overheating, fire, or explosion may occur.
- If any battery leaks, emits smoke or abnormal smell, stop using it immediately. Keep the device far from fire and human body to avoid fire or explosion that may cause injury to people. With safety ensured, send the device to a qualified maintenance site to repair it.
- If the battery fluid comes in contact with your skin or clothes, rinse with water immediately.
- If the battery fluid goes into your eyes, do not rub your eyes. Rinse your eyes with water immediately and seek medical assistance.
- If there is battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, the battery leakage, overheating, explosion, or fire may occur.
- If a battery does not fit in the device, do not apply force. Otherwise, the battery may leak or explode.

- 
- Do not remove the battery from the device when the device is powered on.
  - Charge the battery and store it at room temperature if it will not be used during a long period.
  - End-user will recognize the ID label inside the battery compartment when inserting the battery and SIM card.

## **17.10 Use of the Charger**

- Use the charger approved by the ereader manufacturer. Any violation of this rule may result in fire or malfunction of the charger.
- Do not short-circuit the charger. Short-circuiting the charger may cause fire or malfunction of the charger.
- If the power cable is damaged (for example, the lead is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, the electric shock, short-circuit of the charger, or fire may occur.
- Keep the charger dry. Once water or other liquid leaks into the charger, electrical leakage or other faults may occur.
- Do not use the charger in a dusty and damp environment. Keep the power cord away from any heating appliance.
- Ensure the charger is properly plugged into the power socket properly when charging the battery. Improper insertion may result in electric shock, fire, or explosion. To unplug the charger, pull the plug off rather than tear the power cord.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage can cause fire or malfunction of the charger.
- Do not place any heavy object on the power cord of the charger. Do not damage, change, or pluck the power cord. Otherwise electric shock or fire may occur.
- When you are charging the battery with the charger, do not touch the plug, power cord or the charger with a wet hand. Otherwise, electric shock can be caused.
- Once the liquid such as water leaks into the charger, remove the plug of the charger from the socket immediately. Otherwise, overheating, fire and other malfunction may occur.

---

## 17.11 Use of the USB Cable

Use the USB cable strictly according to the following requirements to avoid damages to the ereader or the computer:

- When using the USB cable to connect the device to a computer, connect the cable to the ereader first, and then connect the cable to the computer.
- During communication between the ereader and the computer, do not disconnect the USB cable, which may cause damages to the ereader of computer.
- To disconnect the USB cable from the ereader and the computer, disconnect the cable from the computer first, and then disconnect the cable from the ereader.
- Users have to use the connection to USB interfaces with USB 2.0 version or higher.

## 17.12 Environment Protection

Observe the local regulations regarding the disposal of your packaging materials, exhausted battery and old device, and promote their recycling. Do not dispose of an exhausted battery or old device in a municipal waste or fire.

---

## **FCC Regulations:**

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
  
- This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
  
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
  
- The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The County Code Selection feature is disabled for products marketed in the US/Canada. For product available in the USA/ Canada markets, only channel 1~11 can be operated. Selection of other channels is not possible.

---

## ▶ **RF Exposure Information (SAR)**

This device is compliance with SAR for general population /uncontrolled exposure limits in ANSI/IEEE C95.1-1999 and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device was tested with the device contacted directly to the human body. To maintain compliance with FCC RF exposure compliance requirements, avoid direct contact to the transmitting antenna during transmitting.



---

## Products with 2.4–GHz Wireless LAN Devices France

L'utilisation de cet équipement (2.4GHz wireless LAN) est soumise à certaines restrictions: cet équipement peut être utilisé à l'intérieur d'un bâtiment en utilisant toutes les fréquences de 2400 à 2483.5MHz (Chaîne 1–13). Pour une utilisation en environnement extérieur, les fréquences comprises entre 2400-2454 MHz (Chaîne 1-9) peuvent être utilisées. Pour les dernières restrictions, voir <http://www.art-telecom.fr>.

For 2.4–GHz wireless LAN operation of this product, certain restrictions apply. This equipment may use the entire 2400–MHz to 2483.5–MHz frequency band (channels 1 through 13) for indoor applications. For outdoor use, only 2400-2454 MHz frequency band (channels 1-9) may be used. For the latest requirements, see <http://www.art-telecom.fr>.

### Wireless LAN Module's Maximum EIRP

Frequency Ranges (MHz)	Indoors	Outdoors
2400 MHz ~ 2446.5 MHz	10mW	Not Permitted
2446.5 MHz ~ 2483.5 MHz	100mW	100mW on private property with Ministry of Defense approval.

This equipment may be operated in:							
AT	BE	BG	CH	CY	CZ	DE	DK
EE	ES	FI	FR	GB	GR	HU	IE
IT	IS	LI	LT	LU	LV	MT	NL
NO	PL	PT	RO	SE	SI	SK	TR



This device have been tested to comply with the Sound Pressure Level requirement laid down in the applicable EN 50332-1and/or EN 50332-2 standards. Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.

Note: A pleine puissance, l'écoute prolongée du baladeur peut endommager l'oreille de l'utilisateur.

---

# Declaration of Conformity

We, Huawei Technologies Co., Ltd.  
of Bantian, Longgang District, Shenzhen 518129, P.R.China

Declare under sole responsibility that the product:

Model: T62W

Description: Ereader

To which this declaration relates, is in conformity with the following standards and/ or other normative documents:

- EN 301 511 V9.0.2
- EN 301 908-1/ -2 V3.2.1
- EN 300328 V1.7.1
- ETSI EN 301 489-1 V1.8.1/ -7 V1.3.1/-17 V1.3.2/ -24 V1.4.1
- EN 60950-1:2006+A11:2009
- EN 50332-1:2000
- EN 62311: 2008/ IEC 62209-2:2010/ FCC OET Bulletin 65 Supplement C (Edition 01-01)

We hereby declare that the above named product is in conformance to all the essential requirements of the R&TTE Directive (99/5/EC), and the EMC Directive (2004/108 /EC) issued by the Commission of the European Community.

The conformity assessment procedure referred to in Article 10 and detailed in Annex [IV] of directive 1999/5/EC has been followed related to Articles.

- R&TTE Article 3.1 (a) Health and Safety
- R&TTE Article 3.1 (b) EMC
- R&TTE Article 3.2 Spectrum Usage

**CE 0700** 