

**Wonderful Communication, Mobile Life**

Welcome to U120 Mobile Phone from Huawei Technologies Co., Ltd.

HUAWEI U120 Mobile Phone  
User Guide

# Notice

**Copyright © 2007 Huawei Technologies Co., Ltd.**

## All Rights Reserved

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

## Trademarks



and HUAWEI are trademarks of Huawei Technologies Co., Ltd. All other trademarks mentioned in this manual are the properties of their respective holders.

## Notice

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements,

information, and recommendations in this manual do not constitute a warranty of any kind, expressed or implied.

Please read the safety precautions carefully to ensure the correct and safe use of your wireless device. For detailed information, refer to the section "Warnings and Precautions".

## Huawei Technologies Co., Ltd.

### Address:

Administration Building, Huawei Technologies Co., Ltd., Bantian, Longgang District, Shenzhen, P. R. China

**Postal Code:** 518129

**Website:** <http://www.huawei.com>

# Safety Precautions

Please read the safety precautions carefully to ensure the correct and safe use of your wireless device. For detailed information, refer to the section "Warnings and Precautions".



Do not switch on your phone when it is prohibited to use mobile phones or when the phone may cause interference or danger.



Do not use your phone while driving.



Follow any rules or regulations in hospitals and health care facilities. Switch off your phone near medical apparatus.



Switch off your phone in aircraft. The phone may cause interference to control signals of the aircraft.



Switch off your phone near high-precision electronic devices. The phone may affect the performance of these devices.



Do not attempt to disassemble your phone or its accessories. Only qualified personnel are allowed to service or repair the phone.



Do not place your phone or its accessories in containers with strong electromagnetic field.



Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.



Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a gas station.



Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.



Use only approved batteries and chargers to avoid the risk of explosions.



Observe any laws or regulations on the use of wireless device. Respect others' privacy and legal rights when using your wireless device.



Strictly follow the relevant instructions on 73 of this manual while using the USB cable. Otherwise your phone or PC may be damaged.

# Table of Contents

## Table of Contents

### Getting to Know Your Phone 1

Packing List .....	1
Your Phone .....	2

### Getting Started 6

Loading the Battery .....	6
Unloading the Battery .....	6
Charging the Battery .....	7
Loading/Removing the SIM Card .....	8
Loading/Removing a Memory Card .....	9
Powering On/Off .....	9

### Call Service 11

Making or Answering Calls .....	11
Operations During a Call .....	12
Operations During a Video Call .....	13

### Text Input 15

T9 Input Method .....	15
Traditional Input Method .....	16
"123" Numeric Input Method .....	16
Symbol Input Method .....	17
Input Different Languages .....	17

### Contacts 18

Making Calls from the Contacts .....	18
Searching for a Contact .....	18
Other Operations .....	19
Groups .....	20

### Call Log 21

Making Calls from Call Log .....	21
Other Operations .....	21

### Messaging 22

Text Messages .....	22
Multimedia Messages .....	25
Email .....	30
Push Inbox .....	35
Broadcast Inbox .....	35
Voice Mail Number .....	36
Common Phrases .....	36

### Music 37

My Music .....	37
Playlist .....	38
CMB List .....	38

### Organiser & Tools 39

SIM ToolKit .....	39
Alarm Clock .....	39
Calendar .....	39
Task .....	41
Memo Pad .....	41
Synchronise .....	42
Calculator .....	42
Unit Converter .....	43
Currency Converter .....	43
Voice Recorder .....	44
World Time .....	44
Stopwatch .....	45
Timer .....	45

Service Dial Number .....	45
<b>My Files 46</b>	
<b>Browser 47</b>	
Browser .....	47
Enter URL.....	47
Bookmarks .....	48
Internet Settings .....	48
<b>Entertainment 49</b>	
Games.....	49
Camera.....	49
Video Camera .....	50
Music.....	51
<b>Connections 52</b>	
Bluetooth (Optional) .....	52
USB .....	56
Note on Connection Functions .....	59
<b>Settings 60</b>	
Phone Settings .....	60
Display Settings.....	61
Message Settings.....	62
Call Settings .....	62
Video Call Settings .....	65
Connectivity.....	65
Network Settings .....	65
Security Settings .....	66
<b>Warnings and Precautions 68</b>	
Electronic Device.....	68

Hospital .....	68
Storage Environment .....	69
Children Safety .....	69
Operating Environment .....	70
Cleaning and Maintenance .....	70
Environmental Protection .....	71
Emergency Calls .....	71
Battery.....	71
Charger .....	72
Using the USB Cable .....	73
Certification Information (SAR) .....	74

## **Acronyms and Abbreviations 77**

## **Appendix 78**

## **Index**

# 1 Getting to Know Your Phone

Your U120 phone can operate in virtually all countries, automatically switching between WCDMA 2100 and GSM/GPRS 900/1800/1900 networks. This allows you to enjoy communication wherever you use your mobile phone.

## Note

The services supported by your phone should be also supported by the network from where you use the phone. For details, please consult your service provider.

## Packing List

Your phone package box contains the following articles:

- 1 One U120 mobile phone
- 2 One travel charger
- 3 One Li-on battery
- 4 One user manual
- 5 One headset (optional)
- 6 One USB cable (optional)
- 7 One CD-ROM disk which contains U120 MOBILE PHONE PC Assistant (optional)

## Your Phone

### Scroll key

Press this key to scroll through a menu.  
To quick access Browser, Contacts, text message editor and My Files.

### Left function key

To activate the function indicated at the left of the prompt bar on the screen.  
To access the main menu in standby mode.


### Music key

To access the play screen in the standby mode.  
To make a video call.

### Send key

To make or answer a call.  
To access the **Call Log** screen in the standby mode.

### Key

Press and hold it to lock the keypad in the standby mode. Then press it and  to unlock the keypad.

Earpiece

### Right function key

To activate the function indicated at the right of the prompt bar on the screen.  
To access **Homepage** in standby mode.

### Clear key

To delete a character before the cursor in the editing mode.

### OK key

To start the selected function in the menu.  
To access the main menu in standby mode.

### Power/End key

To end an ongoing call or reject an incoming call.  
To return to the Home screen.  
Press and hold this key to power on or power off the phone.

### key

 
Press and hold it to switch to the meeting profile from the current profile.  
To select the check box of the option item.

Microphone  
Headset jack


Charger connector/Cable connector




## Front View and Back View

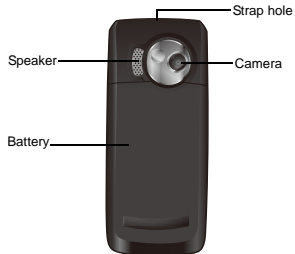

## Side View

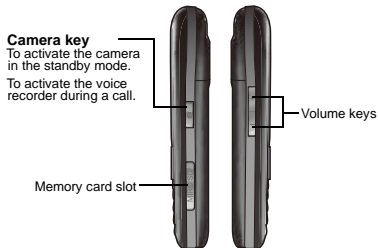 

## Home Screen

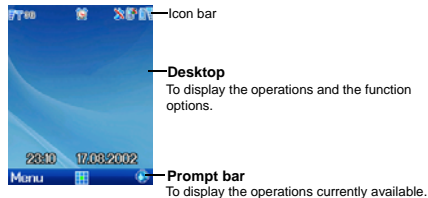 






















### ◆ Icon bar

This area displays the phone status. The following table illustrates all the icons that may appear on this bar.

Icon	Description
	Indicates signal strength. The more the horizontal bars appear, the stronger the signal is.
	Both the GSM and GPRS networks exist.
	Both the WCDMA network and data service exist.

## Your Phone




Icon	Description
	You are using the roaming service.
	Indicates network connection state.
	Indicates security connection state of the network.
	The phone is in a call.
	The keypad is locked.
	The background play is activated.
	Alarm clock is enabled.
	Bluetooth is enabled.
	You have new text messages.
	You have new PUSH messages.
	You have new multimedia messages.
	You have new voice mail.
	The vibration mode is enabled.

Icon	Description
	Indicates in mute mode.
	The normal profile is activated. The icon that corresponding to the profile displays when you select different profiles.
	Forwarding all incoming voice calls to line 1.
	Call line 2 is enabled currently.
	Forwarding all incoming voice calls to line 2.
	The headset is plugged in.
	Your PC connects to the Internet through your phone.
	Indicates battery power level.

## Introduction to the Menu

Your phone provides an extensive range of functions. You can use these functions by navigating the following menus: Entertainment, Music, Call Log, Browser,

Messaging, My Files, Organiser & Tools, Contacts and Settings.

 
- 1** In the standby mode, press  to display the main menu.
- 2** Press the scroll key to scroll through the menu, and then press  to select.
- 3** If the menu contains further submenus, repeat step 2.
- 4** Use the selected function according to the prompts on the screen.
- 5** Select **Back** to return to the previous menu. Press  to return to the standby mode.

## 2 Getting Started

### Loading the Battery

To load the battery:

- 1 Fit the battery into the battery slot on back of the phone.
- 2 Press the battery down until it clicks into place.

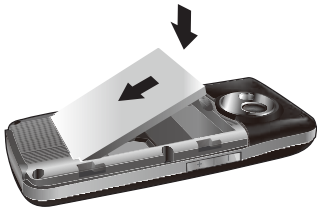

- 3 Slide the back cover to the phone.



### Unloading the Battery

 
Only unload the battery after powering off your phone. Otherwise, your phone may be damaged.

To unload the battery, do as follows:

- 1 Slide the back cover out of the phone.



- 2 Take out the battery.

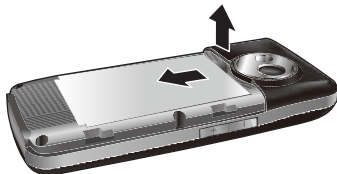

### Charging the Battery

Before charging the battery, please read the following precautions carefully.

#### Note

- When charging the mobile phone, you must use the battery and charger provided with the mobile phone. Otherwise, you should be responsible for all the consequences caused by misusing other batteries and chargers.
- When you charge the battery for the first time, please charge it for a minimum of 12 hours.
- The battery discharges even while not being used. If you haven't used it for a long time, please recharge it first.
- The charging time depends on the environmental temperature and the age of the battery.
- Do not strike, toss or cause any kind of violent shock to the battery, otherwise liquid leakage, body damage, overheating, explosion or fire may occur.

- The battery can be recharged but eventually wears out. If the battery lasts for a shorter time period than usual after being charged normally, replace it with a battery of the same type.

### Charging with a Cable Charger

Before charging the battery with a cable charger, ensure that the battery has been properly loaded into your phone.

To charge the battery, do as follows:

- 1 Insert the plug of the charger into the connector of the phone as shown in the following figure. Before inserting the plug, ensure that the arrow on the charger output jack points to the front side of the phone.



## ■ Loading/Removing the SIM Card

- 2 Plug in the connector of the charger to a power socket.

### Note

- When the battery power level is very low, the phone makes alert sounds and displays a prompt. When the battery power level is too low, the phone will power off automatically.
- When the battery is being charged, the charging indicator blinks continuously. When the charging indicator stops blinking, it indicates that the battery is full.

## ■ Loading/Removing the SIM Card

Your SIM card contains such information as phone numbers and contacts. Load your SIM card before using your phone. To use the SIM card properly, please read the following instructions carefully.

### Note

 
- Keep the SIM card out of the reach of children.
- The SIM card and its metal contacts are easily damaged by scratching or bending.

So be careful when you carry, load or remove it.


- Always disconnect the charger from the phone before loading or removing the SIM card.

To load or remove the SIM card, do as follows:

- 1 Power off the phone and remove the battery.
- 2 Position the card at the card slot entrance, making sure it is facing the same way as shown in the diagram below, with the notched corner at the bottom right. Then slide in as shown.

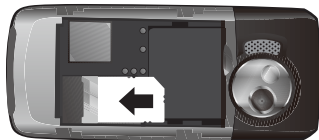

 - 3 To remove the SIM card, power off your phone and take out the battery. Then press the SIM card with one finger and slide it out of the slot.

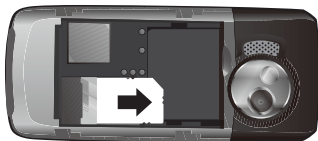

## Loading/Removing a Memory Card

Your mobile phone supports a memory card (micro-SD) with a capacity up to 1 GB.

- 1 Remove the rubber cap from the memory card slot; then insert the memory card into the slot, as shown in the following figure.

 


- 2 After inserting the memory card completely, replace the rubber cap.

## Loading/Removing a Memory Card



- 3 To remove a memory card, open the rubber cap and press the memory card gently. Now the memory card will pop up automatically. Then take it out as shown in the following figure.

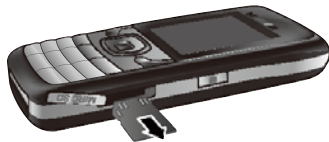


## Powering On/Off

### Powering On


Ensure that the SIM card is in your phone and that the battery has been charged.

## ■ Powering On/Off

Press and hold  to power on your phone.

## Switching Off

---

Press and hold  to power off your phone.

## Access Codes

---

If you have set the phone password and the PIN is **ON**, you have to enter the corresponding access codes when you power on your phone. For setting and changing the access codes, please refer to "Settings/Security Settings" on page 66.

### ◆ Phone Password

The phone password is used to protect your phone from unauthorized use. The phone password is preset as 0000 for your mobile phone.

### ◆ PIN

The PIN (Personal Identification Number) code is used to protect your SIM card from unauthorized use. Usually you will be supplied with the PIN code when you get the SIM card from your service provider. If

you have not got one or you have lost it, please consult your service provider.

### ◆ PIN2

Some SIM cards provide PIN2 code. Some special functions such as the "Fixed Dialer Number" are not available until you enter the PIN2 code and, at the same time, your SIM card must support these functions.

### ◆ PUK

To unlock the locked SIM card, you have to enter the PUK (PIN Unblocking Key) code. Usually you will be supplied with the PUK code when you get the SIM card from your service provider. If you have not got one or you have lost it, please consult your service provider.

### ◆ PUK2

Some SIM cards provide PUK2 code which is used to unlock the locked PIN2 code. Usually you will be supplied with the PUK2 code when you get the card from your service provider. If you have not got one or you have lost it, please consult your service provider.





# 3 Call Service

## Making or Answering Calls


### Making a Video Call

---

You can make a video call under the 3G network with someone whose phone also supports video calls.




- 1 Enter or edit a phone number in any of the following ways:
  - Enter a phone number through the keypad.
  - Select a number from the **Call Log** screen.
  - Access the **Contacts** screen to select a phone number from **Phone** or **SIM**.
- 2 Press  or select **Options > Video Call** to dial.
- 3 Press  to end the video call.

#### Note

To delete a wrong number, press  once to delete the digit to the left of the cursor.

### Making a Voice Call

---

- 1 Enter or edit a phone number in any of the following ways:
  - Enter a phone number through the keypad.
  - Press  to select a number from the **Call Log** screen.
  - Access the **Contacts** screen to select a phone number from **Phone** or **SIM**.
- 2 Press  or select **Options > Voice Call** to dial.
- 3 Press  to end the call.

### Making Voice Calls Using SDN

---

You can make a voice call through speed dialing. For instructions on assigning speed dialing numbers, refer to "Contacts/Other operations" on page 19.





To make a call by speed dialing number (SDN), press and hold the number key in the standby mode until the phone dials the corresponding phone number.


## Operations During a Call

### Answering or Rejecting Calls

You can set the answer mode to **Any key** or **Send key**. For details, refer to "Settings/Call Settings/Answer Mode".

The following describes how to answer or reject a call in different answer modes:

Operation	Description
Answer a call	<ul style="list-style-type: none"><li>If the answer mode is <b>Any key</b>, open the phone and press any key, except  and .</li><li>If the answer mode is <b>Send key</b>, press .</li><li>If the headset is in use, press the control key on the headset.</li></ul>
Reject a call	Press  or select <b>Options &gt; Reject</b> .

Operation	Description
End a call	<ul style="list-style-type: none"><li>If the headset is not in use, you can press .</li><li>If the headset is in use, press the control key of the headset.</li></ul>
Reply by message	Select <b>Options &gt; Reply SMS</b> to send a predefined message to the caller.


You can set the auto answer mode to **Immediate answer**, **Message** or **Recorded message**.

For details, refer to "Settings/Call settings/Auto Answer".

## Operations During a Call

### Icon Description

#### ◆ Icon Description

 : A call is ongoing.

 : The call is on hold.



: There is a new incoming call during a call.

## Operations

---

During a voice call, you can select **Options** to perform the following operations.

- **Hold/Resume:** To hold or resume the call during a call.
- **Answer/Reject:** Your phone allows you to handle two calls simultaneously. During a call, if there is a new incoming call, select **Options > Answer** to answer it or select **Options > Reject** to reject it.
- **Swap:** To swap between calls during a 3-party call.
- **Conference call/Private call:** To switch to the conference call during a 3-party call or to talk with a party privately during a conference call.
- **Handfree/Earpiece:** To switch between the Hands-free and the Earpiece modes during a call.
- **Mute/Unmute:** To mute or unmute your voice during a call.
- **End:** To end all calls, the active call, the current call or the on hold call.
- **New Call:** To make a 3-party call during a call.


## Operations During a Video Call

- **Start Recording/Stop Recording:** to record or stop recording the conversation.
- **Other Applications:** To access the **SMS** screen, the **Contacts** screen or the **Call Log** screen.

## Operations During a Video Call

### Icon Description



---

Icon	Description
	Press the up or down scroll key to adjust the brightness.
	Press the left or right scroll key to zoom in or zoom out.
	Press the volume keys to adjust the volume.
	Press  to switch between the loud-speaker mode and the earpiece mode.

## ■ Operations During a Video Call

### Operations

---

During a video call, you can press  to hold the call and send a preset file to the other party. You can press  again to resume the call. Before you use the function, you can preset a file in **Settings>video call/Send freeze image**.

During a video call, you can select **Options** to perform the following operations.

- Switch picture: To switch display.
- Camera off/Open video: To forbid or allow the video from your side.
- Audio off/Open audio: To forbid or allow the audio from your side.
- Play file: To play a media file.
- Handsfree/Earpiece: Switch between the loud-speaker mode and the earpiece mode.
- Record: To record a video clip. A recorded video clip is saved to the **My Files/Videos** directory.





- Other Applications: To access the **SMS** screen, the **Contacts** screen or the **Call Log** screen.
- Picture in Picture: To set the P-in-P mode to off, top left, top right, bottom right or bottom left.
- Image quality: To set the image quality to best quality or more smooth.

## 4 Text Input

You can use the keypad to enter alphanumeric characters and symbols. For example, you can add entries to the contacts, write messages or schedule events on the calendar.

### Note

While entering text:

 



- Press  to switch between input methods, including "abc", "Abc", "ABC", and numbers.
- Press  to enable or disable T9 input method.
- Press  to display the commonly-used symbols list. You can use the scroll keys to select.
- Press  to delete the letter before the cursor.

### T9 Input Method


With the T9 input method, you can easily and quickly enter words with predictive text scheme.

- Press each key carrying the desired letter once, and then the predictive text scheme will present the candidate words composed by the letters you have entered in the drop-down menu.
- After entering all letters, if there is not the expected one in the drop-down menu, you can select **[Spell]** to enter the desired letter using the traditional input method and then select **Insert**. The words you inserted will be saved in the predictive text dictionary. If the dictionary is full, the new word replaces the oldest one.

For example, to enter the word "good" with the T9 input method, follow these steps.

- 1 Press successively the keys , , , and  which "g", "o", "o", and "d" belong to, and the candidate words composed by these letters will be shown in the drop-down menu.
- 2 Use the up/down scroll key to select "good".

### Note

Press  repeatedly and you will see "T9 abc", "T9 Abc" and "T9 ABC" on the upper


## Traditional Input Method

left corner of the screen successively. It indicates the words to be entered will be in lower case, first letter capitalized or in upper case.

### Traditional Input Method

When T9 input method is off, you can use the traditional input method for entering alphabetic characters. Repeatedly press the key that carries the letter to be entered when it appears on the screen.


For example, to enter the word "Hello" with the traditional input method, follow these steps.

- 1 Press  that carries "h" repeatedly and all letters carried by this key will be displayed successively on the screen. Stop when you see an "h" on the screen.
- 2 After entering the first letter, you can directly press another key to enter the next letter. If the next desired letter is on the same key as the current one, wait until the cursor appears to the right


of the current letter and then you can enter the next one.

- 3 Enter "e", "l", "l" and "o" in the same way.

#### Note


- Press  repeatedly and you will see "abc", "Abc" or "ABC" on the upper left corner of the screen successively. It indicates the words to be entered will be in lower case, first letter capitalized or in upper case.
- Press and hold number keys to enter numbers.

### "123" Numeric Input Method

With the "123" numeric input method, you can enter corresponding numeric characters by pressing the character/number keys. For example, to enter "1" with the "123" numeric input method, you can press . Then "1" appears on the screen.

## Symbol Input Method

Your mobile phone provides an independent symbol input method.

For example, to enter ":" with the symbol input method, you can just press the scroll keys to select ":" in the symbol list and then press .

## Input Different Languages

In a text editing screen, select **Options>Input language** to set the language for the text. The indicator of the selected language will be displayed on the upper left corner of the editing screen.