

Wonderful Communication, Mobile Life

Welcome to U1211 Mobile Phone from Huawei Technologies Co., Ltd.

HUAWEI U1211 Mobile Phone
User Guide

Notice

Copyright © 2008 Huawei Technologies Co., Ltd.

All Rights Reserved

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

Trademarks



and HUAWEI are trademarks of Huawei Technologies Co., Ltd. All other trademarks mentioned in this manual are the properties of their respective holders.

Notice

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements,

information, and recommendations in this manual do not constitute a warranty of any kind, expressed or implied.

Please read the safety precautions carefully to ensure the correct and safe use of your wireless device. For detailed information, refer to the section "Warnings and Precautions".

Huawei Technologies Co., Ltd.

Address:

Administration Building, Huawei Technologies Co., Ltd., Bantian, Longgang District, Shenzhen, P. R. China

Postal Code: 518129

Website: <http://www.huawei.com>

Safety Precautions

Please read the safety precautions carefully to ensure the correct and safe use of your wireless device. For detailed information, refer to the section "Warnings and Precautions".



Do not switch on your phone when it is prohibited to use mobile phones or when the phone may cause interference or danger.



Do not use your phone while driving.



Follow any rules or regulations in hospitals and health care facilities. Switch off your phone near medical apparatus.



Switch off your phone in aircraft. The phone may cause interference to control signals of the aircraft.



Switch off your phone near high-precision electronic devices. The phone may affect the performance of these devices.



Do not attempt to disassemble your phone or its accessories. Only qualified personnel are allowed to service or repair the phone.



Do not place your phone or its accessories in containers with strong electromagnetic field.



Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.



Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a gas station.



Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.



Use only approved batteries and chargers to avoid the risk of explosions.



Observe any laws or regulations on the use of wireless device. Respect others' privacy and legal rights when using your wireless device.



Strictly follow the relevant instructions on 69 of this manual while using the USB cable. Otherwise your phone or PC may be damaged.

Table of Contents

Table of Contents 1

Getting to Know Your Phone 1

Packing List	1
Your Phone	2

Getting Started 6

Loading the Battery	6
Unloading the Battery	6
Charging the Battery	7
Loading/Removing the SIM Card	8
Loading/Removing a Memory Card	9
Powering On/Off	9

Call Service 11

Making or Answering Calls	11
Operations During a Voice Call	12
Operations During a Video Call	13

Text Input 15

T9 Input Method	15
Traditional Input Method	16
"123" Numeric Input Method	16
Symbol Input Method	16
Input Different Languages	17

Contacts 18

Making Calls from the Contacts	18
Searching for a Contact	18
Other Operations	19
Groups	19

Call Log 21

Making Calls from Call Log	21
Other Operations	21

Messaging 22

Text Messages	22
Multimedia Messages	25
Email	29
Push Inbox	33
Broadcast Inbox	34
Voice Mail number	34
Common Phrases	34

Music 35

My music	35
Playlist	36

Organiser & Tools 37

SIM ToolKit	37
Alarms	37
Calendar	37
Task	38
Memo	39
Synchronise	39
Calculator	40
Unit converter	40
Currency converter	41
Voice recorder	41
World Time	42
Stopwatch	42
Timer	42
Service dial number	42

My Files 43

Browser 44

Browser	44
Enter URL.....	44
Bookmarks	45
Internet Settings	45

Entertainment 46

Games.....	46
Camera.....	46
Video Camera	47
Music	48
FM Radio.....	48

Connections 50

Bluetooth	50
USB	53

Settings 56

Phone settings.....	56
Display settings	57
Message settings	58
Call settings.....	58
Video call	61
Connectivity.....	61
Network	61
Security	61

Warnings and Precautions 64

Electronic Device.....	64
Hospital	64

Storage Environment	65
Children Safety	65
Operating Environment	66
Cleaning and Maintenance	66
Environmental Protection.....	67
Emergency Calls.....	67
Battery.....	67
Charger	68
Using the USB Cable	69
Certification Information (SAR)	69

Acronyms and Abbreviations 73

Appendix 74

Index 1

1 Getting to Know Your Phone

Your U1211 phone can operate in virtually all countries, automatically switching between WCDMA 900/2100 and GSM/GPRS 900/1800/1900 networks. This allows you to enjoy communication wherever you use your mobile phone.

Note The services supported by your phone should be also supported by the network from where you use the phone. For details, please contact your service provider.


Packing List

Your phone package box contains the following articles:

- 1 One U1211 mobile phone
- 2 One travel charger
- 3 One Li-ion battery
- 4 One user Guide
- 5 One headset (optional)
- 6 One USB data cable (optional)

- 7 One CD-ROM disk which contains U1211 Mobile Phone PC Assistant (optional)


Your Phone

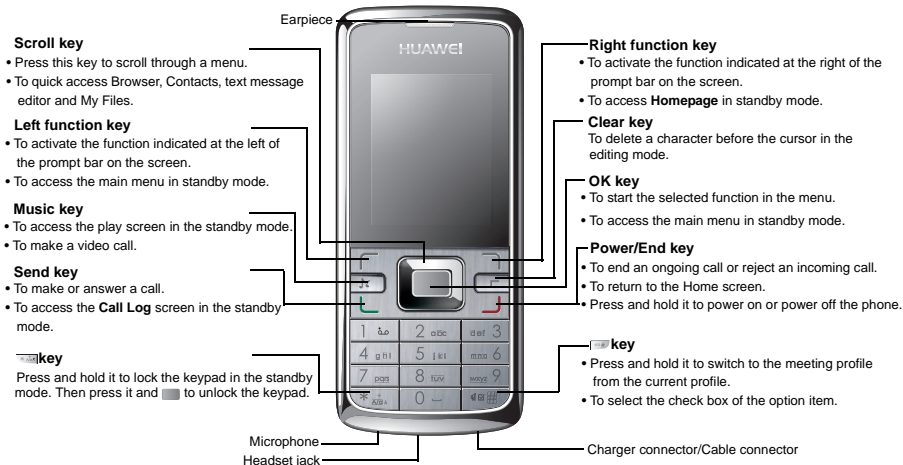


Back View



Side View

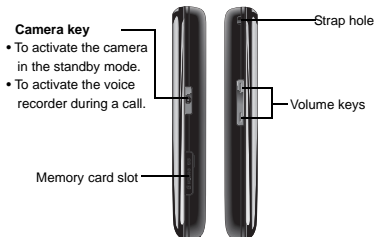

Home Screen

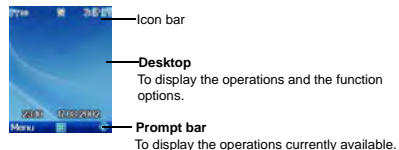










 
 









◆ Icon bar

This area displays the phone status. The following table illustrates all the icons that may appear on this bar.

Icon	Description
	Indicates signal strength. The more bars that appear, the stronger the signal.
	The phone is currently in a GSM network.
	The phone is currently in a WCDMA network.
	You are using the roaming service.


Your Phone



Icon	Description
	Indicates network connection state.
	Indicates security connection state of the network.
	The phone is in a call.
	The keypad is locked.
	The background play is activated.
	Alarm clock is enabled.
	Bluetooth is enabled.
	You have new text messages.
	You have new PUSH messages.
	You have new multimedia messages.
	You have new voice mail.
	The vibration mode is enabled.
	The phone is in mute mode.
	The normal profile is activated.

Icon	Description
	The headset is plugged in.
	Forwarding all incoming voice calls to line 1.
	Call line 2 is enabled currently.
	Forwarding all incoming voice calls to line 2.
	Your PC connects to the Internet through your phone.
	Indicates power level of the battery.

Introduction to the Menu

Your phone provides an extensive range of functions. You can use these functions by navigating the following menus: Entertainment, Music, Call Log, Browser, Messaging, My Files, Organiser & Tools, Contacts and Settings.

- 1 In the standby mode, press  to display the main menu.

- 2** Press the scroll key to scroll through the menu, and then press  to select.
- 3** If the menu contains further submenus, repeat step 2.
- 4** Use the selected function according to the prompts on the screen.
- 5** Select **Back** to return to the previous menu. Press  to return to the standby mode.

2 Getting Started

Loading the Battery

To load the battery, do as follows:

- 1 Fit the battery into the battery slot on back of the phone.
- 2 Press the battery down until it clicks into place.



- 3 Press the back cover down until it clicks into place.



Unloading the Battery

Only unload the battery after powering off your phone. Otherwise, your phone may be damaged. To unload the battery, do as follows:

- 1 Take the back cover out of the phone, as shown in the following figure.



- 2 Take out the battery.



Charging the Battery

Before charging the battery, please read the following precautions carefully.

Note

- When charging the mobile phone, you must use the battery and charger provided with the mobile phone. Otherwise, you should be responsible for all the consequences caused by misusing other batteries and chargers.
- When you charge the battery for the first time, please charge it for a minimum of 12 hours.
- Do not strike, toss or cause any kind of violent shock to the battery, otherwise liquid leakage, body damage, overheating, explosion or fire may occur.
- The battery can be recharged but eventually wears out. If the battery lasts for a shorter time period than usual after being charged normally, replace it with a battery of the same type.

- The charging time depends on the environmental temperature and the age of the battery.
- The battery discharges even while not being used. If you haven't used it for a long time, please recharge it first.

Charging with a Cable Charger

Before charging the battery with a cable charger, ensure that the battery has been properly loaded into your phone.

To charge the battery, do as follows:

- 1** Insert the plug of the charger into the connector of the phone as shown in the following figure. Before inserting the plug, ensure that the arrow on the charger output jack points to the front side of the phone.
- 2** Plug in the connector of the charger to a power socket.

■ Loading/Removing the SIM Card



Note

- When the battery power level is very low, the phone makes alert sounds and displays a prompt. When the battery power level is too low, the phone will power off automatically.
- When the battery is being charged, the charging indicator blinks continuously. When the charging indicator stops blinking, it indicates that the battery is full.

Loading/Removing the SIM Card

Your SIM card contains such information as phone numbers and contacts. Load your SIM card before using your phone. To use the SIM card properly, please read the following instructions carefully.

Note

- Keep the SIM card out of the reach of children.
- The SIM card and its metal contacts can be easily damaged by scratching or bending. Ensure care when you carry, load or remove it.
- Always disconnect the charger from the phone before loading or removing the SIM card.

To load or remove the SIM card, do as follows:

- 1** Power off the phone and remove the battery.
- 2** Position the card at the card slot entrance, making sure it is facing the same way as shown in the diagram below, with the notched corner at the bottom right. Then slide in as shown.



Loading/Removing a Memory Card

- 3 To remove the SIM card, power off your phone and take out the battery. Then press the SIM card with one finger and slide it out of the slot.



Loading/Removing a Memory Card

The U1211 phone supports a memory card (micro-SD) with a capacity up to 1 GB.

- 1 Remove the rubber cap from the memory card slot; then insert the memory card into the slot, as shown in the following figure.



- 2 After inserting the memory card completely, replace the rubber cap.



- 3 To remove a memory card, open the rubber cap and press the memory card gently. Now the memory card will pop up automatically. Then take it out as shown in the following figure.




Powering On/Off


Powering On

Ensure that the SIM card is in your phone and that the battery has been charged.

■ Powering On/Off

Press and hold  to power on your phone.

Powering Off

Press and hold  to power off your phone.

Access Codes

If you have set the phone password and the PIN is **ON**, you have to enter the corresponding access codes when you power on your phone. For setting and changing the access codes, please refer to "Settings/Security Setup" on page 61.

◆ Phone Password

The phone password is used to protect your phone from unauthorized use. The phone password is preset as 0000 for your phone.

◆ PIN

The personal identification number (PIN) code is used to protect your SIM card from unauthorized use. The PIN code is usually provided when you get the SIM card from your service provider. If you have not received a PIN code or if you have forgotten it, contact your service provider.

◆ PIN2

Some SIM cards provide a PIN2 code. Some special functions such as the "Fixed Dialer Number" are not available until you enter the PIN2 code. At the same time, your SIM card should support these functions.

◆ PUK

To unlock a locked SIM card, you need to enter the PIN Unblocking Key (PUK) code. The PUK code is usually provided when you get the SIM card from your service provider. If you have not received a PUK code or if you have forgotten it, contact your service provider.

◆ PUK2

Some SIM cards provide a PUK2 code that is used to unlock a locked PIN2 code. The PUK2 code is usually provided when you get the SIM card from your service provider. If you have not received a Puk2 code or if you have forgotten it, contact your service provider.


3 Call Service


Making or Answering Calls


Making a Video Call

You can make a video call to other person whose phone also supports video calls.

- 1 Enter or edit a phone number in one of the following ways:
 - Enter a phone number through the keypad.
 - Select a number from the **Call Log** screen.
 - Access the **Contacts** screen to select a phone number from **Phone** or **SIM**.

- 2 Press  to dial.

- 3 Press  to end the video call.

Note To delete a wrong number, press  once to delete the digit to the left of the cursor.

Making a Voice Call

- 1 Enter or edit a phone number in one of the following ways:

- Enter a phone number through the keypad.
- Select a number from the **Call Log** screen.
- Access the **Contacts** screen to select a phone number from **Phone** or **SIM**.

- 2 Press  to dial.

- 3 Press  to end the call.

Making Voice Calls Using SDN






You can make a voice call through speed dialing. For instructions on assigning speed dialing numbers, refer to "Contacts/Other Operations" on page 19. To make a call by speed dial number (SDN), press and hold the number key until the phone dials the corresponding phone number.

Answering or Rejecting Calls

You can set the answer mode to **Any key** or **Send key**. For details, refer to "Settings/Call Settings/Answer mode".

The following describes how to answer or reject a call in different answer modes:

Operations During a Voice Call

Operation	Description
Answer a call	<ul style="list-style-type: none">If the answer mode is Any key, open the phone and press any key, except  and .If the answer mode is Send key, press .If the headset is in use, press the control key on the headset.
Reject a call	Press  or select Options > Reject .
End a call	<ul style="list-style-type: none">If the headset is not in use, you can close the phone or press .If the headset is in use, press the control key of the headset.
Reply by message	Select Options > Reply to send a pre-defined message to the caller.

You can also set the auto answer mode to **Immediate answer**, **Message** or **Recorded message**.

For details, refer to “Settings/Call settings/Auto answer”.

Operations During a Voice Call

Icon Description



: A call is ongoing.



: The call is on hold.



: There is a new incoming call during a call.

Operations



During a voice call, you can select **Options** to perform the following operations.

- Hold/Resume:** To hold or resume the call during a call.
- End:** To end all calls, the active call, the current call or the on hold call.
- New Call:** To make a 3-party call during a call.
- Handsfree/Earpiece:** To switch between the Handsfree and the Earpiece modes during a call.
- Start recording/Stop recording:** to record or stop recording the conversation.




- Other applications: To access the **SMS** screen, the **Contacts** screen or the **Call Log** screen.
- Answer/Reject: Your phone allows you to handle two calls simultaneously. During a call, if there is a new incoming call, select **Options > Answer** to answer it or select **Options > Reject** to reject it.
- Swap: To swap between calls during a 3-party call.
- Conference call/Private call: To switch to the conference call during a 3-party call or to talk with a party privately during a conference call.
- Mute/Unmute: To mute or unmute your voice during a call.

Operations During a Video Call



Icon Description

Icon	Description
	Press the up or down scroll key to adjust the brightness.
	Press the left or right scroll key to zoom in or zoom out.

Operations During a Video Call

Icon	Description
	Press the volume keys to adjust the volume.
	Press  to switch between the loud-speaker mode and the earpiece mode.

Operations

During a video call, you can press  to hold the call and send a preset file to the other party. You can press  again to resume the call. Before you use the function, you can preset a file in **Settings/Video call/Send specific file**.

During a video call, you can select **Options** to perform the following operations.

- Switch picture: To switch display.
- Camera off/Open video: To forbid or allow the video from your side.
- Audio off/Open audio: To forbid or allow the audio from your side.
- Play file: To play a media file.

■ Operations During a Video Call





- Handsfree/Earpiece: Switch between the loud-speaker mode and the earpiece mode.
- Record: To record a video clip. A recorded video clip is saved to the **My Files/Videos** directory.
- Other applications: To access the **SMS** screen, the **Contacts** screen or the **Call Log** screen.
- Picture in picture: To set the P-in-P mode to off, top left, top right, bottom right or bottom left.
- Image quality: To set the image quality to best quality or more smooth.

4 Text Input

You can use the keypad to enter alphanumeric characters and symbols. For example, you can add entries to the contacts, write messages or schedule events on the calendar.

Note

While entering text:

- Press  to switch between input methods, including "abc", "Abc", "ABC", and numbers.
- Press  to enable or disable T9 input method.
- Press  to display the commonly-used symbols list. You can use the scroll keys to select.
- Press  to delete the letter before the cursor.

T9 Input Method





With the T9 input method, you can easily and quickly enter words with predictive text scheme.

- Press each key carrying the desired letter once, and then the predictive text scheme will present the


candidate words composed by the letters you have entered in the drop-down menu.

- After entering all letters, if there is not the expected one in the drop-down menu, you can select **[Spell]** to enter the desired letter using the traditional input method and then select **Insert**. The words you inserted will be saved in the predictive text dictionary. If the dictionary is full, the new word replaces the oldest one.

For example, to enter the word "good" with the T9 input method, follow these steps.

- 1 Press successively the keys , , , and  which "g", "o", "o", and "d" belong to, and the candidate words composed by these letters will be shown in the drop-down menu.
- 2 Use the up/down scroll key to select "good".

Note

Press  repeatedly and you will see "T9 abc", "T9 Abc" and "T9 ABC" on the upper left corner of the screen successively. It indicates the words to be entered will be in lower case, first letter capitalized or in upper case.

Traditional Input Method

Traditional Input Method

When T9 input method is off, you can use the traditional input method for entering alphabetic characters. Repeatedly press the key that carries the letter to be entered when it appears on the screen.

For example, to enter the word "Hello" with the traditional input method, follow these steps.

- 1 Press that carries "h" repeatedly and all letters carried by this key will be displayed successively on the screen. Stop when you see an "h" on the screen.
- 2 After entering the first letter, you can directly press another key (except) to enter the next letter. If the next desired letter is on the same key as the current one, wait until the cursor appears to the right of the current letter and then you can enter the next one.
- 3 Enter "e", "l", "l" and "o" in the same way.

Note

- Press repeatedly and you will see "abc", "Abc" or "ABC" on the upper left

corner of the screen successively. It indicates the words to be entered will be in lower case, first letter capitalized or in upper case.

- Press and hold number keys to enter numbers.

"123" Numeric Input Method

With the "123" numeric input method, you can enter corresponding numeric characters by pressing the character/number keys. For example, to enter "1" with the "123" numeric input method, you can press . Then "1" appears on the screen.


Symbol Input Method

Your phone provides an independent symbol input method. For example, to enter ":" with the symbol input method, you can just press the scroll keys to select ":" in the symbol list and then press .

Input Different Languages




In a text editing screen, select **Options > Input language** to set the language for the text. The selected language will be displayed on the upper middle part of the editing screen.

5 Contacts

Contacts  enables you to save and manage such information as phone numbers and addresses of your contacts. You can save such information in your phone or your SIM card. You can also assign frequently-used numbers to speed dialing keys for your convenience.

Making Calls from the Contacts




You can make a voice/video call with a contact selected from the contacts list.

- 1 In the **Contacts**  screen, press the left/right scroll key to select **Phone**  or **SIM**  .
- 2 Select a contact and select **Options > Call**. Then, you can select **Voice Call** or **Video Call** to make a call. Alternatively, you can select **Edit before call** to edit the number before making the call.

Searching for a Contact

You can find a contact from the contacts list easily and quickly by using this function on both the **Phone**




screen and the **SIM** screen.

- 1 In the **Contacts**  screen, press the left/right scroll key to select **Phone**  or **SIM**  .
- 2 Select **Options > Search**.
- 3 Select **Options > Search**, and then enter the contact name you are searching for. The contact is displayed.

Note

The search result includes all matched contacts from both the phone and SIM memories, regardless of the screen (Phone or SIM) from which you start searching.

You can also use quick search in the **Phone** or **SIM** screen:

- 1 In the **Contacts**  screen, press the left/right scroll key to select **Phone**  or **SIM**  .
- 2 Enter a string (one or more letters or numbers) contained in the contact name you are searching for. Then the contacts whose names contain this string are displayed.

You can also find a contact by entering the initials of the first name and the last name of the contact. For example, to find a contact named "Alice Green", enter the initials "ag". This contact is displayed in the candidate list.

Other Operations

In the **Contacts** screen, press the left/right scroll key to select **Phone** or **SIM**. Then select **Options** for the following options.

- **Details:** To view the details of contact.
- **Create message:** To send a message, MMS or Email to the selected contact.
- **New:** To create a new contact.
- **Send contact:** To send a contact to other devices supporting SMS or Bluetooth.
- **Copy to SIM/Copy to phone:** To Copy one or more contacts from your phone to the SIM card or from your SIM card to the phone.
- **Speed Dial Number:** To assign often-used numbers to speed dialing keys "2" to "9".

- **My business card:** To save your own information to a Business Card. You can send the information by SMS or Bluetooth.
- **Backup contacts:** To back up your contacts from your phone to a memory card or from your memory card to your phone.
- **Delete:** To delete the selected contact.
- **Mark/Unmark:** To mark/unmark a record or all records in your phone and SIM card.
- **Memory status:** To view the memory status of both your phone and SIM card.
- **Settings:** To sort the contacts in the phone and the SIM card or to set an alert before saving.



 
Groups

You can rename a group, add group members, or delete a group.

Adding/Deleting Group Members


You can add a member to a group in your phone or delete a member from it.

Groups

- 1 In the **Contacts**  screen, press the left/right scroll key to select **Groups**.
- 2 Select a group and press  to view the details.
- 3 Select **Options** > **Add**. Select a contact and press . The member you added is displayed in the group member list.

To delete a group member, select a member from the group member list, and then select **Options** > **Delete**.

Managing a Group

- 1 In the **Contacts**  screen, press the left/right scroll key to select **Groups**.
- 2 Select a group and select **Options** for the following options.
 - **Details**: to view the details of a group.
 - **Rename**: to change the name of a group.
 - **Create message**: to send a text message or MMS to all members of a group.

- **Delete**: to delete a group and all members of the group.








Note

You cannot rename or delete any group pre-set in your phone.


6 Call Log




The recently dialed calls, received calls and missed calls are saved automatically. This makes it easier to refer to these calls.

Making Calls from Call Log

- 1 Select **Call Log**  in the main menu and then press the left/right scroll key to switch between **All calls** , **Missed** , **Received**  and **Dialed** .
- 2 Press the up/down scroll key to select a record. Press  to make a voice call or press  to make a video call.

Other Operations

Press the left/right scroll key to select **All calls** ,

Missed , **Received**  or **Dialed** . Then select **Options** for the following options.


- Edit before call: To edit the number before making the call.
- Create message: To send a message or MMS.
- Save number: To save the numbers of the selected record to the phone, the SIM card, or an existing contact.
- Call: To make a voice call or a video call.
- Display mode: You can select **Normal** to display all records or select **Simple** to ignore the duplicated records.
- Delete: To delete the selected record.
- Mark/Unmark: To mark/unmark a record or all records.
- Calls status: To display the information on voice calls, video calls and data services. In the voice call, video call and data page, you can select **Reset** to clear all records.



7 Messaging

Text Messages




The maximum content for a single text message is 160 English letters. If the characters you enter exceed this limit, the text is divided into two or more continuous messages when it is sent.

Creating a Text Message

- 1 Select **Messaging**  > **Write SMS** in the main menu.
- 2 In the message editing screen, select **Options**:
 - Send: To send the message.
 - Insert number: You can insert a phone number saved on the phone or the SIM card.
 - Common phrases: You can use these to speed up the process of entering text.
 - T9 Switch: You can select this option to enable or disable T9 input method.
 - Input mode: You may select one of the input methods to enter the message contents.
 - Input language: You can select a language for this message.

- 3 After editing the message, press  to access the "Edit numbers" screen.
 - Enter the phone number, and then select **Options** > **Send** or press  to send the message.
 - Select **Options** > **Group** or **Contacts** to choose a number and send the message.
 - Select **Options** > **Save to drafts** to save the message.



SMS Mailboxes





The phone provides three mailboxes for SMS, namely, **Inbox** , **Drafts**  and **Sent** .

◆ Inbox





You can save the received messages in **Inbox**.

Icons in Inbox

Icon	Description
	a read message in the phone memory
	an unread message in the phone memory

Icon	Description
	a read message on the SIM card memory
	an unread message on the SIM card memory
	a read message report
	an unread message report

Viewing Messages in Inbox

- 1 Select **Messaging > SMS > Inbox**.
- 2 Press the up/down scroll key to view the messages and then press  to view the details.
- 3 Reply or call back.
 - Press  to reply with a text message.
 - Press  to call back by a voice call or press  to call back with a video call.

You can select **Options** for the following operations.


- Reply: To reply the message.
- Forward: To forward the message.


- Edit before call: To edit the number before making the call.
- Save number: To save the numbers retrieved from an SMS to phone or SIM memory or an existing entry in the contacts.
- Extract URL: To extract URL address from an SMS for browsing web pages or stream media.
- Save Email address: To retrieve email address from an SMS and save it.
- Copy to SIM: To back up the SMS to SIM memory.
- Call: To make a voice call or a video call.
- Delete: To delete the message.

◆ Drafts

The Draft box is used to save the messages you created and saved and those which failed to send.

Icons in Drafts


 : A text message saved to the phone.

 : A text message saved to the SIM card.

Viewing and Editing Messages in the Draft

- 1 Select **Messaging > SMS > Drafts**.


Text Messages


- Press the up/down scroll key to select a message and press  to edit it.

◆ Sent





Sent is used to save the messages that have been sent.

Icons in Sent

: A text message that has been sent and saved to the phone.

: A text message that has been sent and saved to the SIM card.

Viewing Messages in the Sent

- Select **Messaging > SMS > Sent**.
- Press the up/down scroll key to select a message and press  to view the details.
- Forward or make a call.
 - Press  to forward a text message.
 - Press  to make a voice call or press  to make a video call.

You may select **Options** to do the same operations as those of SMS Inbox.

SMS Settings

You can change the SMS settings by performing the following steps.

- Select **Messaging > Settings > SMS** from the main menu.
- Set the parameters related to messages:
 - **Message center:** The Phone can auto read the number of the message centre from the SIM card or the handset. If you have deleted the information by accident, contact your service provider.
 - **Valid period:** The time a message is kept in the message centre after it is sent.
 - **Auto save:** You can set whether a message will be saved automatically to **Sent** when it is sent.
 - **Save to:** To set the position for saving newly created messages, received messages, and sent messages.
 - **Signature:** To set whether your signature will be sent along with the message. You can edit the signature while creating a new message.