

Wonderful Communication, Mobile Life

Welcome to U1215 Mobile Phone from Huawei Technologies Co., Ltd.

HUAWEI U1215 Mobile Phone
User Guide

Notice

Copyright © 2007 Huawei Technologies Co., Ltd.

All Rights Reserved

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

Trademarks



and HUAWEI are trademarks of Huawei Technologies Co., Ltd. All other trademarks mentioned in this manual are the properties of their respective holders.

Notice

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements,

information, and recommendations in this manual do not constitute a warranty of any kind, expressed or implied.

Please read the safety precautions carefully to ensure the correct and safe use of your wireless device. For detailed information, refer to the section "Warnings and Precautions".

Huawei Technologies Co., Ltd.

Address:

Administration Building, Huawei Technologies Co., Ltd., Bantian, Longgang District, Shenzhen, P. R. China

Postal Code: 518129

Website: <http://www.huawei.com>

Safety Precautions

Please read the safety precautions carefully to ensure the correct and safe use of your wireless device. For detailed information, refer to the section “Warnings and Precautions”.



Do not switch on your phone when it is prohibited to use mobile phones or when the phone may cause interference or danger.



Do not use your phone while driving.



Follow any rules or regulations in hospitals and health care facilities. Switch off your phone near medical apparatus.



Switch off your phone in aircraft. The phone may cause interference to control signals of the aircraft.



Switch off your phone near high-precision electronic devices. The phone may affect the performance of these devices.



Do not attempt to disassemble your phone or its accessories. Only qualified personnel are allowed to service or repair the phone.



Do not place your phone or its accessories in containers with strong electromagnetic field.



Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.



Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a gas station.



Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.



Use only approved batteries and chargers to avoid the risk of explosions.



Observe any laws or regulations on the use of wireless device. Respect others' privacy and legal rights when using your wireless device.



Strictly follow the relevant instructions on 69 of this manual while using the USB cable. Otherwise your phone or PC may be damaged.

Table of Contents

Table of Contents 1

Getting to Know Your Phone 1

| | |
|--------------------|---|
| Packing List | 1 |
| Your Phone | 2 |

Getting Started 6

| | |
|--------------------------------------|---|
| Loading the Battery | 6 |
| Unloading the Battery | 6 |
| Charging the Battery | 7 |
| Loading/Removing the SIM Card | 8 |
| Loading/Removing a Memory Card | 9 |
| Powering On/Off | 9 |

Call Service 11

| | |
|--------------------------------------|----|
| Making or Answering Calls | 11 |
| Operations During a Voice Call | 12 |
| Operations During a Video Call | 13 |

Text Input 15

| | |
|----------------------------------|----|
| T9 Input Method | 15 |
| Traditional Input Method | 16 |
| "123" Numeric Input Method | 16 |
| Symbol Input Method | 16 |
| Input Different Languages | 17 |

Contacts 18

| | |
|--------------------------------------|----|
| Making Calls from the Contacts | 18 |
| Searching for a Contact | 18 |
| Other Operations | 19 |
| Groups | 19 |

Call Log 21

| | |
|----------------------------------|----|
| Making Calls from Call Log | 21 |
| Other Operations | 21 |

Messaging 22

| | |
|---------------------------|----|
| Text Messages | 22 |
| Multimedia Messages | 25 |
| Email | 29 |
| Push Inbox | 33 |
| Broadcast Inbox | 34 |
| Voice Mail number | 34 |
| Common Phrases | 34 |

Music 35

| | |
|----------------|----|
| My music | 35 |
| Playlist | 36 |

Organiser & Tools 37

| | |
|---------------------------|----|
| SIM Toolkit | 37 |
| Alarms | 37 |
| Calendar | 37 |
| Task | 39 |
| Memo | 39 |
| Synchronise | 39 |
| Calculator | 40 |
| Unit converter | 41 |
| Currency converter | 41 |
| Voice recorder | 41 |
| World Time | 42 |
| Stopwatch | 42 |
| Timer | 42 |
| Service dial number | 42 |

| | |
|---------------------------------|-----------|
| My Files | 43 |
| Browser | 44 |
| Browser | 44 |
| Enter URL | 44 |
| Bookmarks | 45 |
| Internet Settings | 45 |
| Entertainment | 46 |
| Games | 46 |
| Camera | 46 |
| Video Camera | 47 |
| Music | 48 |
| FM Radio | 48 |
| Connections | 50 |
| Bluetooth | 50 |
| USB | 53 |
| Settings | 56 |
| Phone settings | 56 |
| Display settings | 57 |
| Message settings | 58 |
| Call settings | 58 |
| Video call | 61 |
| Connectivity | 61 |
| Network | 61 |
| Security | 61 |
| Warnings and Precautions | 64 |
| Electronic Device | 64 |
| Hospital | 64 |

| | |
|---------------------------------------|----|
| Storage Environment | 65 |
| Children Safety | 65 |
| Operating Environment | 66 |
| Cleaning and Maintenance | 66 |
| Environmental Protection | 67 |
| Emergency Calls | 67 |
| Battery | 67 |
| Charger | 68 |
| Using the USB Cable | 69 |
| Certification Information (SAR) | 69 |

Acronyms and Abbreviations 73

Appendix 74

Index 1

1 Getting to Know Your Phone

Your U1215 phone can operate in virtually all countries, automatically switching between WCDMA 850/1900 and GSM/GPRS/EDGE 850/1800/1900 networks. This allows you to enjoy communication wherever you use your mobile phone.

Note The services supported by your phone should be also supported by the network from where you use the phone. For details, please contact your service provider.


Packing List

Your phone package box contains the following articles:

- 1 One U1215 mobile phone
- 2 One travel charger
- 3 One Li-ion battery
- 4 One user Guide
- 5 One headset (optional)
- 6 One USB data cable (optional)

- 7 One CD-ROM disk which contains U1215 Mobile Phone PC Assistant (optional)


Your Phone

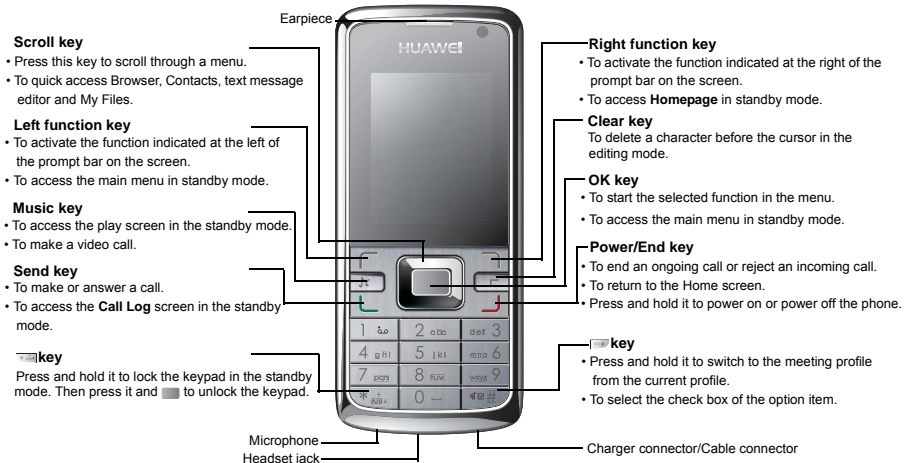


Back View



Side View

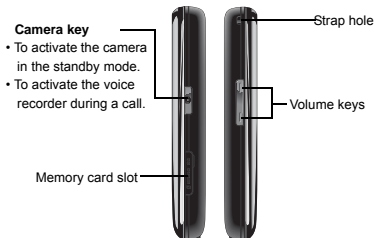

Home Screen

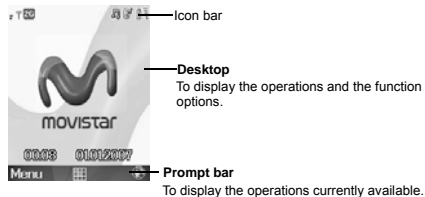





















◆ Icon bar

This area displays the phone status. The following table illustrates all the icons that may appear on this bar.

| Icon | Description |
|------|--|
| | Indicates signal strength. The more bars that appear, the stronger the signal. |
| | The phone is currently in a GSM network. |
| | The phone is currently in a WCDMA network. |
| | You are using the roaming service. |


■ Your Phone



| Icon | Description |
|---|---|
|  | Indicates network connection state. |
|  | Indicates security connection state of the network. |
|  | The phone is in a call. |
|  | The keypad is locked. |
|  | The background play is activated. |
|  | Alarm clock is enabled. |
|  | Bluetooth is enabled. |
|  | You have new text messages. |
|  | You have new PUSH messages. |
|  | You have new multimedia messages. |
|  | You have new voice mail. |
|  | The vibration mode is enabled. |
|  | The phone is in mute mode. |
|  | The normal profile is activated. |

| Icon | Description |
|---|--|
|  | The headset is plugged in. |
|  | Forwarding all incoming voice calls to line 1. |
|  | Call line 2 is enabled currently. |
|  | Forwarding all incoming voice calls to line 2. |
|  | Your PC connects to the Internet through your phone. |
|  | Indicates power level of the battery. |

Introduction to the Menu

Your phone provides an extensive range of functions. You can use these functions by navigating the following menus: Entertainment, Music, Call Log, Browser, Messaging, My Files, Organiser & Tools, Contacts and Settings.

- 1** In the standby mode, press  to display the main menu.

- 2 Press the scroll key to scroll through the menu, and then press  to select.
- 3 If the menu contains further submenus, repeat step 2.
- 4 Use the selected function according to the prompts on the screen.
- 5 Select **Back** to return to the previous menu. Press  to return to the standby mode.

2 Getting Started

Loading the Battery

To load the battery, do as follows:

- 1 Fit the battery into the battery slot on back of the phone.
- 2 Press the battery down until it clicks into place.



- 3 Press the back cover down until it clicks into place.



Unloading the Battery

Only unload the battery after powering off your phone. Otherwise, your phone may be damaged. To unload the battery, do as follows:

- 1 Take the back cover out of the phone, as shown in the following figure.



- 2 Take out the battery.



Charging the Battery

Charging the Battery

Before charging the battery, please read the following precautions carefully.

Note

- When charging the mobile phone, you must use the battery and charger provided with the mobile phone. Otherwise, you should be responsible for all the consequences caused by misusing other batteries and chargers.
- When you charge the battery for the first time, please charge it for a minimum of 12 hours.
- Do not strike, toss or cause any kind of violent shock to the battery, otherwise liquid leakage, body damage, overheating, explosion or fire may occur.
- The battery can be recharged but eventually wears out. If the battery lasts for a shorter time period than usual after being charged normally, replace it with a battery of the same type.

- The charging time depends on the environmental temperature and the age of the battery.
- The battery discharges even while not being used. If you haven't used it for a long time, please recharge it first.

Charging with a Cable Charger

Before charging the battery with a cable charger, ensure that the battery has been properly loaded into your phone.

To charge the battery, do as follows:

- 1** Insert the plug of the charger into the connector of the phone as shown in the following figure. Before inserting the plug, ensure that the arrow on the charger output jack points to the front side of the phone.
- 2** Plug in the connector of the charger to a power socket.

■ Loading/Removing the SIM Card



Note

- When the battery power level is very low, the phone makes alert sounds and displays a prompt. When the battery power level is too low, the phone will power off automatically.
- When the battery is being charged, the charging indicator blinks continuously. When the charging indicator stops blinking, it indicates that the battery is full.

Loading/Removing the SIM Card

Your SIM card contains such information as phone numbers and contacts. Load your SIM card before using your phone. To use the SIM card properly, please read the following instructions carefully.

Note

- Keep the SIM card out of the reach of children.
- The SIM card and its metal contacts can be easily damaged by scratching or bending. Ensure care when you carry, load or remove it.
- Always disconnect the charger from the phone before loading or removing the SIM card.

To load or remove the SIM card, do as follows:

- 1** Power off the phone and remove the battery.
- 2** Position the card at the card slot entrance, making sure it is facing the same way as shown in the diagram below, with the notched corner at the bottom right. Then slide in as shown.



- 3** To remove the SIM card, power off your phone and take out the battery. Then press the SIM card with one finger and slide it out of the slot.



Loading/Removing a Memory Card

The U1215 phone supports a memory card (micro-SD) with a capacity up to 1 GB.

- 1** Remove the rubber cap from the memory card slot; then insert the memory card into the slot, as shown in the following figure.



Loading/Removing a Memory Card

- 2** After inserting the memory card completely, replace the rubber cap.



- 3** To remove a memory card, open the rubber cap and press the memory card gently. Now the memory card will pop up automatically. Then take it out as shown in the following figure.




Powering On/Off


Powering On

Ensure that the SIM card is in your phone and that the battery has been charged.

■ Powering On/Off

Press and hold  to power on your phone.

Powering Off

Press and hold  to power off your phone.

Access Codes

If you have set the phone password and the PIN is **ON**, you have to enter the corresponding access codes when you power on your phone. For setting and changing the access codes, please refer to "Settings/Security Setup" on page 61.

◆ Phone Password

The phone password is used to protect your phone from unauthorized use. The phone password is preset as 0000 for your phone.

◆ PIN

The personal identification number (PIN) code is used to protect your SIM card from unauthorized use. The PIN code is usually provided when you get the SIM card from your service provider. If you have not received a PIN code or if you have forgotten it, contact your service provider.

◆ PIN2

Some SIM cards provide a PIN2 code. Some special functions such as the "Fixed Dialer Number" are not available until you enter the PIN2 code. At the same time, your SIM card should support these functions.

◆ PUK

To unlock a locked SIM card, you need to enter the PIN Unblocking Key (PUK) code. The PUK code is usually provided when you get the SIM card from your service provider. If you have not received a PUK code or if you have forgotten it, contact your service provider.

◆ PUK2



Some SIM cards provide a PUK2 code that is used to unlock a locked PIN2 code. The PUK2 code is usually provided when you get the SIM card from your service provider. If you have not received a Puk2 code or if you have forgotten it, contact your service provider.


3 Call Service

Making or Answering Calls

Making a Video Call

You can make a video call to other person whose phone also supports video calls.

- 1 Enter or edit a phone number in one of the following ways:
 - Enter a phone number through the keypad.
 - Select a number from the **Call Log** screen.
 - Access the **Contacts** screen to select a phone number from **Phone** or **SIM**.
- 2 Press  to dial.
- 3 Press  to end the video call.

Note To delete a wrong number, press  once to delete the digit to the left of the cursor.

Making a Voice Call

- 1 Enter or edit a phone number in one of the following ways:

- Enter a phone number through the keypad.
- Select a number from the **Call Log** screen.
- Access the **Contacts** screen to select a phone number from **Phone** or **SIM**.

2 Press  to dial.

3 Press  to end the call.

Making Voice Calls Using SDN






You can make a voice call through speed dialing. For instructions on assigning speed dialing numbers, refer to "Contacts/Other Operations" on page 19. To make a call by speed dial number (SDN), press and hold the number key until the phone dials the corresponding phone number.

Answering or Rejecting Calls

You can set the answer mode to **Any key** or **Send key**. For details, refer to "Settings/Call Settings/Answer mode".

The following describes how to answer or reject a call in different answer modes:

■ Operations During a Voice Call

| Operation | Description |
|------------------|---|
| Answer a call | <ul style="list-style-type: none">• If the answer mode is Any key, open the phone and press any key, except  and .• If the answer mode is Send key, press .• If the headset is in use, press the control key on the headset. |
| Reject a call | Press  or select Options > Reject . |
| End a call | <ul style="list-style-type: none">• If the headset is not in use, you can close the phone or press .• If the headset is in use, press the control key of the headset. |
| Reply by message | Select Options > Reply to send a pre-defined message to the caller. |

You can also set the auto answer mode to **Immediate answer**, **Message** or **Recorded message**.

For details, refer to “Settings/Call settings/Auto answer”.

Operations During a Voice Call

Icon Description



: A call is ongoing.



: The call is on hold.



: There is a new incoming call during a call.

Operations



During a voice call, you can select **Options** to perform the following operations.

- Hold/Resume: To hold or resume the call during a call.
- End: To end all calls, the active call, the current call or the on hold call.
- New Call: To make a 3-party call during a call.
- Handsfree/Earpiece: To switch between the Handsfree and the Earpiece modes during a call.
- Start recording/Stop recording: to record or stop recording the conversation.




- Other applications: To access the **SMS** screen, the **Contacts** screen or the **Call Log** screen.
- Answer/Reject: Your phone allows you to handle two calls simultaneously. During a call, if there is a new incoming call, select **Options** > **Answer** to answer it or select **Options** > **Reject** to reject it.
- Swap: To swap between calls during a 3-party call.
- Conference call/Private call: To switch to the conference call during a 3-party call or to talk with a party privately during a conference call.
- Mute/Unmute: To mute or unmute your voice during a call.

Operations During a Video Call



Icon Description

| Icon | Description |
|---|--|
|  | Press the up or down scroll key to adjust the brightness. |
|  | Press the left or right scroll key to zoom in or zoom out. |

Operations During a Video Call

| Icon | Description |
|---|---|
|  | Press the volume keys to adjust the volume. |
|  | Press  to switch between the loudspeaker mode and the earpiece mode. |

Operations

During a video call, you can press  to hold the call and send a preset file to the other party. You can press  again to resume the call. Before you use the function, you can preset a file in **Settings/Video call/Send specific file**.

During a video call, you can select **Options** to perform the following operations.

- Switch picture: To switch display.
- External view/Internal view: To switch between the main lens and the assistant lens.
- Camera off/Open video: To forbid or allow the video from your side.
- Audio off/Open audio: To forbid or allow the audio from your side.

■ Operations During a Video Call

- Play file: To play a media file.
- Handsfree/Earpiece: Switch between the loud-speaker mode and the earpiece mode.
- Record: To record a video clip. A recorded video clip is saved to the **My Files/Videos** directory.
- Other applications: To access the **SMS** screen, the **Contacts** screen or the **Call Log** screen.
- Picture in picture: To set the P-in-P mode to off, top left, top right, bottom right or bottom left.
- Image quality: To set the image quality to best quality or more smooth.