Wonderful Communication, Mobile Life

Welcome to U1301 Mobile Phone from Huawei Technologies Co., Ltd.

HUAWEI U1301 Mobile Phone User Guide



Copyright ⊚ 2008 Huawei Technologies Co., Ltd.

All Rights Reserved

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

Trademarks

and HUAWEI are trademarks of Huawei Technologies Co., Ltd. All other trademarks mentioned in this manual are the properties of their respective holders.

Notice

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute a warranty of any kind, expressed or implied.

Please read the safety precautions carefully to ensure the correct and safe use of your wireless device. For detailed information, refer to the section "Warnings and Precautions".

Huawei Technologies Co., Ltd.

Address:

Administration Building, Huawei Technologies Co., Ltd., Bantian, Longgang District, Shenzhen, P. R. China

Postal Code: 518129

Website: http://www.huawei.com

Safety Precautions

Please read the safety precautions carefully to ensure the correct and safe use of your wireless device. For detailed information, refer to the section "Warnings and Precautions".



Do not switch on your phone when it is prohibited to use mobile phones or when the phone may cause interference or danger.



Do not use your phone while driving.



Follow any rules or regulations in hospitals and health care facilities. Switch off your phone near medical apparatus.



Switch off your phone in aircraft. The phone may cause interference to control signals of the aircraft.



Switch off your phone near high-precision electronic devices. The phone may affect the performance of these devices



Do not attempt to disassemble your phone or its accessories. Only qualified personnel are allowed to service or repair the phone.



Do not place your phone or its accessories in containers with strong electromagnetic field.



Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them



Do not put your phone in a hightemperature place or use it in a place with flammable gas such as a gas station.



Keep your phone and its accessories away from children. Do not allow children to use your phone without quidance.



Use only approved batteries and chargers to avoid the risk of explosions.



Observe any laws or regulations on the use of wireless device. Respect others' privacy and legal rights when using your wireless device.



Strictly follow the relevant instructions on 58 of this manual while using the USB cable. Otherwise your phone or PC may be damaged.

Table of Contents

Table of Contents 1	Messaging 20	
Getting to Know Your Phone 1	Messages	20
Packing List1	Email	22
Your Phone	Broadcast Inbox	25
Getting Started 6	Templates	25
Loading the SIM Card6	Music 26	
Unloading the SIM Card7	Music Library	26
Charging the Battery7	Playlists	27
Loading/Removing a Memory Card8	Organiser & Tools 28	
Powering On/Off9	Alarms	28
Call Service 11	Calendar	28
Making or Answering Calls11	Task	29
Operations During a Voice Call12	Memo	30
Operations During a Video Call13	Synchronise	30
Calls14	Calculator	31
Text Input 15	Unit converter	• • • • • • • • • • • • • • • • • • • •
T9® Input Method15	Currency converter	
Traditional Input Method15	Voice recorder	
"123" Numeric Input Method16	World Time	
Symbol Input Method16	Stopwatch	
Input Different Languages16	Timer	
Contacts 17	Service dial number	33
	My Files 34	
Making Calls from the Contacts17 Searching for a Contact17	Browser 35	
Viewing Contacts in Phone/SIM17	Open homepage	35
Other Operations17	Open new page	
Groups18	Bookmarks	

Saved pages	35
History	
Resume	36
Settings	36
Entertainment 37	
Games	37
Camera	37
Connections 39	
Bluetooth	39
USB	
Settings 46	
Phone Settings	46
Display Settings	47
Message Settings	
Call Settings	47
Video Call	50
Contacts Settings	50
JAVA Settings	50
Connectivity	51
Network	51
Security	51
DRM Setting	52
Warnings and Precautions 53	
Electronic Device	53
Hospital	
Area with Inflammables and Explosives	53
Storage Environment	
Children Safety	54

55
55
56
56
56
57
58
58

Getting to Know Your Phone

Your HUAWEI U1301 phone can operate in virtually all countries, automatically switching between WCDMA 900/2100 and GSM/GPRS 850/900/1800/1900 networks. This allows you to enjoy communication wherever you use your mobile phone.



The services supported by your phone should be also supported by the network from where you use the phone. For details, please consult your service provider.

Packing List

Your phone package box contains the following:

- 1 One HUAWEI U1301 mobile phone
- 2 One travel charger
- 3 One Li-ion battery
- 4 One user Guide
- 5 One headset
- 6 One USB data cable

Your Phone


Your Phone




Back View



Side View

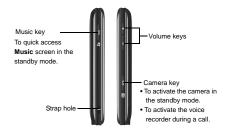

Home Screen

 

Icon bar

This area displays the phone status. The following table illustrates all the icons that may appear on this bar.

Icon	Description
.!! . "	Indicates signal strength. The more bars that appear, the stronger the signal.
EG	The phone is currently in a GSM network.
36	The phone is currently in a WCDMA network.

Your Phone

Icon	Description
. ttR	You are using the roaming service.
B	Bluetooth is enabled.
•	Indicates network connection state.
₽	Indicates security connection state of the network.
()	The phone is in a call.
€ ĭ	Forwarding all incoming voice calls to line 1.
⊟ 2	Call line 2 is enabled currently.
ے	Forwarding all incoming voice calls to line 2.
(2)	Alarm clock is enabled.
\succeq	You have new text messages.
≥2	You have new PUSH messages.
□	You have new multimedia messages.
₹	You have new voice mail.

Icon	Description
4	SD card is inserted.
Я	Ringtone is enabled.
	The vibration mode is enabled.
	The phone is in mute mode.
	The normal profile is activated.
Ω	The headset is plugged in.
②	Your PC connects to the Internet through your phone.
<u></u>	Indicates power level of the battery.
₽	The keypad is locked.
•	The background play is activated.

Introduction to the Menu

Your phone provides an extensive range of functions. You can use these functions by navigating the following menus: Entertainment, Browser, Music, Camera,

Messaging, My Files, Organizer & Tools, Contacts, Calls, Profiles, Video call and Settings.

- In the standby mode, press to display the main menu.
- Press the scroll key to scroll through the menu, and then press to select.
- If the menu contains further submenus, repeat step 2.
- 4 Use the selected function according to the prompts on the screen.
- Select **Back** to return to the previous menu. Press to return to the standby mode.

2Getting Started

Loading the SIM Card

Load your SIM card before using your phone. To use the SIM card properly, please read the following instructions carefully.

Note

- Keep the SIM card out of the reach of children.
- The SIM card and its metal contacts can be easily damaged by scratching or bending. Ensure care when you carry, load or remove it.
- Always disconnect the charger from the phone before loading or removing the SIM card

To load the SIM card, do as follows:

Position the card at the card slot entrance, making sure it is facing the same way as shown in the diagram below, with the notched corner at the top right. Then slide in as shown.



2 Fit the battery into the battery slot on back of the phone. Press the battery down until it clicks into place.



3 Slide the back cover to the phone.

