

2 Getting Started

Loading the SIM Card

 
Load your SIM card before using your phone. To use the SIM card properly, please read the following instructions carefully.

Note

- Keep the SIM card out of the reach of children.
- The SIM card and its metal contacts can be easily damaged by scratching or bending. Ensure care when you carry, load or remove it.
- Always disconnect the charger from the phone before loading or removing the SIM card.

To load the SIM card, do as follows:

- 1** Position the card at the card slot entrance, making sure it is facing the same way as shown in the diagram below, with the notched corner at the down right. Then slide in as shown.



- 2** Fit the battery into the battery slot on back of the phone. Press the battery down until it clicks into place.



- 3** Slide the back cover to the phone.



Unloading the SIM Card

Only unload the SIM card and the battery after powering off your phone. Otherwise, your phone may be damaged.

To unload the SIM card:

 
- 1 Unload the back cover out of the phone.



- 2 Please unload the battery according to the following picture.



- 3 Press the SIM card with one finger and slide it out of the slot.



Charging the Battery

Before charging the battery, please read the following precautions carefully.

Note

- When you charge the battery for the first time, please charge it for a minimum of 12 hours.
- The battery discharges even while not being used. If you have not used it for a long time, please recharge it first.
- The charging time depends on the environmental temperature and the age of the battery.
- The battery can be recharged but eventually wears out. If the battery lasts for a shorter time period than usual after being

■ Loading/Removing a Memory Card

charged normally, replace it with a battery of the same type.

- Do not strike, throw or cause any kind of violent shock to the battery, otherwise liquid leakage, body damage, overheating, explosion or fire may occur.
- Charge the battery by using the charger supplied with your phone.

Charging with a Cable Charger

Before charging the battery with a cable charger, ensure that the battery has been properly loaded into your phone.

To charge the battery, do as follows:

- 1** * Insert the plug of the charger into the connector of the phone as shown in the following figure.
- 2** Plug in the connector of the charger to a power socket.

With the metallic connect downward



Note

- *The plug of the charger is in trapezium shape. Reversely inserting the plug may damage the mobile phone and charger. The connection methods of USB data cable and headset are the same as the charger.
- When the battery power level is very low, the phone makes alert sounds and displays a prompt. When the battery power level is too low, the phone will power off automatically.
- When the battery is being charged, the charging indicator blinks continuously. When the charging indicator stops blinking, it indicates that the battery is full.

 
Loading/Removing a Memory Card

Your phone supports a memory card (micro-SD) with a capacity up to 2 GB.

- 1** Insert the memory card into the slot, as shown in the following figure.




- 2** To remove a memory card, press the memory card gently. Now the memory card will pop up automatically. Then take it out as shown in the following figure.

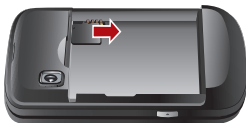


Powering On/Off

Powering On

Ensure that the SIM card is in your phone and that the battery has been charged.

Press and hold  to power on your phone.

Powering Off

Press and hold  to power off your phone.

Access Codes

If you have set the phone password and the PIN is **ON**, you have to enter the corresponding access codes when you power on your phone. For setting and changing the access codes, please refer to "Settings/Security Setup" on page 50.

◆ Phone Password

The phone password is used to protect your phone from unauthorized use. The phone password is preset as 0000 for your phone.

◆ PIN

The personal identification number (PIN) code is used to protect your SIM card from unauthorized use. The PIN code is usually provided when you get the SIM card from your server provider. If you have not received a PIN code or if you have forgotten it, contact your local customer care centre.

■ Powering On/Off

◆ PIN2

Some SIM cards provide a PIN2 code. Some special functions such as the "Fixed Dialer Number" are not available until you enter the PIN2 code. At the same time, your SIM card should support these functions.

◆ PUK

To unlock a locked SIM card, you need to enter the PIN Unblocking Key (PUK) code. The PUK code is usually provided when you get the SIM card from server provider. If you have not received a PUK code or if you have forgotten it, contact your local customer care centre.

◆ PUK2


Some SIM cards provide a PUK2 code that is used to unlock a locked PIN2 code. The PUK2 code is usually provided when you get the SIM card from server provider. If you have not received a PUK2 code or if you have forgotten it, contact your local customer care centre.


3 Call Service

Making or Answering Calls

Making a Video Call

You can make a video call to other person whose phone also supports video calls.

- 1 Enter or edit a phone number in one of the following ways:
 - Enter a phone number through the keypad.
 - Select a number from the **Calls** screen.
 - Select a number from the **Contacts** screen.
- 2 Select **Options > Call > Video Call** to dial.
- 3 Press  to end the video call.

Note To delete a wrong number, press  once to delete the digit to the left of the cursor.

Making a Voice Call

- 1 Enter or edit a phone number in one of the following ways:
 - Enter a phone number through the keypad.

- Select a number from the **Calls** screen.
- Select a number from the **Contacts** screen.

2 Press  to dial.

3 Press  to end the call.

Making Voice Calls Using SDN





You can make a voice call through speed dialing. For instructions on assigning speed dialing numbers, refer to "Contacts/Other Operations" on page 17. To make a call by speed dialing number (SDN), press and hold the number key until the phone dials the corresponding phone number.

Answering or Rejecting Calls

You can set the answer mode to **Any key**, **Send key** or **Slide up**. For details, refer to "Settings/Call Settings/Answer Mode".

The following describes how to answer or reject a call in different answer modes:

Operations During a Voice Call

Operation	Description
Answer a call	<ul style="list-style-type: none">If the answer mode is Slide up, slide the phone.If the answer mode is Any key, press any key except .If the answer mode is Send key, press .If the headset is in use, press the control key on the headset.
Reject a call	Press  or select Options > Reject .
End a call	<ul style="list-style-type: none">If the headset is not in use, you can close the phone or press .If the headset is in use, press the control key of the headset.
Reply by message	To send a predefined message to the caller.

Note

When the phone is closed and there is no ongoing call, you can press and hold the camera key to mute the ringtone of an

incoming call. You can also press and hold the volume keys to reject the call.

You can also set the auto answer mode to **Immediate answer**, **Text message** or **Recorded voice**. For details, refer to “Settings/Call settings/Auto Answer”.

Operations During a Voice Call

Icon Description



: A call is ongoing.



: The call is on hold.

Operations


During a voice call, you can select **Options** to perform the following operations.

- Hold active call/Resume:** To hold or resume the call during a call.
- End:** To end all calls, the active call, the current call or the on hold call.
- Handfree/Earpiece:** To switch between the Hand-free and the Earpiece modes during a call.





- Start recording/Stop recording: to record or stop recording the conversation.
- Other Applications: To access the **Contacts** screen, the **Messaging** screen, the **Calls** screen or the **Calendar** screen.
- Answer/Reject: Your phone allows you to handle two calls simultaneously. During a call, if there is a new incoming call, select **Options** > **Answer** to answer it or select **Options** > **Reject** to reject it.
- Swap: To swap between calls during a 3-party call.
- Conference call/Private call: To switch to the conference call during a 3-party call or to talk with a party privately during a conference call.

Operations During a Video Call



Icon Description

Icon	Description
	Press the up or down scroll key to adjust the brightness.

Operations During a Video Call

Icon	Description
	Press the left or right scroll key to zoom in or zoom out.
	Press the volume keys to adjust the volume.
	Press  to switch between the loud-speaker mode and the earpiece mode.

Operations

During a video call, you can press  to hold the call and send a preset file to the other party. You can press  again to resume the call. Before you use the function, you can preset a file in **settings/video call/Send image**.

During a video call, you can select **Options** to perform the following operations.

- Camera on/Camera off: To allow or forbid the video from your side.
- Audio on/Audio off: To allow or forbid the audio from your side.
- External view/Internal view: To switch between the main lens and the assistant lens.