

Quick Start Guide

Orinoquia U5760



Copyright © Industria Electrónica Orinoquia S.A. 2014. All rights reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Industria Electrónica Orinoquia S.A.

The product described in this manual may include copyrighted software of Industria Electrónica Orinoquia S.A. and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders.

Trademarks and Permissions



and Orinoquia are trademarks or

registered trademarks of Industria Electrónica Orinoquia S.A.

The *Bluetooth*® word mark and logos are registered trademarks owned by *Bluetooth SIG, Inc.* and any use of such marks by Industria Electrónica Orinoquia S.A. is under license.

Other trademarks, product, service and company names mentioned may be the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of the local network, and therefore may not be activated or may be limited by

local network operators or network service providers.

Thus, the descriptions herein may not exactly match the product or its accessories which you purchase.

Industria Electrónica Orinoquia S.A. reserves the right to change or modify any information or specifications contained in this manual without prior notice and without any liability.

DISCLAIMER

ALL CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL INDUSTRIA ELECTRÓNICA ORINOQUIA S.A. BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOSS OF PROFITS, BUSINESS, REVENUE, DATA, GOODWILL SAVINGS OR ANTICIPATED SAVINGS REGARDLESS OF WHETHER SUCH LOSSES ARE FORSEEABLE OR NOT.






THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF INDUSTRIA ELECTRÓNICA ORINOQUIA S.A. ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS MANUAL SHALL BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.









Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and be responsible to obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

 
Safety Precaution

Please read these safety precautions carefully before operating your phone.

	Do not crush, throw, or puncture your phone. Avoid dropping, squeezing, or bending it also.
	Your phone is not meant for use in a damp environment, such as the bathroom. Do not submerge your phone in liquid of any sort and avoid getting your phone wet.
	Avoid using your mobile phone in areas where it may cause interference or present a hazard. Follow local laws and regulations.
	Avoid using your phone while driving. Your safety should always be your top priority.
	Follow any rules or regulations in hospitals and health care facilities. Power off your phone near any medical apparatus.
	Power off your phone in an aircraft. The phone may interfere with the aircraft's control equipment and navigation system.
	Power off your phone near high-precision electronic devices. The phone may affect the performance of these devices.

	Do not attempt to disassemble your phone or its accessories. Only qualified personnel are allowed to service or repair the phone.
	Do not place your phone or its accessories in containers with a strong electromagnetic field.
	Do not place magnetic storage media near your phone. Radio waves from the phone may erase the information stored on them.
	Do not expose your phone to extreme temperatures or use it at a location with flammable materials, such as a gas station.
	Keep your phone and its accessories away from children. Do not allow young children to use your phone without adult supervision.
	Use only approved batteries and chargers to avoid the risk of explosions.
	Observe any laws or regulations on the use of wireless devices. Respect the privacy and legal rights of others when using your phone.
	To prevent damage to your phone or your computer, follow all instructions pertaining to the USB cable.

1 Your Phone

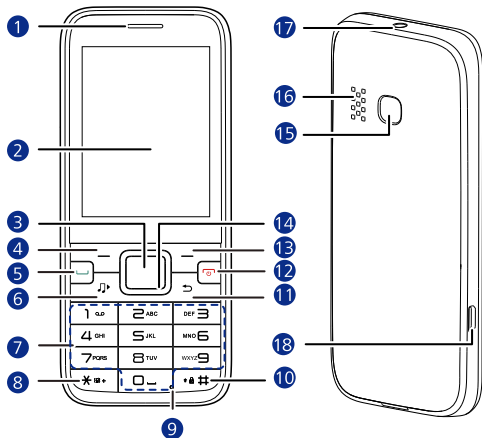

1	Earpiece	2	Screen
3	Confirm key	4	Left soft key
5	Call/Answer key	6	Music key
7	Number keys	8	* key
9	Microphone	10	# key

 
11	Back key	12	End/Power key
13	Right soft key	14	Navigation keys
15	Camera	16	Loudspeaker
17	Headset jack	18	Charger jack/USB port

2 Installing the SIM Card and Battery

 
Before you begin to use your phone, a SIM card must be inserted. Follow the steps laid out below to insert your SIM card into the phone.

Note


Power off your phone before attempting to remove the battery or SIM card.

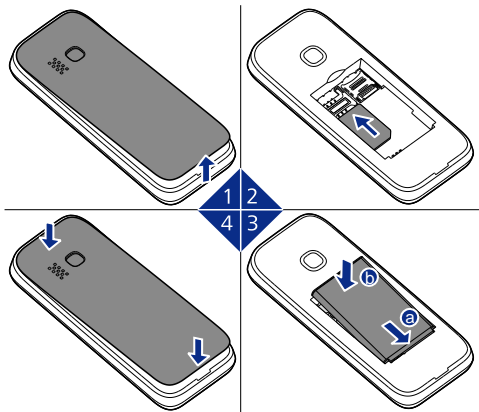


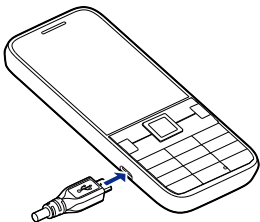 
3 Inserting the microSD Card

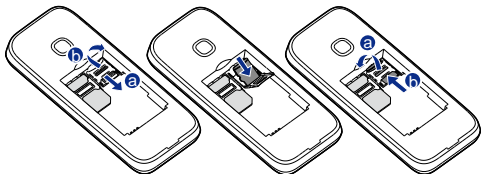

4 Charging the Battery







When the battery icon changes to  or the charging animation becomes static, the battery is fully charged.






If the battery has not been used for a long time or if the battery power is completely depleted, the charging icon  may take several minutes to appear after you start charging.







5 Keys and Functions

Note

In this guide, the navigation keys of the phone are indicated by , , , , , .


Press	To
	Select the option displayed in the lower left corner of the screen.
	Select the option displayed in the lower right corner of the screen.
	<ul style="list-style-type: none">• Dial a number or answer a call.• Access call logs in standby mode.
	<ul style="list-style-type: none">• Power the phone on or off (press and hold the key for about 3 seconds).• End or reject a call.• Return to standby mode.• Turn the backlight on or off in standby mode.
	Start the music.

Press	To
	<ul style="list-style-type: none"> In text input mode, delete the character to the left of the cursor. Press and hold the key for 3 or more seconds to clear all the characters to the left of the cursor. Return to the previous menu.
	<p>Confirm a selection.</p>
	<p>Access the functions assigned to the navigation keys in standby mode.</p>
<div style="display: flex; flex-direction: column; align-items: center;"> <div style="border: 1px solid black; padding: 2px 10px; margin-bottom: 5px;">0</div> <div style="margin-bottom: 5px;">–</div> <div style="border: 1px solid black; padding: 2px 10px;">9</div> </div>	<ul style="list-style-type: none"> Enter numbers, letters, and symbols in text input mode. Call voicemail in standby mode (press and hold 1 for about 3 seconds). Speed-dial phone numbers in standby mode (press and hold the keys 2 – 9 for about 3 seconds).
<div style="border: 1px solid black; padding: 2px 10px; display: inline-block;">*</div>	<ul style="list-style-type: none"> Enter *, +, P or W when entering phone numbers. Enable or disable the Meeting profile in standby mode (press and hold the key for about 3 seconds).

Press	To
	<ul style="list-style-type: none"> • Enter #. • Lock the keypad in standby mode (press and hold the key for about 3 seconds).

6 Text Input



 
Changing the Text Input Mode

The current text input mode indicator is displayed in the upper right corner of the text input screen. To switch between the text input modes, press  .

Entering a Word

In multi-tap input mode, press the number key labeled with the desired letter once to enter the first letter on the key, twice to enter the second letter on the key, and so on.

In predictive input mode:

1. Press each key according to the spelling sequence of the desired word. The phone displays candidate words that may be spelt by the keystroke sequence.
2. Press  to scroll to the desired word.
3. Press  to enter the desired word, or  to enter the word followed by a space.




Entering a Number

- In **123** input mode, press the key labeled with the desired


 
number.

- In any input mode other than **123** input mode, press and hold the number key for about 3 seconds to enter the desired number.


 

Entering a Symbol



1. In any input mode, press  to display the symbol list.
2. Press  to scroll to the desired symbol.
3. Press  to enter the symbol.

7 Creating a Contact


1. Select **Menu > Contacts > Create Contact**.
2. Edit the contact information.
3. Press  or  to save the contact.

8 Making and Answering a Call

In standby mode, press the number keys  -  to enter a phone number, and then press  to dial the number.

When you receive an incoming call, press  to answer it, or  to reject it.

9 Creating and Sending a Message

1. Select **Menu > Messages > Create Message**.
2. Enter a phone number, or press  and then select the recipient from **Contacts**.
3. Edit the message. You can select **Options > Insert Object** to add picture, audio, video or other attachments to the message.

4. Select **Options** > **Send** to send the message.

10 Camera

Select **Menu** > **Multimedia** > **Camera**, and press  to take a photo. On the **Camera** screen, press  (**Options**) to configure camera settings.








 


To view your photos, select **Options** > **Go to Album**.

To set the default storage location, select **Options** > **Settings** > **Storage Location**.



11 Playing Music


 
Select a music file from the playlist and press  to play it.

While the music is playing:

- Press  to pause or continue playing.
- Press  to play the next song. Press and hold  for about 3 seconds to fast-forward the song.
- Press  to play the previous song. Press and hold  for about 3 seconds to rewind the song.
- Press  to display the currently active playlist.
- Press  to display the media library.
- Press  (**Minimize**), , or  to exit the music playback screen. The song will continue to play in the background.
- Select **Options** > **Exit** to exit the music player.

12 Locking the Keypad

To lock the keypad, press and hold  for about 3 seconds in standby mode. When the keypad is locked, you can still press  to answer a call or make an emergency call.

To unlock the keypad, press  then .

13 Phone Lock

The phone lock protects your phone from unauthorized use. By default, the phone lock is disabled. To enable or disable the phone lock, select **Menu > Settings > Security > Phone Lock**. Once you enable the phone lock, you must enter the password.

The default password to unlock your phone is **1234**, and it can be changed to any numeric string of four to eight digits in length. You can select **Menu > Settings > Security > Change Phone Lock Code** to change the passcode.

14 Safety Information

This section contains important information about the operation of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic device

Do not use your device if using the device is prohibited. Do not use the device if doing so causes danger or interference with other electronic devices.

Interference with medical equipment

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device where prohibited.
- Some wireless devices may affect the performance of hearing aids or pacemakers. Consult your service provider for more information.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If using a pacemaker, hold the device on the side opposite the pacemaker and do not carry the device in your front pocket.

Protecting your hearing when using a headset

- Using a headset at high volumes may damage your hearing. To reduce this risk, lower the headset volume to a safe and comfortable level.

- Exposure to high volumes while driving may cause distraction and increase your risk of an accident.

Areas with flammables and explosives

- Do not use the device where flammables or explosives are stored (in a gas station, oil depot, or chemical plant, for example). Using your device in these environments increases the risk of explosion or fire. In addition, follow the instructions indicated in text or symbols.
- Do not store or transport the device in containers with flammable liquids, gases, or explosives.

Traffic security

- Observe local laws and regulations while using the device. To reduce the risk of accidents, do not use your wireless device while driving.
- Concentrate on driving. Your first responsibility is to drive safely.
- Do not hold the device while driving. Use hands-free accessories.
- When you must make or answer a call, pull off the road safely and park the vehicle first.
- RF signals may affect the electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- Do not place the device over the air bag or in the air bag deployment area in a motor vehicle. Doing so may hurt you because of the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft or immediately before boarding. Using wireless devices in an aircraft may disrupt

wireless networks, present a hazard to aircraft operation, or be illegal.

Operating environment

- Avoid dusty, damp, or dirty environments. Avoid magnetic fields. Using the device in these environments may result in circuit malfunctions.
- Do not use your device during thunderstorms to protect your device against any danger caused by lightning.
- Ideal operating temperatures are 0°C to 35°C. Ideal storage temperatures are -20°C to 70°C. Extreme heat or cold may damage your device or accessories.
- Do not expose your device to direct sunlight (such as on a car dashboard) for prolonged periods.
- To protect your device or accessories from fire or electrical shock hazards, avoid rain and moisture.
- Keep the device away from sources of heat and fire, such as a heater, microwave oven, stove, water heater, radiator, or candle.
- Do not place sharp metal objects, such as pins, near the earpiece or speaker. The earpiece may attract these objects and result in injury.
- Stop using your device or applications for a while if the device is overheated. If skin is exposed to an overheated device for an extended period, low temperature burn symptoms, such as red spots and darker pigmentation, may occur.
- Do not touch the device's antenna. Otherwise, communication

quality may be reduced.

- Do not allow children or pets to bite or suck the device or accessories. Doing so may result in damage or explosion.
- Observe local laws and regulations, and respect the privacy and legal rights of others.

Child's safety

- Comply with all precautions with regard to Child Safety. Letting children play with the device or its accessories may be dangerous. The device includes detachable parts that may present a choking hazard. Keep away from children.
- The device and its accessories are not intended for use by children. Children should only use the device with adult supervision.

Accessories

- Using an unapproved or incompatible power adapter, charger or battery may cause fire, explosion or other hazards.
- Choose only accessories approved for use with this model by the device manufacturer. The use of any other types of accessories may void the warranty, may violate local regulations and laws, and may be dangerous. Please contact your retailer for information about the availability of approved accessories in your area.

Charger safety

- For pluggable devices, the socket-outlet shall be installed near the devices and shall be easily accessible.

- Unplug the charger from electrical outlets and the device when not in use.
- Do not drop or cause an impact to the charger.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using it at once. Continued use may lead to electric shocks, short circuits, or fire.
- Do not touch the power cord with wet hands or pull the power cord to disconnect the charger.
- Do not touch the device or the charger with wet hands. Doing so may lead to short circuits, malfunctions, or electric shocks.
- If your charger has been exposed to water, other liquids, or excessive moisture, take it to an authorized service center for inspection.
- Ensure that the charger meets the requirements of Clause 2.5 in IEC60950-1/EN60950-1 and has been tested and approved according to national or local standards.
- Connect the device only to products with the USB-IF logo or with USB-IF compliance program completion.

Battery safety

- Do not connect battery poles with conductors, such as keys, jewelry, or other metal materials. Doing so may short-circuit the battery and cause injuries or burns.
- Keep the battery away from excessive heat and direct sunlight. Do not place it on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode if overheated.

- Do not attempt to modify or remanufacture the battery, insert foreign objects into it, or immerse or expose it to water or other liquids. Doing so may lead to fire, explosion, or other hazards.
- If the battery leaks, ensure that the electrolyte does not make direct contact with your skins or eyes. If the electrolyte touches your skins or splashes into your eyes, immediately flush with clean water and consult a doctor.
- In case of battery deformation, color change, or overheating while charging or storing, immediately stop using the device and remove the battery. Continued use may lead to battery leakage, fire, or explosion.
- Do not put batteries in fire as they may explode. Damaged batteries may also explode.
- Dispose of used batteries in accordance with local regulations. Improper battery use may lead to fire, explosion, or other hazards.
- Do not allow children or pets to bite or suck the battery. Doing so may result in damage or explosion.
- Do not smash or pierce the battery, or expose it to high external pressure. Doing so may lead to a short circuit or overheating.
- Do not drop the device or battery. If the device or battery is dropped, especially on a hard surface, and may be damaged.
- If the device standby time shortens significantly, replace the battery.

Cleaning and maintenance

- Keep the device and accessories dry. Do not attempt to dry it

with an external heat source, such as a microwave oven or hair dryer.

- Do not expose your device or accessories to extreme heat or cold. These environments may interfere with proper function and may lead to fire or explosion.
- Avoid collision, which may lead to device malfunctions, overheating, fire, or explosion.
- Before you clean or maintain the device, stop using it, stop all applications, and disconnect all cables connected to it.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device or accessories. These substances may cause damage to parts or present a fire hazard. Use a clean, soft, and dry cloth to clean the device and accessories.
- Do not place magnetic stripe cards, such as credit cards and phone cards, near the device for extended periods of time. Otherwise the magnetic stripe cards may be damaged.
- Do not dismantle or remanufacture the device and its accessories. This voids the warranty and releases the manufacturer from liability for damage. In case of damage, contact an authorized service center for assistance or repair.
- If the device screen is broken in a collision, immediately stop using the device. Do not touch or attempt to remove the broken parts. Promptly contact an authorized service center.

Emergency calls

The availability of emergency calls is subject to your cellular network quality, service provider policy, and local laws and regulations. Never rely solely on your device for critical communications like medical emergencies.

Environmental protection

- The device and its accessories (if included), such as the power adapter, headset, and battery should not be disposed of with household garbage.
- Disposal of the device and its accessories is subject to local regulations. Support proper collection and recycling.

FCC Regulatory Compliance

Body worn operation

The device complies with RF specifications when used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories, such as a device case and device holster, are not composed of metal components. Keep the device away from your body to meet the distance requirement.

Certification information (SAR)

This device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA).

The SAR limit adopted by the USA is 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported to the FCC for this device type complies with this limit.

The highest SAR value reported to the FCC for this device type when using at the ear is 1.489 W/kg, and when properly worn on the body is 1.325 W/kg.

FCC statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause

undesired operation.

Caution: Any changes or modifications to this device not expressly approved by Industria Electrónica Orinoquia S.A. for compliance could void the user's authority to operate the equipment.