

**Wonderful Communication, Mobile Life.**

Welcome to use HUAWEI U7310s Mobile Phone from Huawei Technologies Co., Ltd.

HUAWEI U7310s Mobile Phone  
User Guide

# Notice

**Copyright © 2008 Huawei Technologies Co., Ltd.**

## All Rights Reserved

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

## Trademarks



and HUAWEI are trademarks of Huawei Technologies Co., Ltd. All other trademarks mentioned in this manual are the properties of their respective holders.

## Notice

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements,

information, and recommendations in this manual do not constitute a warranty of any kind, expressed or implied.

Please read the safety precautions carefully to ensure the correct and safe use of your wireless device. For detailed information, refer to the section “Warnings and Precautions” .

## Huawei Technologies Co., Ltd.

### Address:

Administration Building, Huawei Technologies Co., Ltd., Bantian, Longgang District, Shenzhen, P. R. China

**Postal Code:** 518129

**Website:** <http://www.huawei.com>

# Safety Precautions

Please read the safety precautions carefully to ensure the correct and safe use of your wireless device. For detailed information, refer to the section “Warnings and Precautions” .



Do not switch on your phone when it is prohibited to use mobile phones or when the phone may cause interference or danger.



Do not use your phone while driving.



Follow any rules or regulations in hospitals and health care facilities. Switch off your phone near medical apparatus.



Switch off your phone in aircraft. The phone may cause interference to control signals of the aircraft.



Switch off your phone near high-precision electronic devices. The phone may affect the performance of these devices.



Do not attempt to disassemble your phone or its accessories. Only qualified personnel are allowed to service or repair the phone.



Do not place your phone or its accessories in containers with strong electromagnetic field.



Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.



Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a gas station.



Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.



Use only approved batteries and chargers to avoid the risk of explosions.



Observe any laws or regulations on the use of wireless device. Respect others' privacy and legal rights when using your wireless device.



Strictly follow the relevant instructions in this manual while using the USB cable. Otherwise your phone or PC may be damaged.

# Table of Content

## Table of Content 1

### Getting to Know Your Phone 1

Packing List .....	1
Your Phone .....	1
Home Screen .....	3
Introduction to the Menu.....	4

### Getting Started 5

Loading the SIM Card .....	5
Unloading the SIM Card .....	5
Charging the Battery .....	6
Loading/Removing a Memory Card.....	7
Powering On/Off.....	8

### Call Service 9

Making or Answering Calls .....	9
Operations During a Voice Call .....	10
Operations During a Video Call.....	11
Calls .....	12

### Text Input 13

T9® Input Method.....	13
Traditional Input Method .....	13
"123" Numeric Input Method .....	14
Symbol Input Method .....	14
Input Different Languages.....	14

### Contacts 15

Making Calls from the Contacts .....	15
Searching for a Contact.....	15
Other Operations.....	15

Groups .....	16
--------------	----

### Messaging 17

Messages.....	17
Email .....	19
Broadcast Inbox .....	21
Templates .....	21

### Music 22

Music.....	22
Recently Played .....	22
Music Library.....	22

### Organiser & Tools 23

Alarms.....	23
Calendar .....	23
Task .....	23
Memo .....	23
Synchronise .....	24
Calculator .....	24
Unit Converter.....	25
Currency Converter.....	25
Voice Recorder .....	25
World Time.....	25
Stopwatch .....	25
Timer.....	25
Service Dial Number .....	26

### My Files 27

### Entertainment 28

Games .....	28
-------------	----

Camera/Video Camera.....	28
<b>Connections 30</b>	
USB .....	30
Bluetooth@.....	33
<b>Browser 37</b>	
Open homepage.....	37
Open new page.....	37
Bookmarks .....	37
Saved pages .....	37
History .....	38
Resume.....	38
Settings .....	38
<b>Settings 39</b>	
Phone settings.....	39
Display settings .....	39
Message settings .....	40
Call settings.....	40
Video call .....	42
Contact settings.....	42
Connectivity.....	42
Device management .....	43
Network .....	43
Java™ settings .....	43
Security .....	43
License setting .....	44
Streaming settings.....	45
<b>Warnings and Precautions 46</b>	
Electronic Device.....	46

Hospital .....	46
Area with Inflammables and Explosives .	46
Storage Environment .....	47
Children Safety .....	47
Operating Environment .....	48
Cleaning and Maintenance .....	48
Environmental Protection .....	49
Emergency Calls.....	49
Battery.....	49
Charger .....	50
Using the USB Cable .....	51
Certification Information (SAR) .....	51

## **Acronyms and Abbreviations 55**

## **Appendix 56**

# 1 Getting to Know Your Phone

Your HUAWEI U7310s phone can operate in virtually all countries, automatically switching between WCDMA and GSM networks. U7310s supports WCDMA 2100MHz and GSM/GPRS/EDGE (GSM850M, GSM900M, DCS1800M, and PCS1900M) networks. This allows you to enjoy communication wherever you use your mobile phone.

 
**Note** The services supported by your phone should be also supported by the network from where you use the phone. For details, contact your local customer care centre.

## Packing List

Your phone package box contains the following:

- One HUAWEI U7310s mobile phone
- One travel charger
- One Li-ion battery
- One User Guide
- One stereo headset (Optional)
- One USB data cable (Optional)

## Your Phone

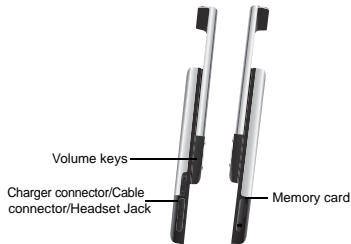

## ■ Your Phone

### Left function key

- Press this key to activate the function indicated at the left of the prompt bar.
- In standby mode, press this key to access the main menu.

### Send key

- Press this key to make or answer a call.
- Press this key to access the **Calls** screen in standby mode.

### OK key

 
- Press this key to start the selected function in the menu.
- In standby mode, press this key to access the main menu.

### Music key

- In standby mode, press this key to access the music menu.

### Character/Number keys

- Use to enter numbers or characters.
- Press and hold the # key to switch to the silent profile from the current profile.

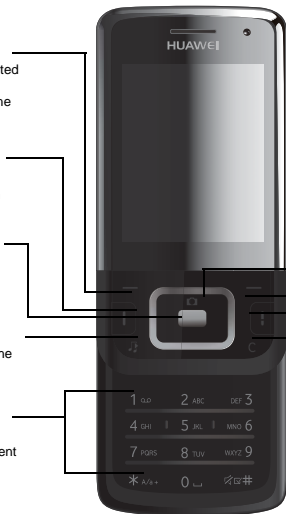

### Scroll key

- Press this key to scroll through a menu.
- In standby mode, press the up scroll key to access **Camera**, press the down scroll key to access **Contacts**, press the left scroll key to access the **New SMS** screen, and then press the right scroll key to access **My Files**.

### Right function key

- Press this key to activate the function indicated at the right of the prompt bar on the screen.
- In standby mode, press this key to access **Browser**.

### Power/End key

 
- Press this key to end an ongoing call or reject an incoming call.
- Press this key to return to the home screen.
- Press and hold it to power on or power off the phone.

### Clear key

- In the editing mode, press this key to delete a character before the cursor.



## Home Screen

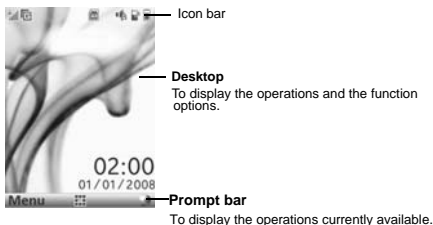







### Icon bar

This area displays the phone status. The following table illustrates the icons that may appear on this bar.

Icon	Description
	Indicates signal strength. The more horizontal bars that appear, the stronger the signal.
	The phone is currently in a GSM network.


Icon	Description
	The phone is currently in a WCDMA network.
	The phone is currently in a HSDPA network.
	Bluetooth is enabled.
	Forwarding all incoming voice calls to line 1.
	Call line 2 is enabled currently.
	Forwarding all incoming voice calls to line 2.
	The phone is in a call.
	Alarm clock is enabled.
	You have new text messages.
	You have new multimedia messages.
	You have new PUSH messages.
	You have new emails.



## ■ Introduction to the Menu

Icon	Description
	You have new voice mails.
	You are using the roaming service.
	The normal profile is activated.
	The headset is plugged in.
	Your PC connects to the Internet through your phone.
	Indicates power level of the battery.

## Introduction to the Menu

Your phone provides an extensive range of functions. You can use these functions by navigating the following menus: **Entertainment, Browser, Music, Camera, Messaging, My Files, Organiser & Tools, Contacts, Profiles(STK), Video call** and **Settings**.

- 1 In standby mode, press  to display the main menu.

- 2 Press the scroll key to scroll through the menu, and then press  to select the desired item.
- 3 If the menu contains further submenus, repeat step 2.
- 4 Use the selected function according to the prompts on the screen.
- 5 Select **Back** to return to the previous menu. Press  to return to the standby mode.

## 2 Getting Started

### Loading the SIM Card

Load your SIM card before using your phone. To use the SIM card properly, please read the following instructions carefully.

#### Note

 
- Keep the SIM card out of the reach of children.
- The SIM card and its metal contacts can be easily damaged by scratching or bending. Ensure care when you carry, load or remove it.
- Always disconnect the charger from the phone before loading or removing the SIM card.

To load the SIM card, do as follows:

- 1 Position the card at the card slot entrance, making sure it is facing the same way as shown in the diagram below, with the notched corner at the down left. Then slide in as shown.



- 2 Fit the battery into the battery slot on back of the phone. Press the battery down until it clicks into place.



- 3 Slide the back cover to the phone.




### Unloading the SIM Card

 Only unload the SIM card and the battery after powering off your phone. Otherwise, your phone may be damaged.


To unload the SIM card:

## ■ Charging the Battery

- 1 Unload the back cover out of the phone.



 - 2 Please unload the battery according to the following picture.



- 3 Press the SIM card with one finger and slide it out of the slot.



## Charging the Battery

Before charging the battery, please read the following precautions carefully.

### Note

- When you charge the battery for the first time, please charge it for a minimum of 12 hours.
- The battery discharges even while not being used. If you have not used it for a long time, please recharge it first.
- The charging time depends on the environmental temperature and the age of the battery.
- Do not strike, throw or cause any kind of violent shock to the battery, otherwise liquid leakage, body damage, overheating, explosion or fire may occur.
- The battery can be recharged but eventually wears out. If the battery lasts for a shorter time period than usual after being charged normally, replace it with a battery of the same type.
- Charge the battery by using the charger supplied with your phone.