

library screen	128
location source	144
lock the screen	20

M

make a call from the call log	52
make a call from the contacts	51
make a call with the dialer	48
manage your accounts	151
manage your memory	175
Maps	144
Market	147
menu key functions	11
message settings	89
MMS	82
modem behaviour	107
month view	163
move a screen item	26
music player panel	134
music player screen	130
music player widget	34
my notepad widget	36

N

Navigation key	11
----------------	----

no warranty	7
notepad	176
notice	6
notification bar	23
notification icons	41

O

OK key	12
onscreen keyboard	71
open a bookmark	102
open a multimedia message	88
Open a web page	100
open Gmail/Google Mail	138
open Maps	145
open Market	147
open Talk	141
open the alarm	166
open the browser	99
open the calculator	176
open the calendar	157
open the file manager	172
open the gallery	114, 124
open the Messaging application	82
open the music	128
open the notification panel	44

open your contacts	58
open your favorites	61
open YouTube	146
other widgets	37

P

packing list	9
pair a Bluetooth device	104
PC suite synchronization	156
permissions	5
phone service	182
play a playlist	131
play a video	123
play music	129
power key functions	11
power off your mobile phone	18
power on your mobile phone	16
prepare for the upgrade	190
protect your phone with a screen lock	186

Q

Quick Contact for Android	59
---------------------------	----

R

reject a call	53
remove a favorite contact	65

remove a screen item	27
remove installed applications	187
remove the microSD card	47, 107
rename a folder	39
reply an email	139
reply to a message	89
reply to an email message	95
reset factory data from menus	189
rotate a picture	121, 125
rotate you mobile phone screen	19

S

safety precautions	2
search for a contact	69
search for a file quickly	174
search for a video	146
search for an email	139
search for applications	148
search for places of interest	145
select pictures or videos in an album	118
send a multimedia message	86
send a text messages	83
send an email	138
send an email message	94
send files via Bluetooth	105

send key functions	11
set a home page	101
set a voice clip as a ringtone	171
set an alarm	168
set an event reminder	165
set notifications for new instant messages	143
set up your mobile phone	17
share a video	147
shoot a video	113
sign out Talk	144
SMS	82
sound recorder	171
Sound recorder screen	170
start a chat	142
status icons	41
switch between accounts	138
switch between calls	56
switch off the data service	183
switch the input method	71
switch the key board layout	74
Synchronization	151

T	
take a photo	111
text message editing screen	85

time settings	177
TouchPal keyboard	73
TouchPal settings	77
touchscreen actions	19
trademarks	5
turn on Bluetooth	103
turn on data roaming	182
turn on silent mode	179
turn on the data service	97
turn on Wi-Fi	97
turn on your SIM card PIN	185

U

uninstall an application	149
unlock the screen	20
unpair a Bluetooth device	105
update the software through the microSD card	191
USB mass storage	46, 106
use your camera	109

V

vibrate your phone	182
view a multimedia message	88
view a picture	119, 125
view an album's contents	116

view an email message	93
view details about a contact	61
view pages you have most visited	102
view pages you have visited	102
view the installed applications	187
view your photos	112
view your videos	113

W

watch a slideshow of your pictures	119
week view	162

Y

YouTube	146
---------------	-----