

HUAWEI U8150-B User Guide

 


1. What is in your box

Your phone box contains the following items:

- Mobile phone
- Battery
- Charger
- USB cable
- Headset
- Quick start guide
- Safety information


2. Phone at a glance

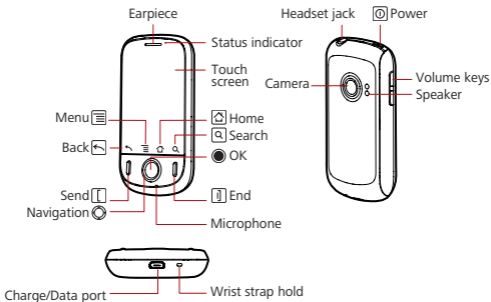


- ☰: Press to open the menu on an active screen.
- 🏠: Touch and hold to open the **Recent** panel.
- ⏏: Press to go to the **Call log** screen.

3. Before getting started

 Installing the SIM card

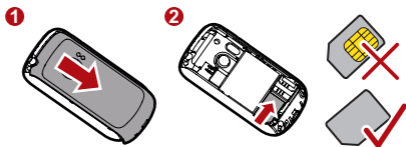

 Installing the microSD card* and the battery

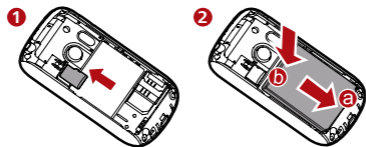

★ *microSD card is optional.

4. Charging the battery




The color of the status indicator tells the battery status of your mobile phone.

- Green: Fully charged (when connected to charger).
- Orange: Charging (when connected to charger).
- Red: Battery low.


5. Powering on or off your mobile phone

Powering on your mobile phone

Press  to power on your mobile phone. The first time you do this, you will be asked to sign in to your account and set up your mobile phone.

- ① **Note: You need an Internet connection to set up accounts.**

Powering off your mobile phone

Press and hold  to open the Phone options menu, and then touch **Power off**.

 
6. Using the Touchscreen

- **Touch:** Touch a desired item with your finger to confirm your selection or start an application.
- **Touch and hold:** Touch and hold the screen until your mobile phone responds. For example, you can always touch and hold the screen to open the options menu of the active screen.
- **Flick:** Flick your finger vertically or horizontally across the screen.
- **Drag:** Touch and hold your desired item with your finger.

Then, drag the item to any part of the screen to move the item.


7. Home screen

Home screen view

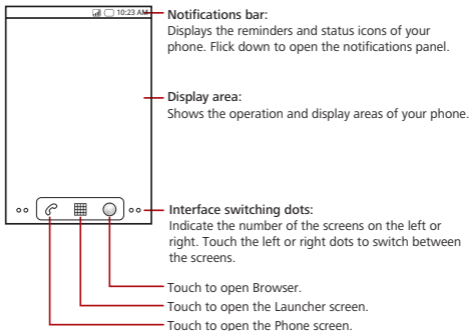






★ Touch and hold the small dots on the lower left or right of the screen to view thumbnails of the Home screen and its extensions, which you can touch to open.

Locking the screen

- When your mobile phone is on, press  to lock the screen. When the screen is locked, you can still receive messages and calls.
- If you leave your mobile phone idle for a while, the screen will lock automatically.

Unlocking the screen

 1. Press , ,  or  to wake up the screen.
2. Drag the lock icon from left to right to unlock the screen.

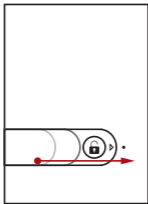



Adding a new screen item


1. Touch and hold a blank area on the Home screen until the Add to Home screen menu is displayed.
2. Select an item to add it to the Home screen.

8. Getting your contacts into the phone

Importing contacts from a SIM card

1. In the contact list, press , and then touch **Import/Export**.
2. Touch **Import from SIM card**. Wait for the SIM card contents to be loaded.
3. Select the check boxes of the contacts you want to import.
 - ★ You can press , and then touch **Import all** to import all contacts from SIM card.

 
Adding a contact




1. In the contact list, press , and then touch **New contact**.
2. Enter the contact's name, and then add detailed information such as phone number or address.
3. When you are finished, touch **Done** to save the contact information.

9. Making a call


Making a call with the dialer

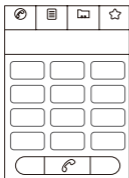
1. To make a call, you can use the **Phone** application.




2. Touch the appropriate numeric keys to enter the phone number.
3. Press  or touch  to initiate the call.
4. When finished, press .


Answering an incoming call

 - Press  or drag  to the right to answer the call.

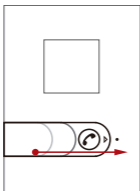


Rejecting an incoming call

 - Press  or drag  to the left to reject a call.

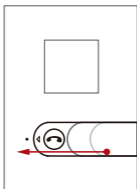

10. Entering text


Using the onscreen keyboard

- Touch the space where you will enter your text to show the keyboard.
- Press  to hide the keyboard.

Switching the input method


Touch and hold the space where you enter your text until the Edit text menu is displayed. Touch Input method.

11. Sending a message


1. Touch **Launcher > Messaging > New message**.
2. Enter a phone number in the **To** field.
3. Touch the **Type** to compose text box to start entering your message.
 - ★ On the edit messages screen, press  to display the options panel. Touch **Add subject** to add the message subject or touch **Attach** to add a picture, music, or video file.
4. When you finished editing message, touch **Send** to send the message.


12. Getting connected

Connecting to a wireless network


1. On the Home screen, press  > **Settings**.
2. Touch **Wireless & networks > Mobile networks**, and then select the **Data enabled** check box to turn on data services.
 - ★ If you do not need a wireless network, you can uncheck the **Data enabled** check box to save data traffic costs.

Connecting to a Wi-Fi network


1. On the Home screen, press  > **Settings**.
2. Touch **Wireless & networks**, and then select the **Wi-Fi** check box to turn on Wi-Fi.
3. Touch **Wi-Fi settings**. You will see a list of detected Wi-Fi networks in the **Wi-Fi networks** section.
4. Touch a Wi-Fi network to connect to it.

When you connected to a Wi-Fi network,  will display on the notifications bar.

Sharing data connection as a portable Wi-Fi hotspot

1. On the Home screen, press  > **Settings**.
2. Touch **Wireless & networks** > **Tethering & portable hotspot**.
3. Select the **Portable Wi-Fi hotspot** check box to share your data connection.
 - ★ When **Portable Wi-Fi hotspot** is selected, you can touch **Portable Wi-Fi hotspot settings** to change its network name or secure it.

Opening a web page

On the Home screen, touch  to open the browser.

- ★ When both of the known/open Wi-Fi networks and the wireless networks are available, your phone selects a Wi-Fi network for internet access.

13. Using the microSD card as USB mass storage


To transfer your favorite music and pictures from your PC to your mobile phone's microSD card, set the microSD card as USB mass storage.

1. Connect your mobile phone to your PC with the USB cable. Your PC will detect the microSD card as a removable disk.
2. Open the notifications panel, and then touch **USB connected**.
3. Touch **Turn on USB storage** in the dialog box that opens to confirm that you want to transfer files.


You can now transfer files from your PC to your mobile phone's microSD card.

14. Personalizing your phone

Changing the wallpaper

On the Home screen, press , and then touch **Wallpaper**. In the options menu, select a picture application. Select the wallpaper you want to use.

Changing the ringtone



On the Home screen, press , and then touch **Settings > Sound > Phone ringtone**. Select the ringtone in the list and then touch **OK**.

 
Changing the message ringtone

On the Home screen, press **Launcher > Messaging**, and then press **☰ > Settings > Select ringtone**. Select the ringtone in the list and then touch **OK**.

15. Taking a picture or recording a video



Taking a picture

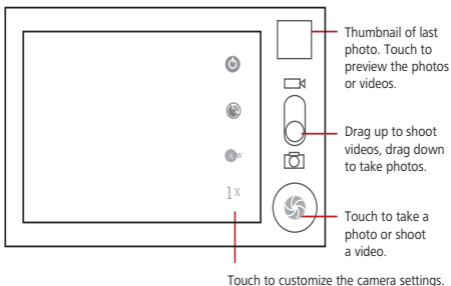1. On the picture capture screen, frame the picture within the screen.
2. Press  or  to take a picture.
3. You can change picture settings through the settings option.



Recording a video

1. Switch from the picture capture mode to the video capture mode.
2. Frame your object.

3. Press  or  to start or stop recording a video.

16. Listening to your favourite music

Using your music player

Once you have done this, the player will search for music on the microSD card. After the search is complete, you will be able to view all available music files in the music library.

So before you open **Music**, you must copy music files from your computer to the microSD card.




Music widget

When you listening to a music in background, you can control the Music player through the **Music widget**.



17. Market

Opening Market and searching for an application

1. Touch **Launcher** > **Market**. When you open **Market** for the first time, the **Android Market Terms of Service** window will appear. Touch **Accept** to continue.
2. Touch the **Search** icon at the upper right of the screen or touch . Enter your desired name to search for the application.
3. Touch a search result to see details about the application.

Downloading and installing an application

1. Touch **Install** or **Buy** at the bottom of the screen.
 2. After the application has been downloaded and installed on your mobile phone, the content download icon appears in the notification bar.
 3. You can find the application icon on the **Launcher** screen.
- ⓘ Availability of Google applications, services, and features may vary according to your country or carrier.**

18. Restoring factory data

If you reset your phone to the settings that were configured at the factory, all of your personal data stored on the phone, including information about your Google Account, any other accounts, your system and application settings, and any applications you have downloaded will be erased.

Resetting the phone does not erase you have downloaded or any files on your microSD card, such as music clips or photos.

- On the Settings screen, touch Privacy > Factory data reset.
- When prompted, touch Reset phone, and then touch Erase everything. The mobile phone resets the settings to the original factory settings, and then restarts.

19. Frequently Ask Questions (FAQ)

How do I disable the function of automatic orientation switching when rotating the phone?

Touch Settings > Display > Auto-rotate screen to disable the function.

How do I set the unlock pattern?

Touch Settings > Location & security > Set up screen lock > Pattern.


How do I change the keyboard mode?

Touch and hold the area where you write text and then select the input method you prefer.

How do I stop the song playing in the background?

Touch the notification bar, flick downwards to open the notifications panel, and then touch the music playing notification to go to the music playing screen.

How do I return to the calling screen?

While on a call, if you are on another screen, you can touch the notification bar, and drag downwards to open the notifications panel. Then touch the current call notification to return to the calling screen. Also you can press  to return to the calling screen.

How do I create an application shortcut on the Home screen?

Touch and hold an application icon on the Launcher screen until the Home screen is displayed. Then drag the icon where you want it to go and release your finger.

How do I hide the keyboard?

Press  to hide the keyboard.

How do I forward a message?

Touch and hold a message in a message window, and then touch Forward in the menu that opens.

Why am I unable to use Navigation?

Navigation is unavailable in some countries or regions. For details, please search in Google.

20. Notice

Copyright © Huawei Technologies Co., Ltd. 2010. All rights reserved.

THIS DOCUMENT IS FOR INFORMATION PURPOSE ONLY, AND DOES NOT CONSTITUTE ANY KIND OF WARRANTIES.

All the pictures in this guide are for your reference only. The actual appearance and display features depend on the mobile phone you purchase.

Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied

petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power

consumption. As a result, the talk time and the standby time are reduced.

- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between -10°C and 45°C while the device is being charged. Keep the ambient temperature between -10°C to 55°C for using the device powered by a battery.

Prevention of Hearing Damage

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

Accessories

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.

- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Avoid dropping the device or battery. If the device or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a qualified service center for inspection.
- Improper battery use may result in a fire, explosion or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- The device should only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.

**Caution**

CAUTION - RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand.

Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.

- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.
- If the device screen is broken by colliding with hard objects, do not touch or try to remove the broken part. In this case, stop using the device immediately, and then contact an authorized service center in time.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Certification Information (SAR)

This device meets guidelines for exposure to radio waves. Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 1.036W/kg, and when properly worn on the body is 1.436W/kg.

The SAR limit also adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue. The highest SAR value for this device type when tested at the ear is 0.754 W/kg, and when properly worn on the body is 1.420 W/kg.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and

on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Caution

Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

Disposal and Recycling Information



This symbol on the device (and any included batteries) indicates that they should not be disposed of as normal household garbage. Do not dispose of your device or batteries as unsorted municipal waste. The device (and any batteries) should be handed over to a certified

collection point for recycling or proper disposal at the end of their life. For more detailed information about the recycling of the device or batteries, contact your local city office, the household waste disposal service, or the retail store where you purchased this device.

The disposal of this device is subject to the Waste from Electrical and Electronic Equipment (WEEE) directive of the European Union. The reason for separating WEEE and batteries from other waste is to minimize the potential environmental impacts on human health of any hazardous substances that may be present.

Reduction of Hazardous Substances

This device is compliant with the EU Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) Regulation (Regulation No 1907/2006/EC of the European Parliament and of

the Council) and the EU Restriction of Hazardous Substances (RoHS) Directive (Directive 2002/95/EC of the European Parliament and of the Council). For more information about the REACH compliance of the device, visit the Web site www.huaweidevice.com/certification. You are recommended to visit the Web site regularly for up-to-date information.

EU Regulatory Conformance

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the Web site www.huaweidevice.com/certification.

CE 0682 

■ **Note:**

Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

■ **Note:**

This device may be operated in all member states of the EU.

France: Outdoor use limited to 10 mW e.i.r.p. within the band 2454-2483.5 MHz.

Italy: For private use, a general authorisation is required if WAS/RLAN's are used outside own premises. For public use, a general authorisation is required.

Luxembourg: General authorisation required for network and service supply.

Norway: This subsection does not apply for the geographical area within a radius of 20 km from the centre of Ny-Ålesund.