

Multimedia and Camera

You can use the phone to listen to music, take photos, and play games.

Music

Opening the Music Player

Touch **Application tab** > **Music** to open the music player and display the media library.

Tip: When your mobile phone plays music in the background, you can open the notification panel and touch the music file to go to the music playing screen.

Using the Media Library

The music stored in your mobile phone is classified into the following categories: **Artists**, **Albums**, **Songs**, and **Playlists**. You can touch the desired category to display the list of music files falling into this category.

Creating a playlist

1. Touch a category on the music library screen.
2. In the list that appears, use the **Trackball** to navigate to the song that you want to add in the playlist.
3. Touch and hold the song or press the **MENU** key, then touch **Add to playlist** on the options menu.
4. On the **Add to playlist** screen, to add the song to an current playlist, or to a new playlist.

Editing a playlist

1. Touch **Playlists** on the music library screen.
2. On the playlists editing screen, you can perform the following operations:
 - Touch and hold a song of the playlist, and then you can remove the song from the playlist, or set the song as ringtones.
 - Press the **MENU** key, then you can perform the options.

Picture and video

The **Gallery** application can automatically search for the pictures and videos stored on your mobile phone and microSD card. In addition, the **Gallery** application sorts these pictures and videos with folders. With the **Gallery** application, you can view and edit pictures, use a picture as the wallpaper or a contact image, and watch the videos stored on your mobile phone and microSD card.

Using the Gallery

To open the Gallery application, do as follows:

- Touch **Application tab > Gallery** to open the viewer.
- On the picture preview screen of the camera, press the **MENU** key, and then touch **More > Gallery** to open the viewer.

The Gallery application categorizes your pictures and videos by storage location and stores these files in folders. You can touch one of the folders to view pictures or videos.

Press the **MENU** key to display the **Gallery** panel. On the panel, you can do as follows:

- Touch **Capture picture** to open the camera and switch to the picture capture mode.
- Touch **Capture video** to open the camera and switch to the video capture mode.
- Touch **Settings** to go to the Gallery setting screen. Then, you can set the size of a picture, the arrangement of

pictures, whether to prompt confirmation upon the deletion of a picture, and how to play a slideshow.

Viewing a Picture

1. Touch the intended folder to view the pictures contained in the folder.
2. Touch the intended picture to view it full-screen mode. When viewing a picture in full screen, flick the picture left and right to view the previous or next picture.
3. Touch the screen, then the zoom panel appears. You can zoom in or zoom out the picture.

Tip: The picture viewer supports the automatic rotation function. When you rotate your mobile phone, the picture adjusts itself to the rotation.

Editing and Setting a Picture

When viewing a picture in full screen, press the **MENU** key to display the operation panel. You can edit or set a picture by selecting the desired option.

To crop a picture

1. Press the **MENU** key to display the operation panel. Then, touch **Crop**.
2. Touch the related areas to adjust the size and position of the cropper.
 - Touch and drag the cropper arrows inwards to or outwards from the center of the cropper to resize the cropper.
 - Touch and hold inside the cropper, and drag your finger to the desired position.
 - Touch **Rotate** to rotate the onscreen picture.
 - Touch **Discard** to discard the changes.
3. Touch **Save** to save the cropped picture.

To rotate a picture

1. Press the **MENU** key to display the operation panel. Then, touch **Rotate**.
2. Select either **Rotate left** or **Rotate right**.

To share a picture

1. Press the **MENU** key to display the operation panel. Then, touch **Share**.
2. From the options menu that is displayed, select **Bluetooth, Email, Gmail, Messaging, Picasa** to share a picture with your friend.

To display your pictures as a slideshow

Press the **MENU** key to display the operation panel. Then, touch **Slideshow**. Your pictures in the selected folder are displayed as a slideshow.

To use a picture as the wallpaper or incoming call image

1. Press the **MENU** key to display the option panel, and then choose **More > Set as**.
2. Use a picture as the contact icon, group icon, or wallpaper.

Other operations

You can also delete a picture, view the picture details, or configure the picture viewer by using the operation panel.

Playing a Video

Touch the video you want to watch in **Gallery** to start playing the video. Touch the screen or press the **Trackball** to show the play control panel. Then, you can rewind the video, pause or resume playing the video, fast forward the video or jump to any part of the video.

Camera

Opening and Closing the Camera

- Touch **Application tab > Camera** to open the camera.

- On the picture capture screen, press the **Home/Back** key to close the camera.

Picture Capture Screen

On the picture capture screen, touch the screen to show capture controls.

- Switch between the picture capture mode and video capture mode.
- Zoom in or zoom out.

On the picture capture screen, press the **MENU** key to show the picture capture panel.

Capturing a Picture

1. Frame the picture within the screen.
2. Press half-way down on the **Capture** key. The camera automatically focuses. When the focus frame turns green, it indicates that the focusing is done.
3. Press the **Capture** key fully to capture the picture.
4. After the picture is captured, you can share, set, or delete it.

Capturing a Video

1. Switch the capture mode to video capture mode.
2. Frame your object.
3. Press the **Capture** key or **Trackball** to capture the video. Stop the capturing and save the capture video by pressing the **Capture** key or **Trackball** again.
4. Then, you can share or delete the captured video.

Game

Your mobile phone supports the game function. For details, refer to the help document delivered with the desired game. You can also login to **Market** to download your favorite games.

More Applications

Alarm Clock

1. Touch **Application tab** > **Alarm** to open the alarm clock.
2. Define your alarm.
3. Press the **MENU** key to display the alarm clock control panel.

Calendar

With the calendar function, you can view dates and set the reminders for appointments and meetings. Depending on your synchronization settings, the calendar on your phone stays in sync with your calendar on the web.

Tip: For more information about Calendar synchronization, refer to “Synchronizing Information” on page 47.

Open the Calendar

1. Touch **Application tab** > **Calendar** to open the calendar.
2. Your mobile phone prompts you to choose whether to use the GoogleTM calendar service. Touch **OK** to access Google calendar or touch **Cancel** to access the local calendar.

Tip: You can also press the **MENU** key, and then touch **More** > **Launch Google Calendar**.

Create events

1. Touch **Application tab** > **Calendar** to open the calendar.
2. On any **Calendar** view, press the **MENU** key and then touch **New event** to open the **Event details** screen.
3. Enter the event name using the keyboard.
4. Do one of the following:
 - If there is a time frame for the event, touch the **From** and **To** date and time to set them.
 - If it is a special occasion such as a birthday or a whole-day event, set the **From** and **To** date, then select the **All day** check box.
5. Enter the event location and description.
6. If you have more than one calendar, select the calendar where you want to save the event.
7. Set the event reminder time in **Reminders**, then select whether the event is recurring in **Repetition**.
8. When finished, touch **Save**.

Tip: To quickly create an event in Day, Week, or Month view, touch and hold an empty time slot, then touch **New event**. A new **Event details** screen appears with the selected time slot and date in the **From** and **To** fields.

Calendar views

You can display the Calendar in day, week, month, or agenda view. To change the **Calendar** view, press **MENU** key, then touch **Day**, **Week**, **Month**, or **Agenda** (current view is not in the menu.)

Event reminders

If you set a reminder for an event, the upcoming event icon appears in the notifications area of the status bar, when the reminder time arrives.

Calculator

Touch **Application tab** > **Calculator** to open the calculator.

- Press the **MENU key** to open the calculator option panel. Then, you can choose either the basic panel or the advanced panel. In advanced panel, you can perform calculations based on advanced functions.
- Touch the virtual keys to enter numbers or mathematical operators. Touch **Clear** to clear the entered information.

Tip: You can flick left or right to switch between the basic panel and the advanced panel.

File Manager

Browsing a file

Touch **Application tab** > **File Manager** to open the file manager.

With the file manager, you can edit and delete files and folders.

Cutting or Copying a File

1. In the file manager, press the **MENU key** to show the operation panel. Then, touch **Cut** or **Copy**.
2. Touch the desired file or folder. The selected file is ticked in green. You can also press the **MENU key** to open the option panel. Then, touch **Select all** to select all files in the desired folder or touch **Unselect all** to cancel the selection.
3. Press the **MENU key** to open the option panel. Then, touch **Done** to complete the cutting or copying operation.
4. Select the path to which the picture is pasted. Press the **MENU key** to open the option panel, and then touch **Paste** to paste the file to the selected path.

Deleting a File

1. In the file manager, press the **MENU** key to open the option panel. Then, touch **Delete**.
2. Touch the file or folder to be deleted. The selected file is ticked in green. You can also press the **MENU** key to open the option panel. Then, touch **Select All** to select all files in the desired folder or touch **Unselect All** to cancel the selection.
3. Press the **MENU** key to open the option panel. Then, touch **Done** to complete the deletion.

Creating a Folder

1. In the file manager, touch to access the desired directory of the folder to be created.
2. Press the **MENU** key to open the option panel, and then touch **New folder**.
3. Enter the new folder name in the text box.
4. Touch **Save** to create the folder.

Quick Search

1. In the file manager, touch to access the directory where your desired file is stored.
2. Press the **MENU** key to open the option panel, and then touch **Search**.
3. Enter the key word of the name of the desired file or folder in the search text box.
4. Touch **Search**. Your mobile phone starts to search the files in all folders and subfolders of the selected directory.
5. The search result is shown in a list. Touch the desired file to open it.

Managing Memory


In the file manager, press the **MENU** key to open the option panel, and then touch **Memory Status** to go to the memory management screen.

Then you can view the memory status and available memory of your mobile phone and the microSD card. In addition, you can format and upgrade your mobile phone and the microSD card. For more information, refer to “Managing Your Phone” on page 71.

Note: If no microSD card is inserted, all files are automatically saved to your phone storage. To ensure the smooth running of your mobile phone, do not save too many files to the phone storage.

Recorder

Touch **Application tab** > **Sound Recorder** to open the recorder.

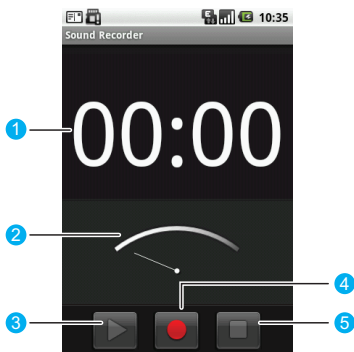

- | | |
|---|--|
| 1 | Show the recording duration. |
| 2 | Show the volume of the captured audio signals. |
| 3 | Touch to play back or pause the recording. |

- | | |
|---|--|
| 4 | Touch to start to record your message. |
| 5 | Touch to stop recording or playing back. |

YouTube™

YouTube™ is a free online video streaming service that allows you to view videos that have been uploaded by YouTube™ members. You do not need a YouTube™ account to browse and view videos. However, to use all the features of YouTube™ (such as viewing “My account”), you must create a YouTube™ account from your computer and sign in to that account from your phone.

Touch **Application tab > YouTube**. to open application. The YouTube™ screen appears with the videos grouped into categories, such as **Featured, Most popular, Most viewed, Top rated**, and more.

Watching YouTube™ videos

1. On the YouTube™ screen, select a video to watch from the available categories. Touch a category to see the available videos for that category.
2. Touch a video to play.
3. Touch the screen to display the playback controls.
4. Press the **Home/Back** key to stop playback and return to the videos list.

Searching for videos

1. On the YouTube™ screen, press the **MENU** key and then touch **Search**.
2. Enter a search keyword, then touch **Search** button.
3. The number of search results appears below the notification bar. Scroll through the results and touch a video to watch.

More Google Services

Creating a Gmail™ account

When you turn on the phone for the first time and after touching the Google services such as **Google Talk™**, **Gmail™**, and **Android Market™**, you will be prompted to sign in to your Google™ account. For more information, refer to “Signing in to Your Google™ Account” on page 6.

Note: Make sure that your phone has an active data connection (3G/GPRS) before you sign in to your Google™ Account.

Tip: To use another Google™ account, touch **Application tab > Settings > Applications > Manage applications**. Then flick your finger downwards on the application list and touch **Google Apps**. On the **Application info** screen, touch **Clear data**. After the configuration, when you try to use a Google service again, your mobile phone prompts you to log in with your desired account.

Using Google Maps™

Google Maps™ lets you track your current location, view real-time traffic situations (depending on availability), and receive detailed directions to your destination. It also provides a search tool where you can locate places of interest or an address on a vector, satellite, or street map.

Enabling Location source

Before you open Maps and find your location or search for places of interest, you must enable Location source.

1. Touch **Application tab > Settings**.
2. Touch **Security & location**.
3. Below the **My Location sources** section, select **Use wireless networks, Enable GPS satellites**, or both.

Finding My Location

On the main map screen, press the **MENU** key and touch **My Location**. Your location is shown on the map as a blinking blue dot.

Searching for Places of Interest

Searching for a place of interest.

1. On the main maps screen, press **MENU** key and touch **Search**.
2. Enter the place you want to search for in the search box.
3. Touch the search icon. Your search results display.
4. Touch a place of interest to show its location on the map.

Navigate on a map

Roll the **Trackball** or flick your finger on the screen in any direction to view other areas of the map.

Changing a map mode

When viewing a map, you can switch to another map mode. Press the **MENU** key and then touch **Map mode**. Select from **Map, Satellite** or **Traffic**.

Getting Directions

Use Maps to get detailed directions to your destination.

To get directions

1. While viewing a map in any mode (except in Street View), press the **MENU** key and then touch **Directions**.
2. Enter the starting point in the first text box, then enter your destination in the second text box.

3. Touch **Go**. The directions to your destination appears in a list.


When you finished viewing or following the directions, press the **MENU** key, then touch **Clear map** to reset the map. Your destination is automatically saved in the Maps history.

Android Market™

Android Market™ provides direct access to useful applications and fun games which you can download and install on your mobile phone. Android Market™ also allows you to send feedback and comments about an application, or flag an application that you find objectionable or incompatible with your phone.

Using Android Market™

1. Touch **Application tab > Market** to open Android Market™.
2. If you use Android Market™ for the first time, define your Google™ account according to the prompts.

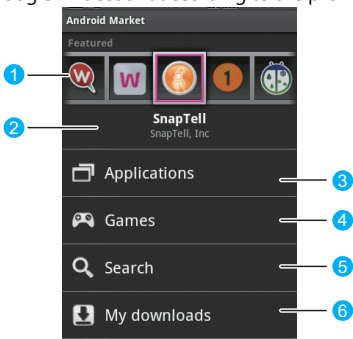

1	Show featured applications. You can touch the icon to view the detailed information about your desired application.
2	Show the name of the selected application.
3	Touch to show the application list.
4	Touch to show the game application list.
5	Touch to go to the search screen. Then, you can search for your desired application in Android Market™.
6	Touch to view the downloaded application.

Getting Help

If you ever need help or have questions about Android Market™, press the **MENU** key and touch **Help**. The Browser will take you to the Android Market™ Help Web page.

Finding Applications

The Android Market™ home page provides several ways to find applications. It showcases featured applications and includes a list of item applications by category, a list of games, a link to search, and a link to **My downloads**. Scroll horizontally through the featured items or select a category to browse its contents, and then select a subcategory. Within each subcategory you can select to view items sorted by popularity or by date. All items in a subcategory are listed on each tab; those on the **By popularity** tab are sorted from the most popular to the least popular, and those on the **By date** tab are sorted from the newest to the oldest.

Installing an Application

To install applications, do as follows:

1. Scroll to the item you want to download, and select it.
2. On the item details screen, read more about the application, including its costs, overall rating, and comments by users. If you scroll down to the **About the developer** section, you can view more applications by this developer, visit the developer's website, and send the developer an email message.
3. To install the item, touch either **Install** (if item is free) or **Buy**, whichever appears.
4. To check the progress of the download, open the notifications panel. Most applications are installed within seconds. If you want to stop downloading the item, touch **Cancel** to cancel download.

Managing Your Phone

Touch **Application tab** > **Settings** to configure your mobile phone.

Setting the Date, Time Zone, and Time

By default, your phone automatically uses the network provided date, time zone, and time.

Note: When the time provided by the network is automatically used, you cannot set the date, time, and time zone by yourself.

Manually Adjusting the Date, Time Zone, and Time

1. Touch **Application tab** > **Settings**.
2. Scroll down the screen, and then touch **Date & time**.
3. Clear the **Automatic** check box.
4. Touch **Set date**. Then touch up button or down button to adjust the date, month, and year, and then touch **Set** when finished.
5. Touch **Select time zone**, then select the time zone in the list. Scroll down the list to view more time zones.
6. Touch **Set time**. Then touch up icon or down icon to adjust the hour and minute, touch **AM** to change to **PM** or vice versa. Touch **Set** when finished.

7. Select the **Use 24-hour format** check box to toggle between using a 12-hour or a 24-hour format.
8. Touch **Select date format** and then select how you want dates to display on your phone. The selected date format also applies to the date displayed in the alarm clock.

Display Settings

Adjusting the Screen Brightness

1. Touch **Application tab > Settings**.
2. Touch **Sound & display**, scroll down the screen, and then touch **Brightness**.
3. Drag the brightness slider to the left to decrease the screen brightness or to the right to increase the screen brightness.
4. Touch **OK**.

Adjusting the Time Before the Screen Turns Off

After a period of inactivity, the phone screen turns off to conserve battery power. You can set the idle time before the screen turns off as follows.

1. Touch **Application tab > Settings**.
2. Touch **Sound & display**.
3. Scroll down the screen, and then touch **Screen timeout**.
4. Touch the time before the screen turns off.

Keeping the Screen On While Charging the Phone

1. Touch **Application tab > Settings**.
2. Choose **Applications > Development**.
3. Select the **Stay awake** check box.

Preventing the Screen Orientation from Automatically Changing

1. Touch **Application tab > Settings**.
2. Touch **Sound & display**.
3. Scroll down the screen, and then clear the **Orientation** check box.

Ringer Settings

Changing the Ringtone

1. Touch **Application tab > Settings**.
2. Touch **Sound & display > Phone ringtone**.
3. Touch the ringtone you want to use, and then touch **OK**.

Tip: If you want to use music in the microSD card as ringtones, you can perform the related setting when editing a contact or contact group or press and hold the music in music list, select **Use as ringtone**.

Enabling Touch Tones

You can configure the phone to play a sound when you are using the Dialer phone pad or touching the screen.

1. Touch **Application tab > Settings**.
2. Touch **Sound & display**, and then scroll down the screen.
3. Select the **Audible touch tones** or **Audible selection** options.

Choosing the Notification Ring Tone

You can select the ringtone to play when your phone receives new notifications. Do as follows:

1. Touch **Application tab > Settings**.
2. Touch **Sound & display > Notification ringtone**.
3. Select your preferred notification ringtone from the list and then touch **OK**.

Phone Services

Your mobile phone can directly connect to the mobile phone network, and allow you to access and change the settings of various phone services for your phone. Phone services may include call forwarding, call waiting, voicemail, and more. Contact your wireless service provider to find out about the availability of phone services for your phone.

Enabling Data Roaming

Data roaming allows you to connect to the partner networks of your wireless service provider and access data services when you are out of the coverage area of your wireless service provider. Do as follows to enable data roaming:

1. Touch **Application tab > Settings > Wireless controls > Mobile networks**.
2. Select the **Data roaming** option.

Note: Accessing data services while roaming may incur additional charges. Inquire the data roaming tariffs with your wireless service provider.

Switching Off the Data Service

The data service allows you to perform data transfer operations, such as synchronising updates, which may incur additional charges. You can disable the data service to avoid unnecessary expenses. Do as follows:

1. Touch **Application tab > Settings > Wireless controls > Mobile networks**.
2. Select the **Data Service** option.

Note: If the data service is disabled, you cannot receive certain data, such as MMS.

Resuming the Access Point Setting

You can manage your access points here. If you delete an access point by mistake, you can reset here. Do as follows:

1. Touch **Application tab > Settings > Wireless controls > Mobile networks > Access Point Names**.
2. Press the **MENU** key, and then touch **Reset to default**.

Note: Generally, your mobile phone automatically reads the access point of the smart card. Therefore, do not modify the parameters of the access point; otherwise, you may be unable to access network sources.

Protecting Your Mobile Phone

Protecting Your SIM Card with a PIN

You can protect your SIM card from unauthorized use by assigning a personal identification number (PIN).

Enabling the SIM card PIN

1. Touch **Application tab > Settings**.
2. Touch **Security & location**, scroll down the screen, and then touch **Set up SIM card lock**.
3. Select the **Lock SIM card** option.
4. Enter the default SIM card PIN using the keyboard, and then touch **OK**.
5. To change the SIM card PIN at any time, touch **Change SIM PIN**.

Tip: Emergency calls can be placed at any time, without requiring a PIN.

Protecting Your Phone with a Screen Lock

You can keep your data more secure by locking the screen and/or requiring a screen unlock pattern every time your mobile phone is turned on or waken up from the Sleep mode.

Locking the screen

Press the **Power** key. Locking the screen prevents accidental screen touches when the phone is in your bag, purse, or pocket.

Tip: To unlock the screen, press the **MENU** key, **Home/Back** key or **Power** key and then press **MENU** key or flick upwards and enter your screen unlock pattern.

Creating and enabling the screen unlock pattern

1. Touch **Application tab > Settings**.
2. Touch **Security & location > Set unlock pattern**.
3. Connect at least four dots in a vertical, horizontal and/or diagonal direction, and then lift your finger from the screen when done. The phone records the pattern.
Touch **Continue**.
4. When prompted, draw the screen unlock pattern again, and then touch **Confirm**.
5. Select the **Require pattern** option to enable the screen unlock pattern.

Tip: Clear the **Use visible pattern** check box if you do not want the unlock pattern to display on the screen when you unlock it.

Managing Memory

Knowing How Much Phone Memory Is Available for Use

1. Touch **Application tab > Settings**.
2. Scroll down the screen, and then touch **SD card & phone storage**.

Knowing the Available Memory Card Space

1. Touch **Application tab > Settings**.

2. Scroll down the screen, and then touch **SD card & phone storage**.

Freeing Some Phone Memory

If your mobile phone is running low on memory, try the following:

- Move files and email attachments to the memory card.
- In **Browser**, clear all temporary Internet files and Browser history information.
- Uninstall the downloaded programs that you no longer use.
- Reset your mobile phone.

Resetting Your Mobile Phone

Resetting the phone deletes all data, including downloaded applications, and resets the phone back to its initial state—the state before you turned on the phone for the first time.

Note: Make sure to back up important data you have on the phone before you perform a factory data reset.

Resetting Factory Data

1. Touch **Application tab > Settings**.
2. Scroll down the screen, and then touch **SD card & phone storage**.
3. Below the Internal phone storage section, touch **Factory data reset**.
4. When prompted, touch **Reset phone**. The phone resets and displays the Home screen.

Upgrading the System Version of Your Mobile Phone

You can upgrade the system version of your mobile phone using the software upgrade package downloaded from the website of your service provider.

Downloading the Upgrade Package

You can download the software upgrade files from the following websites:

-
-
-
-
-

Do as follows to prepare for the upgrade:

1. Use the unzip software to decompress the upgrade file package downloaded from one of the preceding websites.
2. Save the decompressed file to the root directory of the microSD card.

Tip: For the process of copying the upgrade file to the microSD card, refer to “Using the Phone’s microSD Card as a USB Mass Storage” on page 15.

Upgrading the System Version

Note: Before the upgrade, make sure that your mobile phone is fully charged and the upgrade version is correct. In addition, you need to back up important information, such as the contacts, email messages, and messages.

1. Touch **Application tab** > **Settings** > **SD card & phone storage** > **Upgrade**.

2. Before the upgrade, the system of your mobile phone automatically checks the battery level and upgrade version. If the upgrade requirements are not met, the upgrade cannot be performed.
3. During the upgrade, if backing up data in advance is required, the system automatically displays the corresponding prompt.
4. After the confirmation, touch **Confirm**.
5. Your mobile phone displays the number of upgrades and notes for the upgrade process.
6. Touch **Upgrade**.
7. Your mobile phone restarts and the upgrade screen is displayed.
8. After the upgrade is complete, your mobile phone automatically restarts and powers on again.
9. Touch **Application tab > Settings > About phone > Build number** to view the version information.

Battery Saving Tips

How long your battery power lasts depends on the battery type, the network that you connect to, and how you use your mobile phone.

Try the following to conserve battery power:

- When you do not need 3G services, configure your mobile phone to connect to a 2G network. To do this, touch **Application tab > Settings > Wireless controls > Mobile networks**, and then select the **Use only 2G networks** option.
- When your mobile phone is not in use, press the **Power** key to switch off the screen.
- Select a shorter idle time before the phone screen switches off. To do this, touch **Application tab > Settings > Sound & display > Screen timeout**.
- Lower the screen brightness. Touch **Application tab > Settings > Sound & display > Brightness**.

- Use the AC adapter to plug your mobile phone into an external power outlet whenever possible.
- Turn Bluetooth off when you are not using it. Make your mobile phone visible to other devices only when you are trying to establish a Bluetooth partnership. Touch **Application tab > Settings > Wireless controls > Bluetooth**.
- Turn Wi-Fi off when you are not using it. Touch **Application tab > Settings > Wireless controls > Wi-Fi**.
- Turn off your phone connection to GPS satellites when not in use. Touch **Application tab > Settings > Security & location** , and then clear the selection of the **Enable GPS satellites** option.
- Lower the volume.
- Close battery-intensive programs, such as the **Camera** application, when you are not using them.

Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.
- Some wireless devices may affect the performance of hearing aids. For any such problems, consult your service provider.

Potentially Explosive Atmospheres

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.

- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between -10°C and 45°C while the device is being charged. Keep the ambient

temperature between -10°C to 55°C for using the device powered by a battery.

Preventing Hearing Damage

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

Accessories

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries.

Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.

- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.

Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.

Warnings and Precautions

- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Certification Information (SAR)

This mobile device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the mobile device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP)

and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 0.876 W/kg, and when properly worn on the body is 1.310 W/kg. The SAR limit also adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue. The highest SAR value for this device type when tested at the ear is 0.579 W/kg.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Warnings and Precautions

- Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Warning:** Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

Disposal and Recycling Information



This symbol on the device (and any included batteries) indicates that they should not be disposed of as normal household garbage. Do not dispose of your device or batteries as unsorted municipal waste. The device (and any batteries) should be handed over to a certified collection point for recycling or proper disposal at the end of their life.

For more detailed information about the recycling of the device or batteries, contact your local city office, the household waste disposal service, or the retail store where you purchased this device.

The disposal of this device is subject to the Waste from Electrical and Electronic Equipment (WEEE) directive of the European Union. The reason for separating WEEE and batteries from other waste is to minimize the potential environmental impacts on human health of any hazardous substances that may be present.

Reduction of Hazardous Substances

This device is compliant with the EU Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) Regulation (Regulation No 1907/2006/EC of the

European Parliament and of the Council) and the EU Restriction of Hazardous Substances (RoHS) Directive (Directive 2002/95/EC of the European Parliament and of the Council). For more information about the REACH compliance of the device, visit the Web site www.huaweidevice.com/certification. You are recommended to visit the Web site regularly for up-to-date information.

EU regulatory conformance

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

C **CE** **0682** **!**

For the declaration of conformity, visit the Web site www.huaweidevice.com/certification.

Notice: This device can be operated in all European countries.

France: Outdoor use limited to 10 mW e.i.r.p. within the band 2454-2483.5 MHz

Italy: For private use, a general authorisation is required if WAS/RLAN's are used outside own premises. For public use, a general authorisation is required.

Luxembourg: General authorisation required for network and service supply.

Norway: This subsection does not apply for the geographical area within a radius of 20 km from the centre of Ny-Ålesund.

For the declaration of conformity, visit the Web site www.huaweidevice.com/certification.

Troubleshooting

I can not return to the Home screen by pressing the End key.

Touch **Application tab > Settings > General info & option > End button behavior** to check if you have set it to **Go to home**.

After connecting the phone to PC by using the USB cable, the USB disk icon has not been displayed on PC.

Touch **Application tab > Settings > General info & option > USB Mass Storage** to check if you have enabled the USB mass storage function.

I cannot send or receive MMS now.

1. Touch **Application tab > Settings > Wireless controls > Mobile networks > Data Service** to check if you have enabled the data service.
2. If you still cannot send or receive MMS, touch **Application tab > Settings > Wireless controls > Mobile networks > Access Point Names** to check the APN setting.

How to prohibit switching orientation automatically when rotating phone?

Touch **Application tab > Settings > Sound & display > Orientation** to disable the function.

How to access internet through Wi-Fi?

When both the Wi-Fi network and the wireless network are available, your mobile phone selects the Wi-Fi for Internet access. If the access through Wi-Fi does not work, the phone then selects the wireless network for Internet access.

How to set unlock pattern?

Touch **Application tab > Settings > Security & location > Set unlock pattern** to set unlock pattern.

How to switch input method?

Touch and hold on input frame, and then select **Input Method**.

How to drag icon on home screen?

Touch an icon and drag it to the screen edge. Slightly shake your finger to continue dragging until the desktop changes. Then, stop dragging at your desired position on the new desktop and release your finger.

How to reduce data traffic when roaming?

- Touch **Application tab > Settings > Wireless controls > Mobile networks > Data roaming** to disable the data service while roaming.
- Touch **Application tab > Settings > Wireless controls > Mobile networks > Data Service** to disable the data service in all circumstances.
- On **Messaging** screen, press **MENU** key, and then touch **Settings > Roaming auto-retrieve** to disable automatically retrieving multimedia messages while roaming.

How to create a multi-page MMS?

When editing a MMS, press the **MENU** key, and then touch **Attach > Slideshow**.

How to stop the song playing in the background?

Touch and hold the notification bar, and flick downwards to open the notification panel, and then touch the music playing notification to go to the music playing screen.

How to return to the calling screen?

While on a call, if you are on another screen, you can touch and hold the notification bar, and flick downwards to open the notification panel. Then touch the current call notification to return to the calling screen.

How to use the Wi-Fi network to save data traffic costs?

Touch **Application tab > Settings > Wireless controls > Wi-Fi settings > Network notification** to enable the function. Then, when there is an open Wi-Fi network, your mobile phone displays a prompt.

How to use the positioning function?

Your mobile phone supports positioning through the wireless network (subject to the network) and positioning through GPS. Positioning through the wireless network may generate traffic charges but features high speed. Positioning through GPS features high accuracy but consumes more power energy. Select your desired positioning method by touching **Application tab > Settings > Security & location**.

How to exit from programme?

Press and hold the **Home/Back** key to exit from programme.

Index

*Memory is Full	11
Accessories	84
Action Description	8
Adding an Email Account	36
Adding Contacts from the SIM Card	24
Adding Favorite Contacts	24
Adjusting Instant Messaging Settings	39
Adjusting the Screen Brightness	72
Adjusting the Time Before the Screen Turns Off	72
Alarm Clock	59
Android Market™	67
Android™ Keyboard Settings	31
Answering a Call	20
Appearance	2
Battery and Charger	84
Battery Saving Tips	79
Browsing a file	61
Browsing a web page	43
Calculator	61
Calendar views	60
Calendar	59
Call Service	19
Camera	56
Capturing a Picture	57
Capturing a Video	57
Certification Information (SAR)	86
Changing the Ringtone	73

Charging Your Mobile Phone	5
Checking the network connection	41
Choosing the Notification Ring Tone	73
Clearing and Maintenance	85
Composing and Sending Email Messages	36
Connecting to a wireless network	42
Contacts	23
Controlling application synchronisation	47
Controlling Google server synchronization	47
Create events	60
Creating a Folder	62
Creating a Gmail™ account	65
Creating a Group	25
Creating a New Contact	23
Creating a playlist	53
Creating and enabling the screen unlock pattern	76
Creating and Sending an MMS	33
Creating and Sending an SMS	33
Creating and Sending Email Messages	38
Customizing Your Contacts	25
Cutting or Copying a File	61
Deleting a File	62
Display Settings	72
Disposal and Recycling Information	88
Downloading the Upgrade Package	78
Editing a playlist	53
Editing and Setting a Picture	55
Editing the Contact Information	24
Electronic Device	81
Email	36
Emergency Call	86
Enabling Data Roaming	74
Enabling Location source	66
Enabling the SIM card PIN	75
Enabling Touch Tones	73

EU regulatory conformance	89
Event reminders	60
Extended Home Screen	13
FCC Statement	87
File Manager	61
Finding Applications	68
Finding My Location	66
First-Use Wizard and Initial Setup	49
Forwarding or Deleting a Message	35
Freeing Some Phone Memory	77
Game	57
Getting Connected	41
Getting Directions	66
Getting Help	68
Getting Started	1
Gmail™	37
Going to a web page	43
Google Talk™	38
GPRS/3G/EDGE	41
Home screen	9
Index	95
Input Settings	31
Input with intelligent input mode	30
Input without word suggestions	31
Inputting Text, Numbers, or Symbols	30
Installing an Application	68
Installing and Removing the USIM Card or SIM Card, and the microSD Card	4
Installing the Battery	4
Installing the microSD Card	4
Installing the USIM Card or SIM Card	4
Keeping the Screen On While Charging the Phone	72
Key Functions	3
Knowing How Much Phone Memory Is Available for Use	76
Knowing the Available Memory Card Space	76

Knowing the Home Screen	9
Knowing the Keyboard Panel	27
Locking and Unlocking the Screen.	7
Locking the screen	76
Making a Call Through Call log	20
Making a Call Through Contacts	20
Making a Call Through Dialer	19
Making a Call Through Favorites	20
Making a Call	19
Making a Conference Call	21
Managing bookmarks	43
Managing Memory	76
Managing Memory	62
Managing Your Phone	71
Manually Adjusting the Date, Time Zone, and Time.	71
Medical Device	81
Message Settings	36
Messages	33
Mobile Phone View	2
More Applications.	59
More Google Services	65
Multimedia and Camera	53
Music	53
Navigate on a map	66
Network Connections	41
Notification Icons	11
Open the Calendar	59
Opening and Closing the Camera	56
Opening Gmail™	37
Opening the Music Player	53
Operating Environment	83
Other Operations During a Call	21
Other Operations	35
Other Operations	38
Other operations.	56

Packing List	1
Pairing and connecting a Bluetooth device	45
Phone Services	74
Picture and video	54
Picture Capture Screen	57
PIN Protection	8
Playing a Video	56
Potentially Explosive Atmospheres	82
Preventing Hearing Damage	84
Preventing the Screen Orientation from Automatically Changing	73
Protecting Your Mobile Phone	75
Protecting Your Phone with a Screen Lock	75
Protecting Your SIM Card with a PIN	75
Quick Search	62
Reading and Replying a Message	34
Receiving and Reading Email Messages	37
Recorder	63
Reduction of Hazardous Substances	88
Rejecting a Call	21
Removing the microSD card while the phone is on	15
Resetting Factory Data	77
Resetting Your Mobile Phone	77
Resuming the Access Point Setting	75
Ringer Settings	73
Rotating Your Mobile Phone	9
Safety of Children	84
Searching a Contact	25
Searching for Places of Interest	66
Searching for videos	64
Sending files via Bluetooth	45
Setting the browser	44
Setting the Date, Time Zone, and Time	71
Settings	16
Signing In and Chatting Online	38

Signing in to Your Google™ Account	6
Signing Out.	39
SMS and MMS	33
Starting Up	6
Status Icons.	10
Stopping Synchronization	48
Switching Off the Data Service	74
Switching the Input Method	27
Switching the Keyboard Layout.	30
Synchronization Introduction.	47
Synchronizing Information	47
System requirements.	49
Text Input	27
To add a home screen icon	13
To bookmark a web page	43
To change a wallpaper	14
To create a folder	14
To crop a picture.	55
To display your pictures as a slideshow	56
To edit a bookmark.	44
To find text within the web page	43
To lock the screen	7
To move a home screen icon.	13
To navigate on the web page	43
To open a bookmark.	44
To open a new browser windows	44
To remove a home screen icon	13
To rotate a picture	55
To share a picture	56
To switch between browser windows	44
To turn off the phone	6
To turn on the phone	6
To unlock the screen	7
To use a picture as the wallpaper or incoming call image	56

To zoom in or out on the web page	43
TouchPal Settings	31
Traffic Security	82
Troubleshooting	91
Turning on Bluetooth and make the phone discoverable	45
Turning on the data connection	41
Turning on the Wi-Fi	42
Turning Your Phone On and Off	6
Warnings and Precautions	81
Watching YouTube™ videos	64
Viewing a Picture	55
Viewing Your Contacts	23
Wi-Fi	42
Upgrading the System Version of Your Mobile Phone . .	78
Upgrading the System Version	78
Using Android Market™	67
Using Bluetooth	44
Using Browser	43
Using Google Maps™	65
Using Other Functions	22
Using Task List	14
Using the Airplane Mode	22
Using the Android™ Keyboard Panel	29
Using the Application Tab	12
Using the browser windows	44
Using the Call Log	22
Using the Gallery	54
Using the Google Server to Synchronize	47
Using the main RoadSync™ application	49
Using the Media Library	53
Using the Notifications Panel	12
Using the PC Suite to Synchronize	48
Using the Phone as a Modem	46
Using the Phone's microSD Card as a USB Mass Storage	15
Using the phone's microSD card as a USB Mass Storage	15

Index

Using the RoadSync™ Calendar application	50
Using the RoadSync™ Email application	50
Using the Roadsync™ to Synchronize	49
Using the Touch Screen	8
Using the TouchPal Keyboard Panel	28
YouTube™	64