



Note: You can only compress files and folders into .zip files, but can extract both .zip and .rar files.


How to compress a file

1. On the **File Manager** screen, touch , and then touch **Compress**.
2. Select the files or folders you want to compress. When a file is selected, a check mark will appear.
To select all files and folders, touch  > **Select all**. Touch **Unselect all** to cancel the selection.
3. Touch  > **Done**.
4. Edit the save path and the name of the target file, and then touch **OK** to start compressing the files and folders.

How to extract a file

1. Touch and hold a compressed file.
2. Touch **Extract**.
3. Edit the save path for the extracted files.
4. Touch **OK** to start extracting.

How to manage your memory

On the **File Manager** screen, touch  to open the options panel, and then touch **More > Memory Status**. The memory management screen will be displayed. This screen allows you to view the memory status and available memory on your mobile phone and microSD card.

Managing Your Mobile Phone

To configure your mobile phone, touch  > **Settings**.

Setting the Date and Time

By default, your mobile phone automatically uses the date, time zone, and time provided by the network.

Note: When the time provided by the network is automatically used, you cannot set the date, time, and time zone.

1. On the **Settings** screen, touch **Date & time**.
2. Clear the **Automatic** check box.
3. Touch **Set date**. On the set date screen, touch **+** or **-** to adjust the date, month, and year, and then touch **Set** when the configuration is complete.
4. Touch **Select time zone**, and then select the desired time zone from the list. Scroll the list to view more time zones.
5. Touch **Set time**. On the set time screen, touch **+** or **-** to adjust the hour and minute. Touch **Set** when the configuration is complete.

6. Select or clear the **Use 24-hour format** check box to switch between 24-hour format and 12-hour format.



Tip: If the 12-hour format is used, you can touch **AM** to change to **PM** or vice versa.

7. Touch **Select date format** to select how you want the date to display on your mobile phone.
8. Touch **Select date format** to select how you want to display the date on your mobile phone. This change will be applied to the date displayed in the alarm clock.

Setting the Display

How to adjust the screen brightness

1. On the **Settings** screen, touch **Display > Brightness**.
2. Drag the slider left to make the screen darker, or right to make it brighter.
3. Touch **OK** to save the adjustment.

How to adjust the time before the screen turns off

If your mobile phone is idle for several minutes, it will turn off the screen to save battery power. To set a longer or shorter idle time, do the following:

1. On the **Settings** screen, touch **Display > Screen timeout**.
2. Select the duration you want the screen to be illuminated.

How to set the window animation

1. On the **Settings** screen, touch **Display > Animation**
2. Touch **No animations**, **Some animations**, or **All animations** to set the window animations.

Setting Ringers

How to turn on the silent mode

1. On the **Settings** screen, touch **Sound**.
2. Select the **Silent mode** check box to silence all sounds except alarms, and music and video media sound.

How to adjust the volume

You can adjust the volume from the **Home screen** or any application screen (except during a call or when playing music or videos). Press the Volume keys to adjust volume to the level you desire.

You can also adjust the volume from the settings screen.

1. On the **Settings** screen, touch **Sound > Volume**.
2. Drag the slider left to make the volume lower, or right to make it higher.
3. Touch **OK** to save the adjustment.

Tip: On the **Volume** screen, if you do not select **Use incoming call volume for notifications**, you can set **Notification** volume separately.


How to change the phone ringtone

1. On the **Settings** screen, touch **Sound > Phone ringtone**.

2. Touch the ringtone you want to use, and then touch **OK**. The ringtone plays when selected.

Tip: Want to set a song as a ringtone? Easy! First load the tune onto your microSD card. Once you have located it through the phone menu, touch and hold the song name, and select **Set as phone ringtone**. You can set different songs as ringtones for different contacts or groups too – you will find the options when you edit through contacts.

How to change the message ringtone

1. On the **Home screen**, touch  > **Messaging**.
2. In the message list, touch  > **Settings** > **Select ringtone**.
3. Touch the ringtone you want to use, and then touch **OK**. The ringtone plays when selected.

How to set your phone to vibrate for incoming calls

1. On the **Settings** screen, touch **Sound**.
2. Select the **Vibrate** check box. Then the mobile phone will vibrate when there is an incoming call.

How to choose the notification ringtone

Get ringtone alerts when you receive messages and notifications – like this:

1. On the **Settings** screen, touch **Sound**.
2. Touch **Notification ringtone**.
3. Select your preferred notification ringtone from the list, and then touch **OK**.

How to turn on touch tones

Want your mobile phone to play a sound when you are using the **Dialer** or touching the screen? Here is how:

1. On the **Settings** screen, touch **Sound**.
2. Scroll down the screen, and then you can do the following:

- Select the **Audible touch tones** check box. Your phone plays tones when you use the dialer.
- Select the **Audible selection** check box. Your phone plays a sound when you touch buttons, icons and other screen items.

How to turn on the haptic feedback

1. On the **Settings** screen, touch **Sound**.
2. Select the **Haptic feedback** check box. Then the mobile phone will vibrate you touch soft buttons.

Setting Phone Services

How to customize call settings

That is just a fancy term for all the stuff like call forwarding, call waiting, fixed dialing numbers and voicemail. Talk to your operator to learn about the different services you can get.

On the **Settings** screen, touch **Call settings** to customize your call functions.

How to turn on data roaming

Jetting off somewhere new? Turn on data roaming and you can carry on using your mobile phone when you are outside the country. Do not forget to check the rates!

1. On the **Settings** screen, touch **Wireless & networks > Mobile networks**.
2. Select the **Data roaming** check box.

Note: Accessing data services while roaming may incur additional charges. Inquire the data roaming tariffs with your wireless service provider.

How to switch off the data service

Things like synchronizing updates and receiving multimedia messages rely on a transfer of data – and that is where the data service

comes in. Some data services charge an extra fee, but it is easy to switch off the service to avoid extra expenses:

1. On the **Settings** screen, touch **Wireless & networks > Mobile networks**.
2. Clear the **Data enabled** check box.

Note: Data service off means no more multimedia messages.

How to switch off always-on mobile data

If you have not selected **Data always on**, after your screen is locked for 30 minutes, your mobile phone will automatically stop all data services (except MMS). For example, your mobile phone will not check new emails or synchronize data in the background. The mobile phone will automatically enable data services only after you have waken up your screen.

On the **Settings** screen, touch **Wireless & networks > Mobile networks**. Select **Data always on** to enable this function. By default, this function is disabled.

How to manage access point settings

Access points are what keep your mobile phone connected to the world. You can manage your access points – and reset any you delete by accident like this:

1. On the **Settings** screen, touch **Wireless & networks > Mobile networks > Access Point Names**
2. Touch , and then touch **Reset to default**.

Note: Do not be too tempted to fiddle! Your mobile phone automatically reads the access point of the SIM card, so changing stuff might mean you cannot access the network.

Other Settings



Setting the Language

You can set the language and region where you want to use your phone.

1. On the **Settings** screen, touch **Language & keyboard**
2. Touch **Select language**.
3. Select the language you want to use.



Using My Location

You can use your location when using Google search and other Google services.


1. On the **Home screen**, touch  > **Google Search**.
2. Touch , and then touch **Search settings** > **Google Search**.
3. Select the **Use My Location** check box. Then you are asked whether you consent to allowing Google to use your location when providing these services.

Setting the Search

How to set the Google search

1. On the **Home screen**, touch  > **Google Search**.
2. Touch , and then touch **Search settings** > **Google Search**.
3. Select the **Show web suggestions** check box to show the suggestions from Google as you type.

How to set the searchable items

1. On the **Home screen**, touch  > **Google Search**.
2. Touch , and then touch **Search settings** > **Searchable items** to choose what to search on the phone.

Setting the Text-to-speech

Use the Text-to-Speech settings to configure the Android text-to-speech synthesizer, for applications that can take advantage of this feature.

How to install the voice data

1. On the **Settings** screen, touch **Voice input & output > Text-to-speech settings > Install voice data**.
2. If your mobile phone does not have speech synthesizer data installed, connect to Android Market and let it guide you through the process of downloading and installing the data.
3. Follow the instructions to install the voice data.

How to adjust the speech rate

1. On the **Settings** screen, touch **Voice input & output > Text-to-speech settings > Speech rate**.
2. Select a speed at which the text is to be spoken.

How to set the language-specific voice

1. On the **Settings** screen, touch **Voice input & output > Text-to-speech settings > Language**.
2. Touch a language to set the language-specific voice for the spoken text.

Protecting Your Mobile Phone

How to turn on your SIM card PIN

Stop the snoops! Thwart the thieves! A personal identification number (PIN) is all you need to stop shady characters from using your SIM.

1. On the **Settings** screen, touch **Location & security > Set up SIM card lock**.
2. Select the **Lock SIM card** check box.
3. Use the keyboard to enter the SIM card PIN, and then touch **OK**.
4. To change the SIM card PIN at any time, touch **Change SIM PIN**.

Note: You can dial emergency numbers any time from your mobile phone even when your PIN is set.

How to enter your PIN

If your SIM card has a preset PIN, you will be asked to enter the PIN to proceed. Enter the PIN, and then touch **OK**.

Tip: If you enter the wrong PINs three times, the SIM card will be blocked. If this happens, you can unblock it with the PIN Unlocking Key (PUK) that you can get from your service operator.

Protecting Your Mobile Phone with a Screen Lock

To keep your data more secure, lock the screen and/or require a screen unlock pattern every time your mobile phone is turned on or wakes up from sleep mode.

1. On the **Settings** screen, touch **Location & security > Set up screen lock > Pattern**.
2. Flicking your finger vertically, horizontally or diagonally, connect at least four dots in any order you choose. Lift your finger from the screen when you are finished.
You must flick your finger on the screen to create the pattern, not simply touch individual dots.
3. Your mobile phone will record the pattern. Touch **Continue**.
4. When prompted, draw the screen unlock pattern again, and then touch **Confirm**.

To change your unlock screen pattern, touch **Location & security > Change screen lock**.

How to protect your mobile phone with a numeric PIN

You can set up a numeric PIN to lock your phone.

1. On the **Settings** screen, touch **Location & security > Set up screen lock > PIN**.
2. Enter at least four characters.
3. Touch **Continue**.
4. Enter the same characters again and touch **OK**.

To change your PIN, touch **Location & security > Change screen lock**.

How to unlock your mobile phone if you forget the lock pattern

If you have already created a Google account, you can unlock your mobile phone by the following methods.


- After you have entered the wrong sequence five times, a **Forgot pattern?** button will appear. Touch this button to enter the Google account interface. After you have entered your Google account password, you will be able to reset the unlock pattern.
- After you have entered the wrong pattern twenty times, you will be taken directly to the Google account interface. After you have entered your Google account password, you will be able to reset the unlock pattern.

How to set the credential storage

1. On the **Settings** screen, touch **Location & security**.
2. Scroll down the screen to the **Credential storage** section. Then you can perform the following operations:
 - **Use secure credentials:** Select to allow applications to access secure certificates and other credentials. If you have not set a password for the credential storage, the setting is dimmed.
 - **Install from USB storage:** Touch to install a secure certificate from the microSD card.
 - **Set password:** Touch to set or change the password for your secure credential storage.
 - **Clear storage:** Touch to clear the credential storage of all contents and reset its password.

Managing Applications

How to view an installed application

1. On the **Settings** screen, touch **Applications > Manage applications**.
2. In the applications list, do any of the following:
 - Touch , and then touch **Sort by size**. Then touch an application to view its details.

- Touch an application directly to view its details.

How to remove an installed application

1. On the **Settings** screen, touch **Applications > Manage applications**.
2. Touch an application, and then touch **Uninstall**.

Tip: You can also touch and hold an item on the **Home screen** until the **Select action** menu is displayed, and then touch **Uninstall application** to uninstall the application.

How to move an application to microSD card

Some applications are designed to be stored on your phone's USB storage or SD card (depending on your model of phone), rather than in internal storage. Others are designed so you can change where they are stored. You may find it helpful to move large applications off of your internal storage, to make more room for other applications that don't offer the option.

1. On the **Settings** screen, touch **Applications > Manage applications**.
2. Touch an application in the list. Then touch **Move to USB storage** to move the bulk of the application from the phone's internal storage.

The Storage section of the application's details screen shows details about the memory used by the application. If the application can be moved, the Move button is active.

Touch **Move to phone** to move the application back to the phone's internal storage.

How to manage the running services

1. On the **Settings** screen, touch **Applications > Running services**
2. Choose the following operations:
 - View the currently running services.
 - Touch a service to manage it or to stop it.

Managing the Memory

How much internal phone memory you have left

1. On the **Settings** screen, touch **Storage**.
2. In the **Internal storage** section, check the available space.

How much space is available on your memory card

1. On the **Settings** screen, touch **Storage**.
2. In the **SD card** section, check the available space.

Ways to free up your mobile phone memory

- Move files and email attachments to the microSD card.
- In **Browser**, clear all temporary Internet files and Browser history information.
- Uninstall the downloaded programs that you no longer use.
- Reset your mobile phone.

Backing Up My Settings

You can back up your mobile phone's settings to Google servers, with your Google account. If you replace your phone, the settings you've backed up are restored onto the new phone the first time you sign in with your Google account. If you select this option, a wide variety of settings are backed up, including your Wi-Fi passwords, bookmarks, a list of the applications you've installed, the words you've added to the dictionary used by the onscreen keyboard, and most of the settings that you configure with the Settings application. If you clear this option, you stop backing up your settings, and any existing backups are deleted from Google servers.

1. On the **Settings** screen, touch **Privacy**.
2. Select the **Back up my settings** check box. A wide variety of settings are backed up, including your Wi-Fi passwords, bookmarks, a list of the applications you have installed, the words you have added to the dictionary used by the onscreen keyboard, and most of the settings that you configure with the **Settings** application.

Resetting Your Mobile Phone

How to reset factory data from menus

If you reset your phone to the settings that were configured at the factory, all of your personal data stored on the phone, including information about your Google Account, any other accounts, your system and application settings, and any applications you have downloaded will be erased. Resetting the phone does not erase any system software updates you have downloaded or any files on your microSD card, such as music clips or photos.

1. On the **Settings** screen, touch **Privacy > Factory data reset**.
2. When prompted, touch **Reset phone**, and then touch **Erase everything**. The mobile phone resets the settings to the original factory settings, and then restarts.

Legal Notice

Trademarks and Permissions

T-mobile is a federally registered trademark of Deutsche Telekom AG. Huawei, the huawei logo are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Google, the Google logo, Android, the Android logo, Android Market, Google Mail, Google Apps, Google Calendar, Google Latitude, Google Maps, Google Talk and YouTube are all trademarks of Google Inc.

Bluetooth and the Bluetooth logo are trademarks owned by Bluetooth SIG, Inc.

Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc. microSD is a trademark of SD Card Association.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

We will not be held legally responsible for any technical or editorial mistakes we have made in this document, or for any information we have left out of it.

We will not be held legally responsible for any incidental damage or consequential damage that is a result of providing you with this document. This information in this manual is "as is" and has no warranty of any kind. It may change without notice too.

We have the right to change the content of this document at any time, without giving advanced notice. If you do not have our written consent beforehand, you are not allowed to reproduce or transmit any part of this document in any way – whether electronic, mechanical,

photocopied, recorded, stored in a retrieval system, or translated into another language.

Please note

Some features of the **T-mobile move balance** mobile and **T-mobile move balance** accessories described in this document rely on the software you install and the capacity and settings of your local network. For this reason, some of these features may be limited or not activated by local network operators or network service providers. Therefore, the descriptions in this document might not be an exact match for the **T-mobile move balance** mobile phone and accessories you have bought.

Huawei Technologies Co., Ltd (the manufacturer of the **T-mobile move balance**) has the right to change any information and specifications in this manual without any obligation to give you advanced notice.

Huawei Technologies Co., Ltd. is not responsible for the legitimacy and quality of the products you upload or download to and from your **T-mobile move balance**, including (but not limited to) text, pictures, music, movies, and any software with copyright protection that is not built-in to your **T-mobile move balance**. The consequences of the installation or use of such products on this mobile phone are your responsibility.

NO WARRANTY

The contents of this manual are provided “as is”. So unless there are applicable laws which require it, we provide no warranties of any kind that relate to the accuracy, reliability, or contents of this manual: whether express or implied, and including – but not limited to – the implied warranties of merchantability and fitness for purpose.

To the maximum extent that is legally permitted, under no circumstances will Huawei Technologies Co., Ltd be held legally responsible for any special, incidental, indirect, or consequential damages, or lost profits, business, revenue, data, goodwill or anticipated savings.

Import and Export Regulations

Customers – that's you guys reading this – must meet all the applicable export or import laws. You must also obtain all the governmental permits and licenses needed in order to export, re-export or import the **T-mobile move balance phone**, accessories, software and technical data.

Safety Precautions

To make sure you get the most out of your **T-mobile move balance**, there are a few things you should remember. It's all fairly obvious stuff, but we thought we'd tell you just in case!



Do not hit your phone against anything. Don't throw it. And don't puncture it. (Why would you?!).



Try not to get your phone wet. Don't use it where the air is humid – like bathrooms after a hot shower. Oh, and don't use it in the shower either. It definitely doesn't need washing!



Do not switch on your phone when it is prohibited to use mobile phones or when the phone may cause interference or danger.



Do not use your phone while driving. The car is the last place you want to get distracted!



Phones can interfere with medical equipment – so make sure to follow the rules in hospitals and health care facilities.



Okay, this is an obvious one. Where is the last place you want to interfere with high-tech equipment? That's right – switch your phone off when you're onboard aircraft.



Switch off your phone near high-precision electronic devices. The phone may affect their performance. Which might annoy whoever's using them.



No matter how tech-savvy you are, don't try to take your phone apart. Only qualified personnel should service or repair your phone.



Got any containers with strong electromagnetic fields? We thought not – but if you come across any, don't put your phone or its accessories inside.



You probably don't have many tapes or floppy disks these days. But if you do, don't put your phone near them – its radiation could wipe the info stored on them. Then how would you listen to Ricky Martin? Oh yeah...on your **T-mobile move balance**.



Warning – some urban myths are true. So don't use your phone in petrol or gas stations. Whatever happens, it won't be good.



Keep your phone and its accessories away from children. They won't appreciate how brilliant it is without proper guidance.



Only use approved batteries and chargers. The wrong ones could cause your phone to explode (we kid you not...).



Pay attention to laws concerning wireless devices. And always respect others' privacy and legal rights when using your phone.



When using the USB cable, follow the instructions in this manual. By. The. Word. Otherwise your PC and (more importantly!) your **T-mobile move balance** might get damaged.

Warnings and Precautions

The info found in this section is key to the safe operation of your phone. Please read this section **BEFORE** using your new **T-mobile move balance**. It won't do much good **AFTER** something goes wrong!

Near electronic devices

Switch your phone OFF if using it is prohibited. Don't use it if it will cause danger or interference with electronic devices. (Here's a tip: read signs!).

Near medical devices

- Switch your phone OFF and follow the rules and regulations set by hospitals and health care facilities.
- Pacemakers. Now there's something you don't want going haywire. The makers of pacemakers recommend a minimum distance of 15cm between your phone and a pacemaker. At all times. Got a pacemaker yourself? Use your phone on the opposite side of the pacemaker and don't carry the device in your front pockets.
- Your phone may affect the performance of hearing aids. If it does, contact your service provider for your options.

Potentially explosive atmospheres

Potentially explosive atmospheres are exactly as the name suggests – places where explosions can potentially happen. Not good.

They are not always clearly signed, so you might have to use some common sense. If there are signs, make sure you follow the instructions (yes, even if it means switching off your phone). If you're

told to turn your vehicle engine off, then it's a safe bet you should switch your phone off too.

Potentially explosive areas include:

- Service stations
- Fuels depots and storage facilities
- Chemical plants, transfer and storage facilities
- Areas where blasting operations are in progress
- Areas where the air contains chemicals or particles like grain, dust or metal powders

Vehicles using liquefied petroleum gas (LPG) like propane or butane also might not be safe – check with the manufacturer of the vehicle.

Triggering sparks in areas like these could cause an explosion or fire, resulting in injury or even death of you and others. Consider yourself warned!

Drive safely

Let's get this show on the road. You know it's illegal to drive and talk on your mobile at the same time – it's just plain dangerous. So now we've laid down the law, take care and follow our top tips for safe driving:

- Concentrate on driving. Your first responsibility is to drive safely.
- If you have to take a call or make one, park your car first.
- Radio frequency signals may affect the electronic systems in your car or vehicle – check with your vehicle manufacturer to see if there's anything you need to be aware of.
- Do not put your mobile phone over the air bag or in the air bag deployment area. This is because you may be injured by your phone if the air bag inflates.

Fly safely

Switch off your **T-mobile move balance** before you board the plane and do not use it during the flight. This is because a mobile phone may put the aircraft in danger by affecting the way it operates. Depending on where **Safety Precautions** you're flying, it may also be against the law. Using your mobile on a plane can also disrupt the wireless phone network.

Your mobile phone environment

- Do not use or charge your **T-mobile move balance** in dusty, damp or dirty places, or places with magnetic fields. This may stop the circuit from functioning properly.
- Your **T-mobile move balance** meets with the recommended radio frequency levels when you use it near your ear and at a distance of 1.5 cm from your body (always keep it at least this distance from your body).
- Make sure your phone accessories e.g. the case and holster do not have metal components.
- When there are thunderstorms, do not use your mobile when it is charging – it might sound dramatic, but this is to protect you from lightning!
- When you're taking a call, do not touch the antenna. Touching the antenna affects the call quality and will consume more power – so the talk time and standby time of your phone will be reduced.
- When you're using your phone, take note of the local laws and regulations and respect the privacy and legal rights of the people around you.
- Only use accessories that have been authorised by manufacturers. Using unauthorized accessories will make your warranty null and void.
- When charging your phone, or using it on battery power, you'll need to make sure the temperature is no less than 0°C and no more than 40°C.

Preventing Hearing Damage

Whatever you do, don't let this fall on deaf ears: if the volume of your receiver, ear buds, headphones, speakerphone or earpiece is too high it could cause you permanent hearing loss. So listen up and turn it down.

Talk to your doctor if...

- You hear unusual sounds in your ears, e.g. ringing.
- Speech sounds muffled.

These symptoms suggest your hearing is at risk if you continue to set your volume dangerously high.

Expert advice for protecting your hearing:

- Reduce the amount of time you spend using the receiver, ear buds, headphones, speakerphone, or earpiece at high volume.
- Do not amplify the volume to block out the noise of your surroundings.
- Turn the volume down if you can't hear the voices of people near you.

Look after children close to your mobile phone

Keep a watchful eye on any child that goes near your mobile phone and accessories. Not only could they accidentally delete half your cherished contacts list or talk gobbledegook to your boss, more seriously, they could choke on the detachable parts of the handset and accessories.

Get rid of your phone the greenest way

To protect the environment, please follow your local regulations for disposing mobile phones and mobile phone accessories like chargers, headsets, or batteries. Where you can, it's best to recycle them. Whatever you do, do not throw an old phone or battery into the household rubbish.

Accessories

Please do not use any accessories that are not made by the manufacturer of the **T-mobile move balance** – that includes equipment like the charger, battery, and headset. Using other accessories may be bad for your phone, dangerous, and invalidate any approval or warranty that applies to your **T-mobile move balance**.

Looking after your T-mobile move balance

- Like you, your **T-mobile move balance** likes to be treated well, so here are some tips to help you look after it. In return, your **T-mobile move balance** will give you the best service possible.
- First of all, it isn't a lover of water, nor is the battery or charger. In fact they're so hydrophobic they don't even like being near vapour. So always keep your **T-mobile move balance** in a dry place and never touch it with wet hands – you could get a shock and your **T-mobile move balance** may short-circuit and break.
- Your **T-mobile move balance** is also anti-bumps, so try not to drop it or knock it – these can lead to battery leaks, overheating, possibly explosions.
- To help your battery last longer, keep it as close to normal room temperature as possible. If it's too hot or too cold, it can reduce your battery's life. The same goes for your **T-mobile move balance** itself and the battery and charger – they don't like excessive heat or cold.
- Don't put any magnetic storage devices near your phone – for example magnetic cards or floppy disks. Radiation from your **T-mobile move balance** may wipe out the information on them.

Keeping it clean

- Before cleaning your **T-mobile move balance**, make sure it's turned off and disconnected from the charger. Then use a clean, damp, soft antistatic cloth to clean them both. Never use chemicals, detergents, powder or anything like alcohol or benzene to clean your phone or charger as these can damage them and even cause a fire.
- Don't use sharp objects like pins in the earpiece as these may get lodged there and hurt you. And never take your **T-mobile move balance** or any of its accessories to pieces as this will mean your Warranty is no longer valid.

Making emergency Calls

Of course you can always make an emergency call so long as you have a signal, but if you're out of the T-mobile coverage you should make sure you have other means of making important calls.

Battery and Charger

- The battery can be charged and used hundreds of times before it eventually wears out. You'll know it's time to replace your battery when the standby time and talk time are significantly shorter than normal.
- Be sure to use the AC power supply the charger specifications require. Using an incorrect power voltage may cause a fire or stop the charger working properly.
- Do not connect the ends of the battery with any material that conducts electricity, e.g. something made from metal. This may make the battery short-circuit, burn you or cause you an injury.
- Do not take the battery apart or solder the battery poles. This may cause the electrolyte liquid in the battery to leak, and this in turn can lead to overheating, fire, or an explosion.
- If any electrolyte leaks out of your battery, make sure it does not touch your skin or eyes – if it does, wash your eyes with clean water immediately and consult your doctor.
- If your battery is damaged, changes colour, or becomes unusually hot while you are charging or storing your battery, remove it immediately and stop using it. Otherwise it may leak, overheat, set alight or explode.
- If the power cable is damaged (for example, if the lead is exposed or broken), or if the plug section is loose, stop using the cable at once. If you don't do so, you may get an electric shock, short-circuit the charger, or cause a fire.
- Do not throw batteries into a fire as they may explode. Batteries may also explode if they are damaged.

Certification Information (SAR)

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization ICNIRP and include safety measures designed to ensure safety for all users, regardless of age and health.

Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device when tested for use at the ear is 0.554 W/kg, and when properly worn on body is 1.08 W/kg, and when using Wi-Fi hotspot function is 1.22 W/kg.

The SAR limit also adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue. The highest SAR value for this device type when tested at the ear is 0.526 W/kg, and when properly worn on the body is 0.541 W/kg.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The operation is subject to the condition that this device does not cause harmful interference.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio

communications. There is no guarantee, however, that interference does not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

EU Regulatory Conformance

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the Web site www.huaweidevice.com/certification.

CE 0682 ⚠

Note: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

France: Outdoor use limited to 10 mW e.i.r.p. within the band 2454-2483.5 MHz.

Italy: For private use, a general authorisation is required if WAS/RLAN's are used outside own premises. For public use, a general authorisation is required.

Luxembourg: General authorisation required for network and service supply.

Norway: This subsection does not apply for the geographical area within a radius of 20 km from the centre of Ny-Ålesund.

Disposal and Recycling Information



This symbol on the device (and any included batteries) indicates that it is prohibited by law to dispose any item on which this symbol is indicated as normal household garbage. Therefore do not dispose any of these items as unsorted municipal waste. These items have to be handed over to a certified collection point for recycling or proper disposal at the end of their life.

For more detailed information about the recycling of these items, contact your local city office, the household waste disposal service, or the retail store where you purchased these items.

The disposal of this device and the accessories marked by the above symbol is subject to the Waste from Electrical and Electronic Equipment (WEEE) Directive of the European Union and the respective transposition of this Directive into the national legislation of your country. The disposal of the Battery is subject to the Battery Directive and the respective transposition of this Directive into the national legislation of your country. The reason for separating devices, accessories and batteries from other waste is to minimize the potential environmental impacts on human health of any hazardous substances that may be present. Also this way valuable materials can be regained reducing the need for mining and for energy-consuming processing of raw materials.

Reduction of Hazardous Substances

 
This device is compliant with the EU Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) Regulation (Regulation No 1907/2006/EC of the European Parliament and of the Council) and the EU Restriction of Hazardous Substances (RoHS) Directive (Directive 2002/95/EC of the European Parliament and of

the Council). For more information about the REACH compliance of the device, visit the Web site www.huaweidevice.com/certification. You are recommended to visit the Web site regularly for up-to-date information.


How to remove the battery

Caution: Turn off your mobile phone first before removing the battery.


1. Open the battery cover, as shown in the following figure.

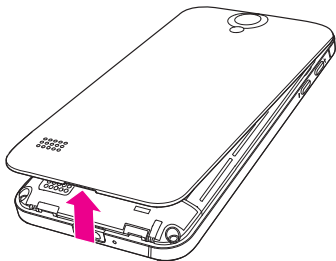

 
2. Use an appropriate Phillips screwdriver to remove the six screws on the rear housing.

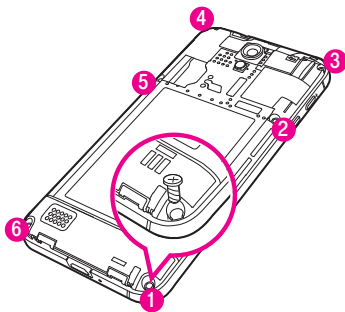

 3. Use tweezers to lever the rear housing up, following the sequence as shown in the following figure. Avoid excessive force in order to not accidentally bend the rear housing.

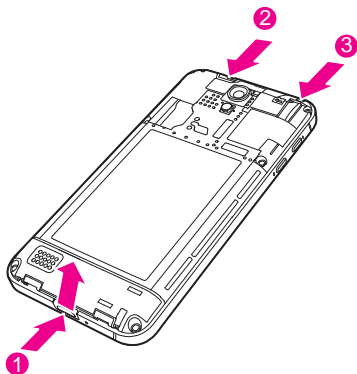


 4. Remove the battery connector.

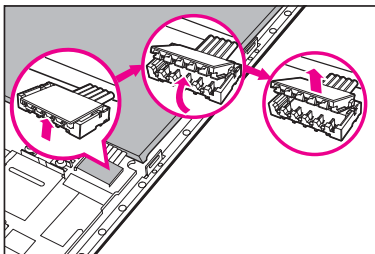

Caution: Gently remove the battery connector to prevent damage to the connector.

 5. Use the blunt end of tweezers to lever the Li-ion battery out.

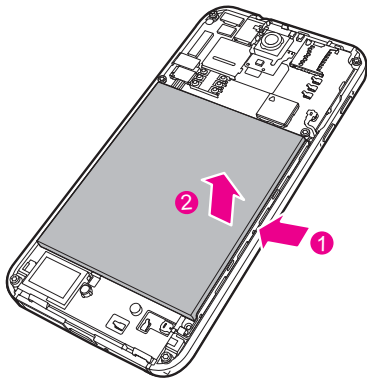

Caution: The Li-polymer battery is packed with a soft material. Do not use a sharp tool to lever the battery out because doing so may result in damage to the battery. Damaging the battery packaging material could result in spill of highly combustable or toxic chemicals which may constitute a fire hazard or could be damaging to your health. Therefore, it is recommended that you gently use the blunt end of the tweezers to lever the battery out.

FAQ

How Can I Use a microSD Card to Import Contacts to My Phone from a Different Mobile Phone?


Your mobile phone only supports contact files in the **.vcf** format.

1. Save the contacts you want to import to your mobile phone to a microSD card as a **.vcf** file.
2. Insert the microSD card into your mobile phone and find the **.vcf** file using the **File Manager**.
3. Touch the **.vcf** file. The phone displays a prompt asking whether you want to import the contacts.
4. Touch **OK** to import the contacts.


Note: Compatibility problems may occur with **.vcf** files created by different mobile phones and certain contact information may be lost after contacts are imported.

Tip: You can also use Bluetooth to share and import contacts.

How do I prevent automatic switching of orientation when rotating phone?

On the **Home screen**, touch  > **Settings** > **Display** > **Auto-rotate screen** to disable the function.

How do I set the unlock pattern?

On the **Home screen**, touch  > **Settings** > **Location & security** > **Set up screen lock** > **Pattern**.

How can I change the input method?

Touch and hold the area where you write text and then select the input method you prefer.

How do I stop the song playing in the background?

Touch the notification bar, flick downwards to open the notifications panel, touch the music playing notification to go to the music playing screen, and then stop playing the song.

How do I return to the calling screen?

While on a call, if you're on another screen, you can touch the notification bar, and drag downwards to open the notifications panel. Then touch the current call notification to return to the calling screen.

How do I create an application shortcut on the Home screen?

Touch and hold an application icon on the application screen until the **Home screen** is displayed. Then drag the icon where you want it to go and release your finger.

How do I hide the keyboard?

Touch  to hide the keyboard.

How do I forward a message?

Touch and hold a message, and then touch **Forward** in the menu that opens.

Why am I unable to use Navigation?

Navigation is unavailable in some countries or regions.

Index

*Memory is full	16
Agenda view	113
Album view mode	75
Android keyboard panel	42
Battery saving advice	6
Be sure your message reaches its destination	51
Browsing Pictures	81
Browsing Videos	84
Canvas top tips	21
Changing the Theme	25
Changing the Wallpaper	24
Clock screen	110
Compressing or extracting files	122
Day view	114
Dialer Screen	18
Dialer tab	27
Disc view mode	76
Editing Text	45
Email account screen	55
Email message screen	58
Ending a call	31
Enjoying the touchscreen at your fingertips	10
Folders	24
Getting the Canvas down to a fine art	20
How much internal phone memory you have left	135
How much space is available on your memory card	135
How to accept an invitation	93

How to add a contact to Your Groups	39
How to add a favorite contact	35
How to add a new friend	93
How to add a signature to emails	91
How to add a VPN	70
How to add an account	104
How to add an alarm	111
How to add an email account	55
How to add an entry's number to your Contacts	31
How to add an Exchange Account	105
How to add music to a playlist	77
How to adjust the screen brightness	125
How to adjust the speech rate	131
How to adjust the time before the screen turns off	126
How to adjust the volume	126
How to answer an incoming call	28
How to backup the Logs of your mobile phone	108
How to block a friend	94
How to change account's synchronization settings	107
How to change email account settings	57
How to change the calendar view	112
How to change the map mode	96
How to change the message ringtone	127
How to change the phone ringtone	126
How to change your online status	93
How to charge your mobile phone	3
How to check the network connection	61
How to check the wireless network status	63
How to choose the notification ringtone	127
How to clear the Call log	32
How to communicate with a contact	37
How to communicate with your contacts	36
How to compress a file	123
How to configure general sync settings	106
How to connect through quick contact for Android	37

How to connect to a wireless network	62
How to connect to a VPN	70
How to connect to another Wi-Fi network	63
How to copy music to the microSD card	73
How to create a folder	122
How to create a group	39
How to create a new contact	35
How to create a playlist	77
How to create an event	116
How to create and send a multimedia message	49
How to create and send a text message	48
How to create and send an email	89
How to create and send an email message	59
How to crop a picture	83
How to customize alarm settings	112
How to customize call settings	128
How to customize the browser settings	68
How to customize the calendar settings	118
How to customize the message settings	53
How to customize your Gmail settings	92
How to cut or copy a file	121
How to cut or copy text	46
How to delete a contact	37
How to delete a file	121
How to delete a message or a message thread	52
How to delete a playlist	78
How to delete an alarm	112
How to delete an email account	57
How to delete an email message	59
How to disconnect or unpair a Bluetooth device	70
How to do a quick search for a file	122
How to download files	67
How to edit a contact	36
How to edit an event	117
How to edit or create a new access point	62

How to edit text	45
How to enable location source	95
How to end a chat	94
How to enter your PIN	132
How to extract a file	123
How to find your friends with Google Latitude	96
How to find your location on the map	96
How to get directions	96
How to get help	101
How to import contacts from a SIM Card	34
How to index for contacts.	35
How to install a secure certificate from the microSD card	71
How to install an application	102
How to install the microSD card	7
How to install the voice data	131
How to join contacts	37
How to keep your battery in top shape	5
How to limit your data connection to 2G networks	61
How to listen to your voicemail	29
How to lock and unlock the screen	9
How to make a call from the Call log	28
How to make a call from the Contacts.	27
How to make a call on the Dialer	26
How to make a conference call	30
How to make your mobile phone work as a modem	71
How to manage access point settings	129
How to manage applications	102
How to manage bookmarks	68
How to manage the running services	134
How to manage your memory	123
How to mark an email message unread	60
How to minimize or turn off the FM Radio.	87
How to move an application to microSD card	134
How to mute the microphone during a call	31
How to navigate on a map	96

How to navigate on a web page	66
How to open a web page	66
How to open and read a text message	52
How to open and view a multimedia message	52
How to open Gmail	89
How to open Maps	96
How to open Market	100
How to open Messaging	47
How to open Talk	93
How to open the browser	64
How to open the Calculator	119
How to open the Calendar	112
How to open the Contacts application	34
How to open the File Manager	120
How to open the Gallery	81
How to open the music library	73
How to open YouTube	99
How to pair and connect a Bluetooth device	69
How to paste text	46
How to play a playlist	77
How to play a video	84
How to protect your mobile phone with a numeric PIN	132
How to put a call on hold	30
How to read an email	90
How to receive a message	51
How to record a video	80
How to refresh Gmail	89
How to reject an incoming call	28
How to remove an account	106
How to remove an installed application	134
How to remove the microSD card while your mobile phone is on ..	7
How to reply to a message	52
How to reply to an email message	59
How to reply to or forward an email	90
How to reset factory data from menus	136

How to respond to the reminder	118
How to restore the logs to your mobile phone	108
How to rotate a picture	82
How to search for a contact	36
How to search for a video	100
How to search for an email	91
How to search for applications	101
How to search for places of interest	96
How to send a file via Bluetooth	70
How to send contacts	38
How to separate contacts	38
How to set a home page	66
How to set an event reminder	117
How to set mobile indicators	94
How to set notifications for new instant messages	94
How to set the credential storage	133
How to set the Google search	130
How to set the language-specific voice	131
How to set the searchable items	130
How to set the window animation	126
How to set your phone to vibrate for incoming calls	127
How to share a picture	84
How to share a video	100
How to share a video	85
How to show or hide calendars	118
How to sign in automatically	95
How to sign out of Talk	95
How to slot in your SIM card	3
How to start a chat	93
How to switch between a Bluetooth headset and the mobile phone ..	31
How to switch between accounts	89
How to switch between active chats	93
How to switch between current calls	30
How to switch off always-on mobile data	129

How to switch off the data service	128
How to switch the input method	40
How to switch the keyboard layout	42
How to switch to the Advanced panel	119
How to synchronize your contacts and calendar	108
How to synchronize your Gmail messages	91
How to take a picture	79
How to tune the FM Radio	85
How to turn on Bluetooth	69
How to turn on data roaming	128
How to turn on the data service	61
How to turn on the FM Radio	85
How to turn on the haptic feedback	128
How to turn on the silent mode	126
How to turn on touch tones	127
How to turn on Wi-Fi	62
How to turn on your SIM card PIN	131
How to turn the speaker on or off	31
How to turn your mobile phone on and off	8
How to type in intelligent mode	44
How to type in normal mode	45
How to watch a video	99
How to view a picture	81
How to view an email message	58
How to view an installed application	133
How to view the event details	116
How to view your sent emails	91
How to uninstall an application	102
How to unlock your mobile phone if you forget the lock pattern ..	133
How to work with multiple browser windows	67
How to use the FM Radio	86
How to use the landscape keyboard	43
How to use the microSD card as the USB mass storage	7
How to use the music player	74
How to use the Provisioning message	54

How to zoom in and out on a picture	82
Joining and Separating Contacts	37
Key features at a glance	2
Main Menu Screen	18
Message screen	48
Messaging Screen	19
Month view	116
Multimedia message settings	53
My FM	21
My Music	22
Notification settings	54
Opening the Clock	110
Other operations during a call	29
Other widgets	23
Phone at a Glance	2
Power Control	22
Protecting Your Mobile Phone with a Screen Lock	132
Recording a Video	80
Rotating your mobile phone	10
Setting the Language	130
Setting the Search	130
Setting the Text-to-speech	130
Sharing Your Phone's Data Connection as a Portable Wi-Fi Hotspot ..	64
Sharing Your Phone's Data Connection via USB	64
Slide editing screen	50
Storage settings	53
Taking a Picture	78
Text message editing screen	49
Text message settings	53
To add a bookmark	68
To add a new screen item	19
To add a widget to the Canvas	21
To add other email accounts	56
To add slides	51

To allow install applications from the Web or the Email.....	67
To charge your mobile phone through charger.....	4
To charge your mobile phone through computer.....	4
To close the notifications panel.....	17
To connect with and manage connections with your friends.....	98
To control what you share.....	99
To create a folder.....	24
To download a file.....	67
To edit a bookmark.....	68
To invite friends to share their locations.....	97
To join Latitude.....	97
To lock the screen.....	9
To move a screen item.....	19
To open a bookmark.....	68
To open a new browser window.....	67
To open Latitude.....	97
To open the notifications panel.....	17
To remove a screen item.....	20
To rename a folder.....	24
To respond to an invitation.....	97
To search on a Web Page.....	66
To set up your mobile phone.....	8
To switch between browser windows.....	67
To turn off your mobile phone.....	9
To turn on your mobile phone.....	8
To view your downloads.....	67
To view your friends' locations.....	98
To unlock the screen.....	10
To zoom in and out on a web page.....	66
TouchPal keyboard panel.....	41
Ways to free up your mobile phone memory.....	135
Week view.....	115
Widgets.....	21
Viewing Your Photos.....	79
Viewing Your Videos.....	81

Using My Location	130
You've got a blank Canvas.....	20