User Guide Vodafone 710



Make the most of now.

Vodafone 710 Mobile Phone User Manual

Notice

Copyright \odot 2006 Huawei Technologies Co. Ltd.

All Rights Reserved

Your Vodafone 710 is made exclusively for Vodafone by Huawei Technologies.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co. Ltd.

Trademarks

Vodafone 2006. Vodafone and the Vodafone logos are trade marks of the Vodafone Group.

Notice

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute a warranty of any kind, expressed or implied.

Huawei Technologies Co. Ltd. Address:

Administration Building, Huawei Technologies Co. Ltd., Bantian, Longgang District, Shenzhen, P. R. China **Postal Code:** 518129

Website: http://www.huawei.com

Safety Precautions

Please read the safety precautions carefully to ensure the correct and safe use of your wireless device. For detailed information, refer to the section "Warnings and Precautions".



Do not switch on your phone when it is prohibited to use mobile phones or when the phone may cause interference or danger.



Do not use your phone while driving.



Follow any rules or regulations in hospitals and health care facilities. Switch off your phone near medical apparatus.



Switch off your phone in aircraft. The phone may cause interference to control signals of the aircraft.



Switch off your phone near high-precision electronic devices. The phone may affect the performance of these devices.



Do not attempt to disassemble your phone or its accessories. Only qualified personnel are allowed to service or repair the phone.



Do not place your phone or its accessories in containers with strong electromagnetic field.



Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.



Do not put your phone in a hightemperature place or use it in a place with flammable gas such as a gas station.



Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.



Use only approved batteries and chargers to avoid the risk of explosions.



Observe any laws or regulations on the use of wireless device. Respect others' privacy and legal rights when using your wireless device.



Strictly follow the relevant instructions on page 102 of this manual while using the USB cable. Otherwise your phone or PC may be damaged.



Please observe the local regulations regarding the disposal of your packaging materials, exhausted battery and old phone and please promote their recycling.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Pacemaker manufacturers recommend that a minimum separation of 15cm be maintained between a mobile phone and a pacemaker to avoid potential interference.

Table of Contents

| Table of Contents | | |
|----------------------------------|--|--|
| Getting to Know Your Phone 1 | | |
| Packing List1 | | |
| Your Phone2 | | |
| Getting Started 9 | | |
| Loading the Battery9 | | |
| Unloading the Battery9 | | |
| Charging the Battery9 | | |
| Loading the SIM Card11 | | |
| Loading/Removing a Memory Card12 | | |
| Powering On/Off13 | | |
| Call Service 15 | | |
| Making or Answering Calls15 | | |
| Operations During a Call17 | | |
| Text Input 20 | | |
| T9 Input Method20 | | |
| Traditional Input Method21 | | |
| "123" Numeric Input Method21 | | |
| Symbol Input Method | | |
| Input Different Languages | | |
| Using the Menus 23 | | |
| Contacts 24 | | |
| Creating SMS/MMS/Email24 | | |
| Making Calls from the Contacts24 | | |
| Adding a New Contact24 | | |
| Deleting a Contact25 | | |
| Searching for a Contact25 | | |

| Copying Contacts | 26 |
|-----------------------------|----|
| Sending a Contact | 26 |
| Marking/Unmarking a Contact | |
| My Business Card | |
| Backing Up Contacts | 27 |
| Speed Dialing Numbers | |
| Viewing the Memory Status | 28 |
| Settings | 28 |
| Groups | 28 |
| Call Log 30 | |
| Making Calls from Call Log | 30 |
| Other Operations | 30 |
| Messaging 32 | |
| Text Messages | 32 |
| Multimedia Messages | 36 |
| Creating MMS Postcards | 42 |
| Email | 43 |
| Push Inbox | 47 |
| Broadcast Inbox | 48 |
| Voice Mail Number | 49 |
| Common Phrases | 49 |
| Music 50 | |
| My Music | 50 |
| Vodafone Radio DJ | 51 |
| Music Store | |
| My Wishlist | 52 |
| Organiser & Tools 53 | |
| SIM ToolKit | 53 |
| | |

| | Alarm Clock53 | |
|------|-----------------------|---|
| | Calendar54 | |
| | Calculator56 | E |
| | Unit Converter56 | |
| | Currency Converter57 | |
| | Synchronise57 | |
| | Tasks | |
| | Voice Recorder | С |
| | Memo Pad60 | 0 |
| | World Time60 | |
| | Stopwatch60 | |
| | Timer61 | |
| | Service Dial Number61 | D |
| Nv I | Files 62 | S |
| - | Pictures62 | |
| | Ringtones62 | |
| | Games | |
| | Music | |
| | Videos | |
| | Applications | |
| | Other | |
| | Memory Card65 | |
| /od | afone live! 66 | W |
| | Vodafone live! | |
| | Enter URL | |
| | Bookmarks | |
| | Internet Settings | |
| /ide | eo Call 69 | |
| | | |

| Functions on the Screen | |
|-------------------------------------|----|
| Entertainment 71 | |
| Games | 71 |
| Camera | 72 |
| Video Camera | 74 |
| Music | 75 |
| Connections 76 | |
| Bluetooth | |
| USB | |
| Note on Connection Functions | |
| DRM 86 | |
| Settings 87 | |
| Phone Settings | |
| Display Settings | |
| Message Settings | |
| Call Settings | |
| Video Call Settings | |
| Connectivity | |
| Network Setup | 94 |
| Security Setup | 94 |
| Warnings and Precautions 96 | |
| Electronic Device | |
| Hospital | |
| Area with Inflammables/Explosives . | 96 |
| Traffic Safety | 97 |
| Storage Environment | |

| Child Safety | 98 |
|---------------------------------|-----|
| Operating Environment | |
| Cleaning and Maintenance | |
| Environmental Protection | 99 |
| Emergency Call | 100 |
| Battery | 100 |
| Charger | 101 |
| Using the USB Cable | 102 |
| Rules for Exposure to RF Energy | 102 |
| Acronyms and Abbreviations 104 | |
| Appendix 105 | |
| Index | |

1 Getting to Know Your Phone

Your Vodafone 710 phone can operate in virtually all countries, automatically switching between WCDMA 2100 and GSM/GPRS 900/1800/1900 net-works. So you'll be able to enjoy communications wherever you are using your mobile phone.

Note

The services supported by your phone must also be supported by the network where your phone is located. For details, please consult Vodafone. Note that you can also access information on Vodafone services at www.vodafone.com.

Packing List

Your phone package box contains the following articles:

- 1
- One Vodafone 710 mobile phone
- 2 One travel charger
- 3 One Li-ion battery
- 4 One stereo headset
- 5 One hand strap

6 One user manual

One quick start guide

Your Phone





 
Side View



Keypad View



Keys



Key

Description

- Press this key to end an ongoing call or reject an incoming call.
- When it is not on the Home screen, press this key to return to the Home screen.
- Press and hold this key to power on the phone or press and hold it to power off the phone in the standby mode.
- In the editing mode, press to delete a character before the cursor.
 - Press to activate the function indicated at the left of the prompt bar on the screen.
 - Access main menu in standby mode.



- Activate the function indicated on the right of the prompt bar on the screen.
- In standby mode, press to access
 Vodafone live!.

Your Phone

| Key | Description |
|------|---|
| (0) | Access the Call Log screen in the |
| ۲ | standby mode. |
| | After entering or selecting a phone |
| | number, press to make a video call. |
| 1.60 | Access the Music screen in the |
| 0 | standby mode. |
| | In an option list, press to tick a check- |
| | box. |
| | Press to start the selected function in |
| | the menu. |
| | In standby mode, press to access the |
| | main menu. |

Key

Description

Up:

- On a menu or on a mode selection screen, press to scroll upward.
- In standby mode, press to access the Vodafone Live! screen.

Down:

- On a menu or on a mode selection screen, press to scroll downward.
- In standby mode, press to access the **Contacts** screen.

Left:

- On a menu or on a mode selection screen, press to scroll leftward.
- In standby mode, press to access the Messaging/New SMS screen.

Right:

- On a menu or on a mode selection screen, press to scroll rightward.
- In standby mode, press to access the **My Files** menu.

the charging indicator on the external screen. When the charging finishes, the indicator stops blinking.

| Key | Description | Key | Description |
|-----------------------------------|--|---|--|
| Charac- ter/ Number keys | Used to enter numbers or characters. When menu items are numbered, press one of them to access a corresponding menu item. In the main menu, press a character/ number key to access a menu whose position on the screen corresponds to that of the number key. For instance, | Record key/ Camera shortcut key | In the standby mode with the phone open, press and hold for a few seconds to activate the camera. During a call, press to activate the voice recorder. In the standby mode with the phone closed, press and hold to start recording, and press again to end the recording. |
| | you can press 🐚 to access | | ing. |
| | Entertainment, or m to access Vodafone Live!. | | In the standby mode with the phone closed, press to activate the external |
| | press we to enter a space. | | screen and display relevant informa- tion. |
| | press and hold <i>press</i> to switch the current profile to the meeting profile. | | • During charging with the phone pow- ered off and closed, press to display |

Your Phone

| Key | Description |
|----------------|---|
| Volume keys | In the standby mode or during a call, press to adjust the volume of the ear- piece. |
| | In the standby mode with the phone closed, press to activate the external screen and display relevant informa- tion. During charging with the phone pow- |

 During charging with the phone powered off and closed, press to display the charging indicator on the external screen. When the charging finishes, the indicator stops blinking.

Home Screen



🔶 lcon bar

This area displays the phone status. The following table illustrates all the icons that may appear on this bar.

| lcon | Description |
|------|---|
| * | Indicates signal strength. The more hori- |
| | zontal bars that appear, the stronger the |
| | signal. |

| lcon | Description |
|----------|--|
| G | The phone is currently in a GSM network. |
| 3 | The phone is currently in a WCDMA network. |
| ò | You are using the roaming service. |
| ۲ | Indicates network connection state. |
| <u>(</u> | Indicates security connection state of |
| | the network. |
| 1 | The phone is in a call. |
| 嬍 | Alarm clock is enabled. |
| * | Bluetooth is enabled. |
| <u>e</u> | You have new text messages. |
| é | You have new PUSH messages. |
| é | You have new emails. |
| đ | You have new multimedia messages. |

| lcon | Description |
|----------------|--|
| 2 | You have new voice mail. |
| | The vibration mode is enabled. |
| 4 | Indicates in mute mode. |
| F | The normal profile is activated. |
| | Call line 1 is enabled currently. |
| I | Forwarding all incoming voice calls to |
| ¥* | line 1. |
| [² | Call line 2 is enabled currently. |
| | Forwarding all incoming voice calls to |
| | line 2. |
| •3 | The headset is plugged in. |
| 1 | Your PC connects to the Internet |
| | through your phone. |
| | Indicates battery power level. |
| | |

Your Phone

Desktop

This area displays the operations and the function options.

Prompt Bar

This area displays the available operations at present.

The content displayed here varies with different screens.



1 Press to execute the operation indicated on the left of the prompt bar.

- 2 Press to execute the operation indicated on the right of the prompt bar.
- 3 Press in to start the selected function or option in the menu



Loading the Battery

To load the battery:

- 1 Fit the battery into the battery slot on back of the phone.
- 2 Press the battery down until it clicks into place.



Unloading the Battery

Only unload the battery after powering off your phone. Otherwise, your phone may be damaged. To unload the battery:

- Push the battery latch upward.
- 2 Take out the battery.



Charging the Battery

Before charging the battery, please read carefully the following precautions.

- When you charge the battery for the first time, please charge it for at least 12 hours.
 - The battery discharges even while not being used. So if you haven't used it for a long time, please recharge it first.

Charging the Battery

- The charging time depends on the environmental temperature and the age of the battery.
- The battery can be recharged repeatedly, but it will eventually wear out. After normal charging, if the time that the battery powers your phone becomes much shorter than usual, please replace the battery with one of the same type.
- Do not strike, toss or cause any kind of violent shock to the battery, otherwise liquid leakage, body damage, overheating, explosion or fire may occur.
- Charge the battery by using the charger supplied with your phone.

You can charge the battery at any time and use your phone during charging.

 When you charge the battery with your phone powered on, the battery level icon will appear on the upper right corner of the internal screen. During battery charging, the charging indicator will blink continuously. When the charging indicator stops blinking, it indicates that the charging is finished.

- During charging with your phone powered off, a charging indicator indicating the power level of the battery will appear on the screen and blink continuously. When it stops blinking, it indicates that the charging is finished.
- Note When the battery power level is very low, the phone makes alert sounds and displays a prompt. When the battery power level is too low, the phone will power off automatically.

Charging with a Cable Charger

Before charging the battery with a cable charger, please make sure that the battery has been properly loaded into your phone.

To charge the battery:

 As shown in the following figure: Insert the plug of the charger into the connector of the phone. Before inserting, please make sure that the arrow on the charger output jack points to the front side of the phone.

2 Plug in the connector of the charger to a power socket



Loading the SIM Card

Your SIM card contains such information as phone numbers and contacts. Load your SIM card before using your phone. To use the SIM card properly, please read the following instructions carefully.

- Note
- · Keep the SIM card out of the reach of children
- · The SIM card and its metal contacts are easily damaged by scratching or bending. So be careful when you carry, load or remove it.

· Always disconnect the charger from the phone before loading or removing the SIM card

Loading the SIM Card

To load the SIM card.

- Switch off the phone and remove the battery.
- 2 Position the card at the card slot entrance, making sure it is facing the same way as shown in the diagram below, with the notched corner at the bottom right. Then slide in as shown.



Loading/Removing a Memory Card

Removing the SIM Card

To remove the SIM card, power off your phone and take out the battery. Then press the SIM card with one finger and slide it out of the slot.



Loading/Removing a Memory Card

The Vodafone 710 phone supports a memory card (mini-SD) with a capacity up to 1 GB.

1 Remove the rubber cap from the memory card slot; then insert the memory card into the slot, as shown in the following figure.



2 After inserting the memory card completely, replace the rubber cap.



3 To remove a memory card, open the rubber cap and press the memory card gently. Now the memory card will pop up automatically. Then take it out as shown in the following figure.

Powering On/Off



Powering On/Off

Powering On

Ensure that the SIM card is in your phone and that the battery has been charged.

Press and hold a until power is on.

Switching Off

Press and hold
 until power is off.

Access Codes

If you have set the phone password and the PIN is **ON**, you have to enter the corresponding access

codes when you power on your phone. For setting and changing the access codes, please refer to "Settings/Security Setup" on page 94.

Phone Password

The phone password is used to protect your phone from unauthorized use. The phone password is preset as 0000 for your Vodafone 710 phone.

PIN

The PIN (Personal Identification Number) code is used to protect your SIM card from unauthorized use. Usually you will be supplied with the PIN code when you get the SIM card from Vodafone. If you have not got one or you have lost it, please consult Vodafone.

PIN2

Some SIM cards provide PIN2 code. Some special functions such as the "Fixed Dialer Number" are not available until you enter the PIN2 code and, at the same time, your SIM card must support these functions

PUK

To unlock the locked SIM card, you have to enter the PUK (PIN Unblocking Kev) code. Usually you will be

Powering On/Off

supplied with the PUK code when you get the SIM card from Vodafone. If you have not got one or you have lost it, please consult Vodafone.

PUK2

Some SIM cards provide PUK2 code which is used to unlock the locked PIN2 code. Usually you will be supplied with the PUK2 code when you get the card from Vodafone. If you have not got one or you have lost it, please consult Vodafone.



Making or Answering Calls

Making a Video Call

You can make a video call with someone whose phone also supports video calls.

- 1
- Enter or edit a phone number in any of the following ways:
- Enter a phone number through the keypad.
- Select a number from the Call Log screen.
- Access the Contacts screen to select a phone number from Phone or SIM.
- 2 press or select Options > Call > Video Call to dial.
- 3 Press on to end the video call.
- Note To delete a wrong number, press an once to delete the digit to the left of the cursor; press and hold at to delete all.

Making a Voice Call

- Enter or edit a phone number in any of the following ways:
 - Enter a phone number through the keypad.
 - Press to select a number from the Call Log screen.
 - Access the **Contacts** screen to select a phone number from **Phone** or **SIM**.
- Press

 to dial.
- Press

 to end the call.

Making Voice Calls Using SDN

You can make a voice call through speed dialing. For instructions on assigning speed dialing numbers, refer to "Contacts/Speed Dialing Numbers" on page 27.

To make a call by speed dialing number(SDN), press and hold the number key until the phone dials the corresponding phone number.

Making or Answering Calls

Answering or Rejecting Calls

If there is an incoming call, the phone rings or vibrates, and displays the phone number or the caller name (if the caller is saved as a contact, except the calling ID is hidden).

When Auto Answer Disabled

You can set the answer mode to **Open flip**, **Any key** or **Send key**. For details, refer to "Settings/Call Setup/Answer Mode".

The following describes how to answer or reject a call in different answer modes:

| То | Operation |
|--------|---|
| Answer | If the answer mode is Open flip, open |
| a call | the phone. |
| | If the answer mode is Any key, open |
| | the phone and press any key. |
| | except 🔵 and 🧫 . |
| | If the answer mode is Send key, |
| | press 🔘 . |
| | • If the headset is in use, press the con- |
| | trol key on the headset. |

| Operation |
|---|
| Press or select Options > Reject . |
| If the headset is not in use, you can |
| close the phone or press 🔘. |
| • If the headset is in use, press the con- |
| trol key of the headset. |
| Select Options > Reply to send a pre- |
| defined message to the caller. |
| |

Note When the phone is closed and not in a call, you can press and hold the record key to mute the incoming call ring, or press and hold the volume keys to reject the call.

When Auto Answer Enabled

You can set the auto answer mode to Immediate

answer, Message or Recorded message.

For details, refer to "Settings/Call settings/Auto Answer". The following describes how the phone will react in different auto answer modes:

pressing a.

· If the headset is in use, you can press the control key on the headset.

Operations During a Call

Icon Description

| ٠ | lcon | Description |
|---|------|-------------|
|---|------|-------------|



- : The call is on hold.
- There is a new incoming call during a call.

Operations

Hold/Resume

During a call, select Options > Hold to hold the call. To resume the call, select Options > Resume.

Answer/Reject

Your phone allows you to handle two calls simultaneously.

During a call, if there is a new incoming call, the icon blinks and the caller information appears on the screen:

Operations During a Call

- Press or select Options > Answer to answer it.
- Press
 or select Options > Reject to reject it.

🔶 Swap

During a 3-party call, select **Options** > **Swap** to swap between calls.

Conference call/Private call

During a 3-party call, select **Options > Conference call** to switch to the conference call.

During a conference call, select **Options** > **Private** call to talk with a party privately.

Handfree/Earpiece

During a call, press to switch between the Handsfree and the Earpiece modes.

Mute

During a call, select **Mute** to mute your voice. To resume the conversation, select **Unmute**.

End a Call

During a 3-party call or a conference call, select:

- Options > End > All calls to end the call with all parties.
- Options > End > current call to end the active call.

During a 3-party call, you can select:

- Options > End > On hold to end the call that is on hold.
- Options > End > Activate call to end the active call.

New Call

During a call, you can enter a phone number through the keypad or select a contact, and then press or select **Options > New call** to make a 3-party call.

Start Record/Stop Record

During a call, you can select **Options** > **Start record** to record the conversation.

To stop recording, select **Options > Stop record**.

Other Applications

During a call, select:

- Options > Other Apps > Messaging to access the inbox.
- Options > Other Apps > Contacts to access the phonebook.
- Options > Other Apps > Call Log to access the call log.

4 Text Input

You can use the keypad to enter alphanumeric characters and symbols. For example, you can add entries to the contacts, write messages or schedule events on the calendar.

Note

While entering text:

- Press to switch between input methods, including "abc", "Abc", "ABC", and numbers.
- Press v to enable or disable T9 input method.
- Press to display the commonly-used symbols list. You can use the scroll keys to select.
- Press to delete the letter before the cursor.

T9 Input Method

With the T9 input method, you can easily and quickly enter words with predictive text scheme.

• Press each key carrying the desired letter once, and then the predictive text scheme will present the

candidate words composed by the letters you have entered in the drop-down menu.

 After entering all letters, if there is not the expected one in the drop-down menu, you can select [Spell] to enter the desired letter using the traditional input method and then select Insert. The words you inserted will be saved in the predictive text dictionary. If the dictionary is full, the new word replaces the oldest one.

For example, to enter the word "good" with the T9 input method, follow these steps.

- 2 Use the up/down scroll key to select "good". Then press to enter a space for entering the next word.
- Note Press Tepeatedly and you will see "T9 english", "T9 English" and "T9 ENGLISH" on the upper left corner of the screen successively. It indicates the words to be

entered will be in lower case, first letter capitalized or in upper case.

Traditional Input Method

When T9 input method is off, you can use the traditional input method for entering alphabetic characters. Repeatedly press the key that carries the letter to be entered when it appears on the screen. For example, to enter the word "Hello" with the traditional input method, follow these steps.

- Press that carries "h" repeatedly and all letters carried by this key will be displayed successively on the screen. Stop when you see an "h" on the screen.
- 2 After entering the first letter, you can directly press another key (except ⇐) to enter the next letter. If the next desired letter is on the same key as the current one, wait until the cursor appears to the right of the current letter and then you can enter the next one.
- 3 Enter "e", "I", "I" and "o" in the same way.

- Note Press repeatedly and you will see "abc", "Abc" or "ABC" on the upper left corner of the screen successively. It indicates the words to be entered will be in lower case, first letter capitalized or in upper case.
 - Press and hold number keys to enter numbers.

"123" Numeric Input Method

With the "123" numeric input method, you can enter corresponding numeric characters by pressing the character/number keys. For example, to enter "1" with the "123" numeric input method, you can press _____. Then "1" appears on the screen.

Symbol Input Method

Symbol Input Method

Your Vodafone 710 provides an independent symbol input method.

For example, to enter ":" with the symbol input method, you can just press the scroll keys to select

":" in the symbol list and then press .

Input Different Languages

In a text editing screen, select **Options** > **Input language** to set the language for the text. The selected language will be displayed on the upper middle part of the editing screen.

5Using the Menus

Your phone provides an extensive range of functions. You can use these functions by navigating the following menus: Entertainment, Music, Call Log, Vodafone Live!, Messaging, My Files, Organiser & Tools, Contacts and Settings.

- In the standby mode, press to display the main menu.
- 2 Press the scroll key to scroll through the menu, and then press to select.
- 3 If the menu contains further submenus, repeat step 2.
- 4 Use the selected function according to the prompts on the screen.
- 5 Select **Back** to return to the previous menu. Press to return to the standby mode.

6 Contacts

Contacts enables you to save and manage such information as phone numbers and addresses of your contacts. You can save such information in your phone or your SIM card. You can also assign eight frequently-used numbers to speed dialing keys for your convenience.

Creating SMS/MMS/Email

You can create a message, a MMS or an email and send it to a contact.

- In the Contacts screen, press the left/right scroll key to select Phone or SIM 5.
- 2 Select Options > Create, and then select SMS, MMS or Email to send it to the selected contact.

Making Calls from the Contacts

You can make a voice/video call with a contact selected from the contacts list.

In the Contacts screen, press the left/right scroll key to select Phone or SIM .

Select a contact and select Options > Call. Then, you can select Voice Call or Video Call to make a call. Alternatively, you can select Edit before call to edit the number before making the call.

Adding a New Contact

For each contact to be added in your phone, you can add the name, mobile phone number, office telephone, home telephone, address, email address, fax number and country of the contact. You can also set an icon and a ring tone for each contact.

For each contact to be added in the SIM card, you can add the name and phone number, and depending on your SIM card type, also the fax number and email address.

- In the Contacts screen, press the left/right scroll key to select Phone or SIM
- 2 Select Options > New.
- 3 Enter the contact information and then select Options > Save.

Deleting a Contact

You can delete a contact from your phone or SIM card.

- In the Contacts screen, press the left/right scroll key to select Phone or SIM 5.
- 2 Select the contact to delete. select Options > Mark/Unmark to tick the checkbox on the right of the contact or cancel the selection.
- 3 Select Options > Delete marked. At the prompt, select Yes to confirm or No to cancel.

Searching for a Contact

You can find a contact from the contacts list easily and quickly by using this function on both the **Phone** screen and the **SIM** screen.



Select Options > Search.

- 3 Select Options > Search, and then enter the contact name you are searching for. The contact will be displayed.
- Note
- The search result will include all matched contacts from both the phone and SIM memories, no matter from which screen (Phone or SIM) you start searching.

You can also use quick search in the **Phone** or **SIM** screen:

- In the Contacts screen, press the left/right scroll key to select Phone or SIM _____.
- 2 Enter a string (one or more letters or numbers) contained in the contact name you are searching for (which is displayed at the bottom of the screen). Then the contacts whose names contain this string will be displayed.

Copying Contacts

You can also find a contact by entering the initials of the first name and the last name of the contact. For example, to find a contact named "Alice Green", enter the initials "ag". This contact will be displayed in the candidate list.

Copying Contacts

You can copy one or more contacts from your phone to the SIM card or from your SIM card to the phone.

- In the Contacts screen, press the left/right scroll key to select Phone or SIM .
- 2 Select a contact to transfer. Select Options > Mark/Unmark to tick the checkbox to the right of the contact or cancel the selection.
- 3 Select Options > Copy marked to SIM or Copy marked to phone. At the prompt, select Yes to confirm or No to cancel.
- Note Not all contact details will get transferred when copying a contact from the phone to the SIM card. Usually this the name, the first

number and the e-mail address but it depends on the SIM card type.

Sending a Contact

You can send a contact to other devices supporting SMS or Bluetooth. Before sending by Bluetooth, you need to switch on the Bluetooth device.

You can send only one contact by SMS each time. When sending by SMS, the information can include the contact name, phone number and email address. Other information (such as home address) cannot be sent by SMS.

Marking/Unmarking a Contact

You can select one or more contacts in your phone and SIM card.

- In the Contacts screen, press the left/right scroll key to select Phone or SIM
- 2 Select Options > Mark/Unmark to tick the checkbox to the right of the entry or cancel the selection.

My Business Card

My Business Card

You can save your own information such as your name, mobile phone number, office telephone number, fax number, and email address to a Business Card. You can send the information by message or Bluetooth.

- In the Contacts screen, press the left/right scroll key to select Phone or SIM 5.
- 2 Select Options > My business card.
- 3 Select Options for one of the following operations: edit, save, sent by SMS, send by Bluetooth or delete the business card.

Backing Up Contacts

You can back up your contacts by copying them from your phone to a memory card or from your memory card to your phone. You can also synchronize contacts in the phone with your personal phone book stored on the Vodafone network. Note that this service is not available in all networks. Please check with Vodafone for more information. For details, refer to "Tools/Synchronise" on page 57.

- In the Contacts screen, press the left/right scroll key to select Phone .
- 2 Select Options > Backup contacts for one of the following options: backup contacts, restore contacts, and synchronise.

Speed Dialing Numbers

You can assign often-used numbers to speed dialing keys "2" to "9".

- In the Contacts screen, press the left/right scroll key to select Phone or SIM ____.
- 2 Select a contact and select Options > Speed Dial No.
- 3 Select a speed dial key for the contact, and then press .

Viewing the Memory Status

Viewing the Memory Status

You can view the memory status of both your phone and SIM card, including the number of existing contacts and the total capacity of the phone and the SIM card.

- In the Contacts screen, press the left/right scroll key to select Phone or SIM
- 2 Select Options > Memory status to view the memory status.

Settings

This option is used to sort the contacts in the phone or to set an alert before saving.

Groups

You can rename a group, add group members, or delete a group.

Adding/Deleting Group Members

You can add a member to a group in your phone or delete a member from it.

- In the Contacts screen, press the left/right scroll key to select Groups.
- 2 Select a group and press
 to view the details.
- 3 Select Option > Add. Select a contact and press . The member you added will be displayed in the group member list.

To delete a group member, select a member from the group member list, and then select **Options** > **Delete**.

Managing a Group

- In the Contacts screen, press the left/right scroll key to select Groups.
- Select a group and select Options for the following options.
 - Details: to view the details of a group.



- Create: to send a text message or MMS to all members of a group.
- Rename: to change the name of a group.
- Delete: to delete a group and all members of the group.
- Note You cannot rename or delete any group preset in your phone.

7 Call Log

The recently dialed calls, received calls and missed calls are saved automatically on your phone to make it easy to refer to them.

Making Calls from Call Log

- Select Call Log ☆ in the main menu and then press the left/right scroll key to switch between All calls → , Missed X, Received and Dialed ↓.
- Press the up/down scroll key to select a record. Press to make a voice call or press to make a video call.

Other Operations

Press the left/right scroll key to select All calls → , Missed W, Received For Dialed . Then

select **Options** for the following options.

| Options | Description |
|---------|---|
| Call | To make a voice call or a video call. |
| | Alternatively, you can select Edit before |
| | call to edit the number before making a |
| | call. |
| Create | To send a message or MMS. |
| Save | To save the numbers of the selected |
| number | record to the phone, the USIM card, or |
| | an existing contact. |
| Delete | To delete the selected record. |
| Mark/ | To mark/unmark a record or all records. |
| Unmark | |
| Display | You can select Normal to display all |
| mode | records or select Simple to ignore the |
| | repeated records. |

Other Operations

Options Description To display the information on voice calls. Calls status

- video calls and data services.
 - · Voice call/Video call: to display the last call duration, incoming call duration, outgoing call duration, total time, and last reset time
 - · Data: to display the total uplink flow, total downlink flow, and total connecting duration; the last uplink flow, last downlink flow and last connecting duration: and the last reset time. In the voice call, video call and data page, you can select Reset to clear all records.



Text Messages

The maximum content for a single text message is 160 English letters. If the characters you entered exceed this limit, the text will be divided into two or more continuous messages for sending.

Creating a text Message

- Select Messaging > New SMS the main menu.
- 2 In the message editing screen, select **Options**:
 - T9 Switch: enable or disable T9 input method.
 - Input mode: You may select one of the input methods to enter the message contents.
 - Common phrases: You can can use these to speed up the text entry.
 - Insert number: You can insert a phone number saved on the phone or the SIM card.
 - Input language: You can select a language for this message.
 - After editing the message, press it to access the "Edit numbers" screen.

- Enter the phone number, and then select
 Options > Send or press to send the message.
- Select Options > Group or Contacts to choose a number and send the message.
- Select **Options** > **Save** to save the message.

SMS Mailboxes

The phone provides three mailboxes for SMS, namely, Inbox a, Outbox i, and Draft

🔶 Inbox

You can save the received messages in Inbox.

Icons in Inbox

| lcon | Description |
|----------|--|
| <u>e</u> | a read message in the phone memory |
| e. | an unread message in the phone mem- ory |
| ß | a read message on the SIM card mem- ory |
| e, | an unread message on the SIM card memory |