

Make the most of now.

Vodafone 720 Mobile Phone
User Guide



Notice

Copyright © 2007 Huawei Technologies Co. Ltd.

All Rights Reserved

Your Vodafone 720 is made exclusively for Vodafone by Huawei Technologies.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co. Ltd.

Trademarks

VODAFONE, the Vodafone logos, Vodafone Radio DJ are trade marks of the Vodafone Group. Other product and company names mentioned herein may be trade marks of their respective owners.

Notice

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure

accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute a warranty of any kind, expressed or implied.

Read the safety precautions carefully to ensure that you use wireless device in a correct and safe manner. For details, see the section "Warnings and Precautions".

Huawei Technologies Co. Ltd.

Branch Address:

Huawei Technologies Deutschland GmbH,
Am Seestern 24, Dusseldorf, Germany
Postal Code: 40547

Head Office Address:

Administration Building, Huawei Technologies
Co. Ltd., Bantian, Longgang District,
Shenzhen, P. R. China
Postal Code: 518129

Website: <http://www.huawei.com>

Safety Precautions



Read the Safety Information section of this user guide on page 57.



Do not use hand-held while driving.



For body-worn operation maintain a separation of 1.5 cm.



Small parts may cause a choking hazard.



This device may produce a loud sound.



Keep away from pacemakers and other personal medical devices.



Switch off when instructed in hospitals and medical facilities.



Switch off when instructed in aircrafts and airports.



Do not use while re-fuelling.



This device may produce a bright or flashing light.



Do not dispose of in a fire.



Avoid contact with magnetic media.



Avoid Extreme Temperatures



Avoid contact with liquid, keep dry.



Do not try and disassemble.



Do not rely on this device for emergency communications.



Switch off in explosive environments.



Only use approved accessories.

Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 1.6 W/kg and the highest SAR value for this device when tested at the ear was 0.385 W/kg*. As mobile devices offer a range of functions, they can be

used in other positions, such as on the body as described in this user guide**.

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

* The tests are carried out in accordance with IEC standard PT62209-1.

** Please see page 57 about body worn operation.

Please read the safety precautions carefully to ensure the correct and safe use of your wireless device. For detailed information, refer to the section "Warnings and Precautions".

Table of Contents

Table of Contents 1

Getting to Know Your Phone 1

Packing List	1
Your Phone	2

Getting Started 6

Loading the SIM Card	6
Unloading the SIM Card	7
Charging the Battery	7
Loading/Removing a Memory Card.....	8
Powering On/Off	9

Call Service 11

Making or Answering Calls.....	11
Operations During a Voice Call	12
Operations During a Video Call	13

Text Input 15

T9® Input Method	15
Traditional Input Method	15
"123" Numeric Input Method	16
Symbol Input Method	16
Input Different Languages	16

Contacts 17

Making Calls from the Contacts	17
Searching for a Contact.....	17
Viewing Contacts in Phone/SIM	17
Other Operations.....	17
Groups.....	18

Calls 20

Making Calls from Calls	20
Other Operations	20

Messaging 21

Messages.....	21
Email	23
Broadcast Inbox	26
Vodafone Messenger	27
Templates	27

Music 28

Music Library.....	28
Playlists.....	29
Vodafone Radio DJ.....	29
Music Store	29
My Wishlist.....	29

Organiser & Tools 30

Alarms	30
Calendar	30
Task	31
Memo	32
Synchronise	32
Calculator.....	33
Unit Converter.....	33
Currency Converter.....	34
Voice Recorder	34
World Time.....	35
Stopwatch	35
Timer	35
Service Dial Number	35

My Files 36

Vodafone live! 37

Open homepage.....	37
Open new page.....	37
Bookmarks.....	37
Saved pages.....	37
History.....	38
Resume.....	38
Settings.....	38

Entertainment 39

Games.....	39
Camera.....	39
Mobile TV.....	41

Connections 42

Bluetooth®.....	42
USB.....	45

Settings 49

Phone Settings.....	49
Display Settings.....	50
Message Settings.....	51
Call Settings.....	51
Video Call.....	53
Contacts Settings.....	54
Java™ Settings.....	54
Connectivity.....	54
Network.....	54
Security.....	54

DRM Setting.....	56
------------------	----

Warnings and Precautions 57

RF Exposure.....	57
Distraction.....	58
Product Handling.....	59
Electrical safety.....	61
Interference.....	62
Explosive environments.....	63

Acronyms and Abbreviations 64

Appendix 65

Index 1

Warranty Terms and Conditions 5

1 Getting to Know Your Phone

Your Vodafone 720 phone can operate in virtually all countries, automatically switching between WCDMA 2100 and GSM/GPRS 900/1800/1900 networks. This allows you to enjoy communication wherever you use your mobile phone.

Note

The services supported by your phone should be also supported by the network from where you use the phone. For details, please contact your local Vodafone customer care centre. Note that you can also access information on Vodafone services at www.vodafone.com.

- 5 One Quick Start Guide
- 6 One stereo headset
- 7 One USB data cable

Packing List

Your phone package box contains the following:

- 1 One Vodafone 720 mobile phone
- 2 One travel charger
- 3 One Li-polymer battery
- 4 One User Guide

Your Phone

 


Your Phone

 
Front View and Back View



Side View

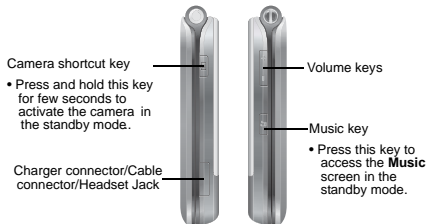



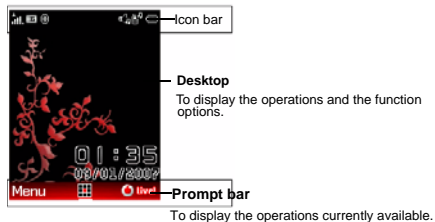











Home Screen








◆ Icon bar

This area displays the phone status. The following table illustrates the icons that may appear on this bar.



Icon	Description
	The phone is in a call.
	Forwarding all incoming voice calls to line 1.
	Call line 2 is enabled currently.

Icon	Description
	Forwarding all incoming voice calls to line 2.
	You have new text messages.
	You have new multimedia messages.
	You have new PUSH messages.
	You have new emails.
	You have new voice mails.
	Indicates signal strength. The more horizontal bars that appear, the stronger the signal.
	The phone is currently in a GSM network.
	The phone is currently in a WCDMA network.
	You are using the roaming service.
	Alarm clock is enabled.


Icon	Description
	Bluetooth is enabled.
	The normal profile is activated.
	The headset is plugged in.
	Your PC connects to the Internet through your phone.
	Indicates power level of the battery.

Introduction to the Menu

Your phone provides an extensive range of functions. You can use these functions by navigating the following menus: Entertainment, Music, Calls, Vodafone live!, Messaging, My Files, Organiser & Tools, Contacts and Settings.

- 1** In standby mode, press  to display the main menu.
- 2** Press the scroll key to scroll through the menu, and then press  to select the desired item.

■ Your Phone

- 3 If the menu contains further submenus, repeat step 2.
- 4 Use the selected function according to the prompts on the screen.
- 5 Select **Back** to return to the previous menu. Press  to return to the standby mode.

2 Getting Started

Loading the SIM Card

 
Load your SIM card before using your phone. To use the SIM card properly, please read the following instructions carefully.

Note


- Keep the SIM card out of the reach of children.
- The SIM card and its metal contacts can be easily damaged by scratching or bending. Ensure care when you carry, load or remove it.
- Always disconnect the charger from the phone before loading or removing the SIM card.

To load the SIM card, do as follows:


- 1** Position the card at the card slot entrance, making sure it is facing the same way as shown in the diagram below, with the notched corner at the down right. Then slide in as shown.



 - 2** Fit the battery into the battery slot on back of the phone. Press the battery down until it clicks into place.



 - 3** Slide the back cover to the phone.



■ Unloading the SIM Card

Unloading the SIM Card

Only unload the SIM card and the battery after powering off your phone. Otherwise, your phone may be damaged.

To unload the SIM card:

 
- 1 Unload the back cover out of the phone.



- 2 Please unload the battery according to the following picture.



- 3 Press the SIM card with one finger and slide it out of the slot.



Charging the Battery

Before charging the battery, please read the following precautions carefully.

Note

- When you charge the battery for the first time, please charge it for a minimum of 12 hours.
- The battery discharges even while not being used. If you have not used it for a long time, please recharge it first.
- The charging time depends on the environmental temperature and the age of the battery.
- The battery can be recharged but eventually wears out. If the battery lasts for a shorter time period than usual after being

charged normally, replace it with a battery of the same type.

- Do not strike, throw or cause any kind of violent shock to the battery, otherwise liquid leakage, body damage, overheating, explosion or fire may occur.
- Charge the battery by using the charger supplied with your phone.

Charging with a Cable Charger

Before charging the battery with a cable charger, ensure that the battery has been properly loaded into your phone.

To charge the battery, do as follows:

- 1 Insert the plug of the charger into the connector of the phone as shown in the following figure.
- 2 Plug in the connector of the charger to a power socket.



Loading/Removing a Memory Card

Note

- When the battery power level is very low, the phone makes alert sounds and displays a prompt. When the battery power level is too low, the phone will power off automatically.
- When the battery is being charged, the charging indicator blinks continuously. When the charging indicator stops blinking, it indicates that the battery is full.

Loading/Removing a Memory Card

The Vodafone 720 phone supports a memory card (micro-SD) with a capacity up to 2 GB.

 
- 1 Insert the memory card into the slot, as shown in the following figure.



- 2 To remove a memory card, press the memory card gently. Now the memory card will pop up

■ Powering On/Off


automatically. Then take it out as shown in the following figure.

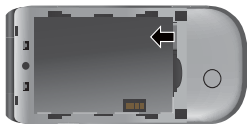


Powering On/Off

Powering On

Ensure that the SIM card is in your phone and that the battery has been charged.

Press and hold  to power on your phone.

Powering Off

Press and hold  to power off your phone.

Access Codes

If you have set the phone password and the PIN is **ON**, you have to enter the corresponding access codes when you power on your phone. For setting

and changing the access codes, please refer to "Settings/Security Setup" on page 54.

◆ Phone Password

The phone password is used to protect your phone from unauthorized use. The phone password is preset as 0000 for your Vodafone 720 phone.

◆ PIN

The personal identification number (PIN) code is used to protect your SIM card from unauthorized use. The PIN code is usually provided when you get the SIM card from Vodafone. If you have not received a PIN code or if you have forgotten it, contact your local Vodafone customer care centre.

◆ PIN2

Some SIM cards provide a PIN2 code. Some special functions such as the "Fixed Dialer Number" are not available until you enter the PIN2 code. At the same time, your SIM card should support these functions.

◆ PUK

To unlock a locked SIM card, you need to enter the PIN Unblocking Key (PUK) code. The PUK code is usually provided when you get the SIM card from

Vodafone. If you have not received a PUK code or if you have forgotten it, contact your local Vodafone customer care centre.

◆ **PUK2**


Some SIM cards provide a PUK2 code that is used to unlock a locked PIN2 code. The PUK2 code is usually provided when you get the SIM card from Vodafone. If you have not received a PUK2 code or if you have forgotten it, contact your local Vodafone customer care centre.

 
3 Call Service

Making or Answering Calls

Making a Video Call

You can make a video call to other person whose phone also supports video calls.

- 1 Enter or edit a phone number in one of the following ways:
 - Enter a phone number through the keypad.
 - Select a number from the **Calls** screen.
 - Select a number from the **Contacts** screen.
- 2 Select **Options > Call > Video Call** to dial.
- 3 Press  to end the video call.

Note To delete a wrong number, press  once to delete the digit to the left of the cursor.

Making a Voice Call

- 1 Enter or edit a phone number in one of the following ways:
 - Enter a phone number through the keypad.

- Select a number from the **Calls** screen.
- Select a number from the **Contacts** screen.

2 Press  to dial.

3 Press  to end the call.





Making Voice Calls Using SDN

You can make a voice call through speed dialing. For instructions on assigning speed dialing numbers, refer to "Contacts/Other Operations" on page 17. To make a call by speed dialing number (SDN), press and hold the number key until the phone dials the corresponding phone number.

Answering or Rejecting Calls

You can set the answer mode to **Open flip**, **Any key** or **Send key**. For details, refer to "Settings/Call Settings/Answer Mode".

The following describes how to answer or reject a call in different answer modes:

Operation	Description
Answer a call	<ul style="list-style-type: none"> If the answer mode is Open flip, open the phone. If the answer mode is Any key, press any key except . If the answer mode is Send key, press . If the headset is in use, press the control key on the headset.
Reject a call	Press  or select Options > Reject .
End a call	<ul style="list-style-type: none"> If the headset is not in use, you can close the phone or press . If the headset is in use, press the control key of the headset.
Reply by message	To send a predefined message to the caller.

Note

When the phone is closed and there is no ongoing call, you can press and hold the camera key to mute the ringtone of an

Operations During a Voice Call

incoming call. You can also press and hold the volume keys to reject the call.

You can also set the auto answer mode to **Immediate answer**, **Text message** or **Recorded voice**.

For details, refer to “Settings/Call settings/Auto Answer”.

Operations During a Voice Call**Icon Description**

: A call is ongoing.



: The call is on hold.

Operations

During a voice call, you can select **Options** to perform the following operations.


- Hold/Resume:** To hold or resume the call during a call.
- End:** To end all calls, the active call, the current call or the on hold call.
- Handfree/Earpiece:** To switch between the Handfree and the Earpiece modes during a call.





Operations During a Video Call

- Start recording/Stop recording: to record or stop recording the conversation.
- Other Applications: To access the **Contacts** screen, the **Messaging** screen, the **Calls** screen or the **Calendar** screen.
- Answer/Reject: Your phone allows you to handle two calls simultaneously. During a call, if there is a new incoming call, select **Options** > **Answer** to answer it or select **Options** > **Reject** to reject it.
- Swap: To swap between calls during a 3-party call.
- Conference call/Private call: To switch to the conference call during a 3-party call or to talk with a party privately during a conference call.



Operations During a Video Call

Icon Description

Icon	Description
	Press the up or down scroll key to adjust the brightness.

Icon	Description
	Press the left or right scroll key to zoom in or zoom out.
	Press the volume keys to adjust the volume.
	Press  to switch between the loud-speaker mode and the earpiece mode.

Operations

During a video call, you can press  to hold the call and send a preset file to the other party. You can press  again to resume the call. Before you use the function, you can preset a file in **settings/video call/Send image**.

During a video call, you can select **Options** to perform the following operations.

- Camera on/Camera off: To allow or forbid the video from your side.
- Audio on/Audio off: To allow or forbid the audio from your side.
- External view/Internal view: To switch between the main lens and the assistant lens.

- Picture mode: To switch display.
- Image quality: To set the image quality to fine quality or more smooth.
- Play file: To play a media file.
- Handsfree/Earpiece: Switch between the loudspeaker mode and the earpiece mode.
- Record: To record a video clip. A recorded video clip is saved to the **My Files/Videos** directory.
- Other Applications: To access the **Contacts** screen, the **Messaging** screen, the **Calls** screen or the **Calendar** screen.

4 Text Input

You can use the keypad to enter alphanumeric characters and symbols. For example, you can add entries to the contacts, write messages or schedule events on the calendar.

Note

While entering text:

- Press **[T9]** to switch between input methods. Press and hold the **[T9]** key to enable or disable the T9 input mode.
- Press **[S]** to display the symbols list. Press and hold the **[S]** key to set the input language.
- Press **[C]** to delete the letter before the cursor.

T9[®] Input Method

With the T9 input method, you can easily and quickly enter words. T9 is a predictive text entry mode. It allows you to easily and quickly enter words. Press the relevant key that corresponds to the desired letter and T9 will offer you candidate words.

Press each key carrying the desired letter once, and then the predictive text scheme will present the can-

didate words composed by the letters you have entered in the drop-down menu.

For example, to enter the word "good" with the T9 input method, follow these steps.

- 1 Press successively the keys **[4]**, **[6]**, **[6]**, and **[3]** which "g", "o", "o", and "d" belong to, and the candidate words "good", "home" etc. composed by these letters will be shown in the drop-down menu.
- 2 Use the up/down scroll key to select "good". Then press **[Space]** to enter a space for entering the next word.

Note

Press **[T9]** repeatedly and you will see "T9 abc", "T9 Abc" and "T9 ABC" on the upper left corner of the screen successively. It indicates the words to be entered will be in lower case, first letter capitalized or in upper case.

Traditional Input Method

When T9 input method is off, you can use the traditional input method for entering alphabetic charac-

ters. Repeatedly press the key that carries the letter to be entered when it appears on the screen.

For example, to enter the word "Hello" with the traditional input method, follow these steps.

- 1 Press **h** that carries "h" repeatedly and all letters carried by this key will be displayed successively on the screen. You can scroll through this list and select the character you want. Stop when you see an "h" on the screen.
- 2 After entering the first letter, you can directly press another key (except **c**) to enter the next letter. If the next desired letter is on the same key as the current one, wait until the cursor appears to the right of the current letter and then you can enter the next one.
- 3 Enter "e", "l", "l" and "o" in the same way.

Note Press **abc** repeatedly and you will see "abc", "Abc" or "ABC" on the upper left corner of the screen successively. It indicates the words to be entered will be in lower case, first letter capitalized or in upper case.

"123" Numeric Input Method

In a text editing screen, press and hold the character/number keys to enter corresponding numeric characters.

You can also press successively the **123** key to switch to the "123" numeric input method, and enter corresponding numeric characters by pressing the character/number keys.

Symbol Input Method


You can press **123** to display the symbols list and then select **Recent** to display recent symbols.

You can also press **123** to input the commonly-used symbols in a text editing screen.

Input Different Languages



In a text editing screen, Press and hold the **123** key to set the language for the text. The selected language will be displayed on the upper right part of the editing screen.

5 Contacts

Contacts  enables you to save and manage such information as phone numbers and addresses of your contacts. You can save such information in your phone or your SIM card. You can also assign frequently-used numbers to speed dialing keys for your convenience.

Making Calls from the Contacts

You can make a voice/video call with a contact selected from the contacts list.

- 1 In the **Contacts**  screen, press the left/right scroll key to select **Contacts**  .
- 2 Select a contact and select **Options > Call**. Then, you can select **Voice Call** or **Video Call** to make a call. Alternatively, you can select **Edit before call** to edit the number before making the call.

Searching for a Contact

You can find a contact from the contacts list easily and quickly by using this function on the **Contacts**


screen. Select **Options > Search**, and then enter the contact name you are searching for. The contact is displayed.

You can also use quick search in the contacts list screen. You can find a contact by entering the initials of the first name or the last name of the contact. For example, to find a contact named "Alice Green", enter the initials "a" or "g". This contact is displayed in the candidate list.

Viewing Contacts in Phone/SIM

In the Contacts screen, select **Options > View contacts in phone/View contacts in SIM**. You can display the contacts list saved in the phone or that in the SIM card. You can also select **Options > Settings** to set the default contact list displayed in the contact screen.

Other Operations

In the **Contacts**  screen, select **Options** for the following options.

Options	Description
Details	To view the detailed information of the contact.
Call	To make a voice call or a video call.
Create message	To send a message, postcard or Email to the selected contact.
Add new contact	To create a new contact.
Management	To back up your contacts from your phone to a memory card or from your memory card to your phone.
Search	To find a contact from the contacts list.
Send contact	To send a contact to other devices supporting Message or Bluetooth.
Copy to SIM/ Copy to phone	To Copy one or more contacts from your phone to the SIM card or from your SIM card to the phone.
Delete	To delete the selected contact.
Mark/ Unmark	To mark/unmark a record or all records in your phone and SIM card.

Options	Description
View contacts in Phone/SIM	To display the contacts list saved in the phone or that in the SIM card
Speed Dial Number	To assign often-used numbers to speed dialing keys "2" to "9".
My business card	To save your own information to a Business Card. You can send the information by Message or Bluetooth.
Settings	To set the default contact list displayed in the contact screen, to sort the contacts on the contact screen or to set the save location.
Memory status	To view the memory status of both your phone and SIM card.




Groups

You can rename a group, add group members, or delete a group.

Groups


Adding/Deleting Group Members

You can add a member to a group in your phone or delete a member from it.

- 1 In the **Contacts**  screen, press the left/right scroll key to select **Groups** .
- 2 Select a group and press  to view the details.
- 3 Select **Options** > **Add new Users**. Select a contact and press **Add**. The member you added is displayed in the group member list.

To delete a group member, select a member from the group member list, and then select **Options** > **Delete**.

Managing a Group







- 1 In the **Contacts**  screen, press the left/right scroll key to select **Groups**.
- 2 Select a group and select **Options** for the following options.
 - Details: to view the details of a group.
 - Rename: to change the name of a group.

- Send Message: to send a text message or MMS to all members of a group.
- Remove all members: to delete all members of the group.


6 Calls




The recently dialed calls, received calls and missed calls are saved automatically.

Making Calls from Calls

- 1 Select **Calls**  in the main menu and then press the left/right scroll key to switch between **All calls** , **Missed** , **Received**  and **Dialed** .
- 2 Press the up/down scroll key to select a record. Press  to make a voice call or select **Options** > **call** > **Video call** to make a video call.

Other Operations

Press the left/right scroll key to select **All calls** .

Missed , **Received**  or **Dialed** . Then select **Options** for the following options.

Options	Description
Send mes- sage	To send a message or MMS.

Options	Description
Save num- ber	To save the numbers of the selected record.
Call	To make a voice call or a video call.
Display mode	You can select Normal to display all records or select Simple to ignore the duplicated records.
Delete	To delete the selected record.
Mark/ Unmark	To mark/unmark a record or all records.
Calls status	To display the information on voice calls, video calls and data services. In the voice call, video call and data page, you can select Reset to clear all records.



7 Messaging


Messages

The maximum content for a single text message is 160 characters. If the characters you enter exceed this limit, the text is divided into two or more continuous messages when it is sent.





Creating a Message

With this option, you can create new SMS, MMS, MMS Postcard, and Email.

- 1 Select **Messaging**  > **Create message** in the main menu.
 - **Message:** To access the SMS or MMS editing screen.
 - **From template:** To edit the SMS or MMS from template.
 - **live! Postcard:** To access the postcard editing screen.
 - **Email:** To access the email editing screen.
- 2 After editing the message, press  or select **Options > Add Recipient** to add a recipient's number.

- 3 Press  or select **Options > Send** to send the message.







Messages Mailboxes

The phone provides four mailboxes for messages, namely, Inbox , Drafts , Outbox  and Sent .


◆ Inbox

You can save the received messages in **Inbox**.

Icons in Inbox

Icon	Description
	a read SMS or a read message report
	an unread SMS or an unread message report
	a read MMS
	an unread MMS
	A read Push message
	An unread Push message


Viewing Messages in Inbox

- 1 Select **Messaging > Inbox**.
- 2 Press the up/down scroll key to view the messages and then press  to view the details.
- 3 You can select **Options** for the following operations.
 - Play: To play the multimedia message.
 - Reply: To reply the message.
 - Forward: To forward the message.
 - Delete: To delete the message.
 - Call sender: To call the message sender by a voice call or a video call.
 - Info.: To view the details of the message.
 - Save text: To save the text of the MMS.
 - Save as template: To save this message as a template.

◆ Drafts


The Draft box is used to save the messages you created and saved.

Icons in Drafts

: A text message saved to the phone.

: A multimedia message to the phone.


Viewing and Editing Messages in the Draft

- 1 Select **Messaging > Drafts**.
- 2 Press the up/down scroll key to select a message and press  to edit it.


◆ Outbox

Outbox is used to save the messages that failed to be sent.

Icons in Outbox.

: A message that fails to be sent.

Viewing and Editing Messages in the Outbox

- 1 Select **Messaging > Outbox**.
- 2 Press the up/down scroll key to select a message and press  to edit it.

◆ Sent

Sent is used to save the messages that have been sent successfully.

Icons in Sent

: A text message has been sent.

Email



: A multimedia message has been sent.

Viewing Messages in Sent

- 1 Select **Messaging > Sent**.
- 2 Press the up/down scroll key to select a message and press ● to view the details.
- 3 You may select **Options** to do the same operations as those of Inbox.

Message Settings

You can change the message settings by performing the following steps.

- 1 Select **Messaging > Settings > SMS & MMS** from the main menu.
- 2 Set the parameters related to messages:
 - Receiving settings: To set parameters related to retrieval of messages.
 - Sending settings: To set parameters related to sending messages.

- Signature: To set whether your signature will be sent along with the message. You can edit the signature while creating a new message.
- Font size: To set the size of the character entered in the message.
- Reply settings: To set whether to reply to a message with the original text.
- MMS Account: To set the MMS account.
- Voice mail: The voice mail number is already preset for you in the phone.


Email

Before sending an email, please set an email account first. For details, please refer to "Email Settings" on page 26.






Creating an Email

- 1 Select **Messaging > Email** from the main menu. Select **Options > New Email** to access the email editing screen.
- 2 Select **【To】** or **【Cc】** and press ●.

- Select **Add from Contacts** or **Add From Group** to select an email address.
- Select **Enter Recipient** to directly enter the email address.

- 3** In the email editing screen, select **Subject** and press  to edit the contents.
- 4** In the email editing screen, select the **Message** text box to edit the content.
- 5** In the email editing screen, select **Options** > **Add attachment** to attach picture, music, video, or eBook.
- 6** In the email editing screen, select **Options** > **send** to send the email.


Mailboxes


Your Vodafone 720 provides five mailboxes for email, namely, Inbox , Drafts , Sent messages , Outbox  and Blocked messages .

◆ **Inbox**


All Emails received are saved in the inbox.

Icons in Inbox

: A read email.

: An unread email.

Viewing and Editing Emails in Inbox

- 7** Select an email and press  to view the content.
- 8** In the **Details** screen, select **Options** for the following operations:
 - Reply: To reply to the email sender.
 - Reply all: To reply to the email sender and all email receivers except the replier.
 - Add to contacts: To save the details of the sender to the contacts.
 - Forward: To forward the selected email.
 - Delete: To delete the selected email.
 - Call sender: To call the email sender by a voice call or a video call.

Other Options in Inbox

- 1** Enter **Inbox** of email.
- 2** Select **Options** for the following operations.
 - View: to view the selected email.

■ Email

- Reply: To reply to the email sender.
- Reply all: To reply to the email sender and all email receivers except the replier.
- Forward: To forward the selected email.
- Delete: To delete the selected email.
- New Email: To create a new email.
- Call sender: To call the email sender by a voice call or a video call.
- Mark as read: To mark this email as read or unread.
- Add to contacts: To save the details of the sender to the contacts.
- Move to: To move the selected email to a specified folder.
- Protect/Unprotect: To protect or unprotect the selected email.
- Mark/Unmark: To mark or unmark all emails in the inbox.
- Email folders: To view the self-defined folder.
- Receive messages: To synchronise emails from server.
- Sort by: To sort your emails according to date, sender or topic.

◆ Drafts

The saved new emails are saved in the drafts.

Icons in Drafts



: Emails to be sent.

Viewing and Editing Emails in Drafts

- 3 Select the desired email in the drafts and press ● to access the editing screen.
- 4 Edit the related information. For details, perform the same operations as in creating an email.

◆ Outbox

Those emails which failed to be sent are retained in the Unsent.

Icon for Outbox



: Emails failed to send.

Viewing and Editing Emails in Outbox

- 5 Select an email and press ● to access the editing screen.
- 6 Edit the related information. For details, perform the same operations as in creating an email.

Other Options in Outbox

In **Outbox** of email, select **Options**. You can do the same operations as those of the **Inbox**.


◆ Sent

The emails sent to server are saved in the sent box.

Icon for Sent

: A read email.

Viewing and Editing Emails in Sent

- 7 Select an email and press  to view the details.
- 8 You may select **Options** to perform the same operations as those of the **Inbox**.

Other Options in Sent

In **sent** of email, select **Options**. You can do the same operations as those of the **Inbox**.

◆ Blocked messages

The blocked emails are saved in this folder. You can select **Messaging > Settings > Email** to set the blocking conditions.

Email Settings

- 1 Select **Messaging > Settings > Email** and select an account.
- 2 The related account information contains: General, Incoming and Outgoing.
- 3 Return to the **Account** screen. Select **Options > Set as default** to activate this account.

After completing all settings, press **Back**.

Note

For the account settings, contact your local Vodafone customer care centre.

Broadcast Inbox

The broadcast messages are saved in the broadcast inbox. You can set the broadcast message.

Select **Messaging > Settings > Broadcast** to set the following items.

- Service: to enable or disable this service.
- Subscription: to subscribe to broadcast channels or cancel the subscription.

■ Vodafone Messenger

- Language: to select the language of the broadcast.
- Silent alert: to set whether to use an alert when there is a new broadcast message.
- Auto delete: to set whether to auto delete earlier messages when the broadcast inbox memory is full.


Vodafone Messenger

With this option, you can access the preset link. The link has been preset by Vodafone for you on the phone.

Templates

You can save the frequently-used SMS or MMS as template for your convenience.

8 Music

Music  enables you to manage your music files easily and conveniently. It also enables you to purchase a wide variety of latest music from Vodafone.

Music Library

You can play various music files, including those supplied with the phone, recorded by using the phone, downloaded from the Internet, and attached to email. You can also enjoy the online audio files.

In Music library, select **Options >Add tracks**, you can add the music files in the handset or memory card to the music library. You can also select **Options > Refresh**, and all music files in the music folder of the handset and memory card are automatically added to the music library.

Function Options During Playing



During playing the music file, select **Options** for the following operations.

- Now playing: To access the current playlist.
- Mute/Unmute: To mute or unmute the music.
- Playlist: To access the music playlist.







- Bookmarks: To access the bookmark list.
- Info.: To view the information of the music files.
- Video camera: To enable the video camera function.
- Shuffle: To enable/disable the random play.
- Loop: To play current music circularly, loop all music or close.
- Equalizer: To select the music style.
- Streaming setting: To set the streaming setting.
- Exit: To exit the music play screen.

Screen Operations During Playing

During playing the music file, you can perform the following operations on the music file.

Operation	Description
	Press the up scroll key to access the current playlist.
	Press the down scroll key to go back to the beginning of the current music file.

Playlists

Operation	Description
	Press the right scroll key to access the next music file. Press and hold the right scroll key to fast forward the current music file.
	Press the left scroll key to access the last music file. Press and hold the left scroll key to fast backward the current music file.
	Press  to pause the playing. Press  again to resume the playing
	Press the volume keys to adjust the volume.

Playlists

Selecting this option, you can rename and edit the playlist as well as play the music in the playlist.

Vodafone Radio DJ

Vodafone Radio DJ is a service which provides you a selection of different music channels. If you skip

tracks on a channel you listen to, the service recognises the kind of music you are skipping. Then, it does not offer such music again on that channel. You can also easily mark music tracks that you like, to download them later on.

Music Store

In the Vodafone music store, you can find a great variety of music to download onto your mobile phone.

My Wishlist

On your music wishlist, you can find all the songs which you have marked to download while listening to a Vodafone Radio DJ channel.