



Quick Start

Thank you for purchasing the Mobile WiFi. This Mobile WiFi brings you a high speed wireless network connection.

This document will help you understand your Mobile WiFi so you can start using it right away. Please read this document carefully before using your Mobile WiFi.

For detailed information about the functions and configurations of the Mobile WiFi, refer to the online help on the web management page that comes with the Mobile WiFi.

For detailed instructions for logging in to the web management page, refer to "Logging In to the Web Management Page".

Getting to Know Your Mobile WiFi


Note:

The Mobile WiFi function descriptions and illustrations in this document are for your reference only. The product you have purchased may vary.


Application Scenarios

Wi-Fi devices (such as smartphones, tablet computers, and game consoles) or computers can all access the Internet through the Mobile WiFi. The specific connection procedure depends on the operating system of the Wi-Fi device or computer. Establish a connection according to your device's specific instructions.

 
Scenario 1: Connecting multiple devices through Wi-Fi

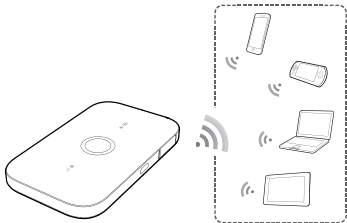

Scenario 2: Connecting a single device through USB

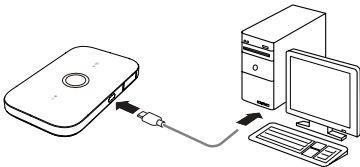 

Scenario 3: Connecting multiple devices through Wi-Fi and USB simultaneously

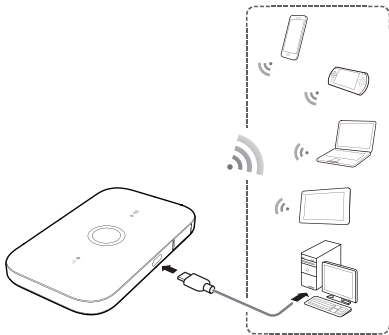 

Appearance

❶ Battery indicator

 
- Green: Sufficient battery.
- Blinking green: Charging the battery.
- Red: Low battery.

❷ Power button

❸ Micro USB port

❹ Signal indicator

- Green: Strong signal.
- Orange: Weak signal.
- Red: No signal.

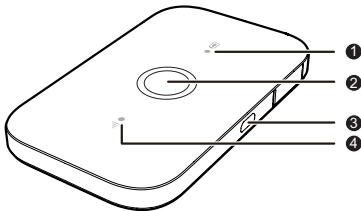


SSID and Wireless Network Encryption Key

When a Wi-Fi device establishes a connection to the Mobile WiFi for the first time, you may need to enter the default Service Set Identifier (SSID) and wireless network encryption key.

The default SSID and encryption key are printed on the Mobile WiFi label.

 It is recommended that you can log in to the web management page and change your SSID and wireless network encryption key.

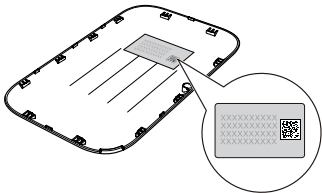


Connecting an Android Device to the Mobile WiFi Using a 2D Barcode

1. Search for HUAWEI Mobile WiFi in Google Play or HUAWEI App Center and download the app to your Android device.
2. Scan the 2D Barcode on the Mobile WiFi label using the HUAWEI Mobile WiFi App. Your Android device will then connect to the Mobile WiFi.

Getting Started

Installing

 Install the SIM card, and battery according to the illustration.

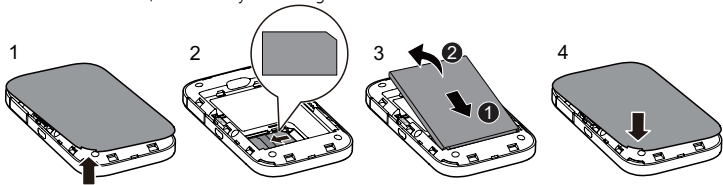


Charging the Battery

If the Mobile WiFi has not been used for a long time or if the battery is fully depleted, the Mobile WiFi may not power on immediately after the charger is plugged in. Please charge the battery for a while before attempting to power on the Mobile WiFi.

Method 1: Use the charger to charge the device

Note:

 
- Only use chargers compatible with the Mobile WiFi and provided by a designated manufacturer. Use of an incompatible charger or one from an unknown manufacturer may cause the Mobile WiFi to malfunction, fail, or could even cause a fire. Such use voids all warranties, whether expressed or implied, on the product.
- The charger is an optional accessory. If it is not included in the package, you may contact an authorized dealer to buy a charger compatible with the Mobile WiFi.

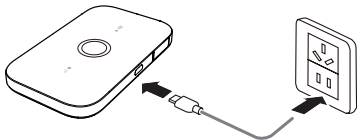

- The Mobile WiFi's charger model is HW-050100XYW. X and Y represent letters or numbers that vary by region. For details about the specific charger model, contact an authorized dealer.

Method 2: Charge the device through a computer connection

 Use the data cable provided with your device to connect the Mobile WiFi to the computer.

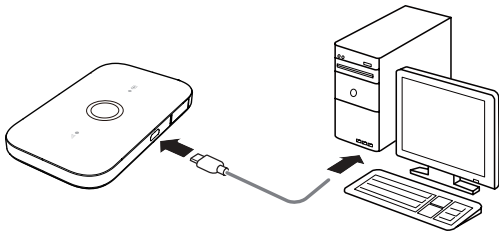

Connecting to the Internet via Wi-Fi

 
The Mobile WiFi's management parameters have been preset according to your operator's requirements. You can quickly connect to the Internet by following these steps:

Step 1: Turn on the Mobile WiFi

Press and hold the power button until indicator lights up, indicating that the Mobile WiFi is turned on.

Note:

Press and hold the power button to turn off the Mobile WiFi.

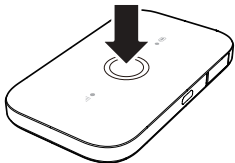

Step 2: Establish a Wi-Fi connection (using a computer running the Windows 7 operating system as an example)

1. Ensure that the Wi-Fi function is enabled.
2. Select **Start > Control Panel > Network and Internet > Network and Sharing Center > Connect to a network**.

Note:

Before establishing a Wi-Fi connection, ensure that the computer is equipped with a wireless network adapter. If the computer indicates a wireless network connection, the wireless network adapter can be used. Otherwise, verify that your wireless network adapter is working properly.

3. Select the wireless network connection with the Mobile WiFi's SSID and click **Connect**.

Note:

- If the wireless network connection is encrypted, enter the correct wireless network encryption key.
 - The default SSID and encryption key are printed on the Mobile WiFi's label.
4. Wait a moment for the wireless network connection icon to appear in the system tray in the lower right corner of the computer screen. The wireless network connection is then established.

Step 3: Connect to the Internet

If data is transmitted, the Mobile WiFi will automatically connect to the Internet. If data is not transmitted for a period of time, the Mobile WiFi will automatically disconnect from the network connection.

Note:

You can log in to the web management page and enable or disable the automatic dialing while roaming function. If this function is turned off, when the Mobile WiFi enters a roaming network, it will automatically disconnect from the Internet connection that has already been established. You will need to manually establish this network connection again.

Logging In to the Web Management Page

1. Make sure the connection between the Mobile WiFi and the Wi-Fi device or computer is working normally.
2. Open the browser, and enter **http://192.168.1.1** in the address box.
3. Enter the user name and password to log in to the web management page.

Note:

- The default user name is **admin**.
- The default password is **admin**.

Verifying the PIN

If the Mobile WiFi's network parameters have been correctly configured but you cannot access the Internet after powering it on, PIN verification may be enabled. Log in to the web management page and enter the PIN when prompted. To avoid entering the PIN every time you power on the Mobile WiFi, disable PIN verification from the web management page.

The PIN/PUK is delivered with your SIM card. For more details, contact your service provider.

Connecting the Device to Mobile WiFi App through Wi-Fi

To download the HUAWEI Mobile WiFi App

For an iPhone or iPad, search for HUAWEI Mobile WiFi in App Store or scan the 2D Barcode on the right side.



For Android devices, search for HUAWEI Mobile WiFi in Google Play or HUAWEI App Center or scan the 2D Barcode on the right side.



Take Android phone as Example

 
The following figures shows the appearance of the HUAWEI Mobile WiFi App. It is provided only for your reference. The actual figures may be different.

1. Install the HUAWEI Mobile WiFi App on your phone or pad.
2. Connect your phone or pad to the Mobile WiFi through Wi-Fi.
3. Touch HUAWEI Mobile WiFi App's icon to open the HUAWEI Mobile WiFi App, and manage your Mobile WiFi.



Name(SSID) and Password settings

4. Touch , select Settings > My Wi-Fi.

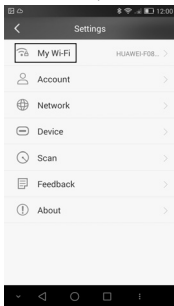


5. Modify the Name(SSID) and Password, then touch



A screenshot of an Android smartphone's 'My Wi-Fi' settings screen. The status bar at the top shows the time as 12:00 and various icons. The screen has a dark header with a back arrow, the title 'My Wi-Fi', and a checkmark button. Below the header, a light gray box contains the text: 'After the Wi-Fi name or password is changed, reconnect to the Wi-Fi network'. The main area has two sections: 'Wi-Fi name' with a text input field containing 'H34W0FD-FOBA-200-guaji', and 'Password' with a password input field showing eight dots and a visibility toggle icon. The bottom of the screen shows the standard Android navigation bar.

Login Account settings

 6. Touch , select **Settings** > **Account**.

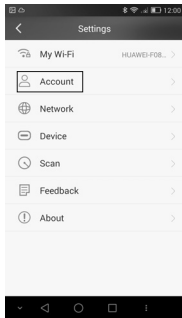


  7. Touch **Modify login password** for modify the password, then touch

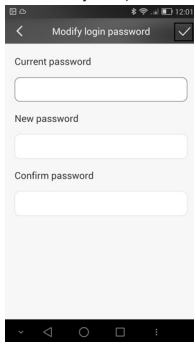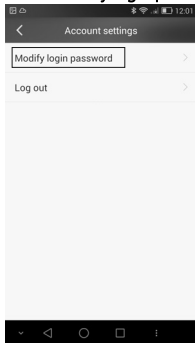


View the messages

 8. Touch  for select SMS.

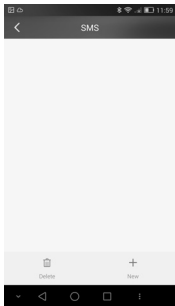

 9. Touch  to write the new messages, then touch  for send messages.

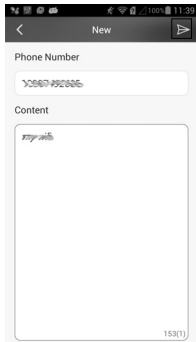

Battery Saving Mode

 
If the Mobile WiFi has been inactive for some time, it enters the standby mode and all the indicators are off. Pressing the power button causes the indicators to light up.

When the Mobile WiFi is being powered only by the battery, you can choose to enable or disable the automatic Wi-Fi off function. If this function is enabled and if no Wi-Fi devices access the Mobile WiFi for a period of time, the Wi-Fi turns off automatically. You can press the power button to turn the Wi-Fi on again.

Restoring to Factory Settings


If you forget the user name, password, or SSID you have set, you can restore the Mobile WiFi to its factory settings.

To do so, simply press and hold the **RESET** button until the Mobile WiFi restarts.

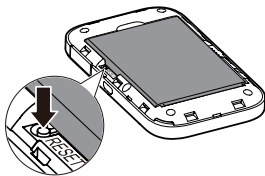

Example: Connecting to a Tablet Computer (for example, iPad) through Wi-Fi

 1. Touch **Settings** > **Wi-Fi** to turn on Wi-Fi.
2. The tablet computer automatically searches for wireless connections and displays a list of access points.
3. Select the access point with the Mobile WiFi's SSID.
4. If required, enter the correct wireless network encryption key, and tap **Join**. (The lock icon indicates that the encryption key is required to connect to this wireless network.)

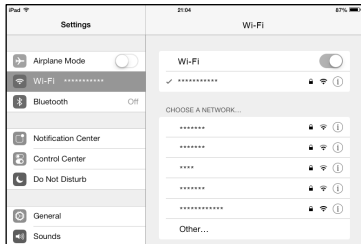

Note:

Wi-Fi devices, such as an iPhone, iPod touch, PS3 and NDSi, can all access the Internet through the Mobile WiFi. For specific operations, refer to the Wi-Fi device's user manual.

Tips

When the Mobile WiFi is in use for an extended period of time, it will become warm and may overheat. Should this happen, the Mobile WiFi will automatically close the network connection and turn off to protect itself from damage. If this occurs, place the Mobile WiFi in a well ventilated space to allow the heat to dissipate, then turn it on and continue to use it as normal.

If you are unable to use the Mobile WiFi as normal, try the following:

- Consult the online help on the web management page.
- Restart the Mobile WiFi.
- Restore the Mobile WiFi to the factory settings.
- Consult your operator.

LTE is a trademark of ETSI.

31010TNU_01

