

Huawei Ascend XT²TM

User Guide



Contents

Foreword

Unboxing your Phone

Inserting a SIM card and microSD card	2
Charging your device	2
Viewing the battery status	4

Getting Started

Setup Wizard	5
Connecting to the Internet	5

Screen and Display

Home screen	7
Locking and unlocking the screen	16
Notification panel and status bar	17
Themes	20
Global search	20
Screenshot	22
Screen recording	25
Split-screen mode	27
Using motion gestures	29
Eye comfort mode	30
Display settings	31

Network and Sharing

Mobile Internet	33
Wi-Fi	35
Bluetooth	37
VPNs	38
Using Huawei Share to transfer files between two Huawei devices	39
Using a USB port to transfer data	39

Security

Security settings	41
-------------------	----

Camera and Gallery

Camera options	42
Photos and video recordings	42
Pro camera mode	45
Perfect Selfie mode	47
Slow-mo recording	47
Time-lapse mode	48

Audio note	48
Managing shooting modes	48
Configuring the camera settings	49
Viewing photos and videos	50
Organizing albums	51
Editing a photo	52
Configuring Gallery	54

Calls and Contacts

Making calls	56
Answering calls	57
Making a conference call	58
In-call options	59
Managing call logs	59
Call settings	60
Creating a contact card	61
Creating a new contact	62
Importing and exporting contacts	63
Managing contacts	63
Searching for contacts	65
Sharing contacts	66
Adding a contact to your favorites	66
Changing contact photos	66
Viewing call records for individual contacts	67
Assigning a ringtone to a contact	67
Contact groups	67

Messaging and Email

Sending a message	69
Replying to a message	69
Searching for messages	70
Deleting message threads	70
Managing messages	70
Returning to the top of the message list	70
Pinning messages to the top of the list	71
Marking messages as read	71
Blocking spam messages	71
Adding a message signature	71
Configuring the message ringtone	71
Adding an email account	72
Sending emails	72
Replying to emails	73
Managing emails	73
Configuring Mail	74

Calendar and Notepad

Changing the calendar view	75
Viewing global holidays	75
Birthday reminders	75
Creating an event	76
Sharing events	76
Deleting an event	76
Searching for events	77
Creating a note	77
Managing notes	77

Phone Manager

Optimizing performance	79
Enhancing speed	79
Managing data usage	79
Harassment filter	80
Battery Management	81
Managing app permissions	82
Virus scanner	82
Encrypting apps	82
Setting apps to close automatically when the screen is locked	83
Configuring Phone Manager	83

Tools

Clock	84
Sound recorder	85

System Features and Settings

Power on and off timer	87
Restarting your device	87
Changing the system language	87
Input method settings	87
Editing text	88
Airplane mode	88
Configuring the sound settings	89
One-handed UI	90
Do not disturb mode	91
Viewing memory and storage information	91
Setting the date and time	92
Enabling location access	92
Restoring factory settings	93
Viewing product information	93
Accessibility features	94

Obtaining help

Personal Information and Data Security

List of safety features

Legal Notice




Foreword

Read this guide carefully before using your device.

All pictures and illustrations in this document are for your reference only and may differ from the final product.


Some features in this guide may not be supported by certain devices or carriers.

 
Symbols and definitions

	Description	Highlights important information and tips, and provides additional information.
	Reminder	Indicates potential problems that may arise if proper care or attention is not given, such as device damage or data loss.
	Warning	Warns you about potential hazards that could cause serious injury.

Unboxing your Phone

Inserting a SIM card and microSD card

- The SIM card slot only supports nano-SIM cards. Contact your carrier for a new or replacement nano-SIM card.
 - Only use standard nano-SIM cards to avoid damaging the SIM card tray.
 - Ensure that the card is in the correct position and keep the card tray level when inserting it into your device.
 - Be careful not to hurt yourself or damage your device when using the SIM eject pin.
 - Store the SIM eject pin out of the reach of children to prevent accidental swallowing or injury.
 - The SIM eject pin should only be used to eject the SIM card tray. Inserting the SIM eject pin into other holes may damage your device.
- 1** Touch and hold the power button and touch  to turn off your device.
 - 2** To remove the card tray, insert the SIM eject pin included with your device into the small hole next to the card tray.

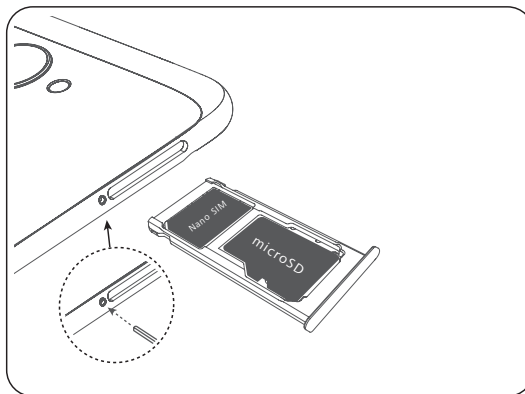


- 3** Insert a SIM card or microSD card into the card tray.
- 4** Insert the card tray back into your phone in the correct orientation.


Charging your device

Your device displays a low battery warning when the battery is nearly empty. Charge your device immediately to prevent it from switching off automatically.

Using a charger to charge your device

Connect your device to a socket using the factory-provided charger and USB cable.

 You must use the charger and USB cable that came with your device for quicker charging speeds. Using other chargers or USB cables may cause your device to continuously restart or increase the charging time. It may also cause the charger to overheat, or even damage your device.

-  • If your device does not respond when you press the power button, the battery is probably empty. Charge your battery for at least 10 minutes (use the charger that came with your device), and then restart your device.
- Your device automatically conducts a safety check when you connect it to a charger or other devices. If your device detects that the USB port is wet, it will automatically stop charging and display a safety message. If this message is displayed, unplug the USB cable from your device and allow the USB port to dry out completely to avoid damaging your device or battery.

Using a USB port to charge your device


If you do not have access to a charger, you can charge your device by connecting it to a computer with a USB cable.

1 When you use a USB cable to connect your device to a computer or another device, **Allow access to device data?** will be displayed in a popup dialog.

2 Touch **No, charge only**.





If another USB connection mode has been selected, swipe down from the status bar to open the notification panel. Touch **File transfer via USB**, and then select **Charge only**.

Safety information

- Only use genuine Huawei batteries, chargers, and USB cables to charge your device. Third-party accessories are a potential safety hazard and may impair your device's performance.
- You can recharge your battery many times, but all batteries have a limited lifespan. If you notice a significant deterioration in your device's battery life, purchase a genuine Huawei replacement battery. Do not attempt to remove built-in batteries. If your device has a built-in battery, contact an authorized Huawei service center for a replacement. If the battery is removable, replace it with a genuine Huawei battery.
- Your device may become warm after prolonged use or when exposed to high ambient temperatures. If your device becomes hot to the touch, stop charging it and disable unnecessary features. Place your device in a cool location and allow it to cool down to room temperature. Avoid touching the surface of your device for prolonged periods when it becomes hot.
- Charging times may vary depending on the ambient temperature and the remaining battery level.
- Avoid using your device when it is charging. Do not cover your device or the charger.
-  For more information on charging and battery care, visit <http://consumer.huawei.com/> and search for your device's user guide.

Battery status information

The battery status is indicated by your device's indicator light and the battery icon in the status bar.



Status indicator	Battery icon	Battery status
Blinking or steady red		Less than 4% remaining
Red		Charging, less than 10% remaining
Yellow		Charging, 10–90% remaining
Green		Charging, at least 90% remaining. If 100% is displayed next to the battery icon in the status bar, or a charging complete message is displayed on the lock screen, this indicates that charging is complete.

Viewing the battery status

You can view the battery status and configure the status bar to display the remaining battery percentage.




Viewing the battery status

The battery status is indicated by the battery icon in the status bar.

Open  **Phone Manager**. Touch  to view the remaining battery percentage and usage time.

Displaying the remaining battery percentage in the status bar

You can display the remaining battery percentage in the status bar in two ways:

- Open  **Phone Manager**. Touch  and switch on **Remaining battery percentage**.
- Open  **Settings**. Touch **Notifications & status bar** > **Battery percentage**. Select **Next to icon** or **In icon** to display the remaining battery percentage in the chosen location. Select **Do not show** if you do not want the remaining battery percentage to be displayed.

Getting Started


Setup Wizard

 
Ensure that the SIM card is inserted correctly before using your phone for the first time. Read the Quick Start Guide for more information on how to set up your phone. Press and hold the power button to turn on your phone, and then follow the onscreen instructions to complete the initial setup.

Connecting to the Internet


Connect to Wi-Fi networks effortlessly with your device.


Connecting to a Wi-Fi network


- 1 Swipe down from the status bar to open the notification panel.
- 2 Touch and hold  to open the Wi-Fi settings screen.
- 3 Switch on **Wi-Fi**. Your device will list all available Wi-Fi networks at your location.
- 4 Select the Wi-Fi network you want to connect to. If you select an encrypted network, you will also need to enter the Wi-Fi password.

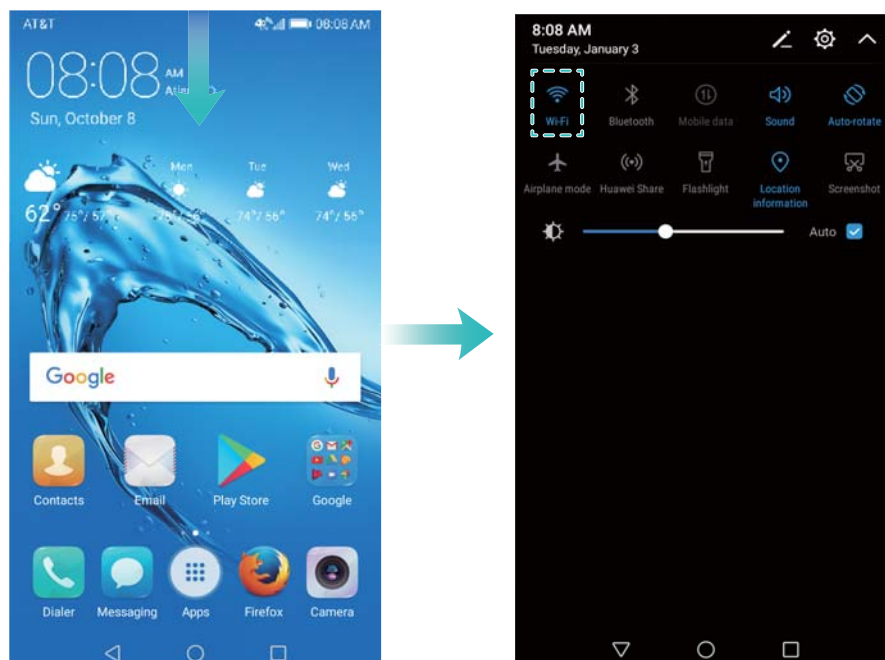

Connecting using mobile data

 Before using mobile data, ensure that you have a data plan with your carrier to avoid incurring excessive data charges.

- 1 Swipe down from the status bar to open the notification panel.
- 2 Touch  to enable mobile data.

 
-  Disable mobile data when not required so as to save battery power and reduce data usage.

Screen and Display

Home screen


About the home screen

Use the home screen to access your apps and widgets.

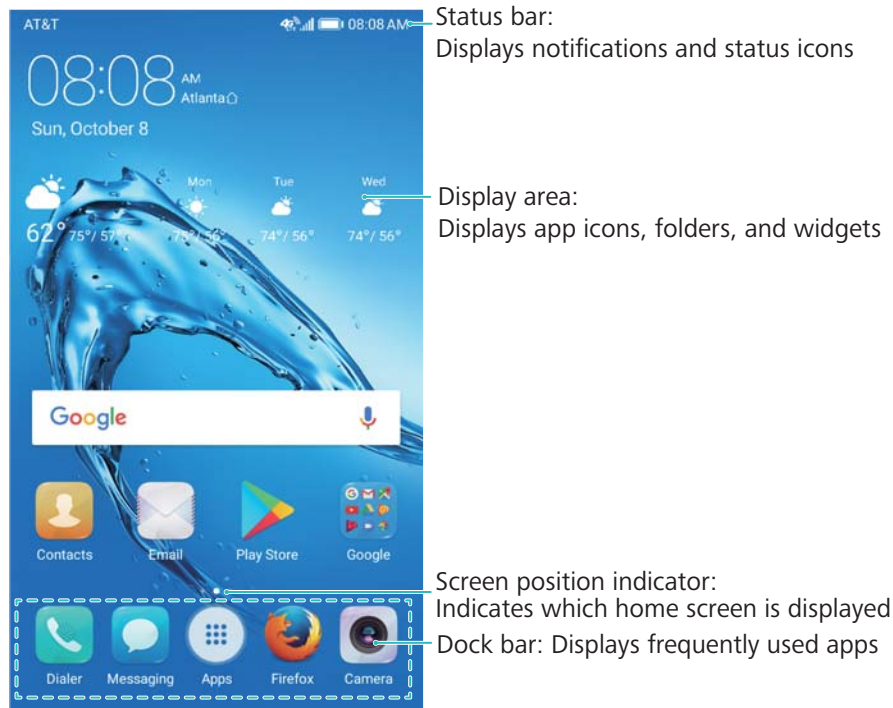


Basic screen gestures

 
Use simple touchscreen gestures to perform a variety of tasks, such as launch apps, scroll through lists, and enlarge images.

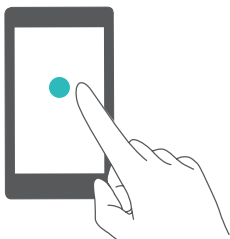

 
Touch: Touch an item once. For example, touch to select an option or open an app.

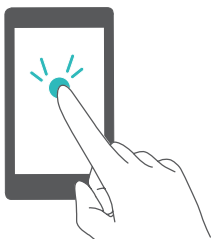

 
Double touch: Touch the target area of the screen twice in quick succession. For example, double touch an image in full screen mode to zoom in or out.

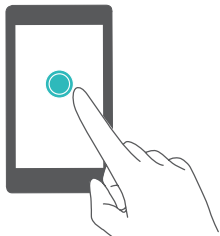

 
Touch and hold: Touch and hold the target area of the screen for at least 2 seconds. For example, touch and hold a blank area on the home screen to access the home screen editor.

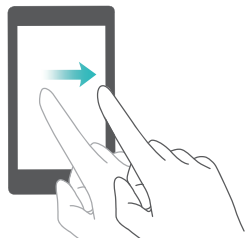

 
Swipe: Swipe your fingers on the screen. Swipe vertically or horizontally to browse other home screens, scroll through a document, and more.

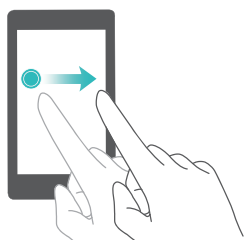

 Drag: Touch and hold an item, and then move it to another position. For example, use this gesture to rearrange apps and widgets on the home screen.

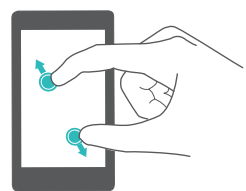

 
Spread fingers apart: Spread two fingers apart on the screen. For example, spread two fingers apart to zoom in on a picture or web page.

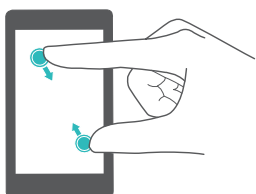


Pinch fingers together: Pinch two fingers together on the screen. For example, pinch two fingers together to zoom out on an image.

Enabling the standard home screen

Enabling the standard home screen



- 1 Open  **Settings**.
- 2 Touch **Home screen style > Standard**.

 
Reverting to the Drawer home screen

- 1 Open  **Settings**.
- 2 Touch **Home screen style > Drawer**.

Adding app shortcuts to the home screen

Add frequently used apps to the home screen for quick access.


- 1 On the home screen, touch  to view the list of apps.
 - 2 Touch and hold an app icon until your device vibrates, and then drag the app icon to the desired location on the home screen.
-  You must have enough space on the home screen. If there is not enough space, add another home screen or free up some space.

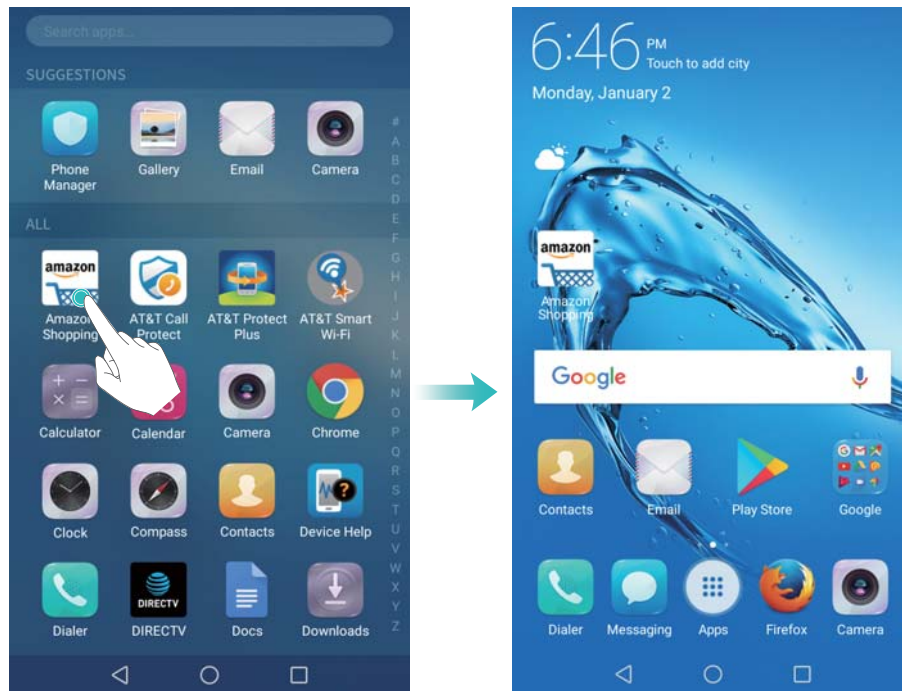

Switching to simple home screen

Simple home screen uses a simple layout and large icons for easier use.

 - 1 Open  **Settings**.
- 2 Touch **Advanced settings > Simple mode**, and touch .

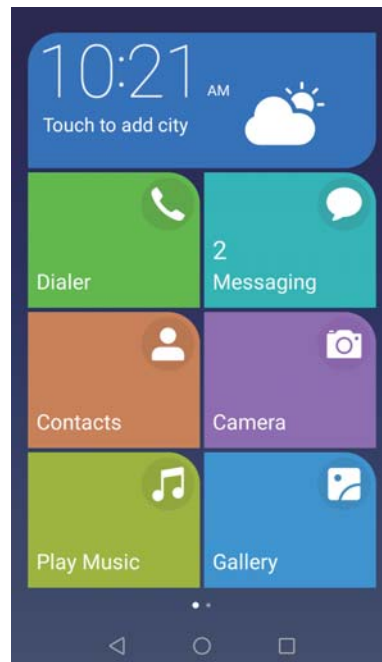

3 On the simple home screen, you can:

- Touch app icons to open them.
- Touch and hold an icon to enter the home screen editor mode. In this mode you can add or delete apps.
- Touch **Others** to open the app list and view or open more apps.
- Touch **Standard mode** to switch back to the standard home screen.

Displaying or hiding notification badges

Notification badges appear in the top-right corner of app icons. The badge number indicates the number of new notifications. Open the corresponding app to view notification details.



- 1** On the home screen, pinch two fingers together to open the home screen editor.
- 2** Touch **Settings** > **Badge app icons**.
- 3** Toggle the corresponding switch to enable or disable notification badges.

Setting the home screen wallpaper


Choose from a wide range of themes and wallpapers to personalize your device.


Changing the wallpaper

- 1** Open  **Settings**.
- 2** Touch **Display** > **Wallpaper** > **Set wallpaper**.

- 3 Select the desired wallpaper and follow the onscreen instructions to set it as the home screen or lock screen wallpaper (or both).

Changing the wallpaper automatically

- 1 Open  **Settings**.
- 2 Touch **Display > Wallpaper**.
- 3 Switch **Randomly change home screen wallpaper** on or off.

 
 When Randomly change home screen wallpaper is enabled, you can configure the **Interval** and **Album to display** so that your wallpaper can change automatically at the specified interval.

Managing home screen icons



You can easily move or uninstall apps on the home screen.


Moving home screen icons

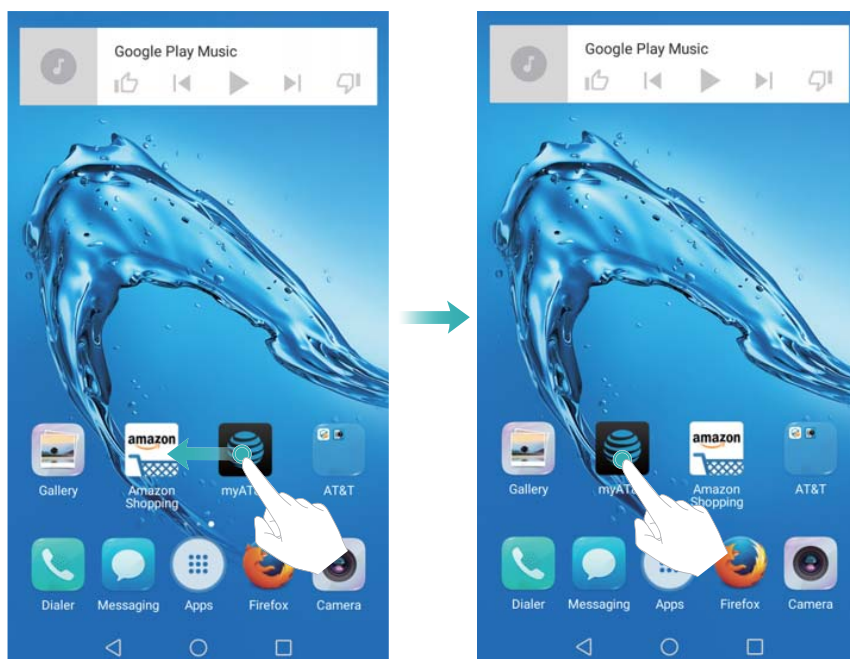On the home screen, touch and hold an app icon or widget until your device vibrates. You can then drag the app icon or widget to the desired location.



Uninstalling apps from the home screen

 On the home screen, touch and hold the app you want to uninstall until  is displayed at the top of the screen. Drag the unwanted app to , and follow the onscreen instructions.

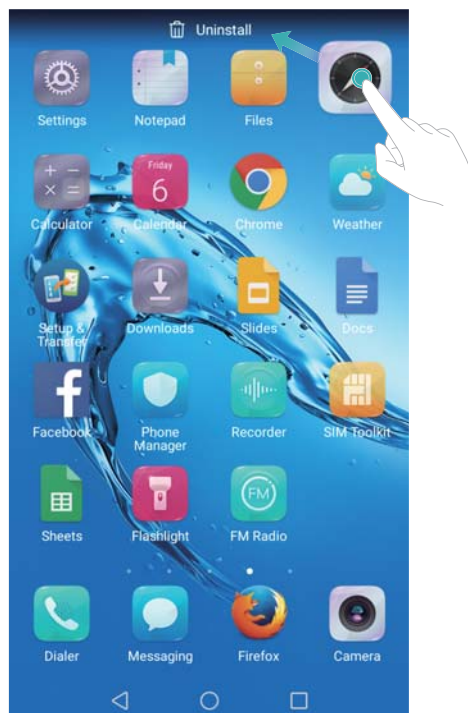


i Some pre-installed apps cannot be uninstalled for the proper running of the system.

Shaking your device to auto-align icons is for **Standard home screen mode only**

Gaps may appear on the home screen after you uninstall apps or move them into folders. You may use the following feature to arrange apps neatly on the home screen.

 - 1** On the home screen, pinch two fingers together to open the home screen editor.
- 2** Touch **Settings** and switch on **Shake**.
- 3** Return to the home screen and open the home screen editor again. Shake your device to rearrange apps so that gaps are filled.

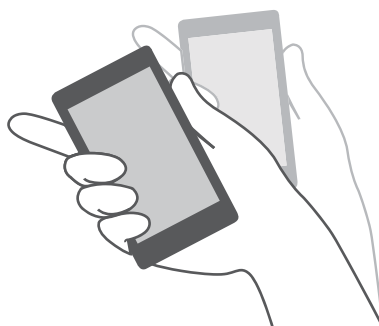


Managing home screens


You can customize home screens to your liking.


Adding home screens

 - 1** On the home screen, pinch two fingers together to open the home screen editor.
- 2** Touch **+** on the home screen furthest to the left or right to add a new screen.

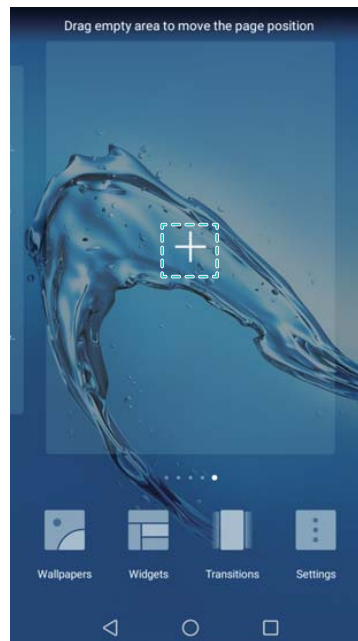

Deleting home screens

 - 1 On the home screen, pinch two fingers together to open the home screen editor.
- 2 Touch  on a blank screen to delete it.

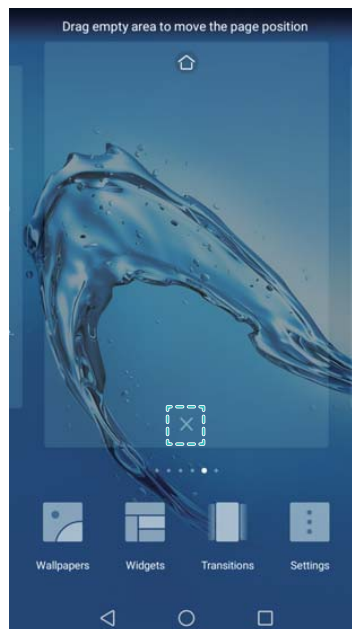


 You cannot delete a home screen if it contains apps or widgets.

Moving home screens

- 1 On the home screen, pinch two fingers together to open the home screen editor.
- 2 Touch and hold the home screen you want to move and drag it to the desired location.


Setting the default home screen

- 1 On the home screen, pinch two fingers together to open the home screen editor.
- 2 Touch  at the top of a home screen to set the chosen home screen as default.

Managing home screen widgets

Add, move, or delete widgets from the home screen.

Adding widgets

- 1 On the home screen, pinch two fingers together to open the home screen editor.
- 2 Touch **Widgets**. Select a widget and drag it to a blank area on the home screen.
 -  You must have enough space on the home screen. If there is not enough space, add another home screen or free up some space.



Moving widgets

On the home screen, touch and hold a widget until your device vibrates, and then drag the widget to the desired location.

Deleting widgets

On the home screen, touch and hold a widget until your device vibrates, and then drag the widget to **Remove** at the top of the screen.

 
Managing home screen folders

Organize your apps into folders so that you can find them more easily.

Creating a folder

Group your apps into categorized folders to make them easier to find. For example, you could create a Social folder for your social media apps.

On the home screen, drag an icon onto another icon to create a folder containing both apps.

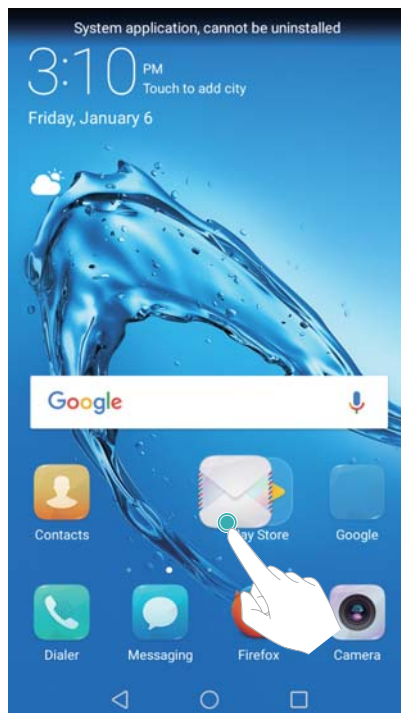

Renaming folders


To rename a folder, open it and touch the folder name.

Adding apps to a folder

- 1 Open the folder.
- 2 Touch **+**.
- 3 Select the apps you want to add and touch **OK**.

Removing apps from a folder

- 1 Open the folder.
- 2 Touch **+**.
- 3 Deselect the apps you want to remove and touch **OK**.

 You can also touch and hold an icon and drag it outside a folder to remove it.

Deleting folders



- 1 Open the folder.
- 2 Touch **+**.
- 3 Deselect all of the apps and touch **OK**. The folder will be deleted automatically.

Locking and unlocking the screen

Changing the lock screen style



Set a screen lock password to prevent unauthorized access to your device.

Setting the screen lock password


- 1 Open  **Settings**.
 - 2 Touch **Screen lock & passwords > Password**
 - 3 You can choose to unlock the screen with an unlock pattern, PIN, or password:
 - Touch **Pattern** and connect at least four dots twice to create a screen unlock pattern.
 - Touch **PIN**. Follow the onscreen instructions to create a PIN containing at least four digits, and then touch **OK**.
 - Touch **Password**. Follow the onscreen instructions to create a password containing at least four characters, and then touch **OK**.
-  To remove the screen lock password, touch **None** and follow the onscreen instructions.

Locking the screen

Lock the screen to reduce power consumption and prevent unintended presses or unauthorized access to your data.

- **Manual lock:** Press the **Power button** to manually lock the screen.
 - **Automatic lock:** The screen will lock automatically and enter sleep mode after the preset sleep time to reduce power consumption and prevent unintended operations.
-  To change the screen sleep time, touch  **Settings > Display > Sleep** and select a time.

Unlocking the screen


- 1 Press the **Power button** to turn on the screen.
 - 2 Swipe on the screen in any direction.
-  If you have set a screen unlock pattern, PIN, or password, you will need to draw the unlock pattern or enter your PIN/password to unlock the screen.

Configuring Magazine Unlock Images




You can configure Magazine unlock to customize your lock screen wallpapers.

Sharing Magazine unlock wallpapers

Share your favorite Magazine unlock wallpapers with your friends.

- 1 Swipe up from the bottom of the lock screen to display the Magazine unlock options.
- 2 Touch , and then select how you want to share the wallpaper and follow the onscreen instructions.

 
Adding offline wallpapers


- 1 Swipe up from the bottom of the lock screen to display the Magazine unlock options.
- 2 Touch  to access the subscriptions list.
- 3 Touch .
- 4 Select the desired images and touch .

Accessing tools from the lock screen

Launch apps directly from the lock screen.


- 1 Swipe up from the bottom of the lock screen to display lock screen features and tools.
- 2 Touch the shortcut icon on the bottom of the screen to launch the app you want to access.

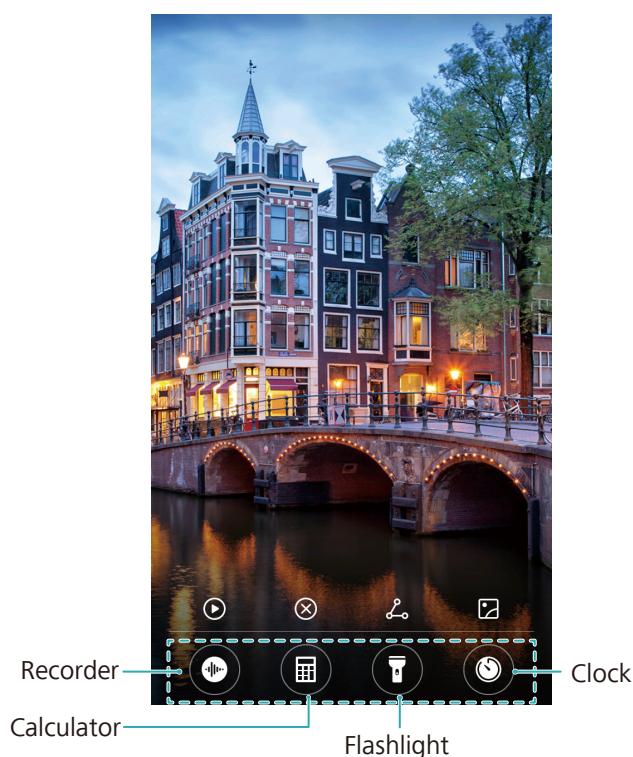

-  Swipe up on the camera icon on the lock screen to directly open the camera.

Configuring your lock screen signature

Configure a lock screen signature to personalize your lock screen.

- 1 Open  **Settings**.
- 2 Touch **Screen lock & passwords > Lock screen signature**.
- 3 Enter your lock screen signature and touch **Save**.

Your lock screen signature will be displayed on the lock screen.

Notification panel and status bar

About the status bar

Use the status bar to access the notification panel and check your device's status.

Opening the notification panel and status bar

Opening the notification panel and status bar from the lock screen

Turn on the screen and swipe down from the status bar to open the notification panel. Then you can switch on or off shortcut switches, or view notification messages.

Opening the notification panel and status bar when the screen is unlocked
















Swipe down from the status bar to open the notification panel. Then you can switch on or off shortcut switches, or view notification messages.

About notification and status icons

Status icons

Status icons are displayed on the right-hand side of the notification bar and tell you about your device's status, including network connections, signal strength, battery, and time.

 Status icons may vary according to your region or carrier.

	Signal strength		No signal
4G LTE	Connected over 4G	4G	Connected over 3G
	Connected to a VPN	4G	Connected over HSPA
4G	Connected over HSPA+		Airplane mode enabled
	Bluetooth enabled		Connected over Wi-Fi
	Vibration mode enabled		Receiving location data from GPS
	Alarm enabled		Silent mode enabled
	Battery full		Charging
	Headset inserted		Battery low
	No SIM card found		

Notification icons


Notification icons are displayed on the left-hand side of the status bar when you receive a new message, notification, or reminder.

	Missed calls		New emails
---	--------------	---	------------

...	More notifications	🔔	New voicemail
↓	Downloading data	↑	Uploading data
📅	Upcoming events	💾	Device memory full
📶	Wi-Fi network available		


Configuring notifications

You can configure the notification settings for each app.


- 1 Open  **Settings**.
- 2 Touch **Notifications & status bar > Notifications management**.
- 3 Select the app that you want to configure and enable or disable notifications as desired.

Configuring the screen to turn on when you receive a notification

Configure the screen to turn on when you receive a new notification to avoid missing important information.

- 1 Open  **Settings**.
- 2 Touch **Notifications & status bar**.
- 3 Toggle the **Notifications turn on screen** switch.

Configuring the status bar



Open  **Settings**, touch **Notifications & status bar**. Toggle the **Notification method** or **Battery percentage** switches to configure which information is displayed in the status bar.

Using shortcut switches to access settings


Use shortcut switches to quickly enable or disable frequently-used features.

Accessing shortcut switches

Swipe down from the status bar to open the notification panel.

-  Touch  to display all of the shortcut switches.

Configuring shortcut switches

- 1 Swipe down from the status bar to open the notification panel.
- 2 Touch . Touch and hold a switch and drag it to the desired position.



- 3 Touch a switch to enable the corresponding feature. If the switch supports touch and hold gestures, touch and hold the switch to access the settings for the corresponding feature.


 Some switches do not support touch and hold gestures.

Themes

About themes

Themes help you to personalize your home screen by changing the wallpaper, app icons, and more.

Changing the theme

 
- 1 Open  **Themes**.
- 2 You can:
 - Select a theme and follow the onscreen instructions to configure the settings.
 - Touch **Customize** to mix and match lock screen methods, wallpapers, app icons, and more.

Global search

About global search

Use global search to find apps, contacts and messages on your device.

Swipe down on the home screen to open the global search window, and then enter your search terms.

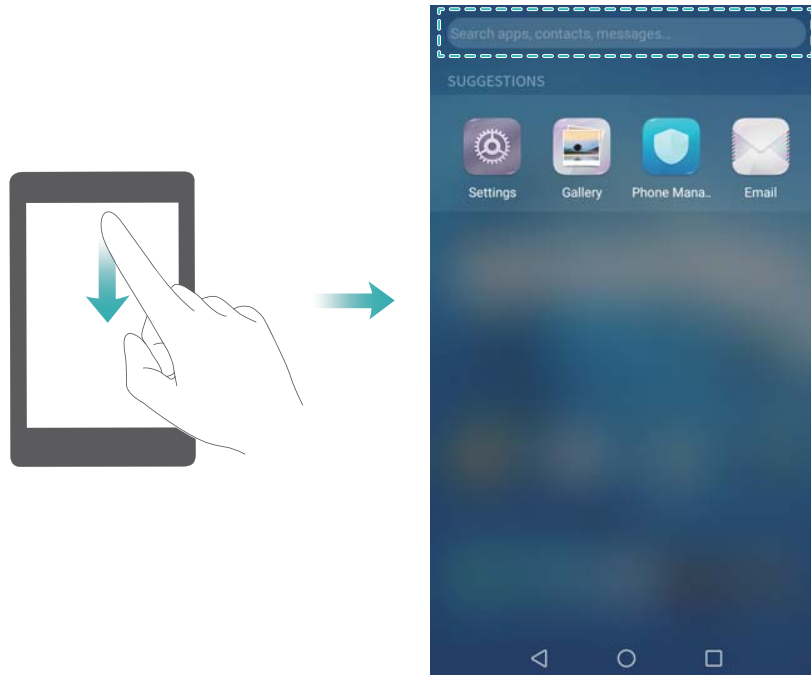


Searching for content on your device

Searching for contacts

- 1 Swipe down on the home screen to display the search bar.
- 2 Touch the search bar and enter the contact name, initials, phone number, email address, or other information. Matching results will be displayed underneath.
 - i To improve the accuracy of search results, enter more than one keyword. Each keyword should be separated by a space (for example "John Smith New York").


Searching for SMS messages

- 1 Swipe down on the home screen to display the search bar.
- 2 Enter one or more keywords. The results will be displayed underneath the search bar.
 - i Alternatively, open  **Messaging** and enter one or more keywords in the search bar.

Searching for emails

- 1 Swipe down on the home screen to display the search bar.
- 2 Enter one or more keywords (such as the email subject). The results will be displayed underneath the search bar.

Searching for apps

- 1 Swipe down on the home screen to display the search bar.
- 2 Enter one or more keywords. The results will be displayed underneath the search bar.
 - i When using the Drawer home screen layout, you can also search for apps by touching  and entering the app name in the search bar.

Searching for settings

- 1 Swipe down on the home screen to display the search bar.
- 2 Enter one or more keywords. Matching menu options from **Settings** will be displayed under the search bar.

Screenshot

Capturing the entire screen

 
Taking a screenshot with the power and volume down buttons

Press the **Power button** and **Volume down button** to take a full screenshot.



Screenshot shortcut

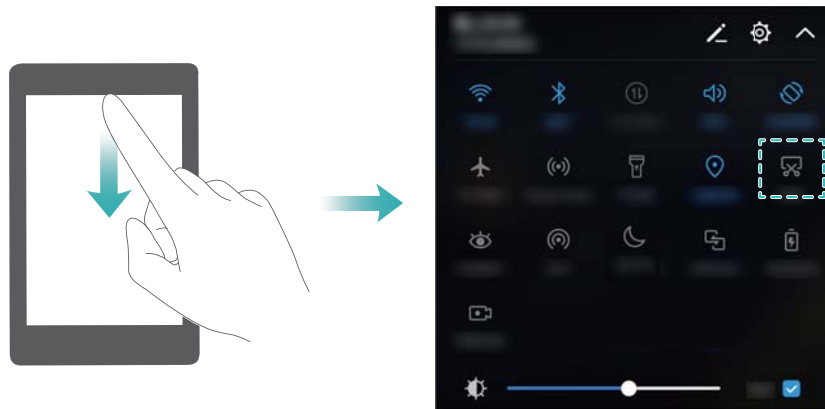

Open the notification panel, and then touch  in the Shortcuts tab to take a full screenshot.





Taking scrolling screenshots

Use scrolling screenshots to capture content that does not fit on the screen. This is useful for sharing chat conversations, web pages, or large images.

Using the shortcuts tab

- 1 Open the notification panel, and then touch  to take a standard screenshot.
- 2 After taking the screenshot, touch  to take a scrolling screenshot.
- 3 The screen will scroll down automatically as your device captures a screenshot.





 Ensure that you touch  within 3 seconds of taking the screenshot.

Viewing, editing, deleting, and sharing screenshots

Viewing screenshots



- 1 Open  **Gallery**.
- 2 On the **Albums** tab, touch **Screenshots** to view your screenshots.

Editing a screenshot



- 1 After taking a screenshot, touch .
- 2 Choose the desired options to edit the image.
- 3 Touch  to save the changes.



Sharing a screenshot

- 1 Open  **Gallery**.
- 2 On the **Albums** tab, touch **Screenshots**.
- 3 Select the screenshot you want to share and touch .
- 4 Choose how you want to share the screenshot and follow the onscreen instructions.

Deleting a screenshot

- 1 Open  **Gallery**.
- 2 On the **Albums** tab, touch **Screenshots**.
- 3 Select the screenshot you want to delete and touch .


Screen recording

 
About screen recordings

Use the screen recording feature to record footage and share it with friends.

Screen recorder

Using the screen recorder shortcut switch

To start a screen recording, open the notification panel and touch  .

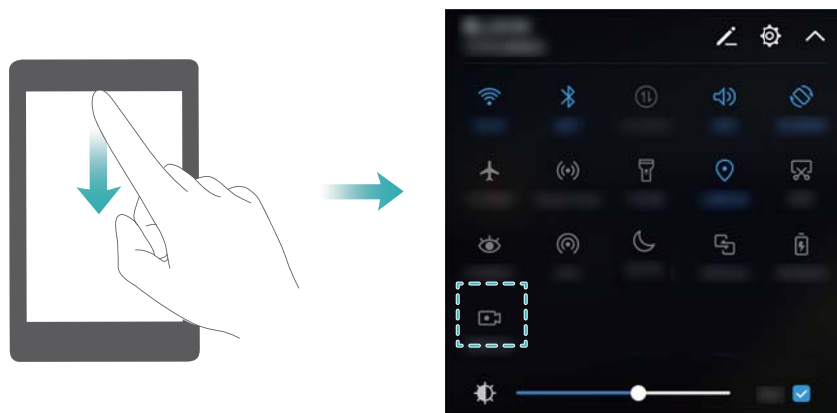

Pressing buttons to record

Press the **Volume up button** and **Power button** simultaneously.



Viewing, sharing, and deleting screen recordings

Viewing screen recordings

Open **Gallery** and go to **Screenshots** or **Screen recordings** to view your screen recordings.

Sharing screen recordings

- 1 Open **Gallery**.
- 2 On the Albums tab, touch **Screenshots** or **Screen recordings**.
- 3 Select the screen recording you want to share and touch .
- 4 Choose how you want to share the recording and follow the onscreen instructions.

Deleting screen recordings

- 1 Open **Gallery**.
- 2 On the Albums tab, touch **Screenshots** or **Screen recordings**.
- 3 Touch and hold the screen recording that you want to delete and select .
- 4 Touch **Delete**.

Configuring the default storage location for screen recordings

Not all devices support microSD cards.

- 1 Insert a microSD card into your device.
- 2 Open **Settings**.
- 3 Touch **Memory & storage** > **Default location** to set the default storage location to **Internal storage** or **SD card**.

Split-screen mode

About split-screen mode

 
Use split-screen mode to use two apps at once.

How to enable split screen mode

Split screen mode is not available for all apps. Some apps may not function properly in split screen mode.


Using swipe gestures to enable split screen mode


Open an app that supports split screen mode, and then swipe up from the bottom of the screen with two fingers.

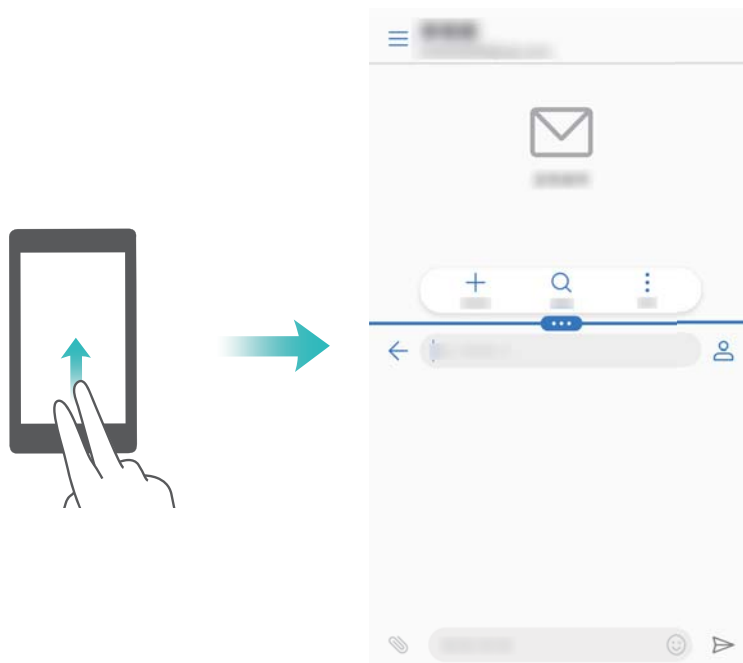

Split Screen Mode


Switching to full screen mode

  In split screen mode, touch and hold  and swipe up or down to switch to full screen mode.

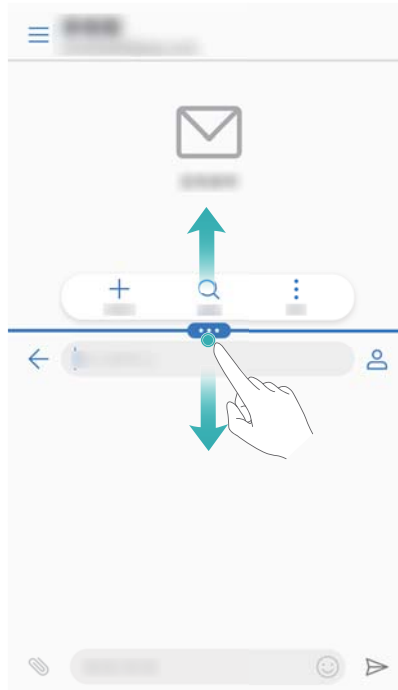


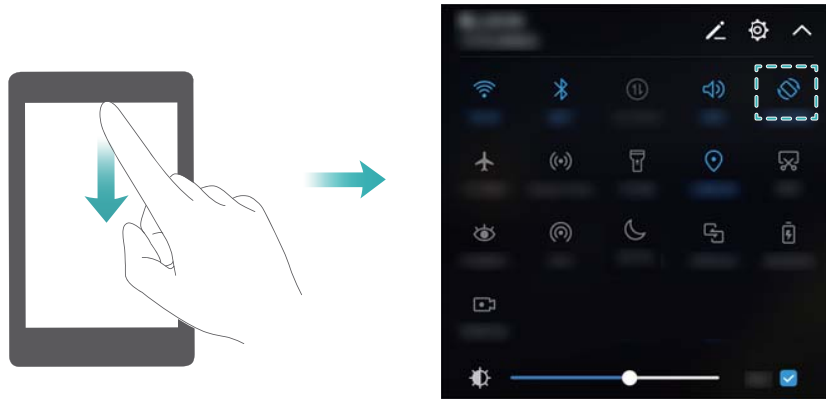 
Swapping screens

In split screen mode, touch , and then touch  to switch the position of the screens.

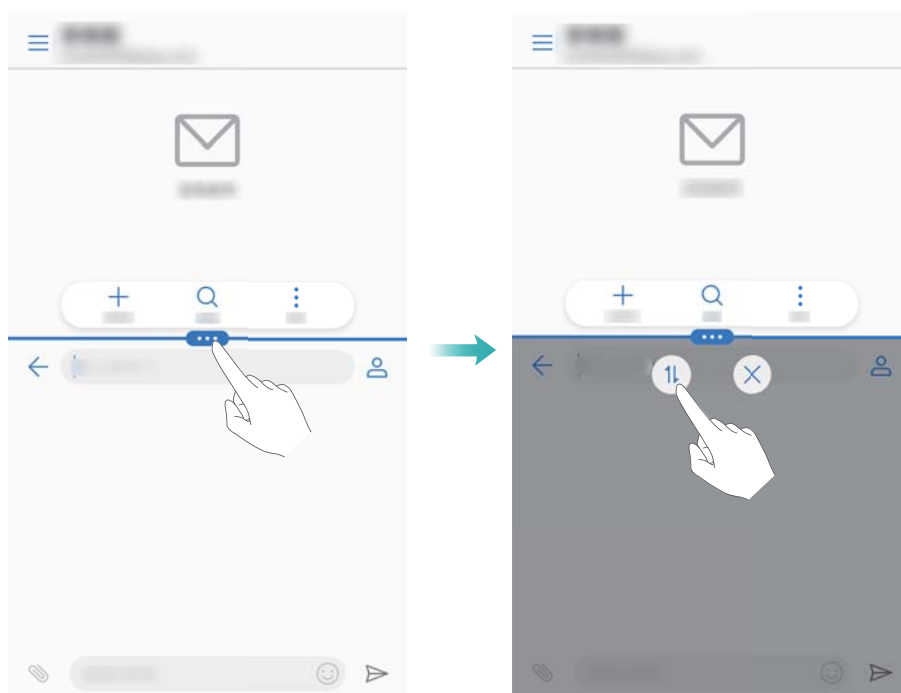



 
Changing the screen orientation

Swipe down from the status bar to open the notification panel. Touch  to enable automatic screen rotation in split screen mode.




Exiting split-screen mode

To exit split-screen mode, touch  and select .

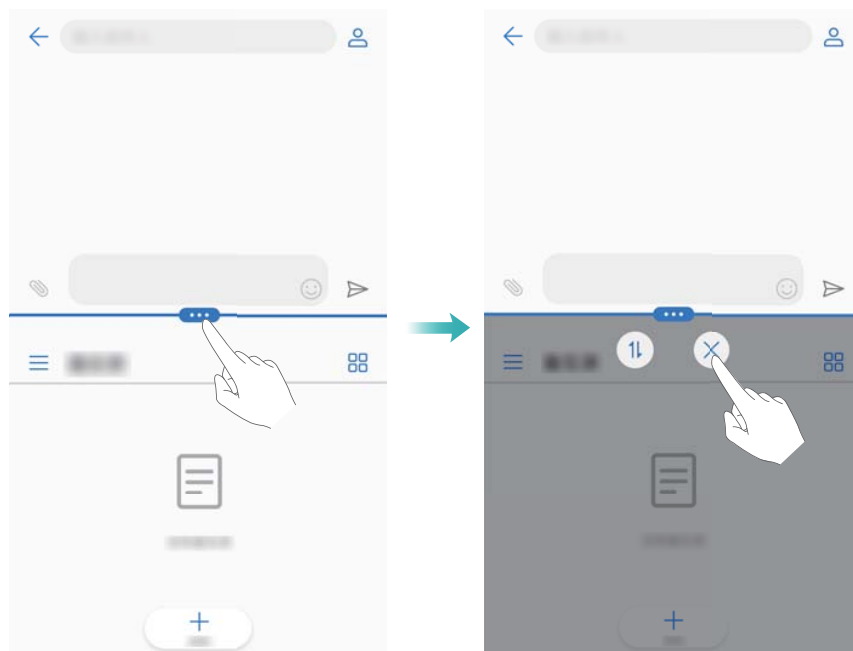

Using motion gestures

Motion gestures make it easier to control your device.

Open  **Settings**. Touch **Smart assistance** > **Motion control** and select the motions you want to enable.

Flip: Mute sounds and disable vibrations for incoming calls, alarms, and timers.





Eye comfort mode

Eye comfort mode decreases the amount of blue light emitted from the screen to reduce eye strain.

Eye comfort mode

- 1 Open  **Settings**.
- 2 Touch **Display** > **Eye comfort** and switch on **Eye comfort**.

 When eye comfort mode is enabled,  will be displayed in the status bar.



Adjusting the color temperature

 
Eye comfort mode reduces the amount of blue light emitted from the screen, which may give the screen a slightly yellow hue. You can adjust the color temperature to control the amount of blue light.

When **Eye comfort** is enabled, swipe left or right on the color temperature slider to make the screen hue cooler or warmer.

Enabling and disabling eye comfort mode


You can use the shortcut switch in the notification panel to enable or disable eye comfort mode.

Swipe down from the status bar. Touch  to display all shortcut switches, and then toggle the  switch.

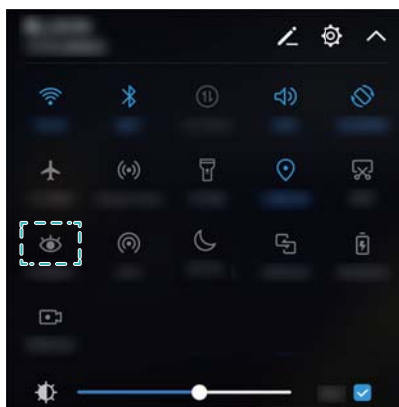

Configuring the timer

 
Configure the timer to enable eye comfort mode automatically at a preset time, such as when you finish work or before you go to bed.

- 1 Open  **Settings**.
- 2 Touch **Display** > **Eye comfort**.
- 3 Switch on **Schedule** and configure the **Start time** and **End time**.

Display settings


Changing the font size

- 1 Open  **Settings**.
- 2 Touch **Display** > **Font size** and choose a font size.

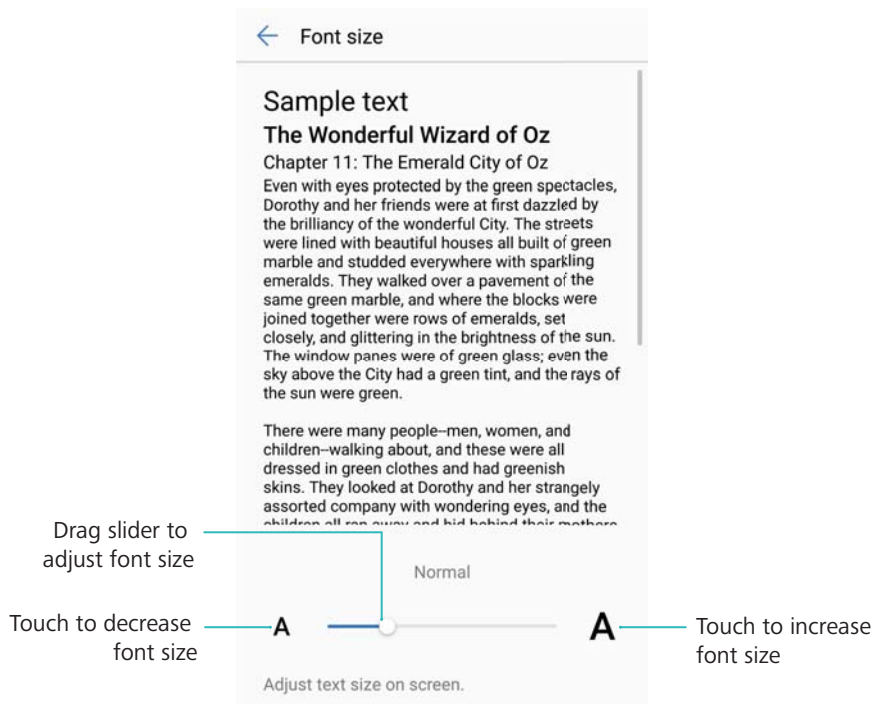

Adjusting the screen brightness

Adjust the screen brightness to suit your needs.

- 1 Open  **Settings**.
- 2 Touch **Display** > **Brightness** and switch on **Auto-brightness**.

When automatic screen brightness is enabled, the brightness of the screen will automatically adjust based on the light conditions.

i Adjust the screen brightness quickly: Swipe down from the status bar. Touch **Auto**.


Enable or disable automatic screen brightness. You can also manually adjust the screen brightness by dragging the slider. The screen brightness will not change in different lighting conditions if automatic mode is not enabled.

 
Configuring the screen rotation settings

When you rotate your device, some apps will automatically adjust the screen orientation to make them easier to use.

1 Open  **Settings**.

2 Touch **Display** and switch on **Auto-rotate screen**.

i Quickly enable auto-rotation: Swipe down from the status bar and open the shortcut switches tab, and then touch  .

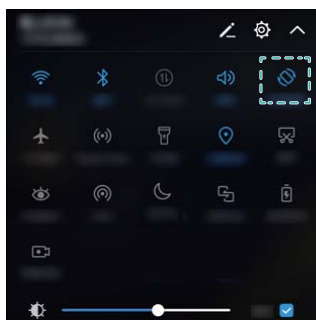


Network and Sharing

Mobile Internet

Using mobile data

Enabling mobile data

i Before enabling mobile data, ensure that you have activated mobile data services with your carrier.


- 1 Open  **Settings**.
- 2 Touch **More > Mobile network**.
- 3 Switch on **Mobile data** to enable mobile data.

i Disable mobile data when not required so as to save battery power and reduce data usage.

Enabling data roaming

Enable data roaming to access the Internet when you travel abroad.


i You may incur roaming charges when data roaming is enabled. Contact your carrier for details.

- 1 Open  **Settings**.
- 2 Touch **More > Mobile network**.
- 3 Switch on **International roaming**.

Sharing your Network with Other Devices

Sharing networks over a Wi-Fi hotspot



- 1 Open  **Settings**.
- 2 Touch **More > Mobile hotspot and tethering**.
- 3 Touch **Portable Wi-Fi hotspot** and enable the Hotspot.

 
- 4 Touch **Configure Wi-Fi hotspot** and set the name, security level and password for the Wi-Fi hotspot, then touch **Save**.


i How can I limit the amount of data other devices can use through my hotspot?

From the **Settings** interface, touch **Data limit** and set the data limit. When the shared data reaches the set value, your device will stop sharing data and disable the hotspot automatically.

Sharing mobile data using a USB cable

- i** Due to the differences in operating systems, you may need to install a device driver or set up a corresponding network connection before using this function. Refer to your operating system guide.

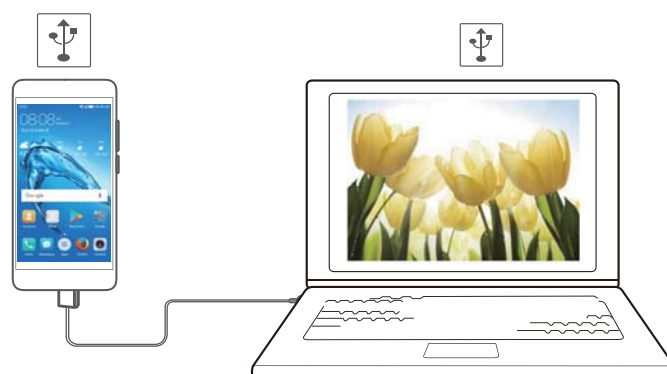


- 1 Connect your device to the computer using a USB data cable.
- 2 Open  **Settings**.
- 3 Touch **More > Mobile hotspot and tethering**.
- 4 Enable **USB tethering** to share your mobile data.

Sharing mobile data over Bluetooth



Pair and connect the devices over Bluetooth before setting up mobile data sharing. For details on how to pair devices, see [Connecting to other devices using Bluetooth](#).

- 1 Open  **Settings**.
- 2 Touch **More > Mobile hotspot and tethering**.

- 3 Enable **Bluetooth tethering** to share your mobile data.
- 4 From the **Bluetooth** interface, touch ⓘ in the area next to the name of the paired device, and enable **Internet access** to set up the Internet access connection.

Wi-Fi


About Wi-Fi

Connect to a Wi-Fi network to access the Internet on your device.

- ⓘ To prevent unauthorized access to your personal data and financial information, always exercise caution when connecting to public Wi-Fi networks.



Connecting to the Internet using Wi-Fi

Connecting to a Wi-Fi network

- 1 Go to  **Settings**.
- 2 Touch **Wi-Fi** and turn on the **Wi-Fi** switch. Your device will display a list of available Wi-Fi networks.
 - **Refresh the list:** Touch **Scan** to refresh the list of available Wi-Fi networks.
 - **Manually add a network:** Swipe down to the bottom of the menu and touch **Add network**.... Follow the onscreen instructions to enter the network name and password manually.
- 3 Select the Wi-Fi network you want to connect to:
 - If the Wi-Fi network does not require a password, your device will connect automatically.
 - If the network is protected, enter the password when prompted and touch **Connect**.

Connecting to a Wi-Fi network using Wi-Fi Protected Setup (WPS)


WPS allows your device to connect to a WPS-enabled router without entering a password.

- 1 Go to  **Settings**.
- 2 Touch **Wi-Fi** and switch on **Wi-Fi**.
- 3 Touch  > **Advanced Wi-Fi settings**. There are two options:
 - Touch **WPS connection** and press the router's WPS button.
 - Touch **WPS PIN connection** to generate a PIN, and then enter the PIN on the router.

Using Wi-Fi+

When Wi-Fi+ is enabled, your device will automatically enable or disable Wi-Fi and connect to the Wi-Fi network with the best signal.


- ⓘ You may incur additional data charges when downloading large files or watching online videos over mobile data. To avoid incurring excessive data charges, purchase a data plan. Contact your carrier for details.

- 1 Open  **Settings**.
- 2 Touch **Wi-Fi > Wi-Fi+** and turn on the **Wi-Fi+** switch.

When Wi-Fi+ is enabled, your device will record your Wi-Fi connection history and monitor your signal strength and location. This information is then used to enable or disable Wi-Fi and connect to the Wi-Fi network with the strongest signal.


How can I use a Wi-Fi bridge to share a network connection?



With Wi-Fi bridging, you can access the Internet using the Wi-Fi network of another phone that is already connected to the Internet. If you don't have access to the Internet, you can share a friend's Wi-Fi connection using their Wi-Fi bridge.

- 1 Touch  **Settings**.
- 2 Touch **More > Mobile hotspot and tethering**.
- 3 Touch **Wi-Fi bridge**, and enable Wi-Fi bridge.
- 4 Touch **Set Wi-Fi bridge**, set the Wi-Fi name and password, then touch **Save**.

Using a QR code to share your Wi-Fi hotspot

Create a QR code to share your device's Wi-Fi hotspot with friends.



-  • QR codes can be generated for the following wireless encryption methods: WPA, WPA2, WEP, WPA-PSK, and WPA2-PSK. You cannot use a QR code to connect to WLAN networks that are encrypted using the EAP protocol.
- Ensure that the connecting device supports using QR codes to import Wi-Fi network credentials.


- 1 Go to  **Settings**.
- 2 Select **Wi-Fi** and turn on the **Wi-Fi** switch.
- 3 Once connected, touch the name of the network to generate a QR code.
- 4 On the connecting device, touch the center of the screen and swipe down. Touch , scan the QR code, and then follow the onscreen instructions to connect to the Wi-Fi hotspot.

Transferring data using Wi-Fi Direct

Wi-Fi Direct lets you transfer data directly between two Huawei devices without connecting to a Wi-Fi network. Wi-Fi Direct is similar to Bluetooth, but offers faster transfer speeds, making it suitable for sharing larger files.


Enabling or disabling Wi-Fi Direct

- 1 Go to  **Settings**.
- 2 Touch **Wi-Fi**. Turn on the **Wi-Fi** switch and then touch .
- 3 Your device will list available Wi-Fi Direct devices. Select the device you want to share files with and then follow the onscreen instructions to connect.

To disconnect from the receiving device, touch  and go to the **Wi-Fi direct** screen. Select the receiving device and touch **OK**.

Using Wi-Fi Direct to send and receive files

 First ensure that Wi-Fi Direct is enabled on both devices.

- 1 Go to  **Files** and touch and hold the image that you want to share.
- 2 Touch **More > Share > Wi-Fi Direct**. Your device will list nearby Wi-Fi Direct devices. Select the receiving device.
- 3 On the receiving device, select **Accept** from the popup dialog to accept the file transfer request.


Open the notification panel to view file transfer progress.


By default, received files are saved to the **Wi-Fi Direct** folder in **Files**.

Bluetooth



Connecting to other devices using Bluetooth

Enabling Bluetooth and pairing with other devices

- 1 Go to  **Settings**.
- 2 Touch **Bluetooth** and switch on **Turn on Bluetooth**.

 Ensure that the device you want to pair with is visible.
- 3 Select the device you want to pair with and follow the onscreen instructions.

Unpairing Bluetooth devices

- 1 Go to  **Settings**.
- 2 Touch **Bluetooth** and switch on **Turn on Bluetooth**.
- 3 Touch the  icon next to the device name and select **Unpair**.

Transferring data using Bluetooth

Using Bluetooth to share files


 Ensure that Bluetooth is enabled on both devices and that both devices are visible.

- 1 Select the file(s) you want to share and touch **Share > Bluetooth**. Your device will search for available Bluetooth devices.
- 2 Select the receiving device.
- 3 On the receiving device, select **Accept** from the popup dialog to accept the file transfer request. Open the notification panel to view the file transfer progress.

 By default, received files are saved to the **Bluetooth** folder in **Files**.

Sharing photos and videos with Bluetooth

When viewing photos or videos in full screen, you can share content rapidly using Bluetooth.

 Ensure that Bluetooth is enabled on both devices and that both devices are visible.


- 1** Go to **Gallery**.
- 2** Select the photo or video you want to share and open it in full screen view. Touch **Share** > **Transfer** > **Start** to share the file. Your device will search for nearby available Bluetooth devices.
- 3** Select the receiving device.
- 4** On the receiving device, select **Accept** from the popup dialog to accept the file transfer request. Open the notification panel to view file transfer progress.

 By default, received files are saved to the **Bluetooth** folder in **Files**.


Bluetooth settings

Renaming your device

When you enable Bluetooth, your device model is used as the default device name. To make your device easier to identify, you can change the device name.

- 1** Go to  **Settings**.
- 2** Touch **Bluetooth** > **Device name**.
- 3** Enter a new name, and then touch **Save**.

Making your device visible

- 1** Go to  **Settings**.
- 2** Touch **Bluetooth** and then switch on **Visibility** to make your device visible to other Bluetooth devices.
- 3** Touch **More** > **Visibility timeout** and configure the visibility timeout.

 After the visibility timeout elapses, **Visibility** is disabled automatically and your device will no longer be visible.

VPNs


About VPNs


A VPN (virtual private network) is a secure connection that allows you to send and receive data across shared or public networks. You can use a VPN to connect to your company network and email server.

Connecting to a VPN

Use a virtual private network (VPN) for secure, remote access to company data and other network resources.

 Contact your VPN administrator to obtain the server information.


- 1 Open  **Settings**.
- 2 Touch **More > VPN**.
- 3 Touch **Add VPN network**. When prompted, enter the server name, select the server type, and then enter the server address. Touch **Save** to save the server settings.
- 4 To connect to the VPN, touch the VPN name, enter your username and password, and then touch **Connect**.

 Contact your VPN administrator to obtain your username and password.



Using Huawei Share to transfer files between two Huawei devices

Huawei Share provides a quick and easy method to share files between two Huawei devices. It combines the convenience of Bluetooth sharing with the speed of Wi-Fi transfers.

Enabling Huawei Share

- 1 Swipe down from the status bar to open the notification panel.
- 2 Touch **Huawei Share**.
 -  • Touch the **Huawei Share** switch. This enables **Wi-Fi** and **Bluetooth** automatically.
 - If you disable **Wi-Fi** or **Bluetooth**, the **Huawei Share** switch will turn off automatically.

Using Huawei Share to transfer files

-  Ensure that Huawei Share is supported on both devices. Huawei Share must be enabled on the receiving device and the screen must be switched on.
- 1 On your device, select the file(s) you want to share. Touch **Share**.
 - 2 Select the receiving device from those listed.
 - 3 On the receiving device, select **ACCEPT** from the popup dialog to accept the file transfer request. Open the notification panel to view file transfer progress.
-  To cancel sending, touch the name of the receiving device on your device.

By default, received files are saved to the **Huawei Share** folder in **Files**.

Using a USB port to transfer data

Selecting the USB connection mode

- 1 When you use a USB cable to connect your phone to a computer or another device, **Allow access to device data?** will be displayed in a popup dialog.
- 2 Touch **No, charge only**.

3 Swipe down from the status bar to open the notification panel, and then touch **Charging via USB**. You can choose from the following USB connection modes:

- **Charge only:** Charge your phone only.
- **Device file manager (MTP):** Transfer files between your phone and a computer.
- **Camera (PTP):** Transfer images between your phone and a computer. If your phone does not support MTP, the PTP protocol will be used to transfer files and images between your phone and computer.
- **MIDI:** Use your phone as a MIDI input device and play MIDI files on your computer.

Transferring data between your phone and a computer

Use a USB cable to connect your phone to a computer and transfer data between the two devices.

Transfer files

MTP (media transfer protocol) is a protocol for transferring media files. You can use MTP to transfer files between your phone and a computer. Before using MTP, ensure that you have Windows Media Player 11 or later installed on your computer.

Swipe down from the status bar to open the notification panel, and then set the USB connection mode to **Device file manager (MTP)**. Your computer will automatically install the necessary drivers. To view files stored on your phone, wait until the drivers have been installed, and then click the new drive icon that appears on your computer (the drive is named after your phone model). If you are using a Windows computer, use Windows Media Player to browse multimedia content on your phone.

Transferring images

PTP (picture transfer protocol) is an image transfer protocol. Use PTP to transfer images between your phone and a computer.

Swipe down from the status bar to open the notification panel, and then set the USB connection mode to **Camera (PTP)**. Your computer will automatically install the necessary drivers. To view images stored on your phone, wait until the drivers have been installed, and then click the new drive icon that appears on your computer (the drive is named after your phone model).

Transferring MIDI data to your phone

MIDI (Musical Instrument Digital Interface) is a music technology protocol that allows digital music instruments to communicate with each other.

Swipe down from the status bar to open the notification panel, and then set the USB connection mode to **MIDI**. You can use your phone to receive or process MIDI data from other devices.


Security

Security settings


Setting your SIM card PIN

Enable the SIM lock to prevent others from using your SIM card. You will need to enter your SIM card PIN each time you turn on your device or insert your SIM card into another device.

 Make sure you have received a SIM card PIN from your carrier before enabling the SIM lock.


- 1 Open  **Settings**.
- 2 Touch **Security & privacy** > **Additional settings** and select card lock to access the SIM lock settings.
- 3 Switch on **Lock SIM card**. Enter your SIM card PIN and touch **OK**.


 To change your SIM card PIN, touch **Change SIM PIN** and follow onscreen instructions.

-  You will need to enter the PUK code if you exceed the maximum number of incorrect PIN attempts. The SIM card will be permanently locked if you enter the PUK code incorrectly too many times.
- For details about these limits, contact your carrier.

Setting microSD card password

Encrypt your microSD card to prevent unauthorized access to your data. You will be prompted to enter a password when the microSD card is inserted into another device.

-  Not all microSD cards can be encrypted. An error message may be displayed when you attempt to encrypt or unlock unsupported cards. Remember to back up important data before encrypting your microSD card.
- Encrypted microSD cards will not be recognized by devices that do not support microSD card encryption.
- If you forget the microSD card password, you will have to clear all the data on the card.
- Not all devices support microSD cards.


- 1 Open  **Settings**.
- 2 Touch **Security & privacy** > **Additional settings** > **Set SD card password** and follow onscreen instructions to set a password.

 
Once you have set your password, you can change or remove the password:

- Touch **Change SD card password** to change the password.
- Touch **Clear SD card password** to remove the microSD card password and disable encryption.

Camera and Gallery

Camera options

Open  **Camera** to display the viewfinder.

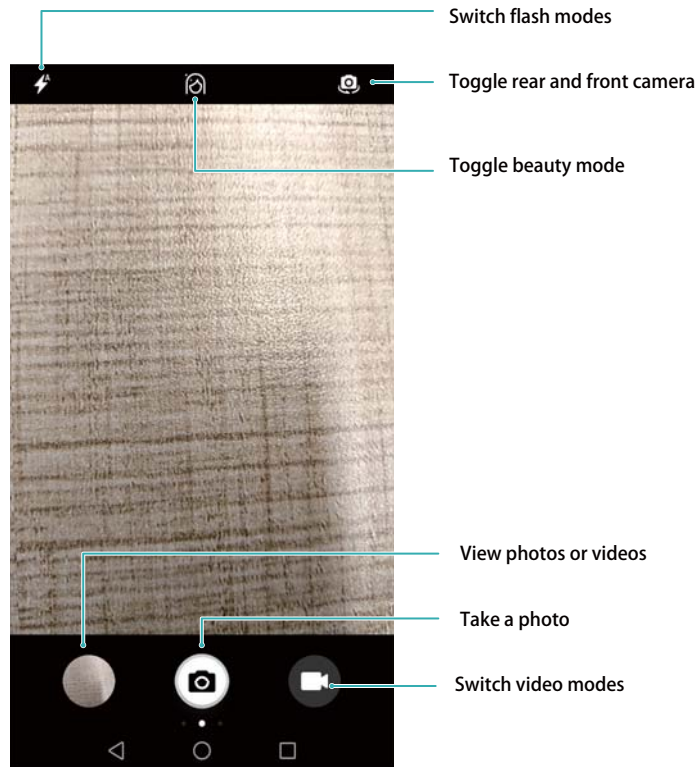

Swipe right on the viewfinder to display the list of shooting modes.

Swipe left on the viewfinder to access the camera settings.


Photos and video recordings

Taking a photo

Geotagging photos

Enable geotagging to record the location of photos and video recordings. In **Gallery** you can view the shooting location of photos and videos. In **Gallery**, you can display all photos and videos on a map.

1 Open  **Camera**.

 When opening **Camera** for the first time, enable location services in the popup dialog.


2 Swipe left on the screen and switch on **GPS tag**.

Zooming in and out


Spread two fingers apart to zoom in, or pinch them together to zoom out. The image quality may be affected if you continue to zoom in after the maximum optical zoom has been reached. You can also zoom in or out by adjusting the slider that appears in the viewfinder after you perform the zoom in or zoom out functions with your two fingers.





Adjusting the exposure

The camera automatically adjusts the exposure according to the ambient brightness. A higher exposure produces brighter images.

Manually adjust the exposure: In the viewfinder, touch the screen and swipe  up or down to adjust the exposure.

Turning on the flash

Touch the flash icon in the top-left corner of the viewfinder to turn on the flash. Touch  to display the four options:


-  : Automatically enables or disables the flash based on the ambient brightness.
-  : Disables the flash.
-  : Enables the flash.
-  : Keeps the flash on when you open **Camera**.

Ultra Snapshot

Press the volume down button twice to take a photo when the screen is off.








 This feature is not available during music playback.




- 1 Open  **Camera**.
- 2 Swipe left and touch **Ultra snapshot > Open camera and take quick snapshot**.
- 3 When the screen is off, point the camera at the desired object and press the volume down button twice in quick succession to take a photo. The camera will automatically take a photo and display the capture time.

 **Disable Ultra Snapshot:** Touch **Ultra snapshot > Off** in the camera settings.

Burst shooting



Use burst shooting when you want to take a photo of a moving subject, such as during a football match. The camera will capture several images in quick succession and automatically select the best photo.

- 1 Open  **Camera**.
 - 2 Touch and hold  to start the burst sequence. The number of captured photos will be displayed above .
 - 3 Release  to stop the burst shooting.
-  You can take up to 20 photos in one burst sequence, provided that there is enough storage space on your phone.

Select the best shot: Touch the image thumbnail to view the image in  **Gallery**, and then touch  to select a photo. Touch  and follow the onscreen instructions to save the photo.


Self timer

Use a self timer to include yourself in shots.


- 1 Open  **Camera**. Swipe left on the screen to access the camera settings.
- 2 Touch **Timer** to set the countdown time.
- 3 Return to the viewfinder. Rest your device on a stable surface and frame the scene you want to capture.
- 4 Touch  to start the countdown timer. Your device will automatically take a photo when the countdown time has elapsed.

Audio-controlled shooting

Use voice commands to control the camera remotely, or set the camera to take a photo when it detects a loud sound.

- 1 Open  **Camera**.
- 2 Swipe left on the screen to access the camera settings.
- 3 Touch **Audio control** and switch on **Audio control**.
- 4 You can then:

- **Say Cheese to take photos:** Set the camera, so that it will take a photo when you issue a voice command.








 The camera will only take photos when default voice command Cheese is detected.
You cannot configure custom voice commands.

- **Take photos when your voice reaches a certain decibel level:** Set the camera to take a photo when the surrounding noise reaches a certain decibel level.

5 Frame the scene you want to capture. Your device will take a photo automatically when you issue a voice command or the device detects a loud sound.

Shooting a video

Shooting a video



- 1** Open  **Camera**.
- 2** Touch  to switch to recording mode.
- 3** Touch  to start recording.
- 4** In the process, you can perform the following:
 - Touch  to pause recording. Touch  to continue recording.
 - Touch  to save the current scene as a photo.
- 5** Touch  to complete recording.

Zooming in and out

Spread two fingers apart to zoom in, or pinch them together to zoom out. The image quality may be affected if you continue to zoom in after the maximum optical zoom has been reached.


Turning on the flash

Touch the flash icon in the top-left corner of the viewfinder. There are two options:

-  : Keep the flash on when you are recording.
-  : Disable the flash.


Pro camera mode

 Pro camera options

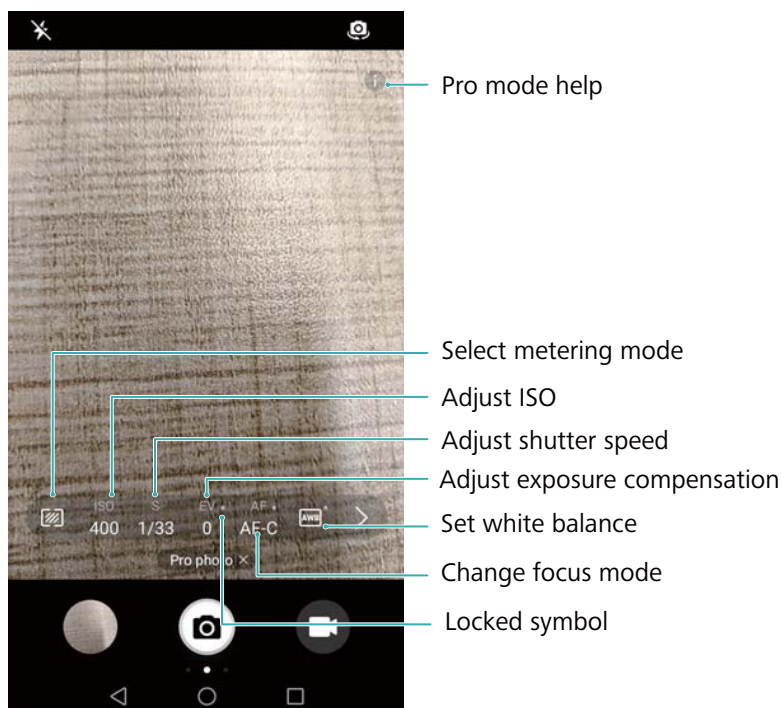

Pro camera settings

Selecting the metering mode

Touch  to select the metering mode. The metering mode affects how your camera determines the exposure. You can select matrix metering, center-weighted metering, or spot metering.

Adjusting the ISO



The ISO determines the camera's sensitivity to light. Increasing the ISO will create a brighter image, but there will be a noticeable increase in noise. Touch ISO and drag the slider to change the ISO settings. You can configure the camera to adjust the ISO automatically, or you can adjust it manually.

Adjusting the shutter speed

Touch S and drag the slider to set the shutter speed. By default, the shutter speed is set to Auto.

Adjusting the exposure compensation

Touch EV to set the exposure compensation. Select an exposure setting to increase or decrease the brightness. Touch and hold the icon to lock the current exposure setting.

The camera will automatically determine the ambient brightness. If the current exposure setting is too high or too low,  or  will be displayed.

Changing the focus mode

Touch AF to set the focus mode. You can select touch to focus (AF-S), continuous autofocus (AF-C), or manual focus (MF). Continuous autofocus is set by default. When continuous autofocus is selected, touch and hold AF-C to enable the focus lock.

Setting the white balance

Touch AWB to select a white balance according to the ambient light conditions. You can choose from daylight, tungsten bulb, fluorescent lamp, and more. You can also adjust the color temperature. Touch and hold AWB to lock the white balance.




Using the spirit level

Enable the spirit level to ensure that the camera is level.

In the Pro camera viewfinder, swipe left and switch on **Horizontal level**. When this feature is enabled, a spirit level will appear on the viewfinder. Ensure that the solid line covers the dotted line.

Perfect Selfie mode

Use Perfect Selfie mode to automatically apply customized beauty settings to your face.





- 1 Open  **Camera**.
- 2 Touch  on the top of the screen.
- 3 Swipe left and touch **Perfect selfie**.
- 4 Switch on **Perfect selfie** and follow the onscreen instructions to take three photos of your face from the front, side, and with your head lowered.
- 5 Configure skin tone, pupils, and face shape settings. Choose a higher value for a more noticeable effect. Touch  to save your settings.

To design your beauty solution, you can perform the following:

- **Modify your personal information:** In the camera settings, touch **Perfect selfie > Edit personal info** to update photos of your face from the front, side, and with your head lowered.
- **Adjust your beauty settings:** In the camera settings, touch **Perfect selfie > Set beauty effects** to adjust the beauty settings, such as skin tone and face shape.





Slow-mo recording

Record videos in slow motion to watch fast-moving scenes in detail.

- 1 Open  **Camera**.
 - 2 Swipe right on the screen and touch **Slow-mo**.
 - 3 Touch  to start a video recording. Touch the screen to focus on an object or area during recording.
 - 4 Touch  to end the recording.
-  Slow motion recording works best in bright surroundings. To select the video clip portion to be played in slow motion, refer to Cropping slow-motion videos.

Time-lapse mode




Time-lapse mode allows you to capture and speed up subtle changes in the natural world. For example, you can record the opening of a flower or the movement of clouds.

- 1 Open  **Camera**. Swipe right and touch **Time-lapse**.
- 2 Place your device on a stable surface or use a tripod. Touch  to start a video recording.
 -  The camera will automatically select a suitable frame rate according to the length of the recording. The zoom cannot be adjusted during recording.
- 3 Touch  to end the recording.


When you play the video in **Gallery**, it will be played back at a higher frame rate. The frame rate is determined automatically by the camera and cannot be adjusted.

Audio note

Add audio notes to bring your photos to life.

- 1 Open  **Camera**.
- 2 Swipe right and touch **Audio note**.
- 3 Frame the scene you want to capture. Touch  to take a photo with an audio note.
- 4 The camera will record a short audio clip of up to 10 seconds to add to your photo. Touch  to stop recording.




Photos with audio notes are indicated by the  icon in **Gallery**.

When viewing a photo with an audio note, touch  to play the audio note.

Managing shooting modes


Rearranging the shooting mode list






Move your favorite shooting modes to the top of the list to make them easier to find.

- 1 Open  **Camera**.
- 2 Swipe right to display the list of shooting modes.
- 3 Touch .
- 4 Drag mode icons to the desired position. Touch  to save the settings.

Deleting shooting modes

Delete unwanted shooting modes to free up storage space.

 Pre-installed shooting modes cannot be deleted.

- 1 Open  **Camera**.
- 2 Swipe right to display the list of shooting modes and touch .
- 3 Shooting modes that can be deleted are indicated by the  icon. Just touch .
- 4 Touch  to delete the selected modes.


Configuring the camera settings

Configure the camera settings to suit your needs.

Setting the photo and video resolutions

Increase the resolution for higher quality images and videos. Larger resolution images take up more space on your device. Changing the resolution will also change the image dimensions.


 Some resolutions may not be supported in certain shooting modes.

Open  **Camera**. Swipe left and touch **Resolution** to change the resolution.

Configuring the default storage location for photos and videos

 Not all devices support microSD cards.


Open  **Camera**. Swipe left and switch on **Priority save in SD card** to change the default storage location to the microSD card.

 This option is only available when the device supports microSD card and a microSD card is inserted. If the microSD card is full, photos will be saved to your device's internal storage.

Adding an overlay


Add a grid or spiral overlay to the viewfinder to help you compose your image.

 Overlays may not be available in some shooting modes.

Open  **Camera**. Swipe left on the screen, touch **Assistive grid**, and then select an overlay. To disable the overlay, touch **Off**.


Configuring the volume button function

By default, the volume button functions as the shutter button. You can change the function of the volume button to adjust the zoom or focus.

Open  **Camera**. Swipe left on the screen. Touch **Volume button function** and select **Shutter**, **Zoom**, or **Focus** as desired.

Configuring the touch and hold settings for the shutter

By default, touch and hold the shutter to take burst shots. You can change the function of the shutter to adjust the focus.

Open  **Camera**. Swipe left on the screen. Touch **Touch & hold shutter icon** and select **Burst shoot** or **Focus** as desired.

Other camera settings

Your camera also comes with a number of other settings to help you shoot high-quality images in a variety of different shooting scenarios.


 Some settings may not be available in certain shooting modes.

Swipe left on the viewfinder to configure the following settings:






- **Touch to capture:** Touch the viewfinder to take a photo.
- **Capture smiles:** The camera will automatically take a photo when it detects a smile.
- **Image adjustment:** Adjust saturation, contrast, and brightness.

Viewing photos and videos

Viewing photos in full screen mode


Open  **Gallery** and touch a photo to view it in full screen. Touch the screen to show or hide the menu.

When viewing photos in full-screen mode, you can:

- **Zoom in or out:** Spread two fingers apart to zoom in, or pinch two fingers together to zoom out.
- **View image details:** Touch to  view the image details, such as the ISO, exposure compensation, and resolution.
- **Rename photos:** Touch  > **Rename**. Enter a new name and select **OK**.
- **Set photo as the home screen wallpaper, or assign the photo to a contact:** Touch  > **Set as** > **Wallpaper** or **Contact photo**.
- **Enable auto-rotation:** In  **Gallery**, touch  > **Settings** > **Photo orientation** > **Always rotate** to rotate photos when you change the screen orientation.

Viewing photos and videos in chronological order

Go to the **Photos** tab. Photos and videos are automatically displayed in chronological order.

Touch  > **Settings** and switch on **Show time** to display the date when the photo was taken. In the **Photos** tab, zoom in or out to switch between month and day view.



Viewing photos and videos by location

If **GPS tag** is switched on in **Camera**, you can view photos and videos by location in **Gallery**.

Go to the **Photos** tab and touch  to view your geotagged photos or videos on a map.

Viewing photos and videos by album

Go to the **Albums** tab. Photos and videos are automatically sorted into default folders. For example, videos that you take with the camera are automatically added to the **Camera videos** folder, and screenshots are added to the **Screenshots** folder.





-  Touch  > **Hide albums** and turn on the switch next to albums that you want to hide. These albums will not appear in the album list.

Viewing photos as a slideshow

Go to the **Photos** tab and touch  > **Slideshow**. Touch the screen to stop the slideshow.




Organizing albums

Adding photos or videos to a new album

- 1 Open  **Gallery**.
- 2 On the **Albums** tab, touch . Enter the album name and touch **OK**.
- 3 Select the images or videos that you want to add to the new album and touch .
- 4 Touch **Copy** or **Move** to add selected files to the new album.
 -  If you copy the files to a new album, the original files will be saved. If you move the files to a new album, the original files will be deleted.

Moving photos and videos


Combine photos and videos from separate albums.

- 1 Open  **Gallery**.
- 2 Go to the **Albums** tab and open the desired photo album. Touch and hold the photo or video that you want to move until  appears, and then select the files that you want to move.
- 3 Touch .
- 4 Select the destination album.


Files are deleted from their original album after they have been moved.


Moving albums

De-clutter your photo collection by moving and merging less important albums into one album.

-  • The **Camera**, **Camera videos**, and **Screenshots** albums cannot be moved to **Others**.
 - Moving an album created by a third-party app to **Others** will not prevent the app from functioning.

- 1 Open  **Gallery**.




- 2 On the **Albums** tab, touch and hold the target album, and then select the albums to be moved in.
- 3 Touch  to move the selected album or albums to **Others**.

In **Others**, touch and hold an album, and then touch  to restore the album to its original location.



Rearranging albums

Change the order in which albums are displayed so you can always find your favorite photos.

 You cannot rearrange **Camera** or **Screenshots**.




- 1 Open  **Gallery**.
- 2 Go to the **Albums** tab, and then touch and hold an album until  appears on the left of all your albums.
- 3 Touch and hold  next to the album that you want to move, and drag it to the desired position. Exit to save the modifications.

 
Deleting photos and videos


- 1 Open  **Gallery**.
- 2 Touch and hold an image or album to open the file selection interface, and then select the files that you want to delete.
- 3 Touch  > **Delete**.


Editing a photo



The Gallery app features powerful image editing tools that you can use to draw graffiti, add watermarks, or apply filters.

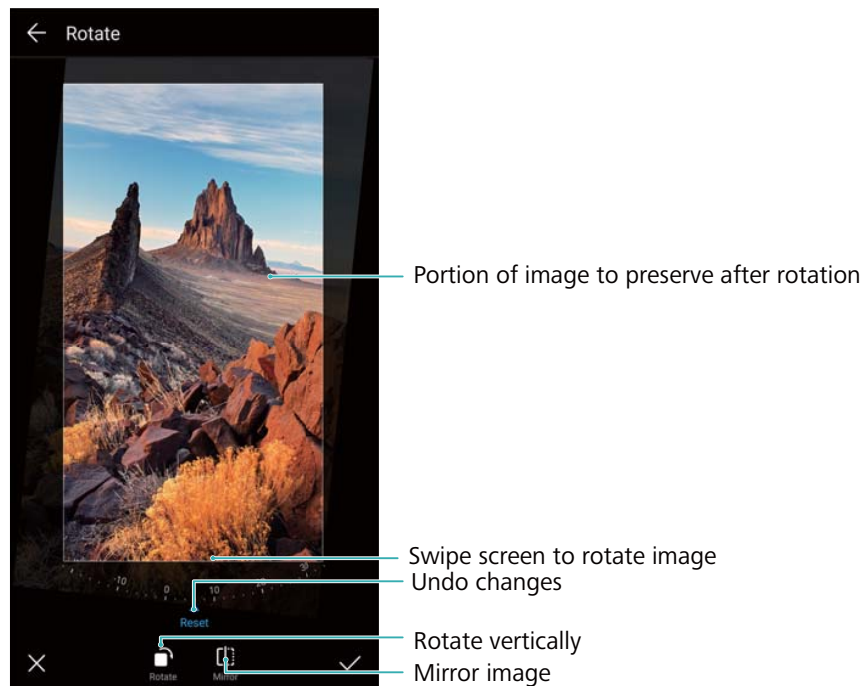  
- 1 Open  **Gallery**.
- 2 Touch an image to view it in full-screen mode. In full-screen view, touch  to open the photo editor and edit your photo using the available tools.
 - **Rotate an image:** Touch  and swipe the screen to adjust the angle of rotation.



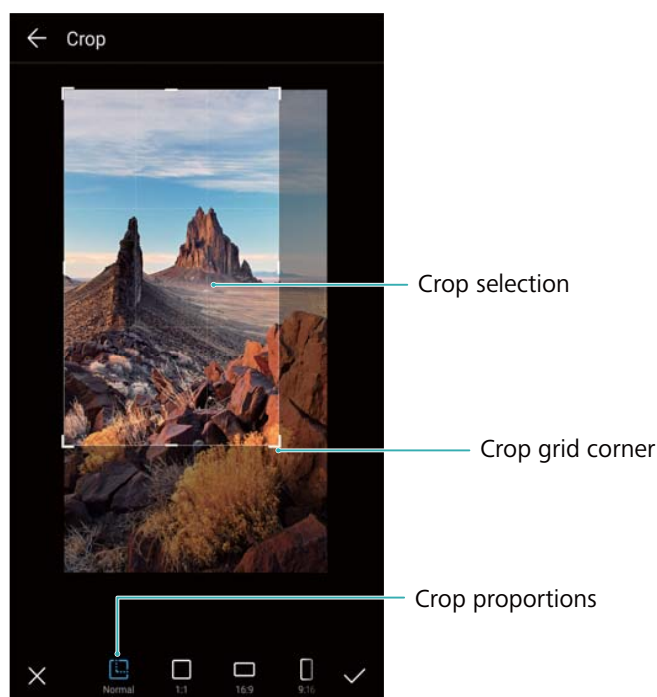



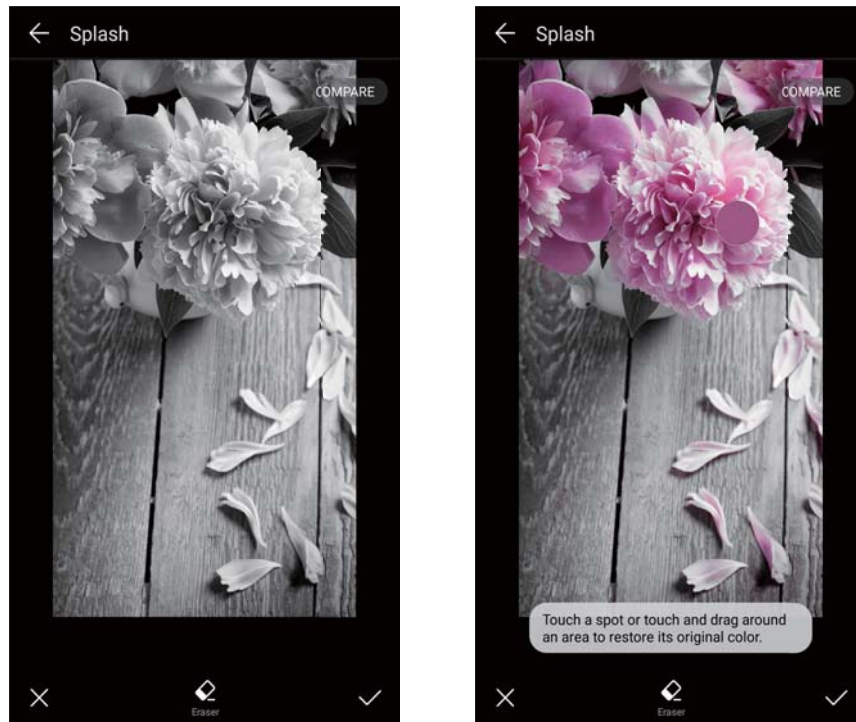


- **Crop an image** : Touch  to select the crop ratio . Drag the dotted edges to crop the image to the desired size.



- **Add a filter**: Touch  and select the desired filter.
- **Accentuate colors**: Touch  . Select an area of the image to accentuate the color. All other areas will be displayed as black and white.





- **Blur an image:** Touch  . Drag the slider to adjust the amount of blur. Drag the circle to the part of the image that you do not want to blur.
- **Adjust image parameters:** Touch  . You can adjust the brightness, contrast, saturation, and more to make your image look more vivid.
- **Apply facial enhancement effects:** Touch  to apply facial enhancement effects to people in an image. You can choose from various skin and eye enhancement effects.
- **Apply mosaic effects:** Touch  and select the desired mosaic effect.
- **Draw graffiti:** Touch  to select the brush and color.
- **Add a watermark:** Touch  to add a watermark and personalize your photo. You can choose from time, location, weather, activity, and other watermarks.
- **Add a label:** Touch  , and then select the desired label type and font. You can use labels to record your mood or thoughts.

Configuring Gallery

Displaying the capture time and location

You can see the capture time and location when viewing the photos.

- 1 Open  **Gallery**.
- 2 Touch  > **Settings**.
- 3 You can configure the following two settings:


- Switch on **Show location**. When viewing a geotagged photo, the photo's location will be displayed.
- Switch on **Show time**. When viewing a photo, the date and time at which the photo was taken will be displayed.

 
Calls and Contacts







Making calls

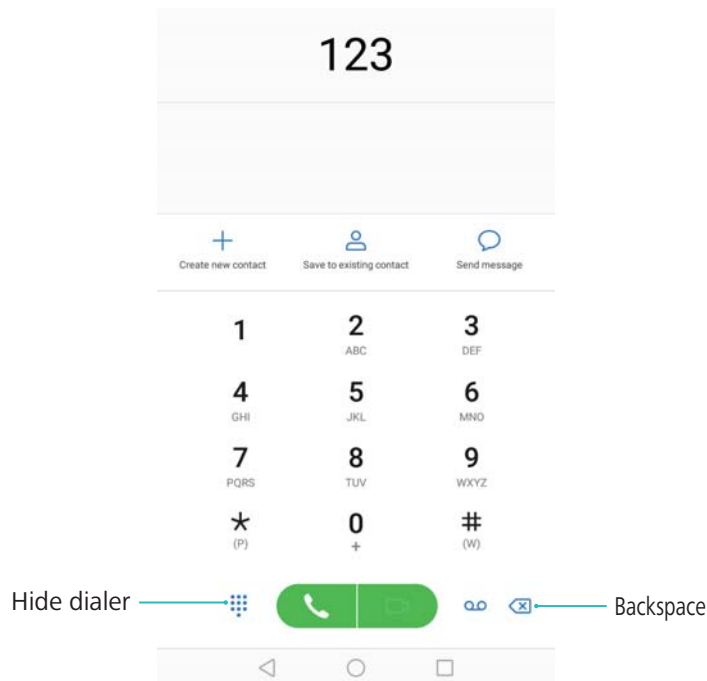Smart dialing



Enter the name, initials, or number of a contact in the dialer. Your device will display matching contacts.

- 1 Open  **Dialer**.
- 2 Enter the name, initials, or number of a contact in the dialer (for example, John Smith or JS). Your device will search your contacts and call log and list the results above the dialer.





- 3 Select the contact you want to call from the list. Touch  to make a call.
 The call status will be displayed on the screen (for example, ringing or call forwarding).
- 4 Touch  to end the call.
 To end a call using the power button, go to  **Dialer**, touch  > **Settings**, and then switch on **Power button ends call**.

Making a call from Contacts






- 1 Open  **Contacts**.
- 2 Touch the search bar and enter the name or initials of the person you want to call.
- 3 Touch the contact number. Touch  to make a call.

Making a call from the call log

- 1 Open  **Dialer**.
- 2 Slide the list up and down to view all calls. Touch the name or number of the person that you want to call. If your device has dual SIM support, touch  to make a call.


Making an emergency call

In the event of an emergency, you can make emergency calls from your device, even without a SIM card. However, you must be in an area with cellular coverage.

 
- 1 Open  **Dialer**.
 -  You can also touch **Emergency** from the lock screen.
- 2 Enter the emergency number for your location in the dialer, and then touch .
 -  If you are in an area with good cellular reception, your device will automatically obtain your location and display it on the screen.
 -  The ability to make emergency calls depend on local regulations and carriers in your area. Poor network coverage or environmental interference may prevent your call from being connected. Never rely solely on your device for essential communication during emergencies.





Answering calls

Answering or rejecting a call

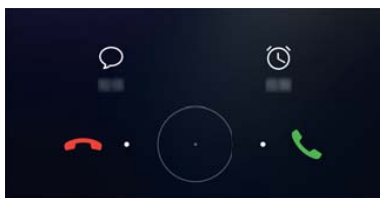-  When a call comes in, press the volume button to mute the ringtone.







If the screen is locked:





- Drag  right to answer the call.
- Drag  left to reject the call.
- Touch  to reject the call and send an SMS.
- Touch  to configure a callback reminder.

If the screen is unlocked:








- Touch  to answer the call.
 - Touch  to reject the call.
 - Touch  to reject the call and send an SMS.
 - Touch  to configure a callback reminder.
- i** If you receive a call when you are entering text or using full-screen mode (for example, when you are viewing an image or playing a game), the incoming call will be displayed at the top of the screen in a floating window. Touch  to answer the call or  to decline the call.

Switching between calls

- i** Ensure that you have turned on call waiting before using this feature. For details, contact your carrier.
- 1 If you receive an incoming call when in another call, touch . You can then answer the incoming call and hold the other line.
 - 2 To switch between the two calls, touch  or select the call that is on hold.

Making a conference call

Set up a conference call using the multi-party call feature. Call one contact's number (or receive a call), and then call another number to add it to the conference call.

- i** Conference calling must be supported by your carrier. Please ensure you have activated this service. For details, contact your carrier.
- 1 Call the first participant.
 - 2 Once the call is connected, touch , and then dial the second participant's number. The first participant will be placed on hold.
 - 3 When the second call is connected, touch  to start a conference call.
 - 4 Repeat steps 2 and 3 to add more people to the conference.
 - 5 During a call, touch  to view the list of participants. You can:
 - Touch  next to a contact to remove the contact from the call.
 - Touch  next to a contact to remove the contact from the conference call and keep them in a separate call.

- Touch  to return to the main call screen.

6 Touch  to end the conference call.

In-call options




-  Do not cover the microphone during a call.

During a call, your device will display an in-call menu.







- **Start a three-way call:** Contact your carrier to find out how to use this feature.
- **Adjust the volume:** Press the volume up button to increase the volume, or the volume down button to decrease the volume.

Managing call logs

Viewing missed calls




- 1 Open  **Dialer**.
- 2 To display all missed calls, touch the **Missed** tab and swipe down in the call log.
 You can also view missed calls in the **All** tab. Missed calls are marked in red.
- 3 Touch  next to a call log to return the call, send a message, and more.

Managing unknown numbers in the call log


- 1 Open  **Dialer**.
- 2 Touch **Unknown**.
- 3 Select a number and touch . You can:
 - **Add the number to your contacts:** Touch  to create a new contact, or touch  to add the number to an existing contact.
 - **Add the number to the blacklist:** Touch  > **Add to blacklist**.
 - **Share the number:** Touch  > **"Send number"** to send the number as a text message.



Merging call logs

Merge call logs belonging to the same contact or number to keep your call log organized.

- 1 Open  **Dialer**.
- 2 Touch  > **Settings > Merge call log**.
- 3 Touch **By contact**. Your device will automatically merge call logs belonging to the same contact or number. Touch  next to a call log to view detailed call log information.

Clearing the call log



Open  **Dialer**. You can clear the call log in two ways:

- **Delete one entry:** Touch and hold a log entry, and then touch **Delete entry**.
- **Delete multiple entries:** Touch . Select the entries you want to delete, and then touch .

Call settings

Enabling call forwarding



If you are unavailable to take a call, you can configure your device to forward calls to another number.

- 1 Open  **Dialer**.
- 2 Touch  > **Settings**.
- 3 Touch **Call forwarding**.
- 4 Select a method of forwarding the call. Enter the destination number and touch **Enable**.

When call forwarding is enabled, your device will forward certain calls (such as unanswered calls) to the number you specified.

Enabling pocket mode

Enable pocket mode to make sure you don't miss calls when your device is in your pocket. The ringtone volume will gradually increase when you receive a call.



- 1 Open  **Dialer**.
- 2 Touch  > **Settings**.
- 3 Switch on **Pocket mode**.




When pocket mode is enabled, the ringtone volume will gradually increase when you receive a call and your device is in your pocket or bag.

Rejecting calls with a text message






Send a predefined text message when you're not available to take a call.

- 1 Open  **Dialer**.
- 2 Touch  > **Settings** > **Reject calls with SMS**.
- 3 Touch a predefined text message to edit the message content. Once you have finished, touch **OK** to save the message.

When you are unavailable to take an incoming call, touch  and select a predefined message to send to the caller.



Configuring the harassment filter

 
The harassment filter automatically blocks calls and messages from unknown or blacklisted numbers.


- 1 Open  **Dialer**.
 - 2 Touch  > **Blocked**.
 - 3 Touch  to configure the harassment filter settings and the blacklist.
-  You can also configure the harassment filter settings and the blacklist in **Phone Manager** > **Blocked** > .

Creating a contact card

Create a contact card to quickly share your contact information. You can share your contact information by scanning the QR code or by sending the contact card using an instant messaging service such as WhatsApp.



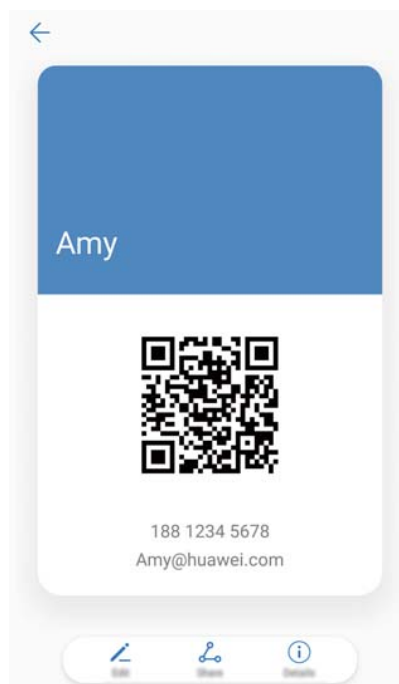


- 1 Open  **Contacts**.
- 2 Touch **Me**.
- 3 Set your profile picture. Enter your name, company, telephone number and other contact information, and then touch . Your device will automatically create a contact card with a QR code.



Share your contact card: Touch . Select the card format and sharing method, and then follow the onscreen instructions.

Creating a new contact



Creating a contact

- 1 Open  **Contacts**.
- 2 Touch .
- 3 In the options menu, select a location to save the contact.
 -  The number of contacts you can store on your device depends on the size of your device's internal storage. The number of SIM card contacts you can store depends on your SIM card's storage capacity.
- 4 Touch the contact's profile picture to choose a photo. Enter the contact's name, company, phone number and other contact information, and then touch .
 -  • If you add the contact's birthday, your device will automatically create a birthday reminder in **Calendar**.
 - The contact's photo will be displayed when the contact calls you. Other contact information such as company name and job title will also be displayed.

You can also add phone numbers, email addresses, and other contact information in to your contacts in call log, **Messaging** or **Email**.

Importing and exporting contacts

Importing contacts from a storage device





- 1 Open  **Contacts**.
- 2 Touch  > **Import/Export** > **Import from storage**.
- 3 Select one or more **.vcf** files, and then touch **OK**.

Exporting contacts to a storage device





- 1 Open  **Contacts**.
- 2 Touch  > **Import/Export** > **Export to storage** > **Export**.
- 3 Choose where you want to export the contacts from and touch **OK**.

By default, the exported **.vcf** file is saved to the root directory of your device's internal storage. Open **Files** to view the exported file.

Importing contacts from a SIM card

- 1 Open  **Contacts**.
- 2 Touch  > **Import/Export** > **Import from SIM card**. If your device has dual SIM support, touch  > **Import/Export** and choose the SIM card you want to import your contacts from.
- 3 Select the contacts you want to import and touch .
- 4 Choose the location. The device will automatically import the contacts.


Exporting contacts to a SIM card




- 1 Open  **Contacts**.
- 2 Touch  > **Import/Export** > **Export to SIM card**. If your device has dual SIM support, touch  > **Import/Export**, and choose the SIM card you want to export your contacts to.
- 3 Select the contacts you want to export and touch .
- 4 Touch **Continue**.

Managing contacts

Editing a contact




After creating a contact, you can edit their contact information at any time. This includes adding or deleting default information such as phone numbers or email addresses. You can also choose a custom ringtone and add a birthday, nickname, or photo.

 Contact photos cannot be added for contacts stored on your SIM card.





- 1 Open  **Contacts**.
 - 2 Touch and hold the contact you want to edit, and then touch **Edit**.
 - 3 Touch the contact's portrait to choose another image. Update the contact's information, and then touch .
-  **Add multiple numbers for one contact:** Select a contact from the contact list and touch **Edit > Add phone number**.

Merging duplicate contacts

When you add contacts to your device from different sources, you may end up with duplicate entries. These duplicate entries can be merged into one to help keep your contacts organized.



- 1 Open  **Contacts**.
- 2 Touch  > **Organize contacts > Merge duplicate contacts**.
- 3 Select the contacts you want to merge and touch .

Deleting contacts

- 1 Open  **Contacts**.
 - 2 Touch  > **Organize contacts > Delete contacts by batch**.
 - 3 Select the contacts you want to delete, and then touch .
 - 4 Touch **Delete**.
-  Alternatively, touch and hold a contact until a popup menu appears. From here, select **Delete** to delete the contact.


Deleting contact history

Delete call records and text messages by contact to protect your privacy.





- 1 Open  **Contacts**.
- 2 Select a contact and touch  > **Erase traces > Erase**.

Your device will delete all call records and text messages for the selected contact.



Adding contacts to the blacklist

- 1 Open  **Contacts**.
- 2 Touch and hold the contact that you want to add to the blacklist, and then touch **Add to blacklist**.

Your device will automatically block incoming calls and messages from blacklisted contacts.

-  • **View blacklisted contacts:** Open  **Phone Manager** and touch **Blocked** >  . Touch **Numbers blacklist** to view blacklisted contacts.
- **Remove contacts from the blacklist:** Open  **Contacts**. Touch and hold the contact that you want to remove from the blacklist, and then touch **Remove from blacklist**.







Identifying contacts with incomplete information

- 1 Open  **Contacts**.
- 2 Touch  > **Organize contacts** > **Contacts with incomplete info**.
- 3 Your device will display a list of contacts with incomplete information. You can then choose to add missing information or delete unwanted contacts.


Searching for contacts

Search contacts stored on the device, SIM card, or linked to an online account.

Finding contacts

- 1 Open  **Contacts**.
 -  For more complete search results, ensure that Contacts is configured to display all of your contacts. On the contacts screen, touch  > **Display preferences** and select **All contacts**.
- 2 On the contact list, you can:
 - Swipe the contact list up or down.
 - Slide your finger up or down the index on the right-hand side of the screen to scroll through your contacts.
 - Enter the contact name, initials, phone number, email address, or other information in the search bar at the top of the contact list. Search results will be displayed underneath.
 -  You can enter multiple keywords, such as "Tom New York". The system will find the contacts that meet the search criteria.
- 3 Select a contact. You can call them, send a text message, or edit their contact information.
 -  If an error message is displayed or you are unable to search for a contact, touch  > **Organize contacts** and select **Rebuild index data**.



Searching for a contact from the home screen

- 1 Swipe down on the home screen to display the search bar.
- 2 Enter one or more keywords (such as the contact's name or email address). The search results will be displayed beneath the search bar.
 -  You can enter multiple keywords, such as "Tom New York". The system will find contacts that meet the search criteria.

- 3 Select a contact. You can then choose to call them, send them a text message, or edit their contact information.







Sharing contacts

Share a contact's vCard


- 1 Open  **Contacts**.
- 2 Touch  > **Import/Export** > **Share**.
- 3 Select the contacts you want to share, or touch **"Select all"** to select all contacts, and then touch **Share**.
- 4 Choose your sharing method and follow the onscreen instructions.



Adding a contact to your favorites

Add frequently contacted people to your favorites to make them easier to find.

- 1 Open  **Contacts**.
 - 2 Touch and hold the contact you want to add to your favorites, and then touch **Add to favorites**.
 -  When viewing contact details, touch  to add the contact to your favorites.
- **Add contacts to your favorites in batch** : Touch **Add**, and choose the contact you want to add, and then touch . If the contact has already been added, touch  to add the contact to your favorites.
 - **Edit your favorites**: Touch **Edit** on the favorites screen. Drag  next to a contact to adjust the position of the contact in your favorites list.
 - **Remove contacts from your favorites**: Touch **Edit** on the favorites screen. Select the contacts that you want to remove from your favorites, and then touch **Remove**.



Changing contact photos

 Contact photos cannot be added for contacts stored on your SIM card.

- 1 Open  **Contacts**.
- 2 Touch and hold the contact you want to edit, and then touch **Edit**.
- 3 Touch the contact's photo. You can choose to select a photo from Gallery or take a photo with the camera.
- 4 Touch .



The contact's photo will be displayed when you receive a call from them.

Viewing call records for individual contacts

- 1 Open  **Contacts**.
- 2 Select the desired contact and touch **Call log**.
- 3 Swipe up on the list to view all entries. You can:
 - Touch an entry to call the contact.
 - Touch  > **Delete** to delete all entries.
 - Touch and hold an entry to delete it or edit it before calling.





Assigning a ringtone to a contact

Assign a unique ringtone to frequently used contacts so that you can easily tell who is contacting you.

- 1 Open  **Contacts**.
- 2 Select the desired contact and touch **Phone ringtone**.
- 3 Select the desired ringtone or music file, and then touch .




Contact groups

Creating a group

- 1 Open  **Contacts**.
- 2 Touch **Groups** and select .
- 3 Enter the group name (for example, Family or Friends) and touch **OK**.
- 4 Touch . Select the contacts you want to add to the group and touch .

Using smart groups



Use smart groups to automatically group contacts by company, location, or contact frequency.

- 1 Open  **Contacts**.
- 2 Touch **Groups**.
- 3 Under **Smart groups**, open a group, and then touch  to send a group message or  to send a group email.




Editing a group

Add or remove people from a group, or change the group name.

- 1 Open  **Contacts**.

- 2 Touch **Groups** and select the group you want to edit.
- 3 Touch  and add new members to the group.
- 4 Touch . There are three options:
 - Touch **Remove members** to remove members from the group.
 - Touch **Delete group** to delete the group.
 - Touch **Rename** to edit the group name.




 



Sending a group text message or email


- 1 Open  **Contacts**.
- 2 Touch **Groups** and select which group you want to send a message or email to.
- 3 Touch  to send a message or  to send an email.

Messaging and Email






Sending a message

You can add a range of different content to messages, such as emoticons, images, and recordings.

- 1 Open  **Messaging**.
- 2 In the list of message threads, touch .
- 3 Select the recipient box and enter the contact name or phone number. You can also touch  to open your contact list and choose a contact or contact group.
- 4 Select the text field to begin composing your message. If you enter more than two lines of text, touch  to switch to full screen mode.
 - Touch  to add an attachment to your message.
 - Touch  to save the message as a draft.
- 5 Touch .

Cancel a message: Touch  > **Settings** in the message list, and then turn on **Cancel sending**. You can cancel a message up to 6 seconds after it was sent.

Replying to a message

- 1 Open  **Messaging**.
 - 2 Touch a message to view the message content. Your device will automatically highlight phone numbers, web addresses, email addresses, times, and other information. Touch highlighted information to access a range of shortcuts. You can also:
 - **Save message attachments:** Touch and hold the attachment that you want to save, then touch **Save**.
 - **Call the sender:** Touch  at the top of the message.
 - **Add the caller's number to your contacts:** Touch  > **Create new contact** or **Save to existing contact** at the top of the message.
 - 3 To send a reply, select the text field and enter your message, and then touch .
-  **Quickly reply to message:** New messages will be displayed in the notification bar. Touch the button to compose a reply.

Searching for messages

There are two ways to search for messages:



- In the list of message threads, touch the search bar at the top of the screen and enter one or more keywords. The results will be displayed beneath the search bar.
- Swipe down on the home screen to display the search bar. Touch the search bar and enter one or more keywords. The results will be displayed beneath the search bar.

Deleting message threads

Delete unwanted or old threads to tidy up your message list.


- Deleted threads cannot be retrieved, so please proceed with caution.

You can delete a message thread in two ways:

- To delete a single thread, swipe left on the thread that you want to delete and touch .
- To delete multiple threads, touch and hold one of the threads that you want to delete. Select the other threads and touch  > **Delete**.


Managing messages

Delete unwanted messages, forward messages to other contacts, copy and paste message content, and lock messages or add them to your favorites to prevent them from being deleted by accident.

- 1 Open  **Messaging**.
- 2 In the list of message threads, touch a contact name or phone number to view your conversations.
- 3 Touch and hold a message, and then follow the onscreen instructions to forward, archive, lock, or share the message.



Returning to the top of the message list

If you have a long list of messages, use a shortcut to return to the top of list without swiping the screen.

- 1 Open  **Messaging**.
- 2 In the list of message threads, double touch the bar at the top of the screen. Your device will automatically return to the top of the list or display unread messages.

Pinning messages to the top of the list



Pin important messages to the top of your message list so that you can access them quickly.

- 1 Open  **Messaging**.
- 2 In the list of message threads, touch and hold the message that you want to pin to the top.
- 3 Select the desired message and touch . Pinned messages will be displayed below text message alerts.




Marking messages as read



Mark unwanted messages as read to keep your inbox organized.

Open  **Messaging**. In the list of message threads, you can:

- **Mark all messages as read:** Touch  > **Mark all as read**.
- **Mark a message as read:** Swipe left on the message that you want to mark as read, and then touch .

Blocking spam messages

- 1 Open  **Messaging**.
- 2 In the list of message threads, touch  > **Blocked**.
- 3 Touch  to configure the harassment filter settings and the blacklist.

Alternatively, open  **Phone Manager** and touch **Blocked** >  to configure the harassment filter settings and the blacklist.


Adding a message signature

Add a message signature to save you time when sending messages.

- 1 Open  **Messaging**.
- 2 Touch  > **Settings** > **Advanced** > **Signature** in the list of message threads, and then switch on **Attach signature**.
- 3 Touch **Edit signature**. Enter your signature and select **OK**.

Configuring the message ringtone


- 1 Open  **Messaging**.

- 2 In the list of message threads, touch  > **Settings** > **Ringtones and vibration**.
- 3 Touch **Notification tone**. If your device has dual SIM support, select **SIM 1 notification tone** or **SIM 2 notification tone**. You can then choose a system ringtone or music file.

Adding an email account

If you don't know your account settings, please consult your email service provider.


Adding a personal email account

- 1 Open  **Email**.
- 2 Choose an email service provider or touch **Others**.
- 3 Enter your email address and password, and then touch **Sign in**.
- 4 Follow the onscreen instructions to configure your account. The system will automatically connect to the server and check your settings.

Your **Inbox** will be displayed once the account has been set up.






Adding an Exchange account


Microsoft Exchange is a corporate email management solution. Some email service providers also provide individual and family Exchange accounts.

- 1 Open  **Email**.
- 2 Touch **Exchange**.
- 3 Enter your email address, user name, and password. Touch **Sign in**.
- 4 Follow the onscreen instructions to configure your account. The system will automatically connect to the server and verify your settings.





Your **Inbox** will be displayed once the account has been set up.


Sending emails

- 1 Open  **Email**.
 - 2 Touch .
 - 3 In **To:**, enter one or more recipients.
 - 4 Touch **Cc/Bcc**, **From:** to add Cc and Bcc recipients, and select the email account to use.
 - 5 Enter the email subject and body. Touch  to add an attachment.
 - 6 Touch  to send the email.
-  Your email service provider may have an attachment size limit. If attachments exceed the limit, you can send them in separate emails.

To save your email as a draft and send it later, touch , and then touch **Save**.

Replying to emails





- 1 Open  **Email**.
- 2 Open the email you want to reply to and touch  .
 ⓘ To reply to all recipients of the original email, touch .
- 3 After drafting your message, touch  to send the email.

Configuring fast responses: Touch  > **Settings**. Select an account and touch **Quick responses** to create or edit a fast response.



Managing emails

Viewing emails

You can check, reply, forward or delete your emails after you create a personal email account.

- 1 Open  **Email**.
- 2 On the **Inbox** screen, touch  and select the account you want to use. Swipe down to refresh your inbox and download new emails.
 ⓘ On the inbox, touch  to star the email.
- 3 You can check, reply, forward or delete your emails. Open an email and swipe left or right on the screen to view the previous or next email.
 ⓘ To delete multiple emails, go to the **Inbox** screen. Select a contact picture or touch and hold an email to activate the email management interface. Select the emails you want to delete and touch .



Saving email attachments

Open an email and touch  to preview the attachment. Touch  to save the attachment to your device.

- ⓘ For large attachments, open the link provided in the email to download.

Syncing emails

On the **Inbox** screen, swipe down to refresh your inbox.



- 1 Open  **Email**.
- 2 Touch  > **Settings**.
- 3 Select the account you want to configure. Switch on **Sync email**.
 ⓘ To sync your emails automatically, touch **Sync schedule** and select a sync interval.

Configuring Mail


Configuring automatic replies

Configure automatic replies when you are out of office.


 You must log in to your Exchange account to use this feature.

- 1 Open  **Email**.
- 2 Touch  > **Settings**.
- 3 Choose the Exchange account you want to configure and switch **Automatic replies** on.
- 4 Switch on **Automatic replies** to configure a message and set the start and end time.
- 5 Touch **Done**.


Configuring an email signature

- 1 On the inbox screen, touch  > **Settings**.
- 2 Select the account you want to configure and touch **Signature**.
- 3 Enter a signature and touch **OK**.

Configuring email notifications


- 1 On the inbox screen, touch  > **Settings**.
- 2 Select the account you want to configure and switch **Email notifications** on.
- 3 Select a notification sound or enable vibration alerts.

Configuring the email view

On the inbox screen, touch  > **Settings** > **General**. You can configure the following:

 
- **Only download attachments over Wi-Fi**: Switch **Don't download images over mobile network** on.
- **Group emails with the same title**: Switch **Organize by subject** on.
- **Display contact images**: Switch **Sender profile picture** on to display contact images next to emails.

Configuring how emails are sorted

On the inbox screen, touch  > **Sort by** and select a sort method.

Calendar and Notepad

Changing the calendar view

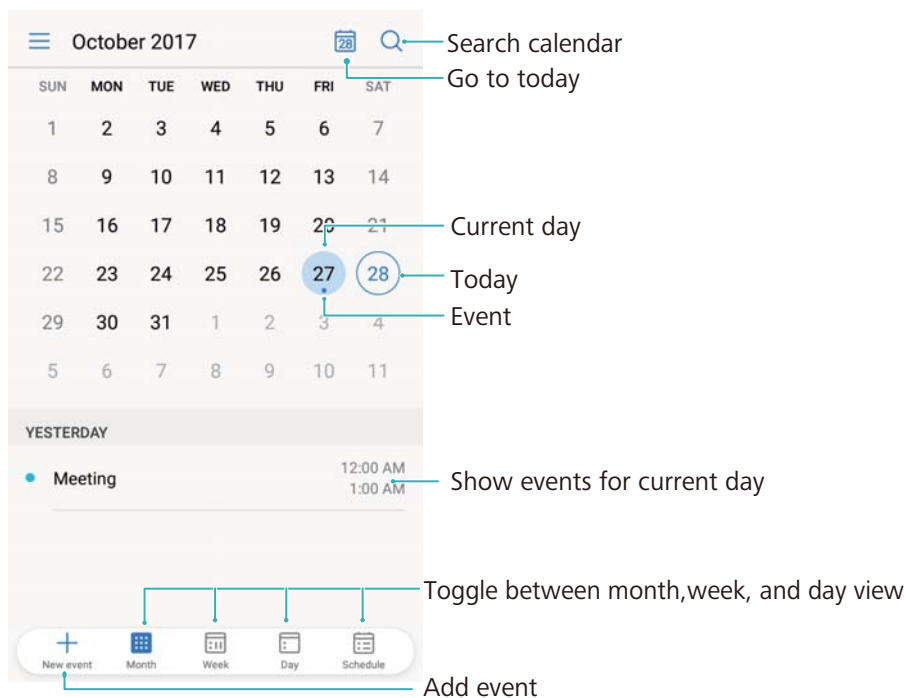

i To view your schedule for a specific day, touch > **Go to**, select a date, and then touch **Done**.

Open **Calendar** and touch > **Settings**. You can:

- **Configure the weekend settings:** Touch **Customize weekend** and configure the settings.
- **Configure the first day of the week:** Touch **Week starts on** and configure the settings.

Viewing global holidays

Enable global holidays to view public holiday information for different countries.

i This feature requires an Internet connection.

- 1 Open **Calendar**.
- 2 Touch > **Settings** > **Global holidays**.
- 3 Turn on the switch next to the country whose holidays you want to view. Your phone will automatically download the country's holiday information.

Birthday reminders

Configure Calendar to import birthday information from your contacts and automatically create birthday reminders.

- Before using this feature, ensure that you have added birthday information to your contacts. For more information, see [Creating a contact](#).

1 Open  **Calendar**.

2 Touch  and select **Contacts' birthdays**.

Once you have enabled this feature, Calendar will automatically import birthday information from your contacts and send you birthday reminders.


Creating an event

Add events and set reminders to help you plan ahead.

1 Open  **Calendar**.

2 Touch .

3 Enter the event name, location, and start and end time. Touch **More > Remind** to create a reminder.

4 Touch  to save the event.

- You can add up to 5 reminders for an event. To add a reminder, touch **Add reminder**.
 - In week or daily view, touch and hold an area on the screen to create an event for the corresponding date and time.

Sharing events

You can share events with your contacts.

1 Open  **Calendar**.




2 Open the event that you want to share and touch .

3 Choose how you want to share the event and follow the onscreen instructions.

- You cannot share birthday reminders that are created automatically. To share birthday information, manually create an event, and then share the event with your friends.


Deleting an event

Open  **Calendar**. You can delete an event in two ways:



- **Delete a single event:** Open the event that you want to delete and touch .
- **Delete multiple events:** Touch , and then touch and hold an event to activate the event management interface. Select the events that you want to delete and touch .
- To delete a birthday reminder, go to **Contacts**, and then delete the contact's birthday information, or delete the corresponding contact.

 
Searching for events


You can search for events in two ways:

- In Calendar, touch . Enter one or more keywords in the search bar, such as the event name or location.
- Swipe down on the home screen to display the search bar. Enter one or more keywords, such as the event name or location.

Creating a note


- 1 Open  **Notepad**.
- 2 Touch  and enter your note.

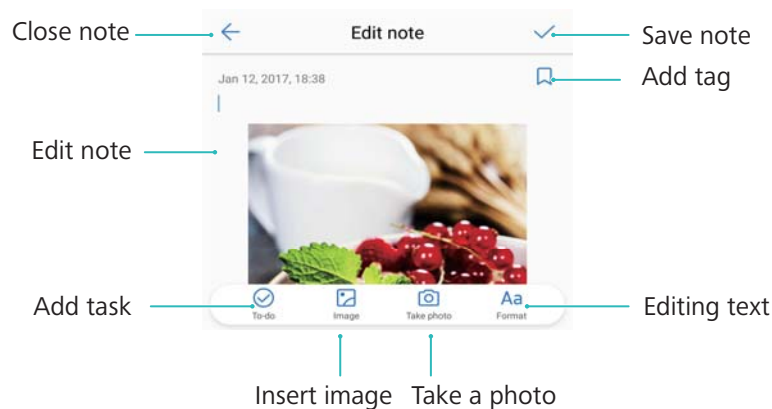



- 3 Touch  to save the note.


Managing notes

Adding a note to favorites

Open  **Notepad**. You can add a note to your favorites in two ways:




- In the list of notes, swipe left on a note and touch .
- Touch the note that you want to add to your favorites and touch .

Sharing a note

In the list of notes, open the note that you want to share and touch . Choose your sharing method and follow the onscreen instructions.

Deleting a note

You can delete a note in three ways:

- In the list of notes, swipe left on the note that you want to delete and touch  .
- Touch and hold a note to activate the note management interface. Select the notes that you want to delete and touch  .
- Touch the note that you want to delete and touch  > **Delete**.

Searching your notes


You can search your notes in two ways:

- In the list of notes, touch the search bar and enter one or more keywords.
- Swipe down on the home screen to display the search bar, and then enter one or more keywords.

Phone Manager

Optimizing performance

Use Phone Manager to make your phone run faster and optimize performance.

Open  **Phone Manager** and touch **OPTIMIZE**. Your phone will automatically optimize performance, enhance security, and reduce power consumption.


Enhancing speed

Clear the app cache and delete residual files and system trash to optimize performance.

1 Open  **Phone Manager**.

2 Touch **Cleanup** to clear the app cache and system trash.


 To free up more storage space, you can:

 
- Touch **Storage manager** to clear large files, images, and app data.
- Restore an app to its default settings. Touch **Application restore**. Select the app you want to restore and touch  > **Delete**. The app will be restored to its default settings, and all app-specific data will be deleted.


3 Touch **Finish** to exit.

Managing data usage

Phone Manager comes with a data management feature that you can use to monitor data usage and avoid exceeding your monthly allowance.

Open  **Phone Manager** and touch **Mobile data**. You can view detailed data usage statistics or configure the following settings:

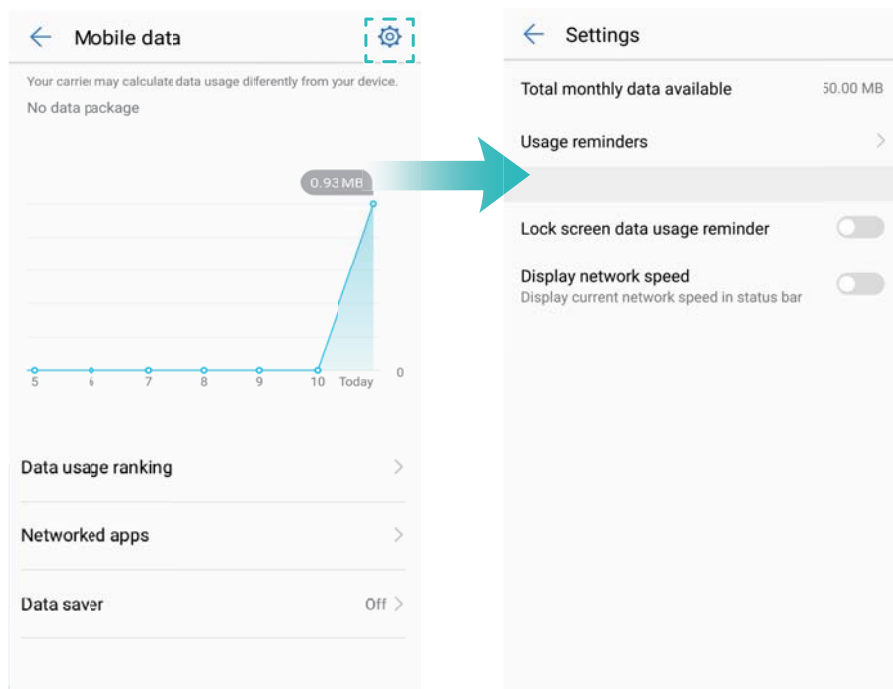


- **Data usage ranking:** View data usage for each app.
- **Networked apps:** Manage Internet access permissions for each app.
- **Total monthly data available:** Touch  to configure your data plan settings and data usage reminders. Your phone will calculate your mobile data usage and remaining data allowance for the billing period you specify. When you have used up your monthly allowance, you will receive a reminder, or your phone will disable mobile data.
- **Data saver:** Enable data saver and choose the apps that you do not want to restrict data for.

Harassment filter

Phone Manager comes with a harassment filter feature, which can help you block unwanted calls and messages.

 Open  **Phone Manager**. Touch **Blocked** >  and follow the onscreen instructions to configure the blacklist and the whitelist, blacklisted keywords, and spam settings.

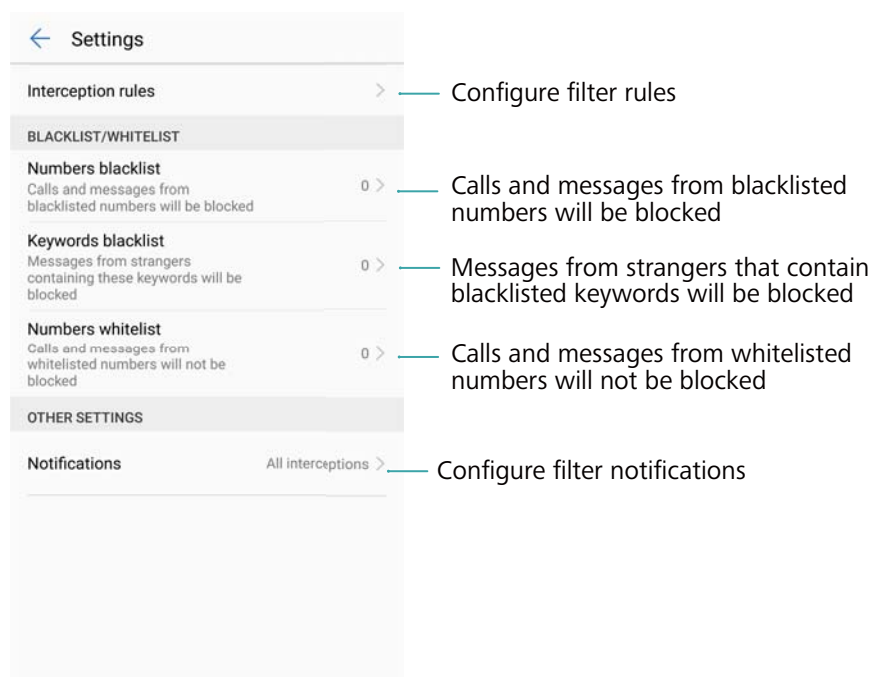

Battery Management

Viewing battery usage statistics


My device's battery is draining very fast, which apps are draining my battery? How can I reduce my power consumption? Use Phone Manager to view detailed battery usage statistics for each app.

Open  **Phone Manager**. Touch **XX% remaining** to enter the battery management screen. Here you can:



- Touch **Battery usage** to view detailed battery usage statistics.
- Touch **Consumption level** to view the hardware and software using the most power.
- Touch **Optimize** to check for power consumption problems and optimize performance.
- Switch on **Remaining battery percentage** to display the remaining battery percentage in the status bar.

Reducing power consumption

How can I effectively reduce my device's power consumption? Use Phone Manager to optimize performance and reduce power consumption.


Open  **Phone Manager** and touch **XX% remaining** to:

- **Optimize performance:** Touch **Optimize**. Your device will check for power consumption problems and optimize performance. To further reduce power consumption, refer to **items need to be optimized manually**, touch **View** or **Optimize** to adjust power settings manually.
- **Restrict background apps:** Touch **Lock screen cleanup**, and toggle off the switches next to the apps that you do not want to run in the background when the screen is locked.

- **Close power-intensive apps:** Touch **Power-intensive apps** and select the apps that you want to close.
 ⓘ A message will appear in the notification panel if power-intensive apps are running in the background. If you don't want to receive these notifications, touch  and switch off **Power-intensive prompt**.
- **Reduce the screen resolution:** Switch on **Low resolution power saving** to reduce the screen resolution and lower power consumption.
- **Automatically close power-intensive apps:** Touch  and switch on **Close excessively power-intensive apps**.


Managing app permissions

Phone Manager comes with a permission manager that you can use to restrict app permissions and protect your personal data.

- 1 Open  **Phone Manager**.
- 2 Touch **Permissions** and configure the desired permissions.

Virus scanner

Phone Manager comes with a virus scanner feature that helps you remove malware.


- 1 Open  **Phone Manager**.
- 2 Touch **Virus scan**. Your device will automatically identify and remove malware.

ⓘ Touch  . You can:

- Enable **Cloud scan** to scan your device using the latest antivirus database. An Internet connection is required to access the online database.
- Enable **Scan reminder** to receive a notification when you have not conducted a virus scan for 30 days.
- Select a scan mode. The **Quick scan** only scans important files and installed apps. The **Full scan** takes longer and scans for malicious files.
- Switch on **Auto-update** and **Only update over Wi-Fi** to automatically update the antivirus database when you have a Wi-Fi connection.

Encrypting apps

Use App Lock to encrypt apps and prevent unauthorized access.

- 1 Open  **Phone Manager**.
- 2 Touch **App lock**. When you access App Lock for the first time, follow the onscreen instructions to set a four-digit PIN and password reminder.

- 3 Turn on the switch next to the apps that you want to encrypt. You will need to enter the PIN each time you open an encrypted app.

 On the App Lock screen, touch  to change password or disable App Lock.


Setting apps to close automatically when the screen is locked

Choose which apps you want to close when the screen is locked to reduce power consumption and mobile data usage.

- 1 Open  **Phone Manager**.

- 2 Touch **Lock screen cleanup**.

- 3 Turn on the switch next to the apps that you want to close.


 The selected apps will close automatically when the screen is locked. You may not receive new messages from email, messaging, and social networking apps after they are closed.

Configuring Phone Manager

Adding shortcut for Phone Manager

Create home screen shortcuts for frequently-used device management features.

- 1 Open  **Phone Manager**.






- 2 Touch  > **Shortcuts** and switch on the feature that you want to add to the home screen.

 
Tools

Clock

Configuring the world clock



Add multiple clocks to view the time in various cities around the world.

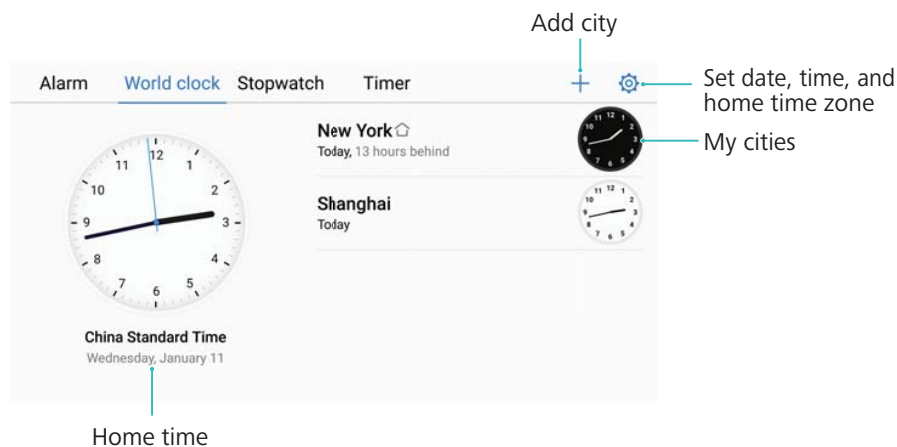
- 1 Open  **Clock**.
- 2 From the **World clock** tab, you can:
 - **Add a city:** Touch  . Enter a city name or select a city from the list.
 - **Set the system date and time:** Touch  > **Date & time** and configure the settings.
 - **Delete a city:** Touch and hold the city you want to delete. Touch  next to the city, and then touch .



Enabling dual clocks

By default, your device displays the network time. Enable dual clocks to display the time in your current time zone and your home time zone on the lock screen.

 
- 1 Open  **Clock**.
- 2 Under **World clock**, touch  > **Date & time** .
- 3 Switch on **Dual clocks**. Touch **Home city** and select your home time zone from the list of cities.

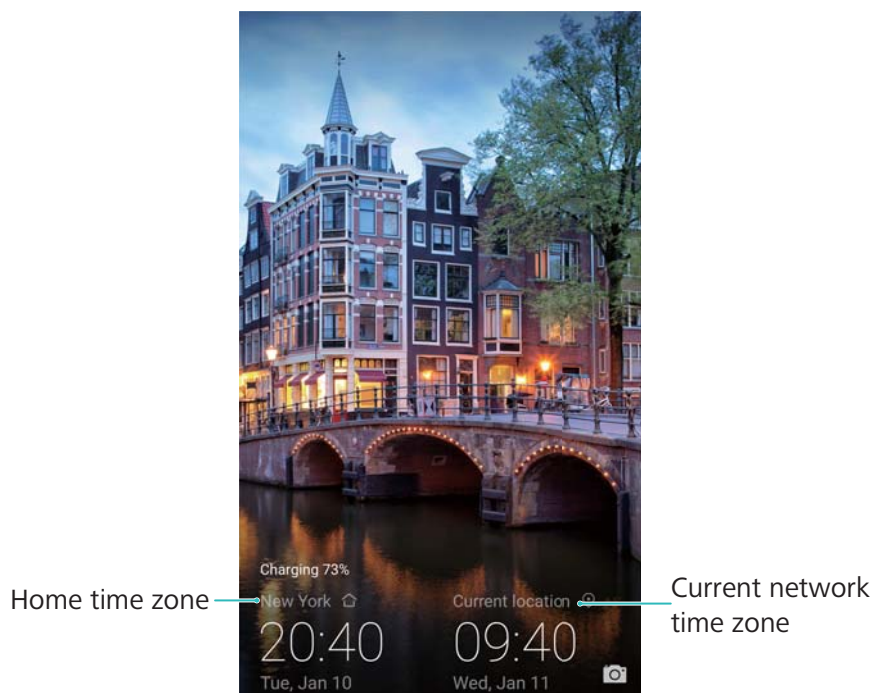

i Only one clock is displayed when the local time zone is the same as the home time zone.

Sound recorder

Recording Sound

- 1 Open  **Recorder**.
- 2 touch **Start** to begin recording.
- 3 Touch **Pause** or **Resume** to pause or resume the recording.


Add a tag: Add a **Quick tag** or **Photo tag** for easy reference.

- 4 Touch **Stop** and name your recording. Then touch **Save**.

i When Recorder is recording sound in the background, use the controller in the notification panel to **Pause**, **Resume**, or **Stop** the recording.

Playing a recording


Play sound from a particular direction, or start playback from a tagged location.

 
- 1 Open  **Recorder**.
- 2 Select **Recordings**.
- 3 Select a recording. On the playback screen, you can:
 - **Select a tag:** Swipe left on the playback screen to view recording tags, and then select a tag to start playback from the corresponding location.
 - **Change the playback mode:** Switch between **Earpiece** and **Speaker**.

i When the Recorder app is recording sound in the background, use the controller in the notification panel to play, pause, or cancel a recording.

Managing recordings

Share, rename, and sort recordings.


- 1 Open  **Recorder**.
- 2 Select **Recordings**.
- 3 On the file management screen, you can sort, share, and rename recordings.

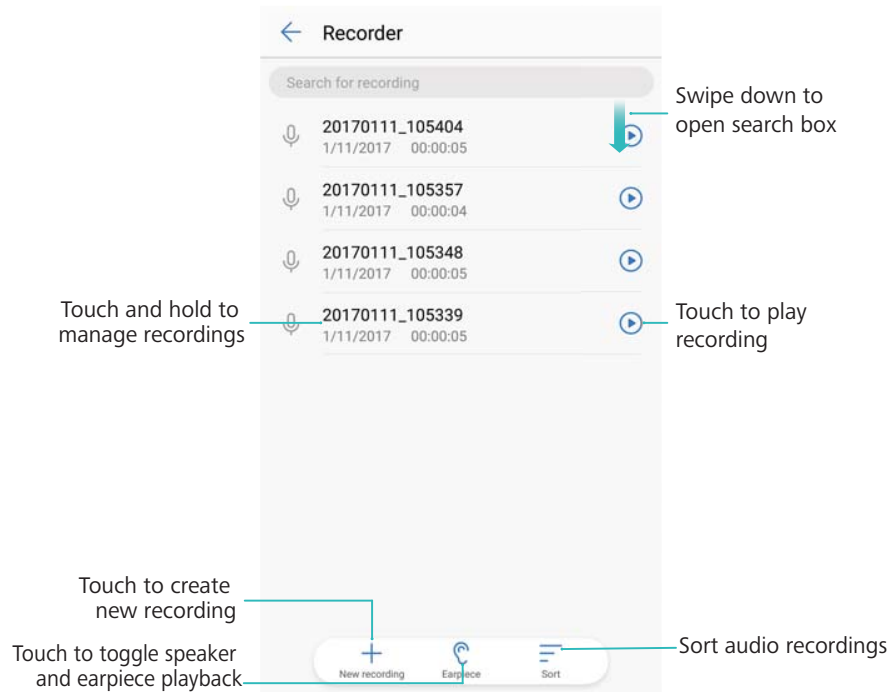

System Features and Settings

Power on and off timer

Use the power on and off timer to reduce power consumption and prevent disturbances when you're asleep.


Open  **Settings**, touch **Smart assistance** > **Scheduled power on/off**. Switch on **Scheduled power off** and **Scheduled power on**, and then configure the power on and off time and repeat settings. Your device will automatically turn on or off at the preset time.

To disable the timer, switch off **Scheduled power off** and **Scheduled power on**.


Restarting your device


You may notice a drop in performance when your device has been powered on for a long time. Restart your device regularly to clear cached files and ensure optimal performance.

To restart your device, press and hold the power button for 3 seconds, and then touch **Restart**.

 To force your device to restart, press and hold the power button until your device vibrates.



Changing the system language

- 1 Open  **Settings**.
- 2 Touch **Advanced settings** > **Language & input**.
- 3 Touch **Language** and select the desired language.

 If the language you are looking for is not listed, touch **Add language** to search for a language and add it to the list.

Input method settings

Adding a keyboard

- 1 Open  **Settings**.
 - 2 Touch **Advanced settings** > **Language & input** and select **Virtual keyboard** under **Keyboard & input methods**.
 - 3 Touch **Add virtual keyboard** and switch on the keyboard that you want to add.
-  After adding a keyboard, you can configure the keyboard settings to suit your needs.

 
Selecting the default input method




- 1 Open  **Settings**.


- 2** Touch **Advanced settings > Language & input**. Under **Keyboard & input methods**, touch **Default keyboard** and select the desired input method. Your device will automatically enable the default input method when you enter text.


Editing text

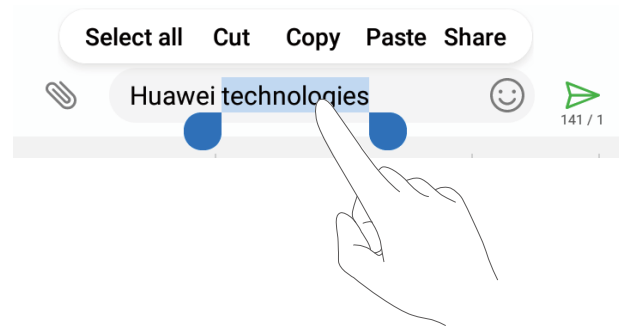Select, cut, copy, paste, and share text.



 - **Selecting text:** Touch and hold the text until  appears. Drag  and  to select a section of text, or touch **Select all** to select all text.
- **Copying text:** Select the text you want to copy and touch **Copy** to copy it to the clipboard.
- **Cutting text:** Select the text you want to cut and touch **Cut** to move it to the clipboard.
- **Pasting text:** Touch and hold where you want to insert the text, and then touch **Paste**.

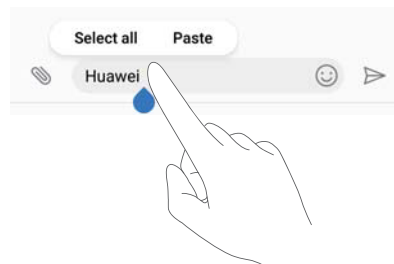

 The pasted text will remain available in the clipboard until you cut or copy other content.



- **Sharing text:** Select the text you want to share and touch **Share**. Choose how you want to share the text and follow the onscreen instructions.

 
Airplane mode


To avoid interference, please enable airplane mode when you are on board a plane. When enabled, call, mobile data, Bluetooth, and Wi-Fi will be disabled. You can enable Bluetooth and Wi-Fi manually.

Use any of the following methods to enable or disable airplane mode:

- **Use the shortcut switch:** Swipe down from the status bar to open the notification panel.

Touch  to display all shortcut switches, and then switch on .

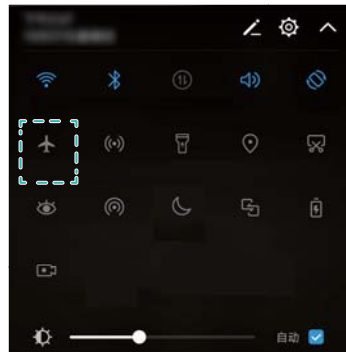


- **Go to Settings:** Open  **Settings** and toggle the **Airplane mode** switch.

 When airplane mode is enabled, the airplane mode icon will display in the status bar .

Configuring the sound settings


Adjusting the system volume


Adjust the ringtone, media, alarm, and call volume to suit your needs.

- 1 Open  **Settings**.
- 2 Touch **Sound > Volume** to adjust the ringtone, media, alarm, and call volume.

Enabling silent mode


Enable silent mode to avoid disturbing others in quiet surroundings, such as when you are in a meeting.

 
- 1 Open  **Settings**.
- 2 Touch **Sound** and switch on **Silent mode**.

 **Vibrate in silent mode:** When **Silent mode** is enabled and **Vibrate in silent mode** is switched on, your device will vibrate when you receive an incoming call or message.

Quickly switch between Silent mode, Vibration, Sound mode


Quickly switch between Silent mode, Vibration, Sound mode from the status bar.

Swipe down from the status bar and open the shortcuts tab. Touch  to switch between **Sound**, **Silent**, and **Vibration** mode.

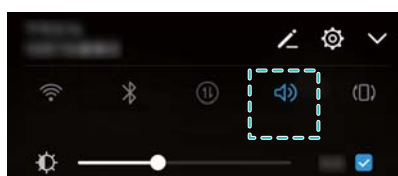

Setting the default notification tone

Choose a preset ringtone or a music file as the notification tone for messages, emails, and other notifications.


- 1 Open  **Settings**.
- 2 Touch **Sound > Default notification sound** and choose a new notification **Ringtone** or a **Music (on storage)** file.

 
Configuring dialpad touch tones

- 1 Open  **Settings**.
- 2 Touch **Sound > Dialer touch tones** and select Default, Melody or None.

One-handed UI

Enable Mini screen view or Shifting keyboard to make it easier to use your device with one hand.

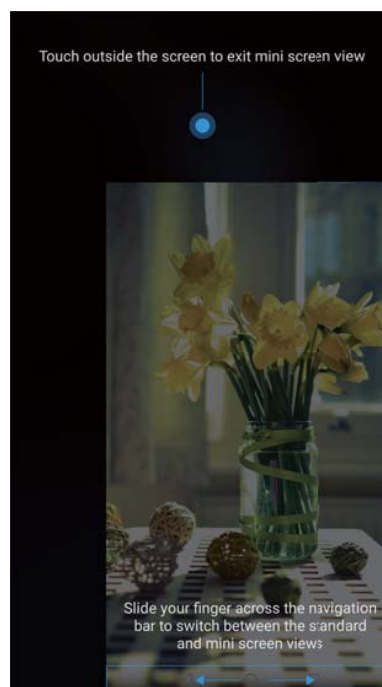


- 1 Open  **Settings**.
- 2 Touch **Smart assistance > One-handed UI**. You can:
 - **Shrink the screen:** Enable **Mini screen view**. The mini screen view will display texts and images in smaller sizes for easier operation. You can switch between mini screen and normal screen by swiping diagonally on the screen from the bottom left or bottom right corner.



- **Use the shifting keyboard:** Enable **Shifting keyboard**. The dialer, in-call menu, and lock screen dialpad will shrink to the corner of the screen for easier one-handed typing. Touch the arrow next to the keyboard to move the keyboard to the other side of the screen.

Do not disturb mode


Do not disturb mode allows you to work or relax in peace and quiet. Your device will only notify you about important calls or messages.

- 1 Open  **Settings**.
 - 2 Touch **Do not disturb** and switch on **Enable now**.
 - 3 Touch **Do not disturb mode**. You can:
 - **Configure the incoming call and message settings:** Select **Allow only priority interruptions**. Touch **Define priority interruptions**, and then touch **Calls** and **Messages** to set the contact range from whom you want to receive calls or messages.
 -  Selecting **Whitelist only** only sets the contact range. Select **Call/message whitelist** to set specific contacts.
 - **Enable alarm ringtones in do not disturb mode:** Select **Alarms only** to only allow alarm ringtones.
 - **Disable all interruptions:** Select **Don't interrupt** to disable all ringtones and vibrations. The screen will not turn on for incoming calls messages, or alarms.
-  • To enable do not disturb mode for a specific period, touch **Time**.
 - To enable do not disturb mode for a specific event, touch **Event**.

Viewing memory and storage information


View storage and memory information, change the default storage location, and format the microSD card.

-  Not all devices support microSD cards.

- 1 Open  **Settings**.
- 2 Touch **Memory & storage** to view storage information for your internal storage and microSD card.
- 3 From there, you can:
 - **Format the microSD card:** Touch **SD card** > **Format** > **Erase & format** to clear all data from the microSD card. Back up your files before formatting the card to avoid losing your data.
 - **Set the default storage location:** Touch **Default location** and set the default storage location to the internal storage or microSD card.

Setting the date and time

Your device automatically sets the date and time using network-provided values. You can also set the time manually and display it in 12-hour or 24-hour formats.


- 1 Open  **Settings**.
- 2 Touch **Advanced settings > Date & time**. You can:
 - **Set the time and date automatically using network-provided values:** Switch on **Automatic date & time**.
 - **Set the time zone automatically using network-provided values:** Switch on **Automatic time zone**.
 - **Set time format:** Switch on the 24-hour format to display the time in 24-hour format. By default, the time is displayed in 12-hour format.

Enabling location access

Enable location-based services to ensure that map, navigation, and weather apps can access your location information.



Configuring the location settings

Features may vary depending on your carrier.

- 1 Open  **Settings**.
- 2 Touch **Security & privacy > Location access**.
- 3 Switch on **Access my location**, you can
 - **Use GPS, Wi-Fi, and mobile networks:** Uses GPS and your device's Internet connection. Enable this option for highly accurate positioning.
 - **Use Wi-Fi and mobile networks:** Only uses your device's Internet connection. Enable this option for reduced power consumption and longer standby times.
 - **Use GPS only:** Does not require an Internet connection. Enable this option to reduce mobile data usage.

Increasing indoor positioning accuracy


Your device uses Wi-Fi and Bluetooth for more accurate positioning when you are indoors.


- 1 Open  **Settings**.
- 2 Touch **Security & privacy > Location access**.
- 3 Touch  **> Scan settings**, you can:
 - Switch on **Wi-Fi scanning**. Location apps and services will continually scan for Wi-Fi networks for more accurate positioning.


- Switch on **Bluetooth scanning**. Location apps and services will search for Bluetooth devices for more accurate positioning.

Restoring factory settings

Restore factory settings if your device crashes or is slow to respond.

 Restoring factory settings will erase your personal data from your device, including account information, downloaded apps, and system settings. Back up important data on your device before restoring factory settings.

- 1 Open  **Settings**.
- 2 Touch **Advanced settings > Backup & reset**.
- 3 Touch **Factory data reset** and choose whether to format your internal storage.

 Selecting **Erase internal storage** will delete all files on your internal storage, such as music and images. Proceed with caution.

- 4 Touch **Reset phone** to restore your device to its factory settings.

Viewing product information


Renaming your device

Rename your device to make it easier to find when connecting other devices to your portable Wi-Fi hotspot, or when pairing other devices over Bluetooth.

- 1 Open  **Settings**.
- 2 Touch **About phone > Device name** and rename your device.


Viewing your model number and version information

View your model number and system version information.

- 1 Open  **Settings**.
- 2 Touch **About phone** to view your model number, Build number, EMUI version, and Android version.


Viewing your IMEI

All devices have a unique 15-digit IMEI that you can use to verify if your device is genuine.

- 1 Open  **Settings**.
- 2 Touch **About phone** to view the IMEI.

Viewing your device's specifications


View your device's specifications using a few simple steps. You can view information about your processor, memory, screen resolution, and more.






- 1 Open  **Settings**.
- 2 Touch **About phone**. Swipe up or down on the screen to view information about the processor, RAM, internal storage, screen resolution, and more.

Accessibility features

Enabling TalkBack

TalkBack provides audible prompts and captions to help visually impaired users. When TalkBack is enabled, your device will issue audible prompts for all content that you touch, select, or enable.

-  Audible prompts are not available for all languages. If your language is not available, you can download a third-party speech synthesis engine. For more information, see [Text To Speech \(TTS\) output](#).

 
- 1 Open  **Settings**.
- 2 Touch **Advanced settings > Accessibility > TalkBack**.
- 3 Switch on **TalkBack** and touch **OK**.
 -  A tutorial will be played when you enable TalkBack for the first time. To replay the tutorial, touch  to access TalkBack Settings, and then select the tutorial.
- 4 Touch  and switch on **Explore by touch**.
 -  When **Explore by touch** is enabled, your device will issue audible prompts for content that you touch.

Disable TalkBack: Press the power button until your device vibrates, and then touch and hold the screen with two fingers for more than 3 seconds.


Using TalkBack to control your device

After you have enabled TalkBack, use gestures to:


Browse the screen: Swipe up or down with two fingers to scroll through menu lists. Swipe left or right to move between screens.

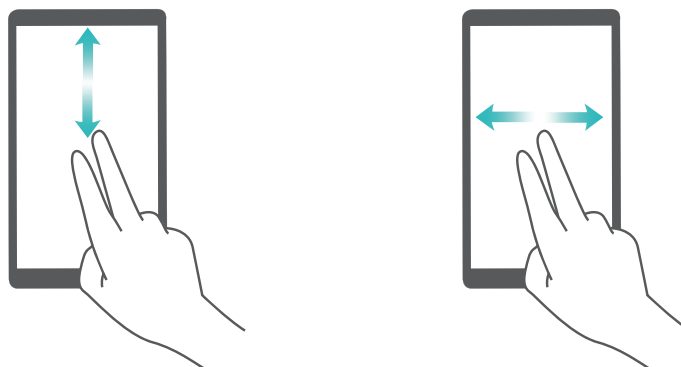

  Select an item: Touch an item with one finger to select it (it will not open). Your device will read out the content of the selected item.

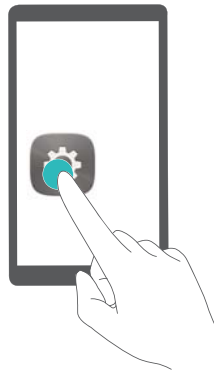

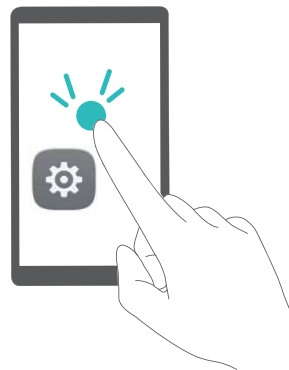

Open an item: Double touch any part of the screen using one finger to confirm your selection from the previous step.




For example, if you want to open **Settings**, touch the **Settings** icon once using one finger, and then touch twice on any part of the screen.

Configuring the TalkBack settings

- 1** Open  **Settings**.
- 2** Touch **Advanced settings** > **Accessibility** > **TalkBack** > .
- 3** Follow the onscreen instructions to adjust the feedback volume, audible feedback settings, control gestures, and more.


Text To Speech (TTS) output


This feature converts text into speech for visually impaired users. Text To Speech (TTS) output requires TalkBack to be enabled.

- 1** Open  **Settings**.
- 2** Touch **Advanced settings** > **Accessibility**. Switch on **Text-to-speech output**, and then select the desired speech synthesis engine and voice speed.

Color correction

Color correction mode adjusts colors to make it easier for color vision impaired users to distinguish between different parts of the screen.

 Enable this mode with caution, as it may affect your device's performance.

- 1** Open  **Settings**.
- 2** Touch **Advanced settings > Accessibility > Color correction**, and switch on **Color correction**.
- 3** Touch **Correction mode**, and select the desired color correction mode.

Obtaining help

Read the Quick Start Guide included with your phone.

Touch **Settings** > **About phone** > **Legal information** to read the legal information.

Visit <http://consumer.huawei.com/en/> for more information.

Personal Information and Data Security

The use of some functions or third-party applications on your device could result in your personal information and data being lost or becoming accessible to others. Use the following measures to help you protect your personal information:

- Put your device in a safe place to prevent unauthorized use.
- Set your device screen to lock and set a password or unlock pattern.
- Periodically back up personal information stored on your SIM card, memory card, or your device memory. If you change to a different device, be sure to move or delete any personal information on your old device.
- Periodically back up personal information stored on your memory card, or your device memory. If you change to a different device, be sure to move or delete any personal information on your old device.
- Do not open messages or emails from strangers to prevent your device from becoming infected with a virus.
- When using your device to browse the Internet, do not visit websites that might pose a security risk to avoid your personal information from being stolen.
- If you use services such as the portable Wi-Fi hotspot or Bluetooth, set passwords for these services to prevent unauthorized access. Turn these services off when they are not in use.
- Install device security software and regularly scan for viruses.
- Be sure to obtain third-party applications from a legitimate source. Downloaded third-party applications should be scanned for viruses.
- Install security software or patches released by Huawei or authorized third-party application providers.
- Using unauthorized third-party software to update your device may damage your device or put your personal information at risk. It is recommended that you update through your device's online update feature or download official update packages for your device model from Huawei.
- Some applications require and transmit location information. As a result, a third-party may be able to share your location information.
- Some third-party application providers may collect detection and diagnostic information on your device to improve their products and services.

List of safety features

Huawei phones come with a number of security features to keep your data secure.

Lock screen style and password	Set a screen lock password to prevent unauthorized access to your phone. For more information, see Changing the lock screen style .
Encrypting a microSD card	Encrypt your microSD card to prevent unauthorized access to your data. A password must be entered when the microSD card is inserted into another phone. For more information, see Setting microSD card password .
Setting your SIM card PIN	Enable the SIM lock to prevent others from using your SIM card. You will need to enter your SIM card PIN each time you turn on your phone or insert your SIM card into another phone. For more information, see Setting your SIM card PIN .
Blocking spam messages	Use the Blocked in Phone Manager to block spam calls and messages. For more information, see Blocking spam messages .
VPNs	You can use a VPN to connect to your company network and email server. For more information, see VPNs .
Harassment filter	Use the Blocked in Phone Manager to block spam calls and messages. For more information, see Harassment filter .
App Lock	Use the App Lock in Phone Manager to lock apps and prevent unauthorized access. The App Lock password is required to open locked apps. For more information, see Encrypting apps .
Managing data usage	Use the data management feature in Phone Manager to keep track of your mobile data usage. Mobile data will be automatically disabled when you exceed the preset limit to prevent you from incurring excessive data charges. For more information, see Managing data usage .
Virus scanner	Use the virus scanner in Phone Manager to remove malware. For more information, see Virus scanner .

Legal Notice

Copyright © Huawei Technologies Co., Ltd. 2017. All rights reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd. and its affiliates ("Huawei").

The product described in this manual may include copyrighted software of Huawei and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders.

Trademarks and Permissions



HUAWEI, HUAWEI,



are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Android™ is a trademark of Google Inc.

The *Bluetooth*® word mark and logos are registered trademarks owned by *Bluetooth SIG, Inc.* and any use of such marks by Huawei Technologies Co., Ltd. is under license.

Other trademarks, product, service and company names mentioned may be the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and therefore may not be activated or may be limited by local network operators or network service providers.

Thus, the descriptions herein may not exactly match the product or its accessories which you purchase.

Huawei reserves the right to change or modify any information or specifications contained in this manual without prior notice and without any liability.

Third-Party Software Statement

Huawei does not own the intellectual property of the third-party software and applications that are delivered with this product. Therefore, Huawei will not provide any warranty of any kind for third party software and applications. Neither will Huawei provide support to customers who use third-party software and applications, nor be responsible or liable for the functions or performance of third-party software and applications.

Third-party software and applications services may be interrupted or terminated at any time, and Huawei does not guarantee the availability of any content or service. Third-party service providers provide content and services through network or transmission tools outside of the control of Huawei. To the greatest extent permitted by applicable law, it is explicitly stated that

Huawei shall not compensate or be liable for services provided by third-party service providers, or the interruption or termination of third-party contents or services.

Huawei shall not be responsible for the legality, quality, or any other aspects of any software installed on this product, or for any uploaded or downloaded third-party works in any form, including but not limited to texts, images, videos, or software etc. Customers shall bear the risk for any and all effects, including incompatibility between the software and this product, which result from installing software or uploading or downloading the third-party works.

This product is based on the open-source Android™ platform. Huawei has made necessary changes to the platform. Therefore, this product may not support all the functions that are supported by the standard Android platform or may be incompatible with third-party software. Huawei does not provide any warranty or representation in connect with any such compatibility and expressly excludes all liability in connection with such matters.

DISCLAIMER

ALL CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL HUAWEI BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOSS OF PROFITS, BUSINESS, REVENUE, DATA, GOODWILL SAVINGS OR ANTICIPATED SAVINGS REGARDLESS OF WHETHER SUCH LOSSES ARE FORSEEABLE OR NOT.

THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF HUAWEI ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS MANUAL SHALL BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.

Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and be responsible to obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

This guide is for reference only. The actual product, including but not limited to the color, size, and screen layout, may vary. All statements, information, and recommendations in this guide do not constitute a warranty of any kind, express or implied.

Please visit <http://consumer.huawei.com/en/support/hotline> for recently updated hotline and email address in your country or region.

Model: H1711

V100R001_01