



F615

USER GUIDE

Copyright © Huawei Technologies Co., Ltd. 2012. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd. and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders under licenses.

Trademarks and Permissions



HUAWEI, HUAWEI, and



are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and may not be activated or may be limited by local network operators or network service providers. Thus the descriptions herein may not exactly match the product or its accessories you purchase.

Huawei Technologies Co., Ltd. reserves the right to change or modify any information or specifications contained in this manual without prior notice or obligation.

NO WARRANTY


THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD. BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

 
Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and will obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

Appearance

 The figures in this guide are provided for your reference only.

Front View

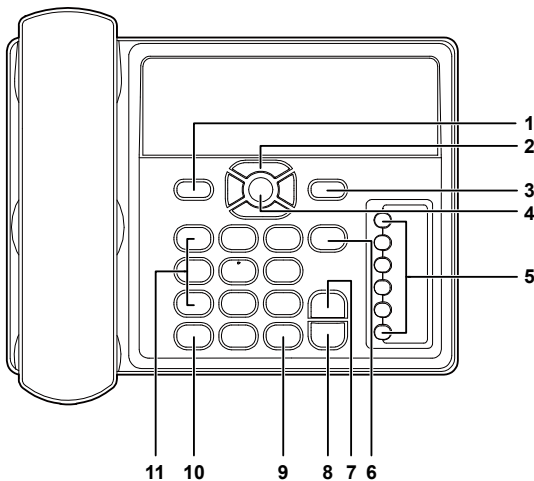

1 Left function key



- Access the main **Menu** in standby mode.
- Select the option displayed on the lower left corner of the screen.

2 Scroll keys



- Access the shortcut screen in standby mode.
- Adjust the volume during a call.

3 Right function key






- Access the **Contacts** screen in standby mode.
- Select the option displayed on the lower right corner of the screen.

 
4 **OK** key



- Access the main **Menu** in standby mode.
 - Select the option displayed on the lower left corner of the display screen.
-





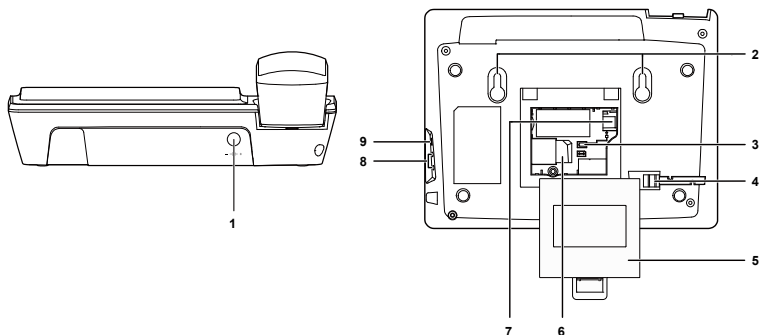

5	Shortcut keys	<ul style="list-style-type: none"> • Speed dial a phone number. • Select Settings > Phone settings > Shortcuts to assign a shortcut key to a phone number.
6	End key 	<ul style="list-style-type: none"> • End a call or reject an incoming call. • Press and hold it to power on or off. • Return to the standby mode.
7	Hands-free key 	<ul style="list-style-type: none"> • Make or answer a call without lifting the handset. • Cancel the dialing that is in hands-free mode. • End the call that is in hands-free mode.
8	Call/Redial key 	<ul style="list-style-type: none"> • Make or answer a call. • View dialed calls in standby mode.
9	# key	<ul style="list-style-type: none"> • Press and hold it to switch between the silent and normal profiles. • Switch on or off the input mode of T9 in editing mode. • Mark or unmark a record.
10	* key	<ul style="list-style-type: none"> • Press and hold it to lock the keyboard in standby mode. • Switch between different input methods in editing mode.
11	Number keys	Enter numbers and characters.

Back and Side View



1	Power jack	2	Wall-mounting brackets
3	Battery container	4	Coiled cord jack on main unit
5	Battery container cover	6	SIM card slot
7	Battery cord jack	8	Headset jack
9	Data port		


Screen Icons

	Signal strength		Battery level
	Call in progress		No network available
	Hands-free mode		Phone powered by the power adapter

Installation

Installing the SIM Card

 
Ensure that the phone is powered off and disconnected from the power adapter. When installing the SIM card, ensure that the golden contacts of the SIM card are facing downward and that the beveled edge of the SIM card is properly aligned with that of the SIM card slot. Then check that the SIM card is fully inserted.

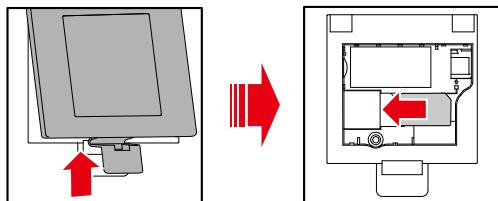

Do not frequently remove the SIM card when using the phone.


Installing the Battery

 Before using the phone, install the battery properly. When installing the battery, ensure that the phone is powered off and is disconnected from the power adapter; ensure that the golden contacts of the battery mate securely with those in the battery slot.

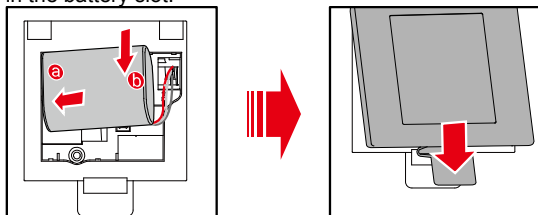

If the phone will not be used for a long time, remove the battery from the phone.

 Connecting the Power Adapter to the Phone

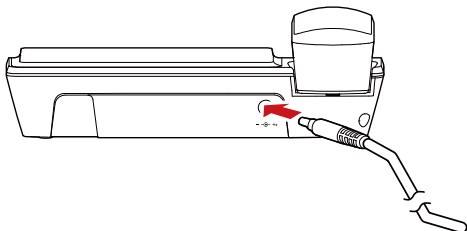

- When new phones are delivered, the battery power is low. Therefore, charge the phone for a while and then power on the phone the first time you use it.
- When you use the phone, it is recommended that you connect the power adapter to the phone. When using the battery to power the phone, ensure that the battery power is sufficient.

Powering On the Phone

To power on the phone, press and hold the end key until the screen lights up.



- The phone will power on automatically after the power adapter is connected to it.
- Press and hold the end key to power off the phone.

Call Functions

Making a Call

1. In standby mode, press the number keys to enter a phone number.
2. Press the call key to dial the number.
3. Press the end key to end the call or cancel the dialing.



- In standby mode, press the call key to view the call log. Find the desired number in the call log, and then press the call key to dial the number.
- Find the desired number in the phonebook, and then press the call key to dial the number.
- During a call, press the right function key to set mute mode, press again to cancel the mute mode.
- For the specific call duration, see your network operator's charging bill.

Answering or Rejecting a Call

When there is an incoming call, press the call key to answer the call; press the end key to reject the call.

Messages

Creating a Message

1. Select **Messages > Write SMS**.
2. Write the message.
3. Press the **OK** key and then add a recipient using the following methods:
 - Enter the recipient's phone number.

- Add the recipient from the phonebook.
4. Press the **OK** key to send the message.

Reading a Message

The phone stores received messages in the inbox.

1. Select **Messages > Inbox**.
2. Press the up or down navigation key to scroll to a message in the list.
3. Press the **OK** key to open and read the message.
4. Press the left function key to manage the message.

Text Input Methods

Switching Between Input Methods

In editing mode, press the * key to switch between text input methods and press the # key to switch between the predictive English input method and the traditional English input method.



- In editing mode, press the right function key to delete the character to the left of the cursor; press and hold the right function key to delete all characters.
- In predictive or traditional English input mode, press the **0** key to enter a space and press the **1** key to display the symbol list.

Predictive English Input (T9)

1. Press the keys labeled with the letters required to spell the desired word once according to the spelling sequence of the word.
As you enter letters, the phone attempts to predict the desired word and displays candidate words.
2. Press the navigation keys to scroll to the desired word.
3. Press the **OK** key to enter the word followed by a space.

Traditional English Input (ABC or abc)

In **ABC** or **abc** text input mode, press the number keys to enter letters. Press a number key repeatedly until the desired character appears. If the next letter you want to enter is on the same key as the current one, wait until the current letter is entered, and then enter the next one.

Number Input

In **123** input mode, enter a desired number by pressing the number key.

Settings

To configure and customize your phone settings, select **Settings**.

Phone Lock

To set the phone lock, select **Security > Password lock > Phone lock**. You can change the default phone lock code (**0000**) to a personalized password.



Before deleting user-defined settings, you must enter the correct phone lock code.

Keypad Lock

In standby mode, press and hold the * key to lock the keypad.

In standby mode, press the * key and then the **OK** key to unlock the keypad.

PIN and PUK

A Personal Identification Number (PIN) protects your SIM card from unauthorized use. A PIN Unblocking Key (PUK) is used to change a blocked PIN. If you enter your PIN incorrectly a number of times consecutively, your SIM card will be locked and the phone asks you to enter the PUK to unlock it. Both the PIN and the PUK are supplied with the SIM card. For details, contact your service provider.

FAQs

If problems occur during the use of the phone, refer to the following sections for a proper solution. If a problem persists, contact your phone vendor.

Phone Cannot Be Powered On

1. Remove the battery cover and check whether the battery is installed properly.
2. If the battery is properly installed, a possible cause for the problem is that the battery power is low. Charge the battery, and then try to power on the phone.

No Information Is Displayed on the Phone Screen

If the phone is not used for a long time and the battery runs out of power, the phone may not display any information when it is being charged. This is a normal phenomenon. The phone can be powered on after the battery is charged for a while.

Battery Cannot Be Charged

1. Check that the phone and the power adapter are connected properly.
2. Check that the power adapter and the power socket are connected properly.
3. Replace the power adapter or the battery with a new one of the same model.

Signal Strength Is Weak

1. Check that the SIM card is installed properly.
2. Place the phone at a location where strong signals can be received.

Call Volume Is Too High or Too Low

During a call, press navigation keys to adjust the volume.

Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.
- Some wireless devices may affect the performance of hearing aids. For any such problems, consult your service provider.

Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Security

- Do not use your device while driving, and observe the local laws and regulations.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- On a stormy day with thunder, do not use your device, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- Use accessories authorized by the manufacturer. Using unauthorized accessories will render the warranty null and void.
- Because the device needs to disperse heat during working, place the device and the power supply in a ventilated and shady place. Never cover the device, put objects on it, or place it near water, fire as well as inflammable and explosive materials.
- This device should be installed and operated with a minimum distance of 20 cm between the antenna and all persons.
- Keep the ambient temperature between -10°C and 45°C while the device is being charged. Keep the ambient temperature between -10°C to 55°C for using the device powered by a battery.

Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

Accessories

Choose only batteries, chargers, and accessories approved for use with this model by the device manufacturer. The use of any other type of battery, charger, or accessory may invalidate any warranty for the device, may be in violation of local rules or laws, and may be dangerous. Please contact your dealer for information about the availability of approved batteries, chargers, and accessories in your area.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
- Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or reference instruction supplied with your device.

Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.

- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Disposal and Recycling Information



This symbol on the device (and any included batteries) indicates that they should not be disposed of as normal household garbage. Do not dispose of your device or batteries as unsorted municipal waste. The device (and any batteries) should be handed over to a certified collection point for recycling or proper disposal at the end of their life.

For more detailed information about the recycling of the device or batteries, contact your local city office, the household waste disposal service, or the retail store where you purchased this device.

The disposal of this device is subject to the Waste from Electrical and Electronic Equipment (WEEE) directive of the European Union. The reason for separating WEEE and batteries from other waste is to minimize the potential environmental impacts on human health of any hazardous substances that may be present.

Reduction of Hazardous Substances

This device is compliant with the EU Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) Regulation (Regulation No 1907/2006/EC of the European Parliament and of the Council) and the EU Restriction of Hazardous Substances (RoHS) Directive (Directive 2002/95/EC of the European Parliament and of the Council). For more information about the REACH compliance of the device, visit the Web site www.huaweidevice.com/certification. You are recommended to visit the Web site regularly for up-to-date information.

EU Regulatory Conformance

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the Web site www.huaweidevice.com/certification.

CE0168

Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

Version: V100R001_01 Part Number: 96721140