

honor 3C *Lite*

User Guide

Contents

Read Before Proceeding	1
Safety Precautions	1
Personal Information and Data Security.....	2
Legal Notice	3
Getting Started.....	6
Key Functions at Your Fingertips.....	6
Important Information About the Battery.....	6
Power Saving Tips	7
Power On or Off Your Mobile Phone	7
Using the Touchscreen	8
Locking and Unlocking the Screen.....	8
Home Screen	10
Notification and Status Icons.....	12
Dual-card management.....	14
Texting.....	15
Personalizing your phone.....	16
Changing the wallpaper	16
Setting the home screen transition effect.....	16
Changing the lock screen style	16
Changing the font size	17
Adjusting the screen brightness.....	17
Calling	18
Making a Call	18
Answering or Rejecting a Call.....	19
Other Operations During a Call.....	20
Using the Call log	21
Using Airplane Mode.....	22
Contact.....	23
Opening the Contact Application	23
Creating a contact.....	23
Importing or exporting contacts.....	23
Adding a Contact to Your Favorites.....	24
Searching for a Contact.....	24
Editing a Contact.....	24
Deleting a Contact.....	25

Managing Groups.....	25
Sharing contacts.....	25
Messaging	26
Creating and Sending a Text Message	26
Creating and Sending a Multimedia Message.....	26
Adding a Slideshow.....	27
Opening and Viewing a Multimedia Message	27
Replying to a Message.....	27
Searching for a message.....	27
Managing messages.....	27
Customizing Message Settings	28
Email	29
Adding an Email Account	29
Viewing an Email Message	29
Saving an Email Attachment.....	29
Creating and Sending an Email Message	30
Replying to an Email Message	30
Customizing Email Account Settings.....	30
Internet connection	31
Mobile Networks.....	31
Wi-Fi.....	32
Wi-Fi Direct.....	33
Sharing Your Phone’s Data Connection	33
Bluetooth	35
Connecting your phone to a computer.....	37
Browser	38
Opening the Browser	38
Opening a Webpage	38
Setting a Home Page	38
Managing Bookmarks	39
Customizing Browser Settings	39
Clearing your browsing history.....	39
Entertainment	40
Taking Photos and Recording Videos.....	40
Using the Gallery	43
Enjoying Music	44
Listening to the FM Radio.....	46

Google Services	47
Creating a Google Account	47
Gmail	47
Maps	48
YouTube	49
Play Store	50
Synchronizing Information	52
Managing Your Accounts	52
Customizing Your Account Synchronization.....	53
Using Other Applications.....	55
Calendar	55
File Manager	56
Clock	58
Weather	59
Calculator	60
Managing Your Mobile Phone.....	61
Turning on or off airplane mode.....	61
Tone settings	61
Display settings.....	62
Date and Time settings.....	62
System language settings	63
Managing applications	63
Setting Phone Services.....	65
Protecting Your Mobile Phone.....	65
Resetting Your Mobile Phone	67
Accessibility	67
Online Update	68

Read Before Proceeding

Safety Precautions

Please read the safety precautions carefully to ensure the correct use of your mobile phone.



Do not crash, throw, or puncture your mobile phone. Avoid the falling, squeezing, and bending of your mobile phone.



Do not use your mobile phone in a moist environment, such as the bathroom. Prevent your mobile phone from being soaked or washed in liquid.



Do not switch on your mobile phone when it is prohibited to use phones or when the phone may cause interference or danger.



Do not use your mobile phone while driving.



Follow any rules or regulations in hospitals and health care facilities. Switch off your mobile phone near medical apparatus.



Switch off your mobile phone in aircraft. The phone may cause interference to control equipment of the aircraft.



Switch off your mobile phone near high-precision electronic devices. The phone may affect the performance of these devices.



Do not attempt to disassemble your mobile phone or its accessories. Only qualified personnel are allowed to service or repair the phone.



Do not place your mobile phone or its accessories in containers with a strong electromagnetic field.



Do not place magnetic storage media near your mobile phone. Radiation from the phone may erase the information stored on them.



Do not put your mobile phone in a high-temperature place or use it in a place with flammable gas such as a gas station.



Keep your mobile phone and its accessories away from children. Do not allow children to use your mobile phone without guidance.



Use only approved batteries and chargers to avoid the risk of explosions.



Observe any laws or regulations on the use of wireless devices. Respect others' privacy and legal rights when using your wireless device.



Strictly follow the relevant instructions of this manual while using the USB cable. Otherwise your mobile phone or PC may be damaged.

Personal Information and Data Security

The use of some functions or third-party applications on your device could result in your personal information and data being lost or becoming accessible to others. Several measures are recommended to help you protect personal and confidential information.

- Place your device in a safe area to prevent it from unauthorized use.
- Set your device screen to lock and create a password or unlock pattern to open it.
- Periodically back up personal information kept on your SIM/UIM card, memory card, or stored in your device memory. If you change to a different device, be sure to move or delete any personal information on your old device.
- If you are worried about viruses when you receive messages or emails from a stranger, you can delete them without opening them.
- If you use your device to browse the Internet, avoid websites that might pose a security risk to avoid theft of your personal information.
- If you use services such as Wi-Fi tether or Bluetooth, set passwords for these services to prevent unauthorized access. When these services are not in use, turn them off.
- Install or upgrade device security software and regularly scan for viruses.
- Be sure to obtain third-party applications from a legitimate source. Downloaded third-party applications should be scanned for viruses.
- Install security software or patches released by Huawei or third-party application providers.
- Some applications require and transmit location information. As a result, a third-party may be able to share your location information.
- Your device may provide detection and diagnostic information to third-party application providers. Third party vendors use this information to improve their products and services.



- If you have concerns about the security of your personal information and data, please contact mobile@huawei.com.

Legal Notice

Copyright © Huawei Technologies Co., Ltd. 2014. All rights reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd. and its affiliates ("Huawei"). The product described in this manual may include copyrighted software of Huawei and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders.

Trademarks and Permissions

HONOR,  HUAWEI, HUAWEI, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Android™ is a trademark of Google Inc.

The *Bluetooth*® word mark and logos are registered trademarks owned by *Bluetooth SIG, Inc.* and any use of such marks by Huawei Technologies Co., Ltd. is under license.

Other trademarks, product, service and company names mentioned may be the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and therefore may not be activated or may be limited by local network operators or network service providers.

Thus, the descriptions herein may not exactly match the product or its accessories which you purchase.

Huawei reserves the right to change or modify any information or specifications contained in this manual without prior notice and without any liability.

Third-Party Software Statement

Huawei does not own the intellectual property of the third-party software and applications that are delivered with this product. Therefore, Huawei will not provide any warranty of any kind for third party software and applications. Neither will Huawei provide support to

customers who use third-party software and applications, nor be responsible or liable for the functions or performance of third-party software and applications.

Third-party software and applications services may be interrupted or terminated at any time, and Huawei does not guarantee the availability of any content or service. Third-party service providers provide content and services through network or transmission tools outside of the control of Huawei. To the greatest extent permitted by applicable law, it is explicitly stated that Huawei shall not compensate or be liable for services provided by third-party service providers, or the interruption or termination of third-party contents or services.

Huawei shall not be responsible for the legality, quality, or any other aspects of any software installed on this product, or for any uploaded or downloaded third-party works in any form, including but not limited to texts, images, videos, or software etc. Customers shall bear the risk for any and all effects, including incompatibility between the software and this product, which result from installing software or uploading or downloading the third-party works.

This product is based on the open-source Android™ platform. Huawei has made necessary changes to the platform. Therefore, this product may not support all the functions that are supported by the standard Android platform or may be incompatible with third-party software. Huawei does not provide any warranty or representation in connect with any such compatibility and expressly excludes all liability in connection with such matters.

DISCLAIMER

ALL CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL HUAWEI BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOSS OF PROFITS, BUSINESS, REVENUE, DATA, GOODWILL SAVINGS OR ANTICIPATED SAVINGS REGARDLESS OF WHETHER SUCH LOSSES ARE FORSEEABLE OR NOT.

THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF HUAWEI ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS MANUAL SHALL BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.

Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and be responsible to obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

Privacy Policy





To better understand how we protect your personal information, please see the privacy policy at <http://consumer.huawei.com/privacy-policy>.

Getting Started



All the pictures in this guide are for your reference only. Your phone's actual display features may be different to those described here, depending on its software version.

Key Functions at Your Fingertips

	<ul style="list-style-type: none">• Press and hold to power on your mobile phone.• Press to lock the screen when your mobile phone is active.
	<ul style="list-style-type: none">• Touch to return to the previous screen or exit the application you are running.• Touch to hide the keyboard.
	<ul style="list-style-type: none">• Touch to open the menu on an active screen.
	<ul style="list-style-type: none">• Touch to return to the home screen.• Touch and hold to open search bar.• Double-click to display the list of recently used applications.

Important Information About the Battery

- If the battery has not been used for a long time, you may not be able to power on your mobile phone immediately after you begin charging the battery. Allow the battery to charge for a few minutes with the phone powered off before attempting to power the phone on.
- As it ages, the battery's performance will degrade, in particular it will not hold charge as it did when it was new. When the battery life becomes noticeably shorter than usual after being charged properly, replace the battery with a new one of the same type.
- Using data services increases the power consumption of the phone and will therefore reduce the length of time that the phone can be used between battery charges.
- The time required to fully charge the battery depends on the ambient temperature and the age of the battery.

- When the battery power is low, the phone will alert you and display a message. When the battery power is almost exhausted, your phone will power off automatically.

Power Saving Tips


The longevity of battery power depends on the network to which you connect, and how you use your mobile phone.

Try the following to conserve battery power:

- When your mobile phone is not in use, turn off the screen backlight.
- Reduce the time it takes for your screen backlight to turn off when your phone is idle.
- Lower the screen brightness.
- Turn off Bluetooth when you are not using it. Only make your phone visible to other Bluetooth devices when you need to establish a Bluetooth connection.
- Turn off Wi-Fi when you are not using it.
- Turn off your phone's location receiver when you are not using it.
- Lower the volume.
- Close power-draining programs, when you do not need them.
- Turn off the data service.

Power On or Off Your Mobile Phone

Powering On Your Mobile Phone

Press and hold  (Power key). The first time you power on your phone, you will be asked to set up your mobile phone.



If personal identification number (PIN) protection is enabled on your mobile phone, you must enter your PIN before using the mobile phone.


Setting Up Your Mobile Phone

The first time you power on your mobile phone, the phone displays a setup wizard to help you set up the phone.

The setup wizard helps you:

Make some initial decisions about how you want to use your mobile phone.

Powering Off Your Mobile Phone

1. Press and hold  (Power key) to open the phone options menu.
2. Touch **Power off**.
3. Touch **OK**.

Using the Touchscreen

Touchscreen Actions

- **Touch:** Tap the screen with your finger to select an item, confirm a selection, or start an application.
- **Touch and hold:** Touch an item with your finger and do not release it until the mobile phone responds. For example, to open the options menu for the active screen, touch and hold the screen until the menu appears.
- **Flick:** Move your finger either vertically or horizontally across the screen.
- **Drag:** Touch and hold the desired item with your finger. To move an item, drag the item to any part of the screen. You can drag an icon to move or delete it.


Rotating Your Mobile Phone Screen

The orientation of most screens will change to landscape or portrait view when you rotate your phone sideways.


On the home screen, touch  > **Accessibility** > **Auto-rotate screen** to disable this function.

Locking and Unlocking the Screen

 
Locking the Screen

- When your phone is on, press  (Power key) to lock the screen. When the screen is locked, you can still receive messages and calls.
- If your phone is idle for a while, the screen will lock automatically.

Unlocking the Screen

1. Press  (Power key) to wake up the screen.

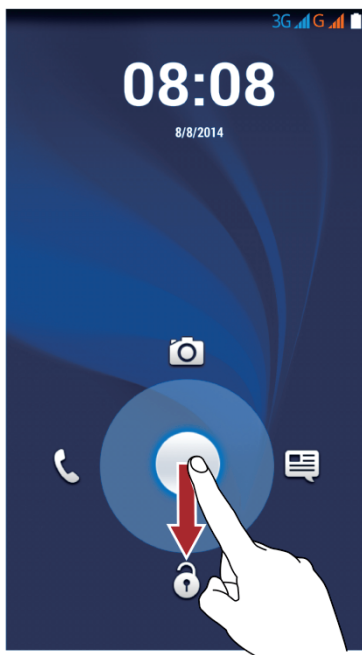

2. Drag the lock icon from up to down to unlock the screen.



If you have set up a screen unlock pattern, you will be prompted to draw the pattern on the screen to unlock it.

Home Screen



 Touch and hold a shortcut until the item expands in size; you can then drag it to your desired location or move it to . You can also drag an icon from another area of the screen to the shortcut position.

 
Switching between home screens

Running out of space on the home screen? Not to worry. Your phone lets you create more home screens for various applications and widgets

- Flick left and right across the screen to switch between the home screens.




- Pinch two fingers together to display the home screen thumbnails. Touch a thumbnail to enter that particular home screen.

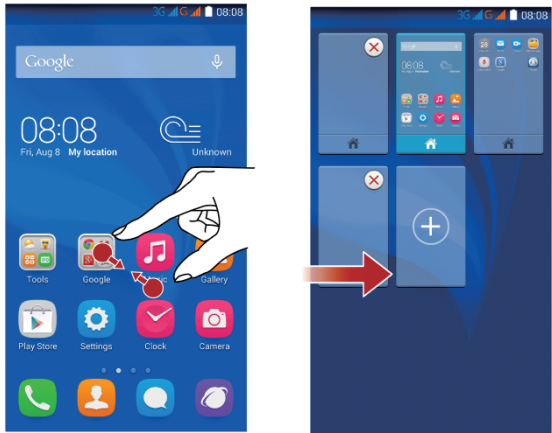

Taking a screenshot



Want to share an interesting scene in a movie or show off your new high score in a game? Take a screenshot and share away.

Press the power and volume down buttons simultaneously to take a screenshot. Then, open the notification panel and touch  to share the screenshot.





































Auto-rotate screen

Your phone features a tilt sensor. If you rotate your phone when browsing a web page or viewing a photo, your screen changes between landscape and portrait view automatically.

You'll also be able to enjoy tilt sensor-based applications, such as racing games.

To turn on or off the auto-rotate screen function, flick down from the status bar to open the notification panel, and touch  > .

Notification and Status Icons

	Signal strength		No signal
	3G networks are connected		No SIM card found
	Roaming		Airplane mode
	Alarm enabled		Receiving location data
	Bluetooth on		Ringer silenced
	Vibration mode		Charging battery
	Battery full		Missed call
	Battery extremely low		Call in progress
	New text or multimedia message		New email
	New mail from Gmail		Problem with text or multimedia message delivery
	More notifications		Select input method
	New voicemails		Upcoming event
	Uploading		Downloading
	Phone storage space is getting low		Sign-in or synchronization problem
	Synchronizing data		Synchronization failed
	Wi-Fi network available		Connected to a Wi-Fi network
	Portable Wi-Fi hotspot on		Connected to a PC
	USB debugging mode enabled		USB tethering on

Notification Panel


Your mobile phone will notify you when you receive a new message or there is an upcoming event. The notification panel also informs you of alarms and settings. Open the notification panel to see your network operator or to view a message, reminder, or event notification.

Using the notification panel

Flick down from the status bar to open the notification panel.



Opening the Notification Panel

1. When a new notification icon appears on the notification bar, place your finger on the notification bar and flick down to open the notification panel.
2. On the panel, you can:
 - Touch a notification to open the related application.
 - Touch  to clear all notifications.

Closing the Notification Panel

Place your finger on the bottom of the panel, and then flick up to close it.

Customizing the Home Screen



Adding a New Home Screen Item

1. Touch and hold an item until mobile phone vibrates.
2. Select the desired position and release it.






Moving a Home Screen Item

1. Touch and hold an item on the home screen until the item expands in size.
2. Without lifting your finger, drag the item to the desired position on the screen, and then release it.

Removing a Home Screen Item

1. Touch and hold an item on the home screen until the item expands.
2. Without lifting your finger, drag the item to the . When the item and the  turn red, the item is ready to be removed.
3. Release the item to remove it from the home screen.

Service Shortcuts


1. Open the notification bar.
 2. Touch  at the top of notification panel to switch data services on or off.
-  If You can also touch ,  or  to turn the corresponding services on or off.

Dual-card management

Your phone supports dual card dual standby mode. You can use one card for your personal life and one card for work.

Enabling or disabling a SIM card

You can install two SIM/USIM card on your phone and use one or both of them at the same time. When you do not need to use a SIM card, disable it.

1. On the home screen, touch .
2. Under **WIRELESS & NETWORKS**, touch **SIM management**.
3. Under **SIM INFORMATION**, touch the switch to enable or disable the corresponding SIM/USIM card.

Setting the default SIM card for data services


You can set a default SIM card for data services.

1. On the home screen, touch .
2. Under **WIRELESS & NETWORKS**, touch **SIM management**.

3. On the **DEFAULT SETTINGS**, touch **Voice call**, **Messaging**, or **Data connection**, and select a SIM/USIM card you want to set as the default card.


Starting applications and switching between them

On the home screen, touch an application icon to open it.


To switch to another application, touch  to return to the home screen, and touch the icon of the application you want to open.

Texting


Your phone comes with multiple text-input methods. You can quickly enter text using the onscreen keyboard.

- Touch a text box to bring up the onscreen keyboard.
- Touch  to hide the onscreen keyboard.

Selecting an input method

1. On the text input screen, flick down from the status bar to open the notification panel.
2. Touch  to select an input method.









To change your phone's default input method, touch  on the home screen. Touch **Language & input** > **Default** to select an input method.

Editing text


Discover how to select, cut, copy, and paste text on your phone.



- Select text: Touch and hold the text to bring up . Then drag  and  to select more or less text.
- Copy text: Select text and touch .
- Cut text: Select text and touch .
- Paste text: Touch where you want to insert the text, drag  to move the insertion point, and touch **PASTE** to paste the text.


Personalizing your phone

Changing the wallpaper

1. On the home screen, touch  > **Wallpapers**.
2. Touch the following menu items to select a picture and set it as the wallpaper:


- **Gallery**
- **Live Wallpapers**
- **HW Wallpaper**
- **Photos**

Setting the home screen transition effect

1. On the home screen, touch  > **Transitions**.
2. Select a home screen transition effect.


Changing the lock screen style

Unlocking the screen with a pattern

1. On the home screen, touch .
2. Touch **Security** > **Screen lock** > **Pattern**.
3. Follow the onscreen instructions to set a screen unlock pattern.


After a pattern is set, you will have to draw it every time you want to unlock the phone screen.

Unlocking the screen with a PIN

1. On the home screen, touch .
2. Touch **Security** > **Screen lock** > **PIN**.
3. Follow the onscreen instructions to set a screen unlock PIN.


After a PIN is set, you will have to enter it every time you want to unlock the phone screen.

Unlocking the screen with a password


1. On the home screen, touch .
2. Touch **Security > Screen lock > Password**.
3. Follow the onscreen instructions to set a screen unlock password. Repeat the password and touch **OK**.

After a password is set, you will have to enter it every time you want to unlock the phone screen.

Changing the font size

1. On the home screen, touch .
2. Touch **Display**.
3. Touch **Font size** and select a font size.

Adjusting the screen brightness

1. On the home screen, touch .
2. Touch **Display > Brightness**.
3. In the displayed dialog box, perform either of the following operations:
 - Touch the Automatic brightness to have your phone automatically adjust its screen brightness based on the ambient light.
 - Clear the Automatic brightness, and drag the slider left to reduce the screen brightness or drag it right to increase the screen brightness.





You can also flick down from the status bar to open the notification panel and adjust the screen brightness using the switch shortcuts.

Calling

To make a phone call, you can dial a number using the keypad or touch a number saved in your contact list, on a webpage, or in other places. When you are in a call, you can answer other incoming calls or redirect them to your voicemail. You can also set up conference calls with several participants.



Making a Call

To make a call, you can use the **Phone** application, or select a number from **Contact**. When you are in a call, you can touch  to use other functions. To return to the call screen, flick the notification bar down and touch current call.


-  Be careful not to block the microphone at the bottom of your phone if you want your voice heard by the other parties in a call.

Making a Call with the Phone Application

Your mobile phone supports the Smart Dial function, that is, when you touch numbers on the dialer, the phone automatically searches among your contacts and lists the matching results ordered according to the accuracy of the match. If no contacts match the information entered, the phone will not display any result.


1. On the home screen, touch .
2. Touch the appropriate number keys to enter the phone number.
3. Touch  and then select desired SIM card to dial.



Making a Call from Contact

1. On the home screen, touch .
2. In the list, touch the contact you want to call.
3. Touch the number to dial the phone number.

Smart dialing



Smart dialing lets you quickly find contacts by entering parts of their names or numbers.

1. On the home screen, touch .

2. Enter the initials or first few letters of a contact's name, or part of the contact's phone number. Matching contacts in your phone and phone numbers in your call log are then displayed in a list.
3. From the list, select the contact you want to call.
4. Touch  and then select desired SIM card to dial.
5. To end the call, touch .

Making an emergency call

In the event of an emergency, you will still be able to make emergency calls without the use of a SIM card. However, you must still be under the coverage area.

1. On the home screen, touch .
2. Enter your local emergency number and touch .



Emergency calls are subject to cellular network quality, use environment, service provider policies, and local laws and regulations. Never rely solely on your phone for critical communications when emergencies occur.

 
Answering or Rejecting a Call

Answering or rejecting an Incoming Call

When you receive a phone call, the incoming call screen opens. If you have previously saved the caller's number in **Contact**, the caller's name and number are displayed. If the caller's number is not saved in **Contact**, the caller's number is displayed.

Drag  to  to answer the call.

Drag  to  to reject the call.

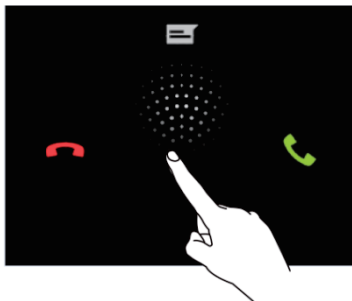


Ending a Call

During a call, touch  to hang up.



 
-  On the dialer screen, touch  > **Settings** > **Other Settings** > **Quick responses** to edit the message that will be sent.

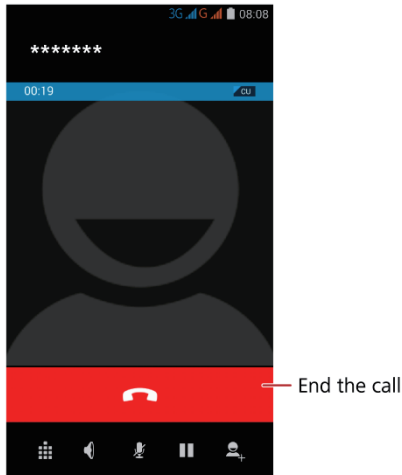Other Operations During a Call




Answering a third-party call





Before you answer a third-party call, make sure that you have turned on call waiting.

1. If a call comes in when you are already in another call, drag  to  to answer the new call and place the first call on hold.
2. To switch between the two calls, touch .

Making a Conference Call


If you receive a new call while you are already in a call, you can add the second call to the call you are in. This feature is known as conference calling. You can also set up a conference call with multiple callers.

-  Contact your network operator to ask if conference calls are supported and, if yes, how many parties can participate.

1. To initiate a conference call, dial the number of the first participant. After you have connected to the first participant, keep the connection open, touch .
2. Enter the phone number of the next person you want to invite for the conversation and touch , or select someone from your **Contact**. The first participant is automatically placed on hold while you do this.
3. Once you have connected to the second person, touch  to begin the conference call.
4. To end the conference call and disconnect from everyone, touch .

Switching Between Calls



If you receive a new call while you are already in a call, you can switch between the two calls.

1. While you are in the first call and the second call comes in, answer the incoming call, and then touch .
2. The current call is placed on hold and you are connected to the first call.




Using the Call log

The call log contains a list of calls that you have dialed, received, and missed. You can use the call log to find a recently called number quickly or add a number from the Call log to your contact list.

Adding an Entry to Contact


1. If you are already working with dialer or contact, on the dial screen, touch .
2. Touch the entry you want to add to your **Contact**.
3. Touch .
4. Touch **CREATE NEW CONTACT**.

Clearing the call log

1. On the home screen, touch .
2. Touch , and then touch  > **Delete**. Select the logs you want to delete or touch **0 selected**, choose **Select all**, and then touch **OK** to clear the call log.

Using Airplane Mode

Some locations may require you to turn off your phone's wireless connections. Rather than powering off your phone, you can place it in **Airplane mode**.

1. Press and hold  (Power key).
2. Touch **Airplane mode**.

Contact



The **Contact** application enables you to save and manage information such as phone numbers and addresses of your contacts. After you save contact information on your mobile phone, you have easy access to the contact with whom you want to communicate.

Opening the Contact Application

On the home screen, touch .

All of your contacts are displayed alphabetically in a list that you can scroll through.



Creating a contact

1. On the home screen, touch .
2. Touch .
3. Choose the save location for the contact.
4. Enter the **Name**, **Phone**, and other details.
5. Touch **DONE**.

Importing or exporting contacts

Your phone supports contact files in .vcf format only. This is the standard format for files storing contacts. Contact names, addresses, phone numbers, and other information can be saved in .vcf files.

Importing contacts from a storage device



1. On the home screen, touch .
2. Touch  > **Import/Export** > **SD card**, and touch **Next**.
3. Under **COPY CONTACTS TO**, touch **Phone contact**, and touch **Next**.
4. Select one or more .vcf files, and touch **OK**.

Importing contacts from the SIM card

1. On the home screen, touch .
2. Touch  > **Import/Export** > **SIM 1** or **SIM 2**, and touch **Next**.



3. Under **COPY CONTACTS TO**, touch **Phone contact**, and touch **Next**.
4. Touch the contacts you want to import, and then touch **OK**.

Exporting contacts to a storage device

1. On the home screen, touch .
2. Touch  > **Import/Export** > **Phone contact**, and touch **Next**.
3. Under **COPY CONTACTS TO**, touch **SD card**, and touch **Next**.
4. Touch the contacts you want to import, and touch **OK**.

To view the .vcf file you just exported, open **File Manager**. By default, the file is saved to the root directory of your phone's internal storage.

Exporting contacts to a SIM card

1. On the home screen, touch .
2. Touch  > **Import/Export** > **Phone contact**, and touch **Next**.
3. Under **COPY CONTACTS TO**, touch SIM 1 or SIM 2, and touch **Next**.
4. Touch the contacts you want to export, and then touch **OK**.


Adding a Contact to Your Favorites

Touch a contact, and then touch  to the left of the contact's name. The star turns grey.




Only a contact saved in the phone storage can be added to favorites.

Searching for a Contact

1. In the contact list, touch .
2. Enter the name of the contact you wish to search for. As you type, contacts with matching names appear below the search box.


Editing a Contact

You can make changes to the information you have stored for a contact at any time.

1. In the contact list, touch the contact whose details you want to edit, and then touch  > **Edit**.
2. Touch the category of contact information you wish to change: **name**, **phone number**, **email address**, or any other information you recorded earlier.

3. Make the desired changes to the contact information, and then touch **DONE**.

Deleting a Contact





1. In the contacts list, touch the contact that you want to delete, and then touch  **Delete** in the options menu.
2. Touch **OK** to confirm that you want to delete the contact.

Using a Google Account to Synchronize Contacts

You can synchronize contacts using your Google account. For details, see Changing an Account's Synchronization Settings.


Managing Groups

Creating a Group



1. On the home screen, touch . Then touch .
2. In the groups list, touch , and then select an account.
3. Enter the name and person's name or touch  to be added to the group.
4. When you are finished, touch **DONE** to save the group information.

Editing a Group

You can always make changes to the information you have saved for a group.

1. In the groups list, touch the group whose details you want to edit, and then touch  **Edit**.
2. Make the desired changes to the group information, and then touch **DONE**.





Sharing contacts

1. On the home screen, touch .
2. In the contacts list, touch  **Share visible contacts**.
3. Select contacts that you want to send.
4. Touch **OK**.
5. Select the way you prefer to send the contacts you have selected, for example **Bluetooth** or **Email**.

Messaging







The **Messaging** application allows you to exchange text messages (SMS) and multimedia messages (MMS) with anyone using an SMS-or-MMS-capable phone.

Creating and Sending a Text Message

1. On the home screen, touch .
2. Touch .
3. Enter a phone number or a contact's name in the **Type name or number** field, or touch  to select a contact.
4. Touch **Type text message** field to start entering your message.
5. When you are ready to send the message, touch  and then select desired SIM card.

Creating and Sending a Multimedia Message

You can use multimedia messages to make everyday communications very special. You can record a message and send it as an audio file, sing 'Happy Birthday' and send it to friend, or send a slideshow of photographs of a special event.


1. On the home screen, touch .
2. Touch .
3. Enter a phone number or a contact's name in the **Type name or number** field, or touch  to select a contact.
4. Touch **Type text message** field to start entering your message.
5. Touch  > **Add subject** or touch  to add a picture, music, or video file.
6. When the message is ready to be sent, touch .



You can select a media file (music, video or picture) and send it as an attachment in a multimedia message. In **File Manager**, press and hold a media file, and then touch **Share > Messaging**.

Adding a Slideshow


If you want to attach more than one file to your message, use the **Slideshow** option.

1. On the message editing screen, touch  > **Slideshow**.
2. Select a slide to start editing it.
3. Touch **Done** to finish composing your message and return to the multimedia message screen.
4. Touch **Edit** to add more slides.
5. When the message is ready to be sent, touch **Send**.



Opening and Viewing a Multimedia Message

1. In the message list, touch the message thread you wish to view.
2. Touch the multimedia message to view the message.

Replying to a Message


1. In the message list, touch a text or multimedia message thread to open it.
2. Touch the text box to compose your message. Once finished, touch .

Searching for a message

1. On the home screen, touch .
2. In the message list touch .
3. Enter the message or contact name, or parts of them. Your phone then displays matching results.




Managing messages

Copying a message


1. On the home screen, touch .
2. In the message list, touch a contact name or phone number to view the conversation thread.
3. Touch and hold the message you want to, and touch **Copy**.

4. Touch and hold the area where you want to paste the message and choose **PASTE** from the displayed option menu.



Forwarding a message

1. On the home screen, touch .
2. In the message list, touch a text or multimedia message thread to open it.
3. Touch and hold the message you want to forward, and touch **Forward**.
4. Touch the recipient text box and enter the contact name or phone number.
5. Touch  or .

Deleting a message

1. On the home screen, touch .
2. In the message list, touch a text or multimedia message thread to open it.
3. Touch and hold the message you want to delete, and touch **Delete**.

Deleting a thread

1. On the home screen, touch .
2. In the list of message threads, touch and hold the thread you want to delete, and touch .

Customizing Message Settings


1. In the message list, touch  > **Settings**.
2. Change the message tone, manage SIM card messages, and more.

Email

Your mobile phone also puts email at your fingertips. With your phone's **Email** application, you can use your email account with Yahoo!, AOL, or other popular email services on your phone.


Adding an Email Account

When using the **Email** application for the first time, you must configure an email account. The Email setup wizard helps you to configure your account. A number of popular email systems are supported. You can work with the same email service that you use on your PC or you can select another email service.



1. On the home screen, touch .
2. Enter your **Email address** and **Password**, and then touch **Next**.
3. Follow the onscreen instructions to customize your email settings, and then touch **Next**.
4. Enter the account name and the name you want other contact to see when they receive an email from you.
5. Touch **Next**.

 To add more email accounts, touch  > **Settings** > **Add account** on the Inbox screen.






 
Viewing an Email Message

1. On the home screen, touch .
2. Select the email account you want to use.
3. Touch the message that you want to view.




Saving an Email Attachment

1. On the home screen, touch .
2. Select the email account you want to use.
3. Touch the email message you want to view.
4. Under **ATTACHMENT (S)**, touch  > **Save** for saving the attachment.

Creating and Sending an Email Message


1. On the home screen, touch .
2. Select the email account you want to use.
3. Touch .
4. In the **To** field, enter the recipients' name or email address.
5. Enter the subject of your message and compose the message.
6. To send an attachment with the message, touch  > **Attach file**.
7. When you are finished, touch .
8. If you are not ready to send the message, touch  > **Save draft** or touch  to save the message as a draft.



Replying to an Email Message

1. On the home screen, touch .
2. Select the email account you want to use.
3. Touch the email message to which you want to reply.
4. Touch .
5. Touch .

Customizing Email Account Settings

You can change a number of account settings, including how often you check for emails, how you are notified of a new mail, and details about the servers the account uses to send and receive mails.

 Your account's incoming and outgoing settings depend on the kind of email service you are using. You can enter the necessary details manually, although you may need to contact your email service provider to obtain the correct information.


1. On the home screen, touch .
2. Touch  > **Settings**, touch the desired account.
3. Change the **Account name**, **Your name** and more.

Internet connection

Mobile Networks

Your mobile phone will be automatically configured to use your network operator's 2G/3G service (if available) when you turn on the phone for the first time. Note that the SIM card must be inserted.


Checking the Network Connection

1. On the home screen, touch .
2. Touch **More...** > **Mobile networks**.
3. Touch **Network operators** or **Access Point Names** to check the network connection.




Your mobile phone will automatically read the access point settings from the SIM card (if any). For this reason, do not change the access point parameters; otherwise, you might not be able to access network resources.



Turning on the Data Service

1. On the home screen, touch .
2. Touch **More...** > **Mobile networks**.
3. Select the **Data connection** and then select desired SIM card check box to turn on the data connection.

Creating an APN

The Access Point Name (APN) is a necessary parameter for a phone to connect to a mobile network or send multimedia messages. It is usually automatically set after you insert a SIM card into your phone. If your phone cannot connect to a mobile network using the automatically set APN, contact your service provider for the specific parameters and create a new APN.

1. On the home screen, touch .
2. Touch **More...** > **Mobile networks**.
3. Touch **Access Point Names**.
4. Select a SIM card you want to create an APN.

5. Touch  > **New APN**. Enter the access point name and other parameters.
6. Touch  > **Save**.

 In the APN list, touch  > **Reset to default** to reset the APN information.


Wi-Fi



When you use your phone at home, you can connect to the Wi-Fi hotspot created from your router. Some public locations, such as airports and libraries, may also have Wi-Fi networks available for use.

Turning On Wi-Fi

1. On the home screen, touch .
2. Under **WIRELESS & NETWORKS**, touch the Wi-Fi switch to turn on Wi-Fi.

Connecting to a Wireless Network

1. On the home screen, touch .
2. Under **WIRELESS & NETWORKS**, touch the Wi-Fi switch to turn on Wi-Fi.
3. Under **WIRELESS & NETWORKS**, touch **Wi-Fi**. Your phone then scans for available Wi-Fi networks and displays them.
4. Touch a Wi-Fi network to connect to it.
 - If you select an open network, you will be automatically connected to the network.
 - If you select a network that is secured with Wired Equivalent Privacy (WEP) and connect to it for the first time, enter the password as prompted, and then touch **Connect**. If you connect to a secured wireless network that you have already used, you will not be prompted to enter the password again unless you have reset your mobile phone to its default settings.


 On the **Wi-Fi** screen, touch  to add a new Wi-Fi network.

Connecting to a Wi-Fi network using WPS

Wi-Fi protected setup (WPS) lets you quickly connect to a Wi-Fi network.

Simply press the WPS button or enter the PIN to connect your phone to a Wi-Fi router that supports WPS.

1. On the home screen, touch .



2. Under **WIRELESS & NETWORKS**, touch the Wi-Fi switch to turn on Wi-Fi.
3. Under **WIRELESS & NETWORKS**, touch Wi-Fi.
4. Touch  on the Wi-Fi router.

Connect to a Wi-Fi network through WPS PIN, touch  > **WPS Pin Entry**.

Wi-Fi Direct

Wi-Fi Direct allows two devices to connect to each other for data transmission without using any access point.

Connecting two devices using Wi-Fi Direct

1. On the home screen, touch .
2. Under **WIRELESS & NETWORKS**, touch Wi-Fi to turn on Wi-Fi.
3. In the Wi-Fi network list, touch  > **Wi-Fi Direct** to scan for available devices.
4. Select a device.

Sharing Your Phone's Data Connection


You can share your mobile phone's data connection with a single computer via a USB cable: USB tethering. You can share your mobile phone's data connection with a number of devices at the same time, by turning your phone into a portable Wi-Fi hotspot.

Sharing Your Phone's Data Connection via USB

To use USB tethering in different operating systems, you may need to prepare your computer to establish a network connection via USB.




You cannot share your mobile phone's data connection and access its microSD card via USB at the same time.

1. On the home screen, touch .
2. Touch **More...** > **Tethering & portable hotspot**.
3. Select the **USB tethering** check box to share your data connection.



Please make sure the phone connected with PC via USB.

Sharing Your Phone's Data Connection as a Portable Wi-Fi Hotspot

1. On the home screen, touch .
2. Touch **More...** > **Tethering & portable hotspot**.
3. Touch the **Wi-Fi hotspot** switch to share your data connection.




When Wi-Fi hotspot is on, you can touch **Wi-Fi hotspot** > **Set up Wi-Fi hotspot** to change its network SSID or secure it.


Controlling your data usage

Your phone's data usage control function lets you check and control your data usage. Set a data usage cycle and a mobile data limit for this period and you will be notified when data usage reaches this limit.

Setting your mobile data usage limits


1. On the home screen, touch .
2. Under **WIRELESS & NETWORKS**, touch **Data usage**.
3. Select the SIM card, and the set mobile data limit check box.
4. Set the data usage limits as follows:
 - Drag the limit line up or down to adjust the mobile data usage limit.
 - Drag the warning line up or down to adjust the mobile data usage warning value. When your data usage reaches the warning line, you will be notified.
 - Drag the date lines left or right to check the data usage during a specific period of time. Touch Data usage cycle to set the statistical cycle for data usage.


Viewing the data usage of an application

1. On the home screen, touch .
2. Under **WIRELESS & NETWORKS**, touch **Data usage**.
3. Flick down to view the data usage of all applications.
4. Touch an application for more details.

Restricting the background mobile data usage

You can restrict the background mobile data usage of some or all applications to save data traffic. This function only takes effect when your phone is using a mobile data connection. When your phone is connected to a Wi-Fi network, applications run without any data restrictions.



1. On the home screen, touch .

2. Under **WIRELESS & NETWORKS**, touch **Data usage**.
3. Touch  > **Restrict background data** to restrict the background mobile data usage of all applications.

To restrict the background mobile data usage of a specific application, choose the application from the application list on the Data usage screen to display its data usage details. Then select the **Restrict background data** check box.

Restricting automatic data synchronization

Restricting automatic data synchronization helps save data traffic and battery power. After this function is enabled, you have to manually synchronize your accounts.



1. On the home screen, touch .
2. Under **WIRELESS & NETWORKS**, touch **Data usage**.
3. Touch , and clear the **Auto-sync data** check box.

Bluetooth

Your mobile phone has Bluetooth, which allows you to create a wireless connection with other Bluetooth devices so you can share files with your friends, talk hands-free with a Bluetooth headset, or even transfer photos from your phone to your PC.

If you are using Bluetooth, remember to stay within 10 meters (33 feet) of the other Bluetooth devices to which you want to connect. Be aware that obstacles like walls or other electronic equipment may interfere with your Bluetooth connection.

Turning On Bluetooth



1. On the home screen, touch .
2. Under **WIRELESS & NETWORKS**, touch the **Bluetooth** switch to turn on Bluetooth. When Bluetooth is turned on,  appears in the notification bar.
3. Under **WIRELESS & NETWORKS**, touch **Bluetooth**, and then touch your phone's name to make your mobile phone visible to other Bluetooth devices.



Turn off Bluetooth when it is not in use to save battery power.


Renaming your phone

Before you rename your phone, turn on Bluetooth. By default, your phone's name is its model. You can change the name to one that's more personal and easier to find.

1. On the home screen, touch .
2. Under **WIRELESS & NETWORKS**, touch the **Bluetooth** switch to turn on Bluetooth.
3. Touch **Bluetooth**, and then touch  > **Rename phone**.
4. Rename your phone and touch **Rename**.

Pairing with a Bluetooth Device

Before you use Bluetooth, pair your mobile phone with another Bluetooth.

1. Ensure that the Bluetooth function on your mobile phone is enabled.
2. On the home screen, touch  > **Bluetooth**. Your mobile phone will then scan for Bluetooth devices in range.
3. From the list of detected Bluetooth devices, touch a device and follow the onscreen instructions to pair with it.

If a Bluetooth connection cannot be set up between your phone and another device, they may be incompatible.

Sending Files via Bluetooth

With Bluetooth, you can share pictures, videos, or music files with your family and friends. To send files via Bluetooth:

1. Touch and hold the file to be sent in your mobile phone or SD card. The active options menu is displayed.
2. Touch **Share**, then **Bluetooth** to select a paired device.



Receiving a file using Bluetooth

1. When your phone receives a file transfer request, open the notification panel.
2. Touch **Bluetooth share : Incoming file** to display a file reception dialog box.
3. Touch **Accept** to start receiving the file.

When the file is received, you will receive a notification of a successful transfer. Open the notification panel to read the notification.

By default, received files are saved to the **bluetooth** folder in **File Manager**.

Disconnecting from a Bluetooth Device

1. On the home screen, touch  > **Bluetooth**.
2. Navigate to the **PAIRED DEVICES** section, and then touch the device to which you are connected.
3. Touch , then touch **Unpair** to disconnect from the device.

Connecting your phone to a computer

MTP mode

MTP mode lets you transfer media files, such as photos, songs, and videos, between your phone and a computer. Windows Media Player 11 or later is required.

1. Use a USB cable to connect your phone to the computer.
2. On the **USB computer connection** screen, choose **Media device (MTP)**.The phone driver is then automatically installed on the computer.
3. After the driver is installed, open the new drive and begin transferring media files between your phone and computer. Multimedia content on your phone can only be viewed through Windows Media Player.

Browser


Your mobile phone comes with an Internet browser pre-installed.

Opening the Browser

On the home screen, touch .



When known or open Wi-Fi networks and mobile data networks are available at the same time, your phone will preferably select a Wi-Fi network for Internet access.

Touch  to open the browser options menu:


- **Refresh:** touch to refresh the current webpage.
- **Stop:** touch to stop open the current webpage.
- **Home:** touch to return home window.
- **Save to bookmarks:** touch to save the window to bookmarks.
- **Close:** touch to close the current window.
- **Save for offline reading:** touch to save the current webpage.
- **Share page:** touch to share the current webpage via Bluetooth, Email, Gmail and etc.
- **Find on page:** touch to find the desired words on current webpage.
- **Request desktop site:** touch to view the webpage by desktop view.
- **Bookmarks/History:** touch to view the bookmarks/history.
- **Settings:** touch to open other menu and perform operations.

Opening a Webpage

1. In a browser window, touch **Search or type URL** field at the top of the screen.
2. Use the keyboard to enter a webpage address.
3. As you enter the address, matching webpage addresses will appear on the screen. If you see the address you want, touch it and go directly to that webpage or complete entering your desired webpage.

Setting a Home Page


1. On the home screen, touch .

2. In a browser window, touch  > **Settings**.
3. Touch **General** > **Set homepage**.
4. From the displayed option menu, choose the web page you want to set as the home page.


Managing Bookmarks

You can store as many bookmarks as you want on your mobile phone.


Adding a Bookmark

1. In a browser window, go to the webpage you want to save as a bookmark.
2. Touch  > **Save to bookmarks**.
3. Edit the bookmark name and then touch **OK**.

Opening a Bookmark



1. In a browser window, touch  > **Bookmarks/History**.
2. On the **Bookmarks** screen, touch the **History** tab to view the pages you have visited, or touch the **Saved pages** tab to view the pages you have saved.
3. Touch the bookmark of the website you want to open.

Customizing Browser Settings

1. In a browser window, touch  > **Settings**.
2. Customize your browser settings to better fit your needs.

Clearing your browsing history

To better protect your privacy, clear your browsing history from time to time.

1. On the home screen, touch .
2. Touch  > **Settings** > **Privacy & security** > **Clear history**.
3. Touch **OK**.



Entertainment

 
In addition to being a communication device and personal assistant, your mobile phone also provides you with a multitude of entertainment possibilities. You can take photos, create videos and audio clips, and download and listen to music.

Taking Photos and Recording Videos

The camera is a combination of camera and camcorder that you can use to shoot and share pictures and videos.


Opening Your Camera

1. On the home screen, touch .
2. Touch  to close the camera.

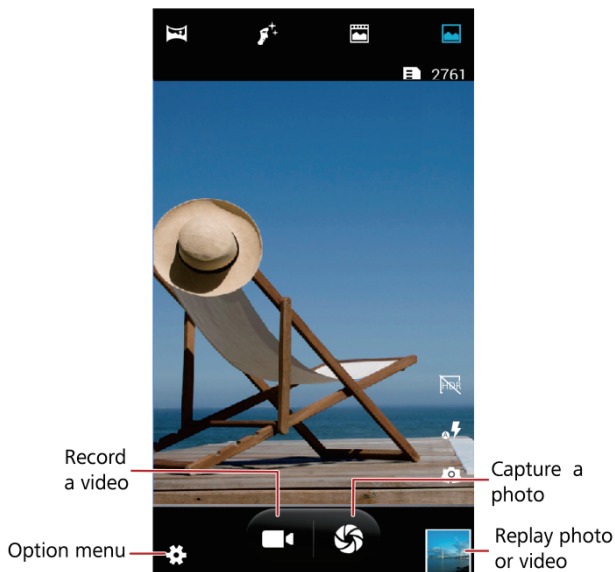



Taking a Photo

1. On the home screen, touch .




2. If necessary, change the camera settings. The preview changes as you change the settings.
3. Frame your photo within the photo capture screen.
4. Touch  to take your photo.

Photos taken are displayed for a moment. You can take another photo or review your photos.



Viewing Your Photos

1. After taking a photo, a thumbnail of the photo you have just taken is shown in the lower right corner of the capture screen. Touch the thumbnail to view it.
2. Touch the onscreen button to do any of the following:
 - Touch  and choose a sharing method to share the photo.
 - Touch  to delete the photo, edit, rotate, crop and etc.

Recording a Video

1. On the home screen, touch .
2. If necessary, change the camcorder settings.
3. Frame the scene with which you want to start your video.
 - Touch  to start recording a video.
 - Touch  to stop recording.




Viewing Your Videos

1. After recording a video, a thumbnail of the video you have just recorded is shown in the lower right corner of the capture screen. Touch the thumbnail to view it.
2. Touch the onscreen buttons to do any of the following:
 - Touch  and choose a sharing method to share the photo.
 - Touch  to delete the video or view details.
3. On the video playback screen, touch the controls to fast-forward or rewind or to play or pause the video.





Continuous shooting

Continuous shooting allows you to record a series of dynamic images and pick the best from them.

1. On the home screen, touch .




2. Touch  >  > **Continuous shot** to enable continuous shooting.
3. Frame the scene you want to capture.
4. Touch and hold , the camera then takes up to 40 photos at most in rapid succession. You can stop shooting anytime by releasing your finger

Taking a panoramic photo

1. On the home screen, touch .
2. Touch  to switch to panoramic mode.
3. Frame the scene you want to capture. Touch  to take your photo.
4. Follow the screen prompts to move your phone slowly and stably, when the two arrows are overlapping, the phone will automatically take one or multiple photos.
5. Touch  to stop shooting. The camera automatically stitches the photos together to create one panoramic photograph




Taking a photo in beauty mode

Want to look flawless in great quality photos? Enable beauty mode for simply stunning photos.

1. On the home screen, touch .
2. Touch  to switch to beauty mode.
3. Drag the slider to adjust the beauty level.
4. Frame the scene you want to capture. The camera will identify a face and focus on it.
5. Touch .





Taking a photo in Live photo mode

You can record an audio clip while taking a photo to make the photo more vivid.




1. On the home screen, touch .
2. Touch  to switch to live photo mode.
3. Frame the scene you want to capture.
4. Touch .

Using HDR

High dynamic range (HDR) imaging technology improves the details in the lightest and darkest areas of photos for true-to-life quality.

1. On the home screen, touch .
 2. Touch  to switch to HDR mode.
 3. Frame the scene you want to capture.
 4. Touch .
-  The front camera does not support HDR.

Taking a photo using audio control

1. On the home screen, touch .
2. Touch  >  > **Voice capture** to switch to audio control mode.
3. Frame the scene you want to capture. Your phone will take a photo when the surrounding noise reaches a certain decibel level.

Using the Gallery

Your **Gallery** application can automatically search for pictures and videos on your mobile phone and microSD card. Use **Gallery** to sort photos and videos into folders, view and edit pictures, watch videos, and set a picture as wallpaper or as a photo for a contact.

Opening the Gallery

On the home screen, touch .

The **Gallery** application categorizes your pictures and videos by storage location and displays these files in folders. Touch a folder to view the pictures or videos inside.

Viewing a Picture

1. In **Gallery**, touch the folder that contains the pictures you want to view.
2. Touch the picture to view it in full-screen mode.
3. You can zoom in or zoom out on the picture.





The picture viewer supports the automatic rotation function. When you rotate your mobile phone, the picture adjusts itself to the rotation.



Rotating a Picture

1. When viewing a picture, touch .
2. Select either **Rotate left** or **Rotate right**. The picture is saved with the new orientation.

Cropping a Picture

1. When viewing a picture, touch  > **Crop**.
2. Use the cropping tool to select the portion of the picture to crop.
 - Drag from the inside of the cropping tool to move it.
 - Drag an edge of the cropping tool to resize the image.
 - Drag a corner of the cropping tool to resize the image without changing its length to width ratio.
3. Touch **SAVE** to save the cropped picture or touch  to discard the changes.

Playing a slideshow

1. On the home screen, touch  .
2. Touch an album.
3. Touch  > **Slideshow** to play a slideshow of the photos in the album.
4. Touch the screen to stop the slideshow.

Enjoying Music

 
Opening the Music Library


On the home screen, touch  .

The music library automatically scans for music stored on your microSD card and phone storage displays them in **Artists**, **Albums**, **Songs**, **Playlists**.

Playing Music

1. From the music library, select a way to view your music.
2. Touch the music file you want to play.

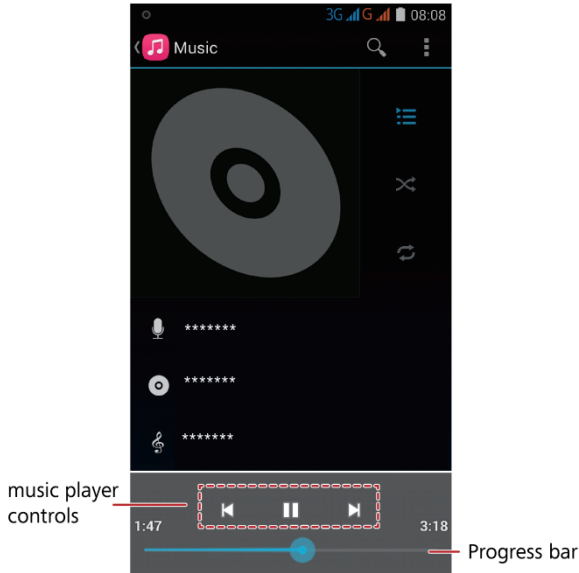

While playing music, touch  to return to the home screen, the music will continue to play in the background and you can use other applications. Open the notifications panel and touch the playing music to return to the music playing screen.

Creating a Playlist

1. In the music library, touch and hold a file.
2. Touch **Add to playlist**.
3. Touch **New**, edit the playlist name and touch **Save** to add the song.

Adding Music to a Playlist

1. From the music library select a way to view your music.
2. Touch and hold a music file, and then touch **Add to playlist**.
 - Touch an existing playlist to add the song to that playlist.
 - Touch **New** to add the song to a new playlist.

Playing Music in a Playlist



1. In music library, touch **Playlists**.

2. Touch and hold the playlist you want to play.
3. Touch **Play** to play the playlist.

Listening to the FM Radio





The FM radio lets you listen to FM radio programs on your mobile phone. Since the FM radio uses the provided wired stereo headset as its antenna, before opening the application, connect the headset to your phone's the audio jack.

Opening the FM Radio

1. On the home screen, touch **Tools** > .
2. The first time you open FM radio, touch  > Search, which automatically scans for available FM channels, saves them as presets, and plays the first FM channel found.

Tuning the FM Radio


Open the **FM Radio** application, and then do the following:

- Touch  or  to tune the radio to the previous or next channel.
- Touch  to add current FM channel to favorites.
- Touch  to view FM channels.

Google Services

Availability of Google applications, services, and features may vary according to your country or carrier. Please follow local laws and regulations to use them.




When you turn on your mobile phone for the first time, touch a Google services such as **Google**, **Gmail**, or **Play Store**, and you will be prompted to sign in to your Google account.

-  Ensure that your mobile phone has an active data connection (3G/GPRS) before you sign in to your Google account.

If you already have a Google account, enter your username and password.

Creating a Google Account

If you do not have a Google account, you can create one.


1. On the home screen, touch .
2. Touch **Add account** > **Google**.
3. Touch **New**, then enter the **First**, **Last**, and then touch .
4. Enter the **Email** for your Google account, and then touch . The mobile phone will connect to a Google server to check whether the username is available. If the username you entered is already in use, you will be prompted to enter another one.
5. Create and confirm your Google account **password**.

Follow screen prompts to complete to create a Google account.

Gmail

Gmail is Google's official email service. When you first use **Gmail**, emails on your web account will be synchronized to your phone.


Opening Gmail

On the home screen, touch **Google** > . The **Inbox** mail list appears. Any emails you decide to keep on your mobile phone will go to your **Inbox** folder.


Switching Between Accounts

1. In the mail list, touch **Primary** on the top of the screen.
2. Touch the account that contains the email you want to read.


Creating and Sending an Email


1. In the mail list, touch .

2. Enter the message recipient's email address in the **To** field. If you are sending the email to several recipients, separate the email addresses with commas. You can add as many message recipients as you want.

If you want to send a copy (Cc) or a blind copy (Bcc) of the email to other recipients, touch  > **Add Cc/Bcc**.

3. Enter the email subject and write your email.

If you want to add a picture/video attachment, touch  > **Attach file** to select the picture/ video you want to attach.

4. After writing your email, touch .

Replying to or Forwarding an Email

1. In the mail list, touch the email that you want to reply to or forward.


2. Touch  to reply.

3. Do one of the following:

- If you selected **Reply all**, enter your message.
- If you selected **Forward**, specify the message recipients and add any additional text you want to include in the forwarded message.

4. Touch  to send, or touch  to save as a draft.

Searching for an Email

1. In the mail list, touch .

2. Enter the search keywords in the box, and then touch .

Customizing Your Gmail Settings


In the mail list, touch  > **Label settings** to customize your Gmail settings.

Maps


Maps lets you find your current location, view real-time traffic conditions (depending on availability in your locale), and get detailed directions to various destinations. You can view satellite images, traffic maps, or other kinds of maps of your current or other locations.

Enabling the Location Service


Before you open **Maps** to find your location or search for places of interest, you must enable the location service.

1. On the home screen, touch  .
2. Touch **Location**.
3. Touch the Location switch to turn on location.


Opening Maps

On the home screen, touch **Google** >  .

Searching for Places of Interest

1. On the map, touch **Search** box.
2. Enter the place you want to search for in the search box, and then touch  .
Your search results will then be displayed on the map.


Getting Directions

1. While viewing a map, touch  .
2. Touch **My Location**, enter the starting point on the **Choose starting point...** box.
3. Touch **Choose destination...**, enter the destination point on the **Choose destination...** box.
4. Touch the icon for car, public transit, or walking directions. Your directions will appear in a list.
5. Touch a direction item on the list to show it on the map.

YouTube


YouTube is Google's free online video streaming service for watching, searching for, and uploading videos.

Opening YouTube

On the home screen, touch **Google** >  .

Searching for a Video

1. On the **YouTube** screen, touch  .

2. Enter a search keyword, and then touch  icon on the keypad. You will see a number of search results displayed below the notification bar. Scroll through the results and touch a video to watch it.

Play Store

Android Market provides direct access to applications and games which you can download and install on your phone.

Opening Market

On the home screen, touch .Searching for Applications

There are a few different ways to find applications on the **Play Store** home screen, including:

- **CATEGORIES**
- **HOME**
- **TOP PAID,**
- **TOP FREE**
- **TOP GROSSING**
- **TOP NEW PAID**
- **TOP NEW FREE**
- **TRENDING**


Installing an Application

1. In the **Play Store**, select a category, and then touch the application you want to download. On the application details screen, you can view more information about this application, such as its cost, overall rating, user comments, and similar applications. When scrolling down, you can also view developer's information including other applications from the same developer and the link to the developer's website. In addition, you can send the developer an email.
2. To install the application, touch **INSTALL** (if it is free) or touch the button with a price (if it is not free), and confirm your download or purchase.


3. To check the progress of a download, open the notification panel. Most applications are installed within seconds. To stop an application from downloading, touch the application and then touch the **STOP**.

After the application has been downloaded and installed on your mobile phone, the content download icon appears in the notification bar.



If you want to install a non-Market application, touch  > **Security**, and then select the **Unknown sources** check box to allow installation of the non-Market application.

Uninstalling an Application

1. On the **Play Store** screen, touch  on the top left, and then touch **My apps**.
2. Touch the application you want to uninstall, and then touch **UNINSTALL**.
3. When prompted, touch OK to remove the application from your mobile phone.

Synchronizing Information

Some applications on your mobile phone give you access to the same personal information that you can add, view, and edit on your computer. If you add, change, or delete your information in any of these applications on the web, the updated information also appears on your mobile phone.

This is made possible through over-the-air data synchronization. The process occurs in the background and does not interfere with use of your mobile phone.


Managing Your Accounts

You can synchronize contacts, email, and other information on your mobile phone with multiple Google accounts or other kinds of accounts, depending on the applications installed on your mobile phone.

For example, you can start by adding your personal Google account, so your personal email, contacts, and calendar are always available. You could then add a work account, so your work-related emails and work contacts are handy. If you like, you may add multiple Google accounts or other accounts.

Adding an Account

When you add an account, the **Contact** application compares contacts from the newly synchronized account with contacts from your existing mobile phone accounts and attempts to merge duplicates into a single entry in **Contact**. While it is presented as a single contact entry, the contact data itself is not merged.

1. On the home screen, touch  > **Add account**. The screen displays your current synchronization settings and a list of your current accounts.




In some cases, you may need to obtain account details from IT support. For example, you may need to know the account's domain or server address.

2. Touch the kind of account to add.
3. Follow the onscreen steps to enter the required and optional information about the account. Most accounts require a username and password, but the details depend on the kind of account and the configuration of the service to which you are connecting.

4. When you are finished, the account is added to the list on the screen.

Adding an Exchange Account



1. On the home screen, touch  > **Add account**.
2. Touch **Corporate**.
3. Follow the instructions and enter the required information about the exchange account you want to add. For details, contact the server administrator.
4. Touch **Next** to display the **Account setup** screen. Configure the settings.
5. Touch **Next** to display the account settings. Configure the synchronization settings for this account.
6. Touch **Next** to finish configuring the account settings. If emails are not synchronized properly, contact the server administrator.

Removing an Account

You can remove an account, deleting it and all information associated with it from your mobile phone, including email, contacts, settings, and so on. You cannot, however, remove some accounts, such as the first account you signed into on the mobile phone. If you attempt to remove certain accounts, all personal information associated with it will be deleted.




All of the accounts will be removed by resetting the phone to factory defaults.

1. On the home screen, touch  .
2. On the **ACCOUNTS**, select the added account type such as **Corporate**, **IMAP**, or **Google**.
3. On the account screen, touch the account to be deleted.
4. Touch  > **Remove account**.
5. Confirm that you want to remove the account.

Customizing Your Account Synchronization

You can configure background data use and synchronization options for all the applications on your phone. You can also configure what kind of data you synchronize for each account. For some accounts, synchronization is bi-directional; changes that you make to the information on your mobile phone are made to the copy of that information on the web. Some accounts support only one-way synchronization; the information on your mobile phone is read-only.

Configuring General Synchronization Settings


1. On the home screen, touch .
2. On the **ACCOUNTS**, select the added account type such as **Corporate**, **Email**, or **Google**.
3. On the account screen, touch the account and do the following:
 - Select or clear the check box to control whether applications and services can transmit data when you are not working with them directly (that is, when they are running in the background).


If you clear this option, **Gmail** stops receiving new mails, **Calendar** stops synchronizing events, and so on, until you refresh them.

- Select or clear the check box to control whether changes you make to information on the phone or on the web are automatically synchronized with each other.

For example, when this option is selected, changes that you make in **Contacts** on the phone are automatically made in Google Contacts on the web.

Changing an Account's Synchronization Settings

1. On the home screen, touch .
2. On the **ACCOUNTS**, select the added account type such as **Corporate**, **Email**, or **Google**.
3. On the account screen, touch the account for which you want to change the synchronization settings. The data and synchronization screen opens, displaying a list of the kinds of information the account can synchronize.

Select the items you want to synchronize from the list, touch  > **Sync now**. Your phone will automatically synchronize the selected items.

Using Other Applications


Calendar

Calendar is your personal assistant that helps you manage, arrange, and keep track of all important events.

Opening Calendar


On the home screen, touch .

Creating a New Event

1. In any calendar view, touch  > **New event** to open the event details screen. If you have more than one calendar, select the calendar where you want to save the event.
2. Enter event details, such as the event name, time, and location.


Setting Synchronization and Display

Calendar events in your accounts (such as an email account) can be synchronized to and viewed on Calendar.

1. In any calendar view, touch  > **Settings**.
2. Touch the added account, and then touch the box next to the account to change whether it is synchronized.

You remain subscribed to calendars that you configure not to store on the phone and can still work with them with Google Calendar on the web, or using other calendar services.

Customizing Calendar Settings

In any calendar view, touch  > **Settings** > **General settings** and choose from the following:

- **Hide declined events:** select to hide events for which you have declined invitations.
- **Choose ringtone:** touch to select the ringtone to sound when you receive an event reminder.
- **Vibrate:** select to vibrate the mobile phone when you receive an event notification.

- **Default reminder time:** touch to select the default time before an event for event reminders to occur.



File Manager

File Manager is like having a pocket-sized personal assistant (PA), letting you organize, edit, and delete files and folders.




Opening File Manager

On the home screen, touch .




Creating a Folder

1. On the home screen, touch .
2. Under **Local**, touch **SD card** or **Internal**.
3. Touch  > **New folder**.
4. Enter the name of the new folder in the text box.
5. Touch **Save**.


Moving or Copying a File

1. On the home screen, touch .
2. Under **Local**, touch **SD card** or **Internal**.
3. Touch  or  to copy, cut.
4. Select the files or folders you want to move or copy. Touch **COPY** or **CUT**.
5. Select the path where you want the file to be copied or moved. Touch **PASTE** to move or copy the file to the selected path.


Searching for a File

1. On the **File Manager** screen, touch a folder to access the directory where the file you want is located.
2. Touch  > **Search**., write key words of the name of your file in the search box.
 - The matched files will display when you enter words and you can touch the desired file.
 - Touch  on the keypad to the search. A list of search results will be displayed. Touch a file in the list to open it.
3. Touch  to return to the file manager screen.



Viewing Your Memory Status

On the home screen, touch  > **Storage**. The memory management screen will be displayed. This screen allows you to view the memory status and available memory on your mobile phone and microSD card.


Renaming a file

1. On the home screen, touch  .
2. Under **Local**, touch **SD card** or **Internal**.
3. Touch and hold the file you want to rename, and touch **Rename**.
4. Rename the file and touch **OK**.

Deleting a file


1. On the home screen, touch  .
2. Under **Local**, touch **SD card** or **Internal**.
3. Touch  .
4. Select the file you want to delete, and touch **DELETE**.
5. Touch **OK**.

Creating a shortcut for a file or folder

1. On the home screen, touch  .
2. Under **Local**, touch **SD card** or **Internal**.
3. Touch and hold the file or folder you want to create a shortcut for, and choose **Desktop shortcuts** from the displayed option menu.

Checking the storage status

Before you save large files to your phone's internal storage or microSD card, make sure there is enough space first.

1. On the home screen, touch  .
2. Under **Local**, view the total and available space in your phone's internal storage or SD card.






Clock

Clock lets you view the time around the world, use stopwatch or timer to keep track of time, or set alarms to wake you up in the morning.








Opening the Clock

On the home screen, touch .


Alarm

1. On the home screen, touch .
2. Touch  to open the alarms. Under alarm, you can:
 - Add an alarm: Touch , set the alarm time, and then touch **Done**. Set the alarm time, ringtone, how often it repeats, and more.
 - Turn on or off an alarm: Touch the switch button to the right of an alarm to turn it on or off.
 - Configure alarm settings: Touch  > **Settings**, and set whether the alarm rings in silent mode, the snooze duration, and what the volume buttons do when pressed.
 - Delete an alarm: Touch  to the right of the alarm you want to delete.
 - When an alarm rings, flick to stop the alarm or snoozing 5 minutes.

Using the world clock

1. On the home screen, touch .
2. Touch  to open the world clock. Under world clock, you can:
 - Add a city: touch , select the check box of the city you want to add.
 - Set the home city: touch , under city lists, touch  > **Settings** > **Home time zone** to set your home time zone and system date and time.
 - Delete a city: touch , touch  to the right of the city you want to delete.

Timer

1. On the home screen, touch .
2. On the Timer tab, rotate the dial to set the timer duration. When you are done, touch **START** to start the timer.
3. When the timer ends, the phone plays a tone and starts overtime timing.

4. Touch **STOP** to stop the tone and reset the timer.




Weather

Weather provides you with the latest weather information for any city around the world. You can share weather information with your family and friends.





Before you use Weather, turn on your phone's **Location** and data service.

Adding a city

Add cities of your concern to check their real-time weather information.





1. On the home screen, touch **Tools** > .
2. Touch , and then touch .
3. Enter a city name. Matching cities are then displayed.
4. Select the city you want to add.
5. In addition to your current city, you can add up to nine cities.

Updating the weather

1. On the home screen, touch **Tools** > .
2. Flick left or right to find the city whose weather you want to update.
3. Touch  to update the weather.
4. You can also set Weather to automatic update mode. Touch , and then touch  > **Settings**, touch **Auto update** switch, and set **Update interval**. Your phone will then update the weather at the interval you set.

Sharing weather information


Your phone lets you send weather information as a text message to remind your family and friends of weather changes.

1. On the home screen, touch **Tools** > .
2. Flick left or right to find the city whose weather you want to share.
3. Touch  to display the messaging screen.
4. You can then:
 - Enter a phone number.
 - Touch  to select a contact.
5. Touch  to send the weather information.

Calculator

Calculator lets you perform basic arithmetic operations.

Opening Calculator

On the home screen, touch **Tools** >  .

Switching Between Basic and Advanced panel

On the **Calculator** screen, flick the screen to the right or left to switch between advanced panel and basic panel.


Managing Your Mobile Phone

To configure your mobile phone, touch .

Turning on or off airplane mode



Your phone's signal reception or transmission may interfere with an airplane's flight system. Power off your phone or switch it to airplane mode as required, when you are on a flight. In airplane mode, your phone's wireless features are disabled, but you can still listen to music or play games using your phone.

Use either of the following methods to turn on or off **Airplane mode**:


- Press and hold the power button, and touch **Airplane mode**.
- On the home screen, touch  > **More...** Select **Airplane mode** check box.

When airplane mode is on,  appears in the status bar.

Tone settings



1. On the home screen, touch .
2. Under **DEVICE**, touch **Audio profiles**.
3. Touch  on the right of **General**. On the **Settings** screen, you can:
 - Touch **Volumes** and drag the sliders to set the volume of ringtones & notifications, alarms, calls, and more.
 - Select or clear the **Vibrate when ringing** check box to set whether your phone vibrates when you have an incoming call.
 - Touch **Phone ringtone** to select a ringtone.
 - Touch **Default notification sound** to set a notification tone.
 - Touch or clear the check box under **SYSTEM** to turn on or off the notification tone or vibration when you touch or lock the screen, take a screenshot, dial a number, and more.

Turning On Silent Mode


1. On the home screen, touch .
2. Under **DEVICE**, touch **Audio profiles**.

3. Select the **Silent** check box to silence all sounds except alarms, and music and video media.

Changing the Message Ringtone

1. On the home screen, touch .
2. In the message list, touch  > **Settings** > **Notifications** > **Sound**.
3. In the list of ringtone, select desired one.
4. Touch **OK**.


Display settings

1. On the home screen, touch  > **Display**.
2. On the Display screen, you can:
 - Touch **Wallpaper** to set the lock screen and home screen wallpapers.
 - Touch **Brightness** to adjust the screen brightness. To manually adjust the brightness, clear the Automatic brightness.
 - Touch **Sleep** to set a screen timeout period. If idle for the specified period, your phone automatically locks its screen to save battery power.
 - Touch **Daydream** to control what happens when the phone is sleeping.
 - Touch **Font size** to change the display font size.

Date and Time settings




When your mobile phone is using the date and time settings provided automatically by the network, you cannot manually set the date, time, and time zone.

1. On the home screen, touch .
2. Touch **Date & time**. On the **Date & time** screen, you can:
 - Select the **Automatic date & time** and **Automatic time zone** check boxes to use the network date and time.
 - Clear the **Automatic date & time** and **Automatic time zone** check boxes to manually set the date, time, and time zone.
 - Select or clear the **Use 24-hour format** check box to switch between the 12-hour and 24-hour formats.

- Touch **Choose date format** to select how you want the date to be displayed.

System language settings

1. On the home screen, touch .
2. Touch **Language & input**.
3. Touch **Language**, and select a language.

Managing applications



Downloading applications

A rich selection of applications is available from a variety of sources. You can:


- Download applications from Google's Play Store.
- Download applications from web pages using the browser on your phone.
- Download applications using a computer, and copy the applications to the phone.
- Connect the phone to a computer, and download applications using.


Viewing applications

You can view the sizes and access permissions of applications installed on your phone. You can also view the running applications to check the system running status.

1. On the home screen, touch  > **Apps**.
2. Select an application type: **Downloaded**, **Running**, or **All**.
3. In the applications list, do either of the following:
4. Touch , and then touch **Sort by size**. Then touch an application to view its details.
5. Touch an application directly to view its details, and flick up or down for more information.


Sharing an application

1. On the home screen, touch and hold the application you want to share until  is displayed at the top of the screen.

2. Drag the application to .
3. On the displayed screen, select a sharing method and follow the onscreen instructions to share the application.

System applications cannot be shared.


Uninstalling an application

1. On the home screen, touch  > **Apps**.
2. Flick to **All**, and select the application you want to uninstall.
3. Touch **Uninstall** > **OK**.

Some pre-installed applications cannot be uninstalled.


Clearing the application cache

You can clear the application cache to free up the phone storage.

1. On the home screen, touch  > **Apps**.
2. Flick to **All**, and select the application you want to clear cache.
3. Touch **Clear cache**.

Moving an Application to the microSD Card

Some applications are designed to be stored on your phone's storage or microSD card (depending on the model of your phone), rather than in its internal storage. Others are designed so you can change where they are stored. You may find it helpful to move large applications off your internal storage, to make more room for other applications that do not offer the option.

1. On the home screen, touch  > **Apps**.
2. Touch an application in the list. Then touch **Move to SD card** to move the bulk of the application from the phone's internal storage.



Ways to Free Up Your Mobile Phone Memory

- Move files and email attachments to the microSD card.
- In **Browser**, clear all temporary Internet files and Browser history information.
- Move applications to the microSD card.
- Uninstall any downloaded programs that you no longer use.


Setting Phone Services

Customizing Call Settings

Mobile phone service providers offer different services such as call forwarding, call waiting, fixed dialing numbers, and voicemail. You can customize many of these services if they are part of your calling plan.

On the home screen, touch , then touch  > **Settings** > **Voice Call** to customize your call functions.

Turning on Data Roaming

1. On the home screen, touch .
2. Touch **SIM management** > **Roaming** > **Data roaming**.
3. Select the SIM card check box.



Accessing data services while roaming may incur additional charges. Ask your wireless service provider about data roaming fees.

Switching off the Data Service


1. On the home screen, touch .
2. Touch **More...** > **Mobile networks** > **Data connection**.
3. Select the SIM card check box.

Protecting Your Mobile Phone

A personal identification number (PIN) is delivered with your SIM card to better protect your phone data. If you enable the SIM card lock, you must enter the PIN each time you turn your phone on.

Before you perform the following operations, make sure you have obtained your SIM card's PIN from your service provider.

Turning on Your SIM Card PIN

1. On the home screen, touch .
2. Touch **Security** > **Set up SIM card lock**.
3. Select the desired SIM card.
4. Select the **Lock SIM card** check box.

5. Use the keyboard to enter the PIN, and then touch **OK**.


6. To change the PIN at any time, touch **Change SIM PIN**.



You can dial emergency numbers any time from your mobile phone.

Protecting Your Mobile Phone with a Screen Lock

To keep your data more secure, lock the screen and/or require a screen unlock pattern every time your mobile phone is turned on or wakes up from sleep mode.

1. On the home screen, touch .
2. Touch **Security > Screen lock > Pattern**.
3. Flick your finger vertically, horizontally or diagonally, connect at least four dots in any order you choose. Lift your finger from the screen when you are finished.


You must drag your finger between the dots on the screen to create the pattern, not simply touch individual dots.

4. Your mobile phone will record the pattern. Touch **Continue**.
5. When prompted, draw the screen's unlock pattern again, and then touch **Confirm**.

To change your unlock screen pattern, touch **Security > Screen lock**.

Protecting Your Mobile Phone with a Numeric PIN

You can set up a numeric PIN to lock your phone.

1. On the home screen, touch .
2. Touch **Security > Screen lock > PIN**.
3. Enter at least six characters.
4. Touch **Continue**.
5. Enter the same characters again and touch **OK**.

Touch **Security > Screen lock** to change your PIN.

Unlocking Your Mobile Phone If You Forget the Screen Lock Pattern

If you have already created a Google account, you can unlock your mobile phone using the following methods.

Make sure your data service or Wi-Fi is on before trying to unlock your mobile phone.

After you have entered the wrong sequence five times, **FORGOT PATTERN** button will appear. Touch this button to enter the Google account interface. After you have entered your Google account password, you will be able to reset the unlock pattern. If you are still experiencing any issues, please contact Huawei support staff.

Resetting Your Mobile Phone

Backing Up My Data

You can use your Google account to back up your mobile phone's settings to Google servers. If you replace your mobile phone, the settings you have backed up will be transferred to the new mobile phone the first time you sign in to your Google account.

1. On the **Settings** screen, touch **Backup&reset**.
2. Select the **Back up my data** check box.

Restoring Factory Data

If you reset your phone to its factory settings, all of your personal data stored on the phone, including information about your Google account, any other accounts that you have configured, your system and application settings, and any applications you have installed will be erased. Resetting the phone does not erase any system updates you have downloaded. Using the check box provided, you can also select to erase all the data stored on your SD card or on the phone's internal SD card, which includes files that you have downloaded or copied there, such as music or photos.

1. On the Settings screen, touch **Backup&reset > Factory data reset**.
2. When prompted, touch **Reset phone**, and then touch **Erase everything**.
The mobile phone resets the settings to the original factory settings, and then restarts.


Accessibility

You can turn on or off accessibility features, such as magnification gestures and large text.

1. On the home screen, touch  .

2. Touch **Accessibility**.

Online Update

Your mobile phone has pre-installed the online update function. When there is new software available, the version information appears and prompts you to update. You can also touch  > **About phone** > **System Update** to check whether the new software is available.

When updating:

1. Back up your personal information. All personal information will not be removed after the update.
2. Make sure that your microSD card has sufficient space to store the new software version.
3. Perform the online update following the onscreen instructions.

All pictures and illustrations in this guide, including but not limited to the phone color, size, and display content, are for reference only. The actual product may vary. Nothing in this guide constitutes a warranty of any kind, express or implied.