

HUAWEI *Ascend* Y220

User Guide



Contents

Contents	i
1 Read Before Proceeding.....	1
Safety Precautions.....	1
Personal Information and Data Security.....	2
2 Legal Notice.....	5
3 Getting Started.....	9
Key Functions at Your Fingertips.....	9
Important Information About the Battery.....	10
Power Saving Tips	10
Power On or Off Your Mobile Phone	11
Powering On Your Mobile Phone	11
Setting Up Your Mobile Phone	12
Powering Off Your Mobile Phone	12
Turning On Quick Boot.....	12
Using the Touchscreen	12
Touchscreen Actions	12
Rotating Your Mobile Phone Screen	13
Locking and Unlocking the Screen	13
Locking the Screen.....	13
Unlocking the Screen	13

Home Screen	15
Notification and Status Icons	15
Notification Panel	16
Viewing Other Parts of the Home Screen	18
Customizing the Home Screen	18
Service Shortcuts	19
Setting a Home Screen Animation	19
Changing the Wallpaper	20
Changing the Theme	20
Application Screen	20
Using a microSD Card	21
Using the microSD Card as a USB Mass Storage	21
Removing the microSD Card	21
4 Calling	22
Making a Call	22
Making a Call with the Dialer Application	22
Making a Call from Contacts	23
Making a Call from Call log	23
Making an IP Call	23
Answering or Rejecting a Call	24
Answering an Incoming Call	24
Ending a Call	25
Rejecting an Incoming Call	25

Other Operations During a Call	26
Making a Conference Call	26
Switching Between Calls	26
Using the Call log	27
Adding an Entry to Contacts	27
Using Airplane Mode	27
5 Contacts	28
Opening the Contacts Application	28
Importing Contacts from a SIM Card	28
Adding a Contact	28
Adding a Contact to Your Favorites	29
Searching for a Contact	29
Editing a Contact	30
Communicating with Your Contacts	30
Using Quick Contact for Android	30
Communicating with a Contact	31
Deleting a Contact	31
Backing Up and Synchronizing Contacts	31
Using a microSD Card to Back Up Contacts	31
Using a Google Account to Synchronize Contacts	32
Managing Groups	32
Creating a Group	32
Editing a Group	33

Sending Contacts.....	33
6 Using the Onscreen Keyboard	35
Displaying the Keyboard.....	35
Choosing an Input Method	35
Using the Android Keyboard	36
Using the Huawei Keyboard.....	36
Using the Landscape Keyboard	37
Customizing Keyboard Settings	38
7 Messaging	39
SMS and MMS.....	39
Opening Messaging	39
Creating and Sending a Text Message	39
Creating and Sending a Multimedia Message	40
Opening and Viewing a Multimedia Message.....	41
Replying to a Message.....	41
Copying a Text Message	42
Customizing Message Settings.....	42
Email	42
Adding an Email Account	42
Viewing an Email Message	43
Saving an Email Attachment	43
Creating and Sending an Email Message.....	43
Replying to an Email Message.....	44

Deleting an Email Account	44
Changing Email Account Settings	44
8 Getting Connected	46
Mobile Networks	46
Checking the Network Connection	46
Turning on the Data Service	46
Wi-Fi	47
Turning On Wi-Fi	47
Connecting to a Wireless Network	47
Sharing Your Phone's Data Connection	48
Sharing Your Phone's Data Connection via USB	48
Sharing Your Phone's Data Connection as a Portable Wi-Fi Hotspot	49
Browser	49
Opening the Browser	49
Opening a Webpage	50
Setting a Home Page	50
Managing Bookmarks	51
Customizing Browser Settings	51
Bluetooth	51
Turning On Bluetooth	52
Pairing with and Connecting to a Bluetooth Device	52
Sending Files via Bluetooth	53

Disconnecting from or Unpairing with a Bluetooth Device	53
9 Entertainment	55
Taking Photos and Recording Videos	55
Opening Your Camera	55
Capture Screen	55
Taking a Photo	56
Viewing Your Photos	56
Recording a Video	56
Viewing Your Videos	57
Using the Gallery	57
Opening the Gallery	57
Viewing a Picture	58
Rotating a Picture	58
Cropping a Picture	58
Enjoying Music	59
Opening the Music Library	59
Playing Music	59
Creating a Playlist	60
Adding Music to a Playlist	60
Playing Music in a Playlist	61
Listening to the FM Radio	61
Opening the FM Radio	61

Tuning the FM Radio	61
10 Google Services	63
Creating a Google Account.....	63
Gmail	64
Opening Gmail	64
Switching Between Accounts	64
Creating and Sending an Email	65
Replying to or Forwarding an Email	65
Searching for an Email	66
Customizing Your Gmail Settings	66
Talk	66
Opening Talk	66
Adding a Friend	66
Accepting an Invitation	67
Starting a Chat.....	67
Setting Notifications for New Instant Messages	67
Signing out of Talk	68
Maps	68
Enabling the Location Service.....	68
Opening Maps	68
Searching for Places of Interest	68
Getting Directions	69
YouTube	69

Opening YouTube	69
Searching for a Video	69
Sharing a Video	70
Play Store	70
Opening Play Store	70
Searching for Applications	70
Installing an Application	70
Uninstalling an Application	71
11 Synchronizing Information	72
Managing Your Accounts	72
Adding an Account	72
Adding an Exchange Account	73
Removing an Account	74
Customizing Your Account Synchronization	75
Configuring General Synchronization Settings	75
Changing an Account's Synchronization Settings	76
12 Using Other Applications	77
All Backup	77
Backing Up data by using Backup to SD	77
Calendar	77
Opening Calendar	77
Creating an Event	78
Setting an Event Reminder	79

Setting Synchronization and Display	79
Customizing Calendar Settings.....	80
ES File Explorer	80
Opening ES File Explorer	80
Creating a Folder.....	81
Moving or Copying a File.....	81
Searching for a File	81
Extracting a File.....	82
Clock	82
Opening the Clock	82
Opening the Alarms	82
Calculator	83
Opening Calculator	83
Switching Between Basic and Advanced panel	83
ToDo	84
Weather Clock	84
Setting the Default City.....	84
Updating Weather.....	85
Changing a City	85
Sharing Weather Information	85
13 Managing Your Mobile Phone	87
Setting the Date and Time	87
Setting the Display	88

Adjusting the Screen Brightness	88
Adjusting the Time Before the Screen Turns Off.....	88
Setting Ringers	88
Turning On Silent Mode	88
Adjusting the Volume.....	88
Changing the Phone Ringtone	89
Changing the Message Ringtone.....	89
Setting Phone Services	90
Customizing Call Settings	90
Turning on Data Roaming	90
Switching off the Data Service	90
Configuring Text-to-Speech	90
Installing Voice Data	91
Adjusting the Speech Rate	91
Protecting Your Mobile Phone	91
Turning on Your SIM Card PIN.....	91
Protecting Your Mobile Phone with a Screen Lock	92
Protecting Your Mobile Phone with a Numeric PIN....	92
Managing Applications.....	93
Viewing an Installed Application	93
Uninstalling an Application	93
Moving an Application to the microSD Card	93
Ways to Free Up Your Mobile Phone Memory	94

Resetting Your Mobile Phone	94
Restoring Factory Data	94
System Updates	95
14 Appendix.....	96
FAQs	96

1 Read Before Proceeding

Safety Precautions

Please read the safety precautions carefully to ensure the correct use of your mobile phone.



Do not crash, throw, or puncture your mobile phone. Avoid the falling, squeezing, and bending of your mobile phone.



Do not use your mobile phone in a moist environment, such as the bathroom. Prevent your mobile phone from being soaked or washed in liquid.



Do not switch on your mobile phone when it is prohibited to use phones or when the phone may cause interference or danger.



Do not use your mobile phone while driving.



Follow any rules or regulations in hospitals and health care facilities. Switch off your mobile phone near medical apparatus.



Switch off your mobile phone in aircraft. The phone may cause interference to control equipment of the aircraft.



Switch off your mobile phone near high-precision electronic devices. The phone may affect the performance of these devices.



Do not attempt to disassemble your mobile phone or its accessories. Only qualified personnel are allowed to service or repair the phone.



Do not place your mobile phone or its accessories in containers with a strong electromagnetic field.



Do not place magnetic storage media near your mobile phone. Radiation from the phone may erase the information stored on them.



Do not put your mobile phone in a high-temperature place or use it in a place with flammable gas such as a gas station.



Keep your mobile phone and its accessories away from children. Do not allow children to use your mobile phone without guidance.



Use only approved batteries and chargers to avoid the risk of explosions.



Observe any laws or regulations on the use of wireless devices. Respect others' privacy and legal rights when using your wireless device.



Strictly follow the relevant instructions of this manual while using the USB cable. Otherwise your mobile phone or PC may be damaged.

Personal Information and Data Security

The use of some functions or third-party applications on your device could result in your personal information and data being lost or becoming accessible to others. Several measures are recommended to help you protect personal and confidential information.

- Place your device in a safe area to prevent it from unauthorized use.

- > Set your device screen to lock and create a password or unlock pattern to open it.
- > Periodically back up personal information kept on your USIM/SIM card, memory card, or stored in your device memory. If you change to a different device, be sure to move or delete any personal information on your old device.
- > If you are worried about viruses when you receive messages or emails from a stranger, you can delete them without opening them.
- > If you use your device to browse the Internet, avoid websites that might pose a security risk to avoid theft of your personal information.
- > If you use services such as Wi-Fi tether or Bluetooth, set passwords for these services to prevent unauthorized access. When these services are not in use, turn them off.
- > Install or upgrade device security software and regularly scan for viruses.
- > Be sure to obtain third-party applications from a legitimate source. Downloaded third-party applications should be scanned for viruses.
- > Install security software or patches released by Huawei or third-party application providers.
- > Some applications require and transmit location information. As a result, a third-party may be able to share your location information.

- > Your device may provide detection and diagnostic information to third-party application providers. Third party vendors use this information to improve their products and services.
- > If you have concerns about the security of your personal information and data, please contact mobile@huawei.com.

2 Legal Notice

Copyright © Huawei Technologies Co., Ltd. 2014. All rights reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd. and its affiliates ("Huawei").

The product described in this manual may include copyrighted software of Huawei and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders.

Trademarks and Permissions



HUAWEI, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Android™ is a trademark of Google Inc.

The *Bluetooth*® word mark and logos are registered trademarks owned by *Bluetooth SIG, Inc.* and any use of such marks by Huawei Technologies Co., Ltd. is under license.

Other trademarks, product, service and company names mentioned may be the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities

and settings of local network, and therefore may not be activated or may be limited by local network operators or network service providers.

Thus, the descriptions herein may not exactly match the product or its accessories which you purchase.

Huawei reserves the right to change or modify any information or specifications contained in this manual without prior notice and without any liability.

Third-Party Software Statement

Huawei does not own the intellectual property of the third-party software and applications that are delivered with this product. Therefore, Huawei will not provide any warranty of any kind for third party software and applications. Neither will Huawei provide support to customers who use third-party software and applications, nor be responsible or liable for the functions or performance of third-party software and applications.

Third-party software and applications services may be interrupted or terminated at any time, and Huawei does not guarantee the availability of any content or service. Third-party service providers provide content and services through network or transmission tools outside of the control of Huawei. To the greatest extent permitted by applicable law, it is explicitly stated that Huawei shall not compensate or be liable for services provided by third-party service providers, or the interruption or termination of third-party contents or services.

Huawei shall not be responsible for the legality, quality, or any other aspects of any software installed on this product, or for any uploaded or downloaded third-party works in any form, including but not limited to texts, images, videos, or software etc. Customers shall bear the risk for any and all effects, including incompatibility between the software

and this product, which result from installing software or uploading or downloading the third-party works.

This product is based on the open-source Android™ platform. Huawei has made necessary changes to the platform. Therefore, this product may not support all the functions that are supported by the standard Android platform or may be incompatible with third-party software. Huawei does not provide any warranty or representation in connects with any such compatibility and expressly excludes all liability in connection with such matters.

DISCLAIMER

ALL CONTENTS OF THIS MANUAL ARE PROVIDED “AS IS”. EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL HUAWEI BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOSS OF PROFITS, BUSINESS, REVENUE, DATA, GOODWILL SAVINGS OR ANTICIPATED SAVINGS REGARDLESS OF WHETHER SUCH LOSSES ARE FORSEEABLE OR NOT.

THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF HUAWEI ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS MANUAL SHALL

BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.

Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and be responsible to obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

Privacy Policy

To better understand how we protect your personal information, please see the privacy policy at <http://consumer.huawei.com/privacy-policy>.

3 Getting Started



All the pictures in this guide are for your reference only. Your phone's actual display features may be different to those described here, depending on its software version.

Key Functions at Your Fingertips

	> Press and hold to power on your mobile phone. > Press and hold to open the Phone options menu. > Press to lock the screen when your mobile phone is active.
	> Touch to return to the previous screen or exit the application you are running. > Touch to hide the keyboard. > Touch to open the screen management interface in the home screen.
	> Touch to open the menu on an active screen. > Touch and hold to show the most recently used applications.
	> Touch to return to the home screen. > Touch and hold to open the Google Search.

Important Information About the Battery

- > If the battery has not been used for a long time, you may not be able to power on your mobile phone immediately after you begin charging the battery. Allow the battery to charge for a few minutes with the phone powered off before attempting to power the phone on.
- > As it ages, the battery's performance will degrade, in particular it will not hold charge as it did when it was new. When the battery life becomes noticeably shorter than usual after being charged properly, replace the battery with a new one of the same type.
- > Using data services increases the power consumption of the phone and will therefore reduce the length of time that the phone can be used between battery charges.
- > The time required to fully charge the battery depends on the ambient temperature and the age of the battery.
- > When the battery power is low, the phone will alert you and display a message. When the battery power is almost exhausted, your phone will power off automatically.

Power Saving Tips

The longevity of battery power depends on the network to which you connect, and how you use your mobile phone.

Try the following to conserve battery power:

- > When you do not need 3G services, set your phone to connect to a 2G network.
- > When your mobile phone is not in use, turn off the screen backlight.
- > Reduce the time it takes for your screen backlight to turn off when your phone is idle.
- > Lower the screen brightness.
- > Turn off Bluetooth when you are not using it. Only make your phone visible to other Bluetooth devices when you need to establish a Bluetooth connection.
- > Turn off Wi-Fi when you are not using it.
- > Lower the volume.
- > Close power-draining programs, when you do not need them.
- > Turn off the data service.

Power On or Off Your Mobile Phone

Powering On Your Mobile Phone

Press and hold **Power key**. The first time you power on your phone, you will be asked to sign in to your account and set up your mobile phone.



If personal identification number (PIN) protection is enabled on your mobile phone, you must enter your PIN before using the mobile phone.

Setting Up Your Mobile Phone

The first time you power on your mobile phone, the phone displays a setup wizard to help you set up the phone.

The setup wizard helps you:

- Create or sign in to your account
- Make some initial decisions about how you want to use your mobile phone

Powering Off Your Mobile Phone

- 1 Press and hold **Power key** to open the **Phone options** menu.
- 2 Touch **Power off**.

If **Quick boot** is enabled, the phone will enter the deep sleep mode. If **Quick boot** is disabled, touch **OK** to shut down the phone.

- 3 Touch **OK**.

Turning On Quick Boot

- 1 Touch  > **Settings** > **Accessibility**.
- 2 Select the **Quick boot** check box.



Do not turn on **Quick boot** while on an airplane.

Using the Touchscreen

Touchscreen Actions

- **Touch:** Tap the screen with your finger to select an item, confirm a selection, or start an application.

- > **Touch and hold:** Touch an item with your finger and do not release it until the mobile phone responds. For example, to open the options menu for the active screen, touch and hold the screen until the menu appears.
- > **Flick:** Move your finger either vertically or horizontally across the screen.
- > **Drag:** Touch and hold the desired item with your finger. To move an item, drag the item to any part of the screen. You can drag an icon to move or delete it.

Rotating Your Mobile Phone Screen

The orientation of most screens will change to landscape or portrait view when you rotate your phone sideways.



On the home screen, touch  > **Settings** > **Display** > **Auto-rotate screen** to disable this function.

Locking and Unlocking the Screen

 
Locking the Screen

- > When your phone is on, press **Power key** to lock the screen. When the screen is locked, you can still receive messages and calls.
- > If your phone is idle for a while, the screen will lock automatically.

Unlocking the Screen


- 1 Press **Power key** to wake up the screen.

- 2** Drag the lock icon from left to right to unlock the screen.

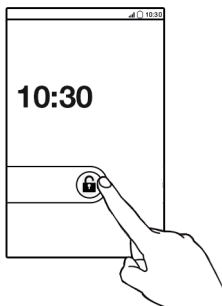

If you have set up a screen unlock pattern, you will be prompted to draw the pattern on the screen to unlock it.

 Home Screen

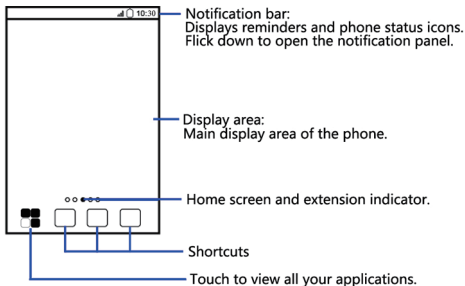

Touch and hold a shortcut until the mobile phone vibrates, you can then drag it to your desired location or move it to the trash. You can also drag an icon from another area of the screen to the shortcut position.

Notification and Status Icons

	Signal strength		No signal
	Connected to EDGE mobile network		EDGE in use
	Connected to 3G mobile network		3G in use
	Roaming		Airplane mode
	Bluetooth on		Bluetooth Connected

	Speakerphone on		Alarm enabled
	Vibration mode		Ringer silenced
	Call muted		Charging battery
	Battery full		Battery extremely low
	Call in progress		Missed call
	Call in progress with a Bluetooth headset used		New mail from Gmail
	New text or multimedia message		Problem with text or multimedia message delivery
	New chat message		New email
	New voicemail		Connected to a PC
	Open Wi-Fi network available		Upcoming event
	Uploading		Downloading
	Phone storage space is getting low		Synchronizing data
	Preparing the microSD card		More undisplayed notifications
	Portable Wi-Fi hotspot on		USB tethering on
	Connected to a VPN		

Notification Panel

Your mobile phone will notify you when you receive a new message or there is an upcoming event. The notification

panel also informs you of alarms and settings. Open the notification panel to see your network operator or to view a message, reminder, or event notification.

Opening the Notification Panel

- 1 When a new notification icon appears on the notification bar, place your finger on the notification bar and flick down to open the notification panel.



 
You can also open the notification panel from the home screen: Touch  > **Notifications** to open the panel.

- 2 On the panel, you can:
 - > Touch a notification to open the related application.
 - > Touch **Clear** to clear all notifications.


Closing the Notification Panel

Touch and hold the bottom of the panel. Then flick up to close it.

Viewing Other Parts of the Home Screen

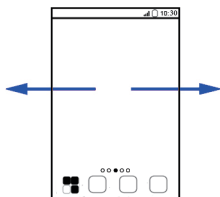

 Flick your finger left or right across the Home screen.

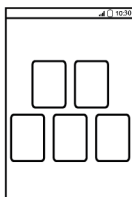

Touch ⇄ to view thumbnails of the Home screen and its extensions. Touch a thumbnail to open the screen.



On the home screen, touch  > **Home settings** > **Advanced settings** > **Screen number** to set the number of extended screens.

Customizing the Home Screen

Adding a New Home Screen Item

- 1 Touch and hold a blank area on the home screen until the **Add to home screen** select action menu is displayed.



You can also touch  > **Add** on the home screen to display the Select action menu.

- 2 Select an item to add it to the home screen.

Moving a Home Screen Item

- 1 Touch and hold an item on the home screen until the item expands in size and the mobile phone vibrates.
- 2 Without lifting your finger, drag the item to the desired position on the screen, and then release it.

Removing a Home Screen Item

- 1 Touch and hold an item on the home screen until the item expands and the mobile phone vibrates.
- 2 Without lifting your finger, drag the item to the trash can. When the item and the trash can turn red, the item is ready to be removed.
- 3 Release the item to remove it from the home screen.

Service Shortcuts

- 1 Open the notification bar.
- 2 Touch  at the top of the screen to switch data services on or off.



You can also touch , ,  to turn the corresponding services on or off.

Setting a Home Screen Animation

- 1 On the Home screen, touch  > **Home settings** > **Animation**.
- 2 Select an animation, and then touch **Save**.

Changing the Wallpaper

- 1 On the home screen, touch  > **Wallpaper**.
- 2 Touch the following menu items to select a picture and set it as the wallpaper:
 - > **ES File Explorer**
 - > **Gallery**
 - > **Live wallpapers**
 - > **Wallpapers**

Changing the Theme

- 1 On the home screen, touch  > **Home settings**.
- 2 Do any of the following:
 - > Touch **Theme** to select a theme.
 - > Touch **Application icons** to select a series of application icons.
- 3 Touch **Save**.

Application Screen

The Application screen holds icons for all of the applications on your phone. You can touch  on the home screen to open the application screen.

Using a microSD Card

Using the microSD Card as a USB Mass Storage

To transfer all your favorite music and pictures from your PC to your mobile phone's microSD card, set the microSD card as a USB mass storage.

- 1 Connect your mobile phone to your PC with the USB cable provided. Your PC will detect the microSD card as a removable storage device.
- 2 Open the notification bar, and then touch **USB connected**.
- 3 Touch **Turn on USB storage** in the dialog box that opens to confirm that you want to transfer files.

You can now transfer files from your PC to your mobile phone's microSD card.



When your microSD card acts as a USB mass storage, your mobile phone will not use this memory space. Ensure that you follow the correct procedures to disconnect the USB mass storage device (your mobile phone) from the PC when you have finished transferring files.

Removing the microSD Card

- 1 Power off the phone.
- 2 Remove the battery cover, and remove the battery.
- 3 Carefully remove the microSD card.

4 Calling

To make a phone call, you can dial a number using the keypad or touch a number saved in your contact list, on a webpage, or in other places. When you are in a call, you can answer other incoming calls or redirect them to your voicemail. You can also set up conference calls with several participants.

Making a Call

To make a call, you can use the **Dialer** application, or select a number from **Contacts** or **Call log**.

When you are in a call, you can touch  to use other functions. To return to the call screen, flick the notification bar down and touch **Current call**.



Be careful not to block the microphone at the bottom of your phone if you want your voice heard by the other parties in a call.

Making a Call with the **Dialer** Application

Your mobile phone supports the Smart Dial function, that is, when you touch numbers on the dialer, the phone automatically searches among your contacts and lists the matching results ordered according to the accuracy of the match. If no contacts match the information entered, the phone will not display any result.

- 1 On the home screen, touch  > **Dialer** to display the dialer.

If you are already working with **Contacts** or **Call log**, touch the **Dialer** tab.

- 2 Touch the appropriate number keys to enter the phone number.
- 3 Touch  to initiate the call.

During a call, touch **Dialpad** to enter other numbers on the dialpad.

Making a Call from **Contacts**

- 1 On the home screen, touch  > **Contacts** to display the contact list.

If you are already working with **Dialer** or **Call log**, touch the **Contacts** tab.

- 2 In the list, touch the contact you want to call.
- 3 Touch  to dial the phone number.

Making a Call from **Call log**

- 1 On the home screen, touch  > **Call log** to display the call log.

If you are already working with **Contacts** or **Dialer**, touch the **Call log** tab.

- 2 Touch  to the right of the log entry to dial.



If you touch and hold a log entry, the options menu will open.

Making an IP Call

- 1 On the home screen, touch  > **Settings** > **Call settings** > **Voice Call** > **IP prefix number**.
- 2 Touch **Enter prefix number**, enter an IP call number, and touch **OK**.

- 3 On the home screen, touch  > **Dialer** to display the dialer.
- 4 Dial the phone number that you wish to call.
- 5 Touch  > Touch , and the default IP call number will be added before the phone number to initiate an IP call.



 
If you are making an IP call for the first time, you can enter the phone number by using the **Dialer**, and then touch  to set the default IP call number and make an IP call.

Answering or Rejecting a Call

Answering an Incoming Call

When you receive a phone call, the incoming call screen opens. If you have previously saved the caller's number in **Contacts**, the caller's name and number are displayed. If the caller's number is not saved in **Contacts**, the caller's number is displayed.

Touch **Answer** to answer the call.

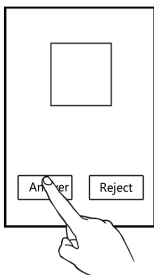


Ending a Call

During a call, touch **End** to hang up.

Rejecting an Incoming Call

 Touch **Reject** to reject the call.

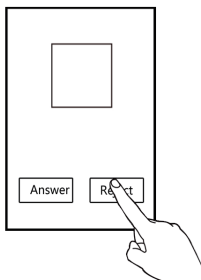

Other Operations During a Call

Making a Conference Call

If you receive a new call while you are already in a call, you can add the second call to the call you are in. This feature is known as conference calling. You can also set up a conference call with multiple callers.



Contact your network operator to ask if conference calls are supported and, if yes, how many parties can participate.

- 1** To initiate a conference call, dial the number of the first participant. After you have connected to the first participant, keep the connection open, touch **Add call**.
- 2** Enter the phone number of the next person you want to invite for the conversation and touch , or select someone from your **Call log** or **Contacts**. The first participant is automatically placed on hold while you do this.
- 3** Once you have connected to the second person, touch **Merge calls** to begin the conference call.
- 4** To end the conference call and disconnect from everyone, touch **End conference**.

Switching Between Calls

If you receive a new call while you are already in a call, you can switch between the two calls.

- 1** While you are in the first call and the second call comes in, answer the incoming call, and then touch **Swap**.

-
- 2 The current call is placed on hold and you are connected to the first call.

Using the **Call log**

The **Call log** contains a list of calls that you have dialed, received, and missed. You can use the call log to find a recently called number quickly or add a number from the call log to your contact list.

Adding an Entry to **Contacts**

- 1 If you are already working with **Dialer** or **Contacts**, touch the **Call log** tab.
- 2 Touch and hold the entry you want to add to your **Contacts**.
- 3 Touch **Add to contacts** in the options menu.
- 4 Touch **New** or scroll through the contact list and touch an existing contact name.

Using Airplane Mode

Some locations may require you to turn off your phone's wireless connections. Rather than powering off your phone, you can place it in **Airplane mode**.

- 1 Press and hold **Power key**.
- 2 Touch **Airplane mode** in the options menu.

5 Contacts

The **Contacts** application enables you to save and manage information such as phone numbers and addresses of your contacts. After you save contact information on your mobile phone, you have easy access to the people with whom you want to communicate.

Opening the **Contacts** Application

On the home screen, touch  > **Contacts** to open the **Contacts** application.

All of your contacts are displayed alphabetically in a list that you can scroll through.

Importing Contacts from a SIM Card

- 1 In the contact list, touch  > **More** > **Import/Export**.
- 2 Select SIM card name, and then touch **Next**.
- 3 Select the location from which you want to export contacts, and then touch **Next**.
- 4 Select the contacts you want to import or touch **Select All** to select all contacts.
- 5 Touch **Copy**.
- 6 After contacts are imported, touch **OK**.

Adding a Contact

- 1 In the contact list, touch  > **New contact**.

- 2 If you have more than one account with contacts, touch the account to which you want to add the contact.
- 3 Enter the contact's name, and then add detailed information such as phone number and address.
- 4 When you are finished, touch **Save** to save the contact information.

Adding a Contact to Your Favorites

- > Touch and hold the contact you want to add to **Favorites**. Then touch **Add to favorites**.
- > In the contact details interface, touch a contact, and then touch the star to the right of the contact's name. The star turns gold.



Only the contacts stored in the phone can add to **Favorites**.

Searching for a Contact

- 1 In the contact list, touch  > **Search**.
- 2 Enter the name of the contact you wish to search for. As you type, contacts with matching names appear below the search box.



On the contact list screen, you can touch a letter on the right to display contacts starting with the touched letter.

Editing a Contact

You can make changes to the information you have stored for a contact at any time.

- 1** In the contacts list, touch and hold the contact whose details you want to edit, and then touch **Edit contact** in the options menu.
- 2** Touch the category of contact information you wish to change: name, phone number, email address, or any other information you recorded earlier.
- 3** Make the desired changes to the contact information, and then touch **Save**. To cancel all of your changes, touch **Revert**.

Communicating with Your Contacts

From the **Contacts** or **Favorites** tab, you can quickly call or send a text (SMS) or multimedia (MMS) message to a contact's default phone number. You can also open details to view a list of all the ways you can communicate with that contact. This section describes how to communicate with a contact when you view your contacts list.

Using Quick Contact for Android

- 1** Touch the contact's picture or picture frame (if you have not assigned a picture to the contact) to open Quick Contact for Android.
- 2** Touch the icon for the way you want to communicate with the contact.



The icons available depend on the information you have entered for the contact, the applications installed on your phone, and the accounts you have.

Communicating with a Contact

- 1 In the contacts list, touch the contact that you want to communicate with.
- 2 On the contact's details screen, touch the icon to the right of the number to call or send messages.

Deleting a Contact

- 1 In the contacts list, touch and hold the contact that you want to delete, and then touch **Delete contact** in the options menu.
- 2 Touch **OK** to confirm that you want to delete the contact.

Backing Up and Synchronizing Contacts

You can back up contacts from your phone to a microSD card, or synchronize phone contacts with a server using your Google account.

Using a microSD Card to Back Up Contacts

Backing Up Contacts

- 1 In the contact list, touch  > **More** > **Import/Export**.
- 2 Select **Phone**, and then touch **Next**.
- 3 Select **SD Card**, and then touch **Next**.

- 4 Select the contacts you want to import or touch **Select All** to select all contacts.
- 5 Touch **Copy** to export your phone contact's information to the installed microSD card.

You can copy the .vcf files backed up on the microSD card to your computer. The files are stored in the microSD card's **Contact** folder.

Restoring Contacts

- 1 In the contact list, touch  > **More** > **Import/Export**.
- 2 Select **SD Card**, and then touch **Next**.
- 3 Select **Phone**, and then touch **Next**.
- 4 Select the .vcf files you want to import.

If there is more than one .vcf files saved on the microSD card, you can choose to restore one, multiple, or all the of them.

Using a Google Account to Synchronize Contacts

You can synchronize contacts using your Google account. For details, see 10.2.2 Changing an Account's Synchronization Settings.

Managing Groups

Creating a Group

- 1 On the home screen, touch  > **Contacts**. Then touch  > **Groups**.
- 2 In the groups list, touch , and then touch **Add group**.

- 3 Enter the name you want to assign to the group.
- 4 Touch **Add Members** to add members to the group.
- 5 Select the contacts to be added to the group and then touch **Save**.
- 6 When you are finished, touch **Save** to save the group information.



You can only add contacts saved in the phone memory to a group.

Editing a Group

You can always make changes to the information you have saved for a group.

- 1 In the groups list, touch and hold the group whose details you want to edit, and then touch **Edit group** in the options menu.
- 2 Make the desired changes to the group information, and then touch **Save**. To cancel all changes you made to the group information, touch **Revert**.



You can add contacts in phone memory rather than in USIM/SIM card to a group.

Sending Contacts

You can send contacts as a .vcf file via Bluetooth or Email.

- 1 In the contacts list, touch  > **More**.
- 2 Touch **Share visible contacts**.

- 3 Select the way you prefer to send the contacts you have selected, for example Bluetooth or Email.



You can send one contact by another way. Touch and hold a contact, touch Send contact, and then select the way you prefer to send.

6 Using the Onscreen Keyboard

Displaying the Keyboard

To enter text, use the onscreen keyboard. Some applications open the keyboard automatically. In others, touch a text field to open the keyboard.

Touch ↩ to hide the keyboard.



Touch and hold a text field to open the Edit text menu.

Choosing an Input Method

- 1 Touch a text field until the Edit text menu is displayed.
- 2 Touch **Input method**.
- 3 Select the input method.

Using the Android Keyboard



Touch to delete a character to the left of the cursor.

Touch and hold to delete all characters to the left of the cursor.

Touch to insert a space.

Touch to enter text by voice.

Touch to select or set input method.

Touch to change from the text mode to the symbol/number mode.

Touch once to capitalize the next letter you type.

Touch twice to capitalize all letters to be entered.



 
The keyboard layout may vary slightly depending on the field where you are entering text. The previous figure is provided for your reference only.



On the home screen, touch  > **Settings** > **Language & keyboard** > **Android keyboard** > **Voice input** to turn on or turn off voice input.

Using the Huawei Keyboard

Swipe your finger to the left or right to switch between full keyboard and T9 keypad.

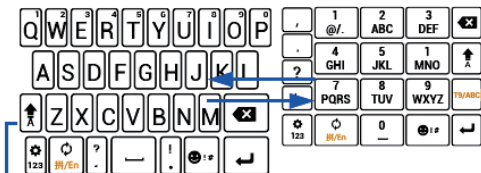

Touch to switch the input method.

Touch to insert a expression symbol.

Touch and hold to open Huawei input method setting.
or select the input method.

Touch to toggle the keyboard to lower case, upper case
and all case



The keyboard layout may vary slightly depending on the field where you are entering text. The previous figure is provided for your reference only.

Using the Landscape Keyboard

If you find the keyboard inconvenient or difficult to use, turn your mobile phone sideways. The screen will display the keyboard in landscape orientation, providing you with a wider keyboard layout.

Customizing Keyboard Settings

- 1 On the home screen, touch  > **Settings** > **Language & keyboard**.
- 2 In **Keyboard settings**, select an input method to customize the keyboard settings.

7 Messaging

The **Messaging** application allows you to exchange text messages (SMS) and multimedia messages (MMS) with anyone using an SMS-or-MMS-capable phone. With the **Email** application you can read and send emails.

SMS and MMS

Opening **Messaging**

Touch  > **Messaging**.

Creating and Sending a Text Message

- 1 Touch  > **Messaging** > **Compose new message**.
- 2 Enter a phone number or a contact's name in the **To** field, or touch  to select a contact from **Contacts**.

As you enter the phone number or the contact's name, the phone displays possible matches from your contacts. Select a contact from the list of possible matches or continue entering.

After you select a contact or finish entering a number, add a comma and you can enter another recipient. You can also touch a previously entered contact again to edit or delete it.

- 3 Touch the composition text box to start entering your message.
- 4 When you are ready to send the message, touch **Send**.

Sent and received messages will be displayed in a message thread, grouping together the messages in a conversation.

Creating and Sending a Multimedia Message

You can use multimedia messages to make everyday communications very special. You can record a message and send it as an audio file, sing 'Happy Birthday' and send it to friend, or send a slideshow of photographs of a special event. The possibilities are endless.

- 1 Touch  > **Messaging** > **Compose new message**.
- 2 Enter a phone number in the **To** field, or touch  to select a contact from **Contacts**.
- 3 Touch the composition text box to start entering your message.
- 4 Touch  to display the options panel.
 - > Touch **Add subject** to add the message subject. Your mobile phone is now in multimedia message mode.
 - > Touch **Attach** to add a picture, music, or video file.
- 5 When the message is ready to be sent, touch **Send**.



You can select a media file (music, video or picture) and send it as an attachment in a multimedia message. In **ES File Explorer**, touch and hold a media file, and then touch **Share** > **Messaging**.

Adding a Slideshow

If you want to attach more than one file to your message, use the **Slideshow** option.

- 1 On the message editing screen, touch  to display the options panel.
- 2 Touch **Attach > Slideshow**, and then select a slide to start editing it.
- 3 Touch  and then touch **Add slide** to add more slides.
- 4 Touch  to finish composing your message and return to the multimedia message screen.
- 5 To alter your multimedia message, touch the slideshow on the multimedia message screen. When the message is ready to be sent, touch **Send**.

Opening and Viewing a Multimedia Message

- 1 In the message list, touch the message thread you wish to view.
- 2 Touch the multimedia message to view the message.

Replying to a Message

- 1 In the message list, touch a text or multimedia message thread to open it.
- 2 Touch the text box to compose your message. Once finished, touch **Send**.

Copying a Text Message

- 1 In the message list, touch a text message thread to open it.
- 2 Touch and hold one of the messages, and then touch **Copy message text**.

Customizing Message Settings

In the message list, touch , and then touch **Settings** to customize the message settings.

Email

Your mobile phone also puts email at your fingertips. With your phone's **Email** application, you can use your email account with Yahoo!, AOL, or other popular email services on your phone.

Adding an Email Account

When using the **Email** application for the first time, you must configure an email account. The Email setup wizard helps you to configure your account. A number of popular email systems are supported. You can work with the same email service that you use on your PC or you can select another email service.

- 1 On the home screen, touch  > **Email**.
- 2 In the email system list, touch **Manual setup** to select a system when you enter account number and password.
- 3 To customize your email settings, follow the onscreen instructions, and then touch **Next**.

- 4 Enter the account name and the name you want other people to see when they receive an email from you.
- 5 Touch **Done**.

Adding Other Email Accounts

- 1 After creating your initial email account, touch  on the **Inbox** screen, and then touch **Accounts** to access the accounts screen.
- 2 Touch  on the accounts screen, and then touch **Add account** to create another email account.



When adding an additional email account, you have the option to use the new account to send all outgoing messages.

Viewing an Email Message

- 1 On the accounts screen, touch the email account you want to use.
- 2 Access a folder, and then touch the message that you want to view.

Saving an Email Attachment

- 1 On the accounts screen, touch the email account you want to use.
- 2 Touch the email message you want to view.
- 3 Touch **Save** next to the attachment in the email.

Creating and Sending an Email Message

- 1 On the accounts screen, touch the email account you want to use.

- 2 On the **Inbox** screen, touch , and then touch **Compose** in the options panel.
- 3 In the **To** field, enter the recipients' name or email address.
- 4 Enter the subject of your message and compose the message.

To send an attachment with the message, touch , and then touch **Add attachment**.

- 5 When you are finished, touch **Send**.

If you are not ready to send the message, touch **Save as draft** or touch  to save the message as a draft.

Replying to an Email Message

- 1 On the accounts screen, touch the email account you want to use.
- 2 Touch the email message to which you want to reply.
- 3 Touch **Reply** or **Reply all** to reply to the email message.

Deleting an Email Account

- 1 On the accounts screen, touch and hold the email account you want to delete.
- 2 Touch **Delete**.
- 3 Touch **OK**.

Changing Email Account Settings

You can change a number of account settings, including how often you check for emails, how you are notified of a

new mail, and details about the servers the account uses to send and receive mails.



Your account's incoming and outgoing settings depend on the kind of email service you are using. You can enter the necessary details manually, although you may need to contact your email service provider to obtain the correct information.

- 1** Touch  > **Email**.
- 2** On the accounts screen, touch and hold the email account you want to change.
- 3** Touch **Account settings**.
- 4** Change **General settings**, **Notification settings**, or **Server settings**.

8 Getting Connected

Mobile Networks

Your mobile phone will be automatically configured to use your network operator's 2G/3G service (if available) when you turn on the phone for the first time. Note that the SIM/USIM card must be inserted.

Checking the Network Connection

- 1 Touch  > **Settings**.
- 2 Touch **Wireless & networks** > **Mobile networks**.
- 3 Touch **Network operators** or **Access Point Names** to check the network connection.



Your mobile phone will automatically read the access point settings from the SIM/USIM card (if any). For this reason, do not change the access point parameters; otherwise, you might not be able to access network resources.

Turning on the Data Service

- 1 Touch  > **Settings**.
- 2 Touch **Wireless & networks** > **Mobile networks**.
- 3 Select the **Data connection**, then select operator's check box to turn on the data connection.

Wi-Fi

Wi-Fi gives you wireless access to broadband Internet. To use Wi-Fi on your mobile phone, you must have an access to wireless access points (hotspots). Obstacles that block the Wi-Fi signal will reduce its strength.

Turning On Wi-Fi

- 1 Touch  > **Settings**.
- 2 Touch **Wireless & networks**, and then select the **Wi-Fi** check box to turn on Wi-Fi.

Connecting to a Wireless Network

- 1 After turning on Wi-Fi, touch  > **Settings**.
 - 2 Touch **Wireless & networks** > **Wi-Fi settings**. You will see a list of detected Wi-Fi networks in the **Wi-Fi networks** section.
 - 3 Touch a Wi-Fi network to connect to it.
- > If you select an open network, you will be automatically connected to the network.

- If you select a network that is secured with Wired Equivalent Privacy (WEP) and connect to it for the first time, enter the password as prompted, and then touch **Connect**. If you connect to a secured wireless network that you have already used, you will not be prompted to enter the password again unless you have reset your mobile phone to its default settings.



On the **Wi-Fi settings** screen, touch **Add Wi-Fi network** to add a new Wi-Fi network.

Sharing Your Phone's Data Connection

You can share your mobile phone's data connection with a single computer via a USB cable: USB tethering. You can share your mobile phone's data connection with a number of devices at the same time, by turning your phone into a portable Wi-Fi hotspot.

Sharing Your Phone's Data Connection via USB

To use USB tethering in different operating systems, you may need to prepare your computer to establish a network connection via USB.



You cannot share your mobile phone's data connection and access its microSD card via USB at the same time.

- 1 Touch  > **Settings**.
- 2 Touch **Wireless & networks > Tethering & portable hotspot**.

- 3 Select the **USB tethering** check box to share your data connection.

Sharing Your Phone's Data Connection as a Portable Wi-Fi Hotspot

- 1 Touch  > **Settings**.
- 2 Touch **Wireless & networks > Tethering & portable hotspot**.



If you want to use the **Tethering & portable hotspot**, you must install the driver, the driver can go to the official website to download.

- 3 Select the **Portable Wi-Fi hotspot** check box to share your data connection.



When **Portable Wi-Fi hotspot** is selected, you can touch **Portable Wi-Fi hotspot settings** to change its network name or secure it.

Browser

Your mobile phone comes with an Internet browser pre-installed.

Opening the Browser

Touch  > **Browser** to open the home page.



When known or open Wi-Fi networks and mobile data networks are available at the same time, your phone will preferably select a Wi-Fi network for Internet access.

Touch  to open the browser options menu and perform one of the following operations:

- > **New window:** Touch **Windows** > **New window** to open a new window.
- > **Bookmarks:** Touch to display bookmarks.
- > **Windows:** Touch to view thumbnails of open browser windows. You can switch to another browser window or open a new one on this screen.
- > **Forward:** Touch to browse the next web page.
- > **More:** Touch to open other menus and perform operations such as searching, selecting text, downloading, or setting options.

Opening a Webpage

- 1 In a browser window, touch the URL field at the top of the screen.
- 2 Use the keyboard to enter a webpage address. You can touch  to enter the web page address by voice.
- 3 As you enter the address, matching webpage addresses will appear on the screen. If you see the address you want, touch it and go directly to that webpage or complete entering your desired webpage.

Setting a Home Page

- 1 In a browser window, touch .
- 2 Touch **More** > **Settings** > **Set home page**.

- 3 Enter the address of the desired home page, and then touch **OK**.

Managing Bookmarks

You can store as many bookmarks as you want on your mobile phone.

Adding a Bookmark

- 1 In a browser window, go to the webpage you want to save as a bookmark.
- 2 Touch , and then touch **Bookmarks > Add bookmark**.
- 3 Edit the bookmark name and then touch **OK**.

Opening a Bookmark

- 1 In a browser window, touch , and then touch **Bookmarks**.
- 2 Touch the bookmark of the website you want to open.

Customizing Browser Settings

Customize the browser to suit your browsing style. Use **Browser** to set page content, privacy, and security preferences. In a browser window, touch , and then touch **More > Settings**.

Bluetooth

Your mobile phone has Bluetooth, which allows you to create a wireless connection with other Bluetooth devices so you can share files with your friends, talk hands-free with a Bluetooth headset.

If you are using Bluetooth, remember to stay within 10 meters (33 feet) of the other Bluetooth devices to which you want to connect. Be aware that obstacles like walls or other electronic equipment may interfere with your Bluetooth connection.

Turning On Bluetooth

- 1 Touch  > **Settings**.
- 2 Touch **Wireless & networks**, and then select the **Bluetooth** check box to turn on Bluetooth. When Bluetooth is turned on, the Bluetooth icon appears in the notification bar.
- 3 Touch **Bluetooth settings**, and then select the **Discoverable** to make your mobile phone visible to other Bluetooth devices.

Pairing with and Connecting to a Bluetooth Device

Your mobile Bluetooth lets you do the following:

- > Hands Free Profile (HFP): allows you to use a hands-free Bluetooth device.
- > Headset Profile (HSP): allows you to use a mono Bluetooth headset.
- > Object Push Profile (OPP): allows you to transfer files over a Bluetooth connection.
- > Advanced Audio Distribution Profile (A2DP): allows you to use a stereo Bluetooth headset.
- > A/V Remote Control Profile (AVRCP): allows you to control audio playing using a Bluetooth headset remotely.

Before you use Bluetooth, pair your mobile phone with another Bluetooth device as follows:

- 1 Ensure that the Bluetooth function on your mobile phone is enabled.
- 2 On the home screen, touch  > **Settings** > **Wireless & networks** > **Bluetooth settings**. Your mobile phone will then scan for Bluetooth devices in range.
- 3 Touch the device you want to pair your mobile phone with.
- 4 If required, enter the pairing password to complete the connection.



When pairing with Bluetooth version 2.0 or above Bluetooth devices do not enter a password.

Sending Files via Bluetooth

With Bluetooth, you can share pictures, videos, or music files with your family and friends. To send files via Bluetooth:

- 1 Touch and hold the file to be sent in your mobile phone or SD card. The active options menu is displayed.
- 2 Touch **Share**, then **Bluetooth** to select a paired device.

Disconnecting from or Unpairing with a Bluetooth Device

- 1 Touch  > **Settings** > **Wireless & networks** > **Bluetooth settings**.

- 2** Navigate to the **Bluetooth devices** section, and then touch and hold the device to which you are connected.
- 3** Touch **Unpair** to disconnect from the device.

9 Entertainment

In addition to being a communication device and personal assistant, your mobile phone also provides you with a multitude of entertainment possibilities. You can take photos, create videos and audio clips, and download and listen to music.

 
Taking Photos and Recording Videos

The camera is a combination of camera and camcorder that you can use to shoot and share pictures and videos.

Opening Your Camera

- > Touch  > **Camera** to open the camera, and ready to take a picture or record a video.
- > Touch  to close the camera.

Capture Screen

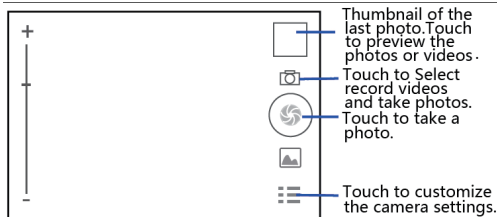

On the capture screen, touch  to show the capture panel.

Taking a Photo

- 1 Open your camera application and switch it to camera mode.
- 2 If necessary, change the camera settings. The preview changes as you change the settings.
- 3 Frame your photo within the photo capture screen.
- 4 Release  to take your photo.

Photos taken are displayed for a moment. You can take another photo or review your photos.

Viewing Your Photos

- 1 After taking a photo, a thumbnail of the photo you have just taken is shown in the upper right corner of the capture screen. Touch the thumbnail to view it.
- 2 Touch the onscreen button to do any of the following:
 - > Touch **Share** to send the photo in a message or post it online.
 - > Touch **Delete** to delete the photo.
 - > Touch **More** > **Set as** to set the photo as a contact icon or the wallpaper.

Recording a Video

- 1 Open the camera application, and then switch it to camcorder mode.
- 2 If necessary, change the camcorder settings.
- 3 Frame the scene with which you want to start your video.

- 4 Touch  to start recording a video.
- 5 Touch  to stop recording.

Viewing Your Videos

- 1 After recording a video, a thumbnail of the video you have just recorded is shown in the upper right corner of the capture screen. Touch the thumbnail to view it.
- 2 Touch the onscreen buttons to do any of the following:
 - > Touch **Share** to send the video in a message or post it online.
 - > Touch **Delete** to delete the video.
- 3 If you want to view more videos, flick your finger left or right across the screen.

Using the **Gallery**

Your **Gallery** application can automatically search for pictures and videos on your mobile phone and microSD card. Use **Gallery** to sort photos and videos into folders, view and edit pictures, watch videos, and set a picture as wallpaper or as a photo for a contact.

Opening the **Gallery**

On the home screen, touch  > **Gallery**.

The **Gallery** application categorizes your pictures and videos by storage location and displays these files in folders. Touch a folder to view the pictures or videos inside.

Viewing a Picture

- 1 In **Gallery**, touch the folder that contains the pictures you want to view.
- 2 Touch the picture to view it in full-screen mode.
- 3 Touch the screen. Then the zoom panel appears. You can zoom in or zoom out on the picture.



The picture viewer supports the automatic rotation function. When you rotate your mobile phone, the picture adjusts itself to the rotation.

Rotating a Picture

- 1 When viewing a picture, touch  to display the operations panel.
- 2 Touch **More**.
- 3 Select either **Rotate Left** or **Rotate Right**. The picture is saved with the new orientation.

Cropping a Picture

- 1 When viewing a picture, touch  to display the operation panel, and then touch **More > Crop**.
- 2 Use the cropping tool to select the portion of the picture to crop.
 - > Drag from the inside of the cropping tool to move it.
 - > Drag an edge of the cropping tool to resize the image.
 - > Drag a corner of the cropping tool to resize the image without changing its length to width ratio.

 
- 3 Touch **Save** to save the cropped picture. Touch **Discard** to discard the changes.

Enjoying Music

Opening the Music Library


On the home screen, touch  > **Music** to open the music library.

The music library automatically scans for music stored on your microSD card and displays them in **Artists**, **Albums**, **Songs**, **Playlists**.

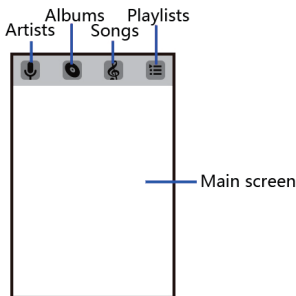

Playing Music

 - 1 From the music library, select a way to view your music.
- 2 Touch the music file you want to play.

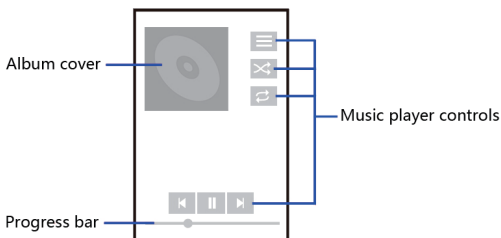

While playing music, touch  to return to the home screen, the music will continue to play in the background and you can use other applications. Open the notifications panel and touch the playing music to return to the music playing screen.

Creating a Playlist

- 1 In the music library, select **Songs**.
- 2 Touch and hold a music file, and then touch **Add to playlist**.
- 3 Select **New**, and then enter the playlist name.
- 4 Touch **Save** to create a new playlist.



Touch and hold a playlist to **Rename** or **Delete** it.

Adding Music to a Playlist

- 1 From the music library select a way to view your music.

- 2 Touch and hold a music file, and then touch **Add to playlist**.
- > Touch an existing playlist to add the song to that playlist.
- > Touch **New** to add the song to a new playlist.

Playing Music in a Playlist

- 1 In music library, touch **Playlists**.
- 2 Touch and hold the playlist you want to play.
- 3 Touch **Play** to play the playlist.

Listening to the **FM Radio**

The FM radio lets you listen to FM radio programs on your mobile phone. Since the FM radio uses the headset as its antenna, before opening the application, connect the headset to your phone's the audio jack.

Opening the **FM Radio**

- 1 On the home screen, touch  > **FM Radio** to open the application.
- 2 The first time you open FM radio, touch  > **Search**, which automatically scans for available FM channels, saves them as presets, and plays the first FM channel found.

Tuning the **FM Radio**

Open the **FM Radio** application, and then do the following:

- > Touch  or  to tune the radio to the previous or next channel.

- > Touch  > **Search** to scan automatically for available FM channels.

10 Google Services



Availability of Google applications, services, and features may vary according to your country or carrier. Please follow local laws and regulations to use them.

When you turn on your mobile phone for the first time, touch a Google services such as **Talk**, **Gmail**, or **Play Store**, and you will be prompted to sign in to your Google account.



Ensure that your mobile phone has an active data connection (3G/GPRS) before you sign in to your Google account.

If you already have a Google account, touch **Sign in** and enter your username and password.

Creating a Google Account

If you do not have a Google account, you can create one:

- 1 After reading the setup information, touch **Next**.
- 2 Touch **Create**.
- 3 Enter the first name, last name, and user name for your Google account, and then touch **Next**. The mobile phone will connect to a Google server to check whether the username is available. If the username you entered is already in use, you will be prompted to choose another one or select one from a list.

- 4 Enter and confirm your Google account password.
- 5 Select a security question from the drop-down menu, and then enter the answer.
- 6 Touch **Create**.
- 7 Enter the characters that appear on the screen, and then touch **Next**.



To use another Google account, go to the screen, and touch to select which type of accounts you want to add.

Gmail

Gmail is Google's web-based email service. When you first set up your phone, you may have configured it to use an existing **Gmail** account or create a new account. The first time you open the **Gmail** application on your phone, your **Inbox** will contain the messages from your **Gmail** web account.

Opening Gmail

On the home screen, touch  > **Gmail**. The **Inbox** mail list appears. Any emails you decide to keep on your mobile phone will go to your **Inbox** folder.

Switching Between Accounts

- 1 In the mail list, touch , and then touch **Accounts**.
- 2 Touch the account that contains the email you want to read.

Creating and Sending an Email

- 1 In the mail list, touch , and then touch **Compose**.
- 2 Enter the message recipient's email address in the **To** field. If you are sending the email to several recipients, separate the email addresses with commas. You can add as many message recipients as you want.

If you want to send a copy (Cc) or a blind copy (Bcc) of the email to other recipients, touch , and then touch **Add Cc/Bcc**.

- 3 Enter the email subject and write your email.

If you want to add a picture attachment, touch , and then touch **Attach** to select the picture you want to attach.

- 4 After writing your email, touch .

Replying to or Forwarding an Email

- 1 In the mail list, touch the email that you want to reply to or forward.
- 2 Touch  to reply. You can also touch , and then touch **Reply**, **Reply all**, or **Forward**.
- 3 Do one of the following:
 - > If you selected **Reply** or **Reply all**, enter your message.
 - > If you selected **Forward**, specify the message recipients and add any additional text you want to include in the forwarded message.

- 4 Touch  to send, or touch  to save as a draft.

Searching for an Email

- 1 In the mail list, touch , and then touch **Search**.
- 2 Enter the search keywords in the box, and then touch .

Customizing Your **Gmail** Settings

In the mail list, touch , and then touch **More > Settings** to customizing your **Gmail**.

Talk

Talk is Google's instant messaging service. You can use it to communicate in real time with other people using **Talk** on a phone or on the web.

Opening **Talk**

On the home screen, touch  > **Talk** to open the application.



Your **Talk** account is based on the Google account you set up with your mobile phone.

Adding a Friend

- 1 In the friends list, touch , and then touch **Add friend**.
- 2 Enter the **Talk** instant messaging ID or Gmail address of the friend you want to add.
- 3 Touch **Send**.

Accepting an Invitation

- 1 If you have invited anyone to chat or if someone else has invited you to chat, this information will appear in the friends list.
- 2 Touch a pending invitation, and then touch **Accept**.

Starting a Chat

- 1 In the friends list, touch a friend's name in the friends list.
- 2 Use the onscreen keyboard to enter text and chat with your friend.
- 3 After entering your message, touch **Send**.

Setting Notifications for New Instant Messages

Whenever you receive an instant message, your mobile phone can play a sound, vibrate, or display an icon. To set up one of these handy notifications, start in the friends list, and then touch . Then touch **Settings**. Now choose from one of the following:

IM notifications	Select the check box to receive a notification on the notification bar when you receive an instant message.
Select ringtone	Touch to choose the ringtone used for a new instant message. You will hear a short sample of the ringtone when you select it. To turn the ringtone off, select Silent .
Vibrate	Select the check box to make your mobile phone vibrate when you receive a new instant message.

Signing out of **Talk**

On the friends list screen, touch , and then touch **Sign out** to quit **Talk**.

Maps

Maps lets you find your current location, view real-time traffic conditions (depending on availability in your locale), and get detailed directions to various destinations. You can view satellite images, traffic maps, or other kinds of maps of your current or other locations.

Enabling the Location Service

Before you open **Maps** to find your location or search for places of interest, you must enable the location service.

- 1 On the home screen, touch  > **Settings**.
- 2 Touch **Location**.
- 3 In the **Location** section, select the **Use wireless networks** check box.

Opening **Maps**

On the home screen, touch  > **Maps** to open the application.

Searching for Places of Interest

- 1 On the map, touch , and then touch **Search**.
- 2 Enter the place you want to search for in the search box, and then touch the Search icon.
- 3 Your search results will then be displayed. Touch a place you are interested in and the application will show where it is on the map.

Getting Directions

- 1 While viewing a map, touch , and then touch **Directions**.
- 2 Enter the starting point in the first text box, and then enter your destination in the second text box.
- 3 Touch the icon for car, public transit, or walking directions.
- 4 Touch **Get directions**. Your directions will appear in a list.
- 5 Touch a direction item on the list to show it on the map.
- 6 When you finish viewing or following the directions, touch , and then touch **Clear Map** to reset the map.

YouTube

YouTube is Google's free online video streaming service for watching, searching for, and uploading videos.

Opening YouTube

On the home screen, touch  > **YouTube**. You will then see the YouTube screen.

Searching for a Video

- 1 On the **YouTube** screen, and touch .
- 2 Enter a search keyword, and then touch the Search icon.
- 3 You will see a number of search results displayed below the notification bar. Scroll through the results and touch a video to watch it.

Sharing a Video

From the video list on the **YouTube** screen, select a video clip and touch **More > Share**.

Play Store

Android Market provides direct access to applications and games which you can download and install on your phone.

Opening Play Store

- 1 On the home screen, touch  > **Play Store**
- 2 When you open **Play Store** for the first time, the **Android Market Terms of Service** window will appear. Touch **Accept** to continue.

Searching for Applications

There are a few different ways to find applications on the **Play Store** home screen, including:

- > Featured applications
- > List of games
- > Search function
- > My apps

Installing an Application

- 1 In the **Play Store**, select a category, and then touch the application you want to download. On the application details screen, you can view more information about this application, such as its cost, overall rating, user comments, and similar applications. When scrolling down, you can also

view developer's information including other applications from the same developer and the link to the developer's website. In addition, you can send the developer an email.

- 2 To install the application, touch **Install** (if it is free) or touch the button with a price (if it is not free), and confirm your download or purchase.
- 3 To check the progress of a download, open the notification panel. Most applications are installed within seconds. To stop an application from downloading, touch the cross (×).

After the application has been downloaded and installed on your mobile phone, the content download icon appears in the notification bar.



If you want to install a non-Market application, touch  > **Settings** > **Applications**, and then select the **Unknown sources** check box to allow installation of the non-Market application.

Uninstalling an Application

- 1 On the **Play Store** screen, touch  > **My Apps**.
- 2 Touch the application you want to uninstall, and then touch **Uninstall**.
- 3 When prompted, touch **OK** to remove the application from your mobile phone.

11 Synchronizing Information

Some applications on your mobile phone give you access to the same personal information that you can add, view, and edit on your computer. If you add, change, or delete your information in any of these applications on the web, the updated information also appears on your mobile phone.

This is made possible through over-the-air data synchronization. The process occurs in the background and does not interfere with use of your mobile phone. When your phone is synchronizing, a data synchronization icon will be shown in the notification bar.

Managing Your Accounts

You can synchronize contacts, email, and other information on your mobile phone with multiple Google accounts or other kinds of accounts, depending on the applications installed on your mobile phone.

For example, you can start by adding your personal Google account, so your personal email, contacts, and calendar are always available. You could then add a work account, so your work-related emails and work contacts are handy. If you like, you may add multiple Google accounts or other accounts.

Adding an Account

When you add an account, the **Contacts** application compares contacts from the newly synchronized account with contacts from your existing mobile phone accounts and attempts to merge duplicates into a single entry in **Contacts**. While it is presented as a single contact entry, the contact data itself is not merged.

- 1 On the home screen, touch  > **Settings** > **Accounts & sync**. The screen displays your current synchronization settings and a list of your current accounts.



In some cases, you may need to obtain account details from IT support. For example, you may need to know the account's domain or server address.

- 2 Touch **Add account**.
- 3 Touch the kind of account to add.
- 4 Follow the onscreen steps to enter the required and optional information about the account. Most accounts require a username and password, but the details depend on the kind of account and the configuration of the service to which you are connecting.
- 5 Configure the account. Depending on the kind of account, you may be asked to configure what kind of data you want to synchronize to the mobile phone, to name the account, and for other details. When you are finished, the account is added to the list on the screen.

Adding an Exchange Account

- 1 On the home screen, touch  > **Settings** > **Accounts & sync**.
- 2 Touch **Corporate**.

- 3 Follow the instructions and enter the required information about the exchange account you want to add. For details, contact the server administrator.
- 4 Touch **Next** to display the **Account options** screen. Configure the synchronization settings for this account.
- 5 Touch **Next** to finish configuring the account settings. If emails are not synchronized properly, contact the server administrator.

Removing an Account

Prerequisite

You can remove an account, deleting it and all information associated with it from your mobile phone, including email, contacts, settings, and so on. You cannot, however, remove some accounts, such as the first account you signed into on the mobile phone. If you attempt to remove certain accounts, all personal information associated with it will be deleted.



You can only remove the first Google Account by resetting the phone to factory defaults.

- 1 On the **Accounts & sync settings** screen, touch the account to be deleted.
- 2 Touch , and then touch **Remove account**.
- 3 Confirm that you want to remove the account.

Customizing Your Account Synchronization

You can configure background data use and synchronization options for all the applications on your phone. You can also configure what kind of data you synchronize for each account.

For some accounts, synchronization is bi-directional; changes that you make to the information on your mobile phone are made to the copy of that information on the web. Some accounts support only one-way synchronization; the information on your mobile phone is read-only.

Configuring General Synchronization Settings

On the **Accounts & sync settings** screen, do the following:

- Select or clear the **Background data** check box to control whether applications and services can transmit data when you are not working with them directly (that is, when they are running in the background).

If you clear this option, **Gmail** stops receiving new mails, **Calendar** stops synchronizing events, and so on, until you refresh them.

- Select or clear the **Auto-sync** check box to control whether changes you make to information on the phone or on the web are automatically synchronized with each other.

For example, when this option is selected, changes that you make in **Contacts** on the phone are automatically made in Google Contacts on the web.

Changing an Account's Synchronization Settings

- 1** On the **Accounts & sync settings** screen, select **Background data** and **Auto-sync**.
- 2** Touch the account for which you want to change the synchronization settings. The data and synchronization screen opens, displaying a list of the kinds of information the account can synchronize.
- 3** Select the items you want to synchronize from the list. Your phone will automatically synchronize the selected items.

12 Using Other Applications

All Backup

You can back up data using **All Backup**, which provides the following options: **Backup to SD**, **Restore from SD**, **Quick Backup**, **Schedule Backup** and **Applications**.

Backing Up data by using **Backup to SD**

- 1 On the home screen, touch  > **All Backup**.
- 2 Touch **Backup to SD**.
- 3 Enter a file name in the **Filename:** field.
- 4 In the **Backup contents:** field, select the contents you want to back up.
- 5 Touch **Backup** to back up the selected data.

Calendar

Use **Calendar** to create and manage events, meetings, and appointments. Depending on your synchronization settings, the calendar on your phone can be synchronized with the internet-based calendar you use.

Opening **Calendar**

On the home screen, touch  > **Calendar** to open the application.



When you add a Google Account that includes a calendar service to your phone, you can access Google calendar: Touch , and then touch **More > Calendars**.

Creating an Event

- 1 In any calendar view, touch  > **More**, and then touch **New event** to open the **Event details** screen.



If you have more than one calendar, select the calendar where you want to save the event.

- 2 Enter the event name.
 - > If there is a time frame for the event, touch **From** and **To** to set the beginning and end times of the event.
 - > If the event is a special occasion such as a birthday or a day-long activity, set the date for **From** and **To**, and then select the **All day** check box.
- 3 Enter the location of the event and a description.
- 4 Specify in **Repetition** whether the event recurs and, if it does, how frequently, and then set the time for your event reminder in **Reminders**.

5 Touch **Done**.



To quickly create an event in the day, week, or month view, touch and hold an empty time slot, and then touch **New event**. A new event details screen will appear with the selected time slot and date in the **From** and **To** fields.

Setting an Event Reminder

- 1 In any calendar view, touch an event to view its details.
- 2 Touch “+” to add a reminder, or touch the reminder’s “-” button to delete an existing reminder.
- 3 Touch the reminder time, and then, from the list displayed, touch the length of time before the event when you want to be reminded. When the time comes, you will receive a notification about the event.

Setting Synchronization and Display

The Calendars screen displays all the calendars you have added or subscribed to for each account that is configured to synchronize events to your phone, organized by account. (Calendars for accounts you have configured not to synchronize Calendar events are not included in the list.)

- 1 In any calendar view, touch . Then touch **More > Calendars**.
- 2 Touch the icon next to a calendar to change whether it is synchronized and whether it is displayed.

You remain subscribed to Calendars that you configure not to store on the phone and can still work with them with Google Calendar on the web, or using other calendar services.

3 Touch **OK**.

Customizing Calendar Settings

In any calendar view, touch . Then touch **More > Settings** and choose from the following:

- > **Hide declined events:** Select to hide events for which you have declined invitations.
- > **Set alerts & notifications:** Touch to set event reminders to alert you, to send you a notification, or to turn off event notifications on your mobile phone.
- > **Select ringtone:** Touch to select the ringtone to sound when you receive an event reminder.
- > **Vibrate:** Select to vibrate the mobile phone when you receive an event notification.
- > **Default reminder time:** Touch to select the default time before an event for event reminders to occur.

ES File Explorer

ES File Explorer is like having a pocket-sized personal assistant (PA), letting you organize, edit, and delete files and folders.

Opening ES File Explorer

On the home screen, touch  > **ES File Explorer** to open the application.

Creating a Folder

- 1 On the **ES File Explorer** screen, access the directory in which you want to create a new folder.
- 2 Touch  > **New** to open the options panel, and then touch **Folder**.
- 3 Enter the name of the new folder in the text box.
- 4 Touch **Ok**.

Moving or Copying a File

- 1 On the **ES File Explorer** screen, Touch **Select**, and then you can make multiple selections.
- 2 Touch the file or folder you want to move or copy. When a file or a folder is selected, a check mark will appear.

To select or unselect all files, Touch and hold **Select** until the Choose menu is displayed.

- 3 Touch **Cut** or **Copy**.
- 4 Select the path where you want the file to be copied or moved. Touch **Paste** to move or copy the file to the selected path.

Searching for a File

- 1 On the **ES File Explorer** screen, touch a folder to access the directory where the file you want is located.
- 2 Touch **Search**.
- 3 Write a key word of the name of your file in the search box.
- 4 Touch **OK**. Your mobile phone will start the search.

- 5 A list of search results will be displayed. Touch a file in the list to open it.
- 6 Touch the back key to return to the file manager screen.

Extracting a File

Your phone supports extracting files.



You can extract both .zip and .rar files.

- 1 Touch and hold a compressed file.
- 2 Touch  > **Extract to**.
- 3 Edit the save path for the extracted files.
- 4 Touch **OK** to start extracting.

Clock

The **Clock** application displays the date and time. You can also use **Clock** to turn your mobile phone into an alarm clock.

Opening the **Clock**

On the home screen, touch  > **Clock** to open the application.

Clock opens with the date and time displayed on your home screen wallpaper.

Opening the **Alarms**

On the **Clock** screen, touch  to open the **Alarms**.

Adding an Alarm

- 1 On the alarm list screen, touch **Add alarm**.

- 2 Set the alarm, and then touch **Done**.

Setting an Alarm

- 1 On the alarm list screen, touch one of the alarms on the screen.
- 2 Touch **Time** to set the time of the alarm.
- 3 Touch **Repeat** to set the days when you want the alarm to sound.
- 4 Touch **Ringtone** to select a ringtone for the alarm.
- 5 Select the **Vibrate** check box to enable the phone to vibrate, in addition to playing the ringtone.
- 6 Touch **Label** to enter a name for the alarm.
- 7 Touch **Done**.

Customizing Alarm Settings

On the alarm list screen, touch , and then touch **Settings**.

Calculator

Use **Calculator** to solve simple arithmetic problems or use its advanced operators to solve more complex equations.

Opening Calculator

On the home screen, touch  > **Calculator** to open the application.

Switching Between **Basic** and **Advanced** panel

On the **Calculator** screen, flick the screen to the right or left to switch between **Basic** panel and **Advanced** panel.

ToDo

ToDo features a simple text processor. In the note list, you can add, edit, and delete notes.

- 1 On the home screen, touch  > **ToDo** to open the application.
- 2 Touch  to create a note.
- 3 Touch **No expire date** to open the time setting box, you can set the year and month, then touch **set**.
- 4 Touch  or **Done** to save the note.

Weather Clock

You can use **Weather Clock** to check the date and time of cities around the world, to get the latest weather of any city in any time and to share weather information with others.



You need to turn on data service on your phone before using weather clock.

Setting the Default City

- 1 On the home screen, touch  > **Weather Clock**.
- 2 On the weather clock screen, touch  > **Add city**.
- 3 Select the city you want to add.



In addition to your current city, you can add up to four more cities to the weather clock and get weather information for all of them at the same time.

- 4 On the weather information screen, touch the city name, and confirm that you want to set the city as the default city.

Updating Weather

You can update weather information on the weather clock either manually or automatically. To update the current city's latest weather information, touch  > **Refresh** on the weather clock screen.

You can also set your phone to update the weather information automatically.

- 1 On the weather clock screen, touch  > **More** > **Settings**.
- 2 Select **Auto update**.
- 3 Touch **Update interval** to set the interval between automatic weather updates.

Changing a City

- 1 On the weather clock screen, touch  > **Change city**.
- 2 Select a city from the Popular cities list, or search for another city by entering its name in the search field.

Sharing Weather Information

- 1 On the weather clock screen, touch  > **Share weather**.
- 2 Enter a phone number or a contact's name in the **To** field, or touch  to select a contact.

- 3 Touch **Send** to send weather information to the recipient.

13 Managing Your Mobile Phone

To configure your mobile phone, touch  > **Settings**.

Setting the Date and Time



When your mobile phone is using the date and time settings provided automatically by the network, you cannot manually set the date, time, and time zone.

- 1 On the **Settings** screen, touch **Date & time**.
- 2 Clear the **Automatic with network** check box.
- 3 Touch **Set date**. On the set date screen, flick up and down to adjust the month, date, and year, and then touch **Set** when the configuration is complete.
- 4 Touch **Select time zone**, and then select the desired time zone from the list. Scroll the list to view more time zones.
- 5 Touch **Set time**. On the set time screen, flick up and down to adjust the hour and minute. Touch **Set** when the configuration is complete.
- 6 Select or clear the **Use 24-hour format** check box to switch between 24-hour and 12-hour formats.
- 7 Touch **Select date format** to select how you want the date to display on your mobile phone.

Setting the Display

Adjusting the Screen Brightness

- 1 On the **Settings** screen, touch **Display > Brightness**.
- 2 Drag the slider left to make the screen darker, or right to make it brighter.
- 3 Touch **OK** to save the adjustment.

Adjusting the Time Before the Screen Turns Off

If your mobile phone is idle for several minutes, it will turn off the screen to save battery power. To set a longer or shorter idle time:

- 1 On the **Settings** screen, touch **Display > Screen timeout**.
- 2 Select the duration you want the screen to be illuminated.

Setting Ringers

Turning On Silent Mode

- 1 On the **Settings** screen, touch **Audio profiles**.
- 2 Select the **Silent** check box to silence all sounds except alarms, and music and video media.

Adjusting the Volume

You can adjust the volume while on the home screen or on most of the application screens (such as the screen displayed during a call or when playing music or videos). Press the Volume keys to adjust volume to the level you

desire. You can also adjust the volume from the settings screen.

- 1 On the **Settings** screen, touch **Audio profiles > General > Volume**.
- 2 Drag the slider left to make the volume lower, or right to make it higher.
- 3 Touch **OK** to save the adjustment.

Changing the Phone Ringtone

- 1 On the **Settings** screen, touch **Audio profiles > General > Phone ringtone**.
- 2 In the displayed list, select an option:
 - > **Android System:** Select a preinstalled ringtone. The ringtone plays when selected.
 - > **Es File Explorer:** Select the music stored in the phone or on the microSD card.
- 3 Touch **OK**.

Changing the Message Ringtone

- 1 On the home screen, touch  > **Messaging**.
- 2 In the message list, touch  > **Settings > Select ringtone**.
- 3 In the displayed list, select an option:
 - > **Android System:** Select a preinstalled ringtone. The ringtone plays when selected.
 - > **Es File Explorer:** Select the music stored in the phone or on the microSD card.

- 4 Touch **OK**.

Setting Phone Services

Customizing Call Settings

Mobile phone service providers offer different services such as call forwarding, call waiting, fixed dialing numbers, and voicemail. You can customize many of these services if they are part of your calling plan.

On the **Settings** screen, touch **Call settings** to customize your call functions.

Turning on Data Roaming

- 1 On the **Settings** screen, touch **Wireless & networks > Mobile networks**.
- 2 Select **Data roaming** check box .



Accessing data services while roaming may incur additional charges. Ask your wireless service provider about data roaming fees.

Switching off the Data Service

- 1 On the **Settings** screen, touch **Wireless & networks > Mobile networks**.
- 2 Select **Data enabled** check box.

Configuring Text-to-Speech

Use the Text-to-Speech settings to configure the Android text-to-speech synthesizer, for applications that can take advantage of this feature.

Installing Voice Data

- 1 On the **Settings** screen, touch **Voice input & output > Text-to-speech settings > Install voice data**.
- 2 If your mobile phone does not have speech synthesizer data installed, connect to Android Market and let it guide you through the process of downloading and installing the data.
- 3 Follow the instructions to install the voice data.

Adjusting the Speech Rate

- 1 On the **Settings** screen, touch **Voice input & output > Text-to-speech settings > Speech rate**.
- 2 Select a speed at which the text is to be spoken.

Protecting Your Mobile Phone

Turning on Your SIM Card PIN

- 1 On the **Settings** screen, touch **Security > Set up SIM card lock**.
- 2 Select the **Lock SIM card** check box.
- 3 Use the keyboard to enter the PIN, and then touch **OK**.
- 4 To change the PIN at any time, touch **Change SIM PIN**.



You can dial emergency numbers any time from your mobile phone.

Protecting Your Mobile Phone with a Screen Lock

To keep your data more secure, lock the screen and/or require a screen unlock pattern every time your mobile phone is turned on or wakes up from sleep mode.

- 1 On the **Settings** screen, touch **Security > Set up screen lock > Pattern**.
- 2 Flick your finger vertically, horizontally or diagonally, connect at least four dots in any order you choose. Lift your finger from the screen when you are finished.

You must drag your finger between the dots on the screen to create the pattern, not simply touch individual dots.

- 3 Your mobile phone will record the pattern. Touch **Continue**.
- 4 When prompted, draw the screen unlock pattern again, and then touch **Confirm**.

To change your unlock screen pattern, touch **Security > Change screen lock**.

Protecting Your Mobile Phone with a Numeric PIN

You can set up a numeric PIN to lock your phone.

- 1 On the **Settings** screen, touch **Security > Set up screen lock > PIN**.
- 2 Enter at least four characters.
- 3 Touch **Continue**.
- 4 Enter the same characters again and touch **OK**.

To change your PIN, touch **Security > Change screen lock > PIN**.

Managing Applications

Viewing an Installed Application

- 1 On the **Settings** screen, touch **Applications > Manage applications**.
- 2 In the applications list, do either of the following:
 - > Touch , and then touch **Sort by size**. Then touch an application to view its details.
 - > Touch an application directly to view its details.

Uninstalling an Application



You cannot uninstall the applications that are pre-installed on the system.

- 1 On the **Settings** screen, touch **Applications > Manage applications**.
- 2 Touch an application, and then touch **Uninstall**.

Moving an Application to the microSD Card

Some applications are designed to be stored on your phone's USB storage or microSD card (depending on the model of your phone), rather than in its internal storage. Others are designed so you can change where they are stored. You may find it helpful to move large applications off your internal storage, to make more room for other applications that do not offer the option.

- 1 On the **Settings** screen, touch **Applications > Manage applications**.

- 2 Touch an application in the list. Then touch **Move to SD card** to move the bulk of the application from the phone's internal storage.

The **Storage** section of the application's details screen shows details about the memory used by the application. If the application can be moved, the **Move to SD card** button is active.

Touch **Move to phone** to move the application back to the phone's internal storage.

Ways to Free Up Your Mobile Phone Memory

- > Move files and email attachments to the microSD card.
- > In **Browser**, clear all temporary Internet files and Browser history information.
- > Move applications to the microSD card.
- > Uninstall any downloaded programs that you no longer use.
- > Reset your mobile phone.

Resetting Your Mobile Phone

Restoring Factory Data

If you reset your phone to its factory settings, all of your personal data stored on the phone, including information about your Google account, any other accounts that you have configured, your system and application settings, and any applications you have installed will be erased. Resetting the phone does not erase any system updates you have downloaded. Using the check box provided, you can also select to erase all the data stored on your SD

card or on the phone's internal SD card, which includes files that you have downloaded or copied there, such as music or photos.

- 1** On the **Settings** screen, touch **Privacy > Factory data reset**.
- 2** When prompted, touch **Reset phone**, and then touch **Erase everything**. The mobile phone resets the settings to the original factory settings, and then restarts.

System Updates

Your mobile phone has pre-installed the online update function. When there is new software available, the version information appears and prompts you to update. You can also touch **Settings > About phone > Online upgrade** to check whether the new software is available.

When updating:

- 1** Back up your data before upgrading, because after the upgrade there is the risk of losing data.
- 2** Make sure that your microSD card has sufficient space to store the new software version.
- 3** Perform the online update following the onscreen instructions.

14 Appendix

FAQs

More FAQs are available at the following website:
<http://www.huaweidevice.com/worldwide/faq.do?method=index>

How Can I Use a microSD Card to Import Contacts to My Phone from a Different Mobile Phone?

Your mobile phone only supports contact files in the **.vcf** format.

- 1) Save the contacts you want to import to your mobile phone to a microSD card as a **.vcf** file.
- 2) Insert the microSD card into your mobile phone and find the **.vcf** file using **ES File Explorer**.
- 3) Touch the **.vcf** file. The phone displays a message asking whether you want to import the contacts.
- 4) Touch **Yes** to import the contacts.



Compatibility problems may occur with **.vcf** files created by different mobile phones and certain contact information may be lost after contacts are imported.

How Do I Set a Song As a Phone Ringtone?

In **Music**, touch and hold the song to be set as a ringtone, and then touch **Use as phone ringtone**.

How Do I Prevent Automatic Change of Screen Orientation When Rotating My Phone?

On the home screen, touch  > **Settings** > **Display** > **Auto-rotate screen** to disable the function.

How Do I Set an Unlock Pattern?

On the home screen, touch  > **Settings** > **Security** > **Set up screen lock** > **Pattern**.

How Can I Change the Input Method?

Touch and hold the area where you write text and then select the input method you prefer.

How Do I Stop the Song Playing in the Background?

Touch the notification bar, flick downwards to open the notifications panel, touch the music playing notification to go to the music playing screen, and then stop playing the song.

How Do I Return to the Call Screen?

While in a call, if you're on another screen, you can touch the notification bar, and flick downwards to open the notifications panel. Then touch the current call notification to return to the call screen.

How Do I Create an Application Shortcut on the Home Screen?

Touch and hold an application icon on the application screen until the home screen is displayed. Then drag the icon to where you want to place it and release your finger.

How Do I Hide the Keyboard?

Touch  to hide the keyboard.

How Do I Forward a Message?

In the SMS conversation interface, touch and hold a message, and then touch **Forward** in the menu that opens.

All pictures and illustrations in this guide, including but not Switch between photo and video modes limited to the phone color, size, and display content, are for reference only. The actual product may vary. Nothing in this guide constitutes a warranty of any kind, express or implied.