

Hughes 9202

User Guide

Revision 0.2
15 July 2011

Copyright © 2011 Hughes Network Systems, LLC

All rights reserved. This publication and its contents are proprietary to Hughes Network Systems, LLC. No part of this publication may be reproduced in any form or by any means without the written permission of Hughes Network Systems, LLC, 11717 Exploration Lane, Germantown, Maryland 20876.

Hughes Network Systems, LLC has made every effort to ensure the correctness and completeness of the material in this document. Hughes Network Systems, LLC shall not be liable for errors contained herein. The information in this document is subject to change without notice. Hughes Network Systems, LLC makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Trademarks

Hughes and Hughes Network Systems are trademarks of Hughes Network Systems, LLC. All other trademarks are the property of their respective owners.

Contents

Understanding safety alert messages	v
Messages concerning personal injury	v
Messages concerning property damage	v
Safety symbols	vi
Introduction.....	1
Overview	1
About this User Guide	2
Package Contents	2
Minimum System Requirements for Laptop/PC.....	3
Getting Started	3
Terminal LCD Display	3
Using the Hughes 9202.....	5
Terminal Status Page	5
Connecting the terminal to the computer	6
Connecting by Ethernet.....	6
Connecting by WLAN	6
WEP Security	7
Connecting by ISDN.....	8
Connecting by RJ-11.....	8
Coverage Map.....	9
Using the Hughes UT web UI.....	11
Accessing the UT web UI.....	11
Home page	12
Data.....	14
Manage Connections.....	15
Automatic Context Activation (ACA)	16
Manage APNs	21
SMS	24
Settings page	26
General Setup.....	26
IP Address/DHCP Settings	28
Wireless LAN	29
Wireless LAN Security	30
Telephony	32
Security	33
Usage Page.....	35

Support Page	36
Troubleshooting	39
Technology Overview	42
GPS	42
Obtaining a GPS Fix	42
GPS and BGAN Registration.....	43
ISDN	43
Dialing and Numbering.....	43
PDP Context.....	43
Technical Specifications	45
Declaration of Conformity	46
FCC Compliance.....	47
EU RoHS (Restriction of Hazardous Substances) Directive	47
EU WEEE (Waste Electrical and Electronic Equipment) Directives	47
Glossary	49

Understanding safety alert messages

Safety alert messages call attention to potential safety hazards and tell you how to avoid them. These messages are identified by the signal words DANGER, WARNING, CAUTION, or NOTICE, as illustrated below. To avoid possible property damage, personal injury or in some cases possible death, read and comply with all safety alert messages.

Messages concerning personal injury

The signal words DANGER, WARNING, and CAUTION indicate hazards that could result in personal injury or in some cases death, as explained below. Each of these signal words indicates the severity of the potential hazard.



DANGER indicates a potentially hazardous situation which, if not avoided, will result in death or serious injury



WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.




CAUTION indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

Messages concerning property damage



NOTICE is used for messages concerning possible property damage, product damage or malfunction, data loss, or other unwanted results—but *not* personal injury.

Safety symbols

The generic safety alert symbol  calls attention to a potential personal injury hazard. It appears next to the DANGER, WARNING, and CAUTION signal words as part of the signal word label. Other symbols may appear next to DANGER, WARNING, or CAUTION to indicate a specific type of hazard (for example, fire or electric shock). If other hazard symbols are used in this document they are identified in this section.

Additional symbols



Warning Potential Radio Frequency (RF) hazard. Where you see this alert symbol and WARNING heading, strictly follow the warning instructions to avoid injury to eyes or other personal injury.



Warning Where you see this alert symbol and WARNING heading, strictly follow the warning instructions to avoid personal injury.



Danger Electric shock hazard: Where you see this alert symbol and DANGER heading, strictly follow the warning instructions to avoid electric shock injury or death.

Warnings for Satellite Terminal



Do not stand in front of the Antenna This device emits radio frequency energy. To avoid injury, do not place head or other body parts in front of the satellite antenna when system is operational. Maintain a distance of one meter or more from the front of the Satellite Terminal antenna.



General Handle your Satellite Terminal with care. The unit is weather resistant per IEC 60529 IP54; however, do not submerge the unit. Avoid exposing your Satellite Terminal to extreme hot or cold temperatures outside the range -25°C to +55°C.

Avoid placing the Terminal close to cigarettes,

open flames or any source of heat.

Changes or modifications to the Terminal not expressly approved by Hughes Network Systems could void your authority to operate this equipment.

Only use a soft damp cloth to clean the Terminal.

To avoid impaired Terminal performance, please ensure the unit's antenna is not damaged or covered with foreign material like paint or labeling.

When inserting the SIM, do not bend it or damage the contacts in any way. When connecting the interface cables, do not use excessive force.



In the vicinity of blasting work and in explosive environments Never use the Satellite Terminal where blasting work is in progress. Observe all restrictions and follow any regulations or rules. Areas with a potentially explosive environment are often, but not always, clearly marked. Do not use the Terminal while at a petrol filling station. Do not use near fuel or chemicals.



Qualified Service Do not attempt to disassemble your Satellite Terminal. The unit does not contain consumer-serviceable components. Only qualified service personnel may install or repair equipment.



Accessories Use Hughes approved accessories only. Use of non-approved accessories may result in loss of performance, damage to the Satellite Terminal, fire, electric shock or injury.



Battery Use only battery approved by Hughes. Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.



Connecting Devices Never connect incompatible devices to the Satellite Terminal. When connecting the Satellite Terminal to any other device, read the device's User Manual for detailed safety instructions.



Pacemakers The various brands and models of cardiac pacemakers available exhibit a wide range of immunity levels to radio signals. Therefore, people who wear a cardiac pacemaker and who want to use a Satellite Terminal should seek the advice of their cardiologist. If, as a pacemaker user, you are still concerned about interaction with the Satellite Terminal, we suggest you follow these guidelines:

- Maintain a distance of one meter from the main antenna front and sides and your pacemaker;
- Refer to your pacemaker product literature for information on your particular device.

If you have any reason to suspect that interference is taking place, turn off your Satellite Terminal immediately.



Hearing Aids Most new models of hearing aids are immune to radio frequency interference from Satellite Terminals that are more than 2 meters away. Many types of older hearing aids may be susceptible to interference, making it very difficult to use them near a Terminal. Should interference be experienced, maintain additional separation between you and the Satellite Terminal.



Electrical Storms Operation of the Satellite Terminal during electrical storms may result in severe personal injury or death. Ensure the Below Deck Equipment is properly grounded to the vehicle chassis.

Introduction

Overview

The Hughes 9202 Land Portable Terminal is the latest Hughes BGAN product that provides reliable satellite connectivity over the Inmarsat BGAN satellite network in a very small and portable package. It allows the user to send and receive IP packets via Ethernet and WLAN interfaces. In parallel with the packet data services, the Hughes 9202 supports circuit switched voice and fax calls via standard POTS and ISDN interfaces.

The Hughes 9202 offers you the following features and benefits:

- Small, compact IP terminal with the following interfaces:
 - Wi-Fi access point built-in
 - 1X RJ-45 Ethernet port
 - 1X RJ-45 ISDN port for voice, 3.1KHz audio and UDI/RDI data (64Kbps)
 - POTS RJ-14 port for voice and fax
- Multi-user capability for sharing a single unit
- Selectable Quality-of-Service (QoS) up to 128Kbps streaming
- Full IP compatibility for Email, file transfer (FTP), browsing, VPN, etc.
- Cost-effective “always-on” access – charges only for data sent and received
- UMTS IP-based services
- FCC and CE certified
- Subscriber Identification Module (SIM) card security

In this document, the following names and abbreviations are used to identify the Satellite Terminal and your computer.

Term	Definition
Terminal	Satellite Terminal
TE	Terminal Equipment (your computer)
UT	User Terminal/satellite terminal

About this User Guide

This user guide contains the most up-to-date information available on this product, on the date it was generated. It is focused on the specific information needed to operate the Hughes 9202 Land Portable Terminal.

Please refer to the Hughes 9201 User Guide for general information on how to access the BGAN network and how to use the Inmarsat LaunchPad Software. The 9201 User Guide can be downloaded from the Hughes website at www.bgan.hughes.com.

Package Contents

When you unpack the Hughes 9202 Land Portable Terminal Kit package, you will find the following:

- Hughes 9202 terminal assembly
- AC/DC power adapter
- Ethernet cable
- Lithium Ion battery

Your Service Provider will supply you with a Subscriber Identification Module (SIM) and its PIN, and Satellite Terminal configuration instructions – you will need these to access the network. Note: The SIM card may also have four (4) MSISDN numbers associated with it for various ISDN services:

- 4K Voice
- 3.1KHz Audio/Fax
- 64K UDI data
- 56K RDI data

Minimum System Requirements for Laptop/PC

These are the minimum computer system requirements for successful interface with the Satellite Terminal:

- Internet Browser: Microsoft Internet Explorer, Mozilla or Safari.
- PC Support for at least one of these interfaces: Ethernet, WLAN (802.11b or b/g), or ISDN.
- 100 MB of free hard disk space if using LaunchPad.


Getting Started

This guide is the simplest and quickest way to connect to the BGAN network. If you are a first time user, you will be guided through the procedure for powering up your terminal, obtaining a GPS fix, connecting your computer to the terminal and registering with the BGAN network. You are then ready to start using voice and broadband services.

Terminal LCD Display

The 9202 terminal has an LCD display and provides four buttons for the user. Each button has two primary functions, one invoked with a short press and the other invoked with a long press. The top icon associated with a button is the long press function. The bottom icon associated with a button is the short press icon. These are tabulated as follows:

Button Name	Short Press	Long Press
Scroll	Scrolls through a menu	Turns WiFi on/off
Back	Up one level in menu	Cancel menu
Accept	Enters menu and confirms selection	Power on/off
User	Selects the user to display	Audio on/off

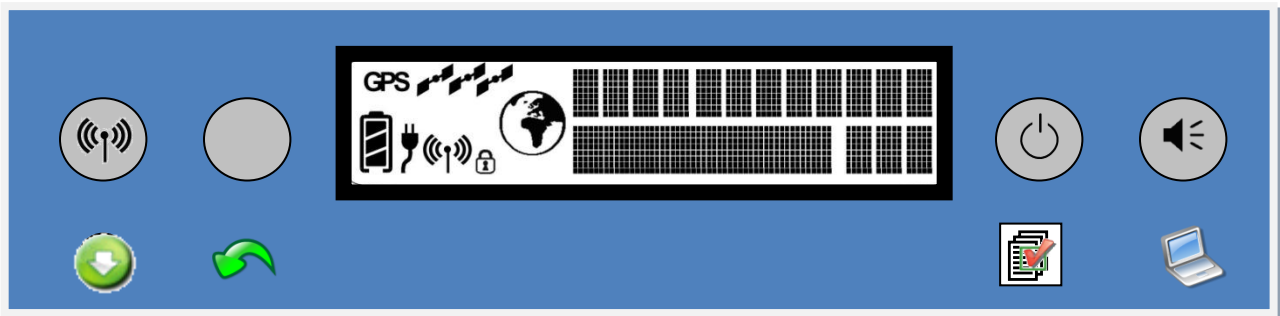

Short Press	UT State	Result
Scroll button	On, menu item	Scroll to next option of displayed menu item
Back button	On, menu item	Goes up one level in menu
Accept button	On, pointing	Exit pointing, start normal operation
	On, status display	Enter menu
	On, menu item	Confirm selected menu item
User button	On	Select the next user terminal equipment connected to the UT (.101, .102, ...)
Long Press	UT State	Result
Scroll button	On, status display	Toggle WiFi on/off (save state in NVRAM)
Back button	On, menu item	Cancel menu action, return to status display
Accept button	Off	Turn on, LCD lamp test confirms button action
	On	Turn off, UT ignores additional power button input until power down sequence is complete
User button	On	Toggle audio pointing tone on/off
Special Action	UT State	Result
Accept and User buttons, simultaneous long press	Off	Go to minimum boot mode
Accept button, extra long press	On	Hardware enforced power down

Note that a “short press” shall be defined as any debounced keystroke less than two seconds in duration. A “long press” shall be defined as any debounced keystroke that is two seconds in duration or greater. A long press shall not end until the button is released (i.e., an extended long press shall not be interpreted as multiple keystrokes).

An “extra long press” shall be defined as a long press that continues for more than five seconds. Long press actions are selected to avoid accidental invocation (power on/off, connect/disconnect). Extra long press actions are selection to ensure intentional action by the user (hardware enforced power down).

Using the Hughes 9202

Terminal Status Page

Since the Hughes 9202 terminal is a portable device, you must first obtain a GPS fix and point the terminal to the satellite before setting up a data connection with the network.

- The Terminal Status page gives you all the information you need to point and register with the network. Once you have a GPS fix and are pointed to the satellite as best you can, click on the Register with the Network button to start the registration process.
- Once you are registered and CS and PS Attached, you can then select the Quality of Service (QoS) for your data connection by choosing either the Standard or Streaming connection

HUGHES 9202 Terminal Status

Home Data SMS Settings Usage Support

STATUS

Connection

Registering...
PS Not Attached
CS Not Attached

Signal Quality: 0

GPS

Acquiring

Location: Waiting
Last Fix: 00/00/00, 00:00

BGAN Terminal

WLAN Disabled

Antenna Unit

Elevation 0°
0.000 MHz

Connecting...

The terminal is currently connecting to the BGAN network. Please wait...

Signal Quality: 0 dB

Visible Satellites

Satellite Name	Compass Direction	Antenna Angle
I-4 EMEA	89.9°	60.7°

Connecting the terminal to the computer

You can connect your computer to the 9202 with one or more of the following interfaces

- Ethernet
- WLAN
- Integrated Services Digital Network (ISDN)

NOTICE

There is no need to check the active interface. All interfaces can be used simultaneously to accommodate multiple users.

NOTICE

- During initial setup, the terminal can only be configured using an Ethernet connection. Once the terminal has been configured, all interfaces (Ethernet, WLAN and ISDN) can be used for data transfer depending on the service required. Your computer must be configured to support your chosen connection method. Refer to the documentation supplied with your computer for details.

Connecting by Ethernet

To connect the BGAN terminal to a device using Ethernet:

- Connect an Ethernet cable to your device's Ethernet port, and insert the other end of the connector into the Ethernet port on the 9202..

Connecting by WLAN

If you have not previously used the 9202's WLAN interface, it has to be enabled from the internal web UI, Integrated MMI or LaunchPad with your computer connected to the 9202 using the Ethernet interface.

- **WLAN Power:** The default is off, which disables the WLAN feature.
- **SSID (network name):** The default is BGAN, but you can change it to whatever you want.
- **Channel Number:** This controls the radio channel number (1 through 11) used by the access point. To meet FCC regulations, channels 12 to 14 are not supported.

As you are configuring the WLAN, you can enable the Wireless Encryption Protocol (WEP), MAC address filtering and no broadcast SSID features for added security.

Once the WLAN is “Enabled” and configured, any device with a WLAN interface can detect the 9202’s WLAN SSID, and connect to it automatically.

WEP Security

- **WEP Protection Status:** Check the box to “Enable” the WEP for added security. Encryption Level: 64 or 128 bit WEP encryption can be enabled.
- **WEP Key:** You can define the WEP key or use the default WEP key, which is formulated using the IMEI number of the terminal (e.g. IMEI number +0123456789).
- **Hexadecimal 128-bit:** Requires 26 characters.
Recommended
- **Hexadecimal 64-bit:** Requires 10 characters

NOTICE

- **SSID Broadcast:** For added security you can choose not to broadcast your SSID.
- **MAC Filtering:** For added security, check the box to “Enable” MAC Filtering. You can define up to 10 MAC addresses that are allowed to connect to your WLAN.

NOTICE

To determine the MAC address of a PC, go to a DoS prompt and type ipconfig/all. For Mac OS X, under the Apple Menu go to System Preferences -> Network and Show Airport. The Airport Id is the MAC address. Alternatively, go to About this Mac -> More Info -> network, and select Airport.

NOTICE

When WLAN is enabled, unauthorized users may be able to access your BGAN service. If WEP is enabled, you must provide other WLAN users with the WEP key in order for them to connect to the terminal. You can go to the Manage Connections page to see what computers are actually using the BGAN service.

Connecting by ISDN

Connect an ISDN cable to your computer's or phone's ISDN port, and insert the other end of the connector into the Terminal's ISDN port.

To dial, prefix the international number with 00 and terminate with #. For example, to dial a number in the USA, enter: 0018005551234# (00 + Country code + phone number #). For the UK dial 00011442077281000#.

To receive incoming calls you must configure your ISDN device with the MSN (Multiple Subscriber Number) of the service it supports. See the ISDN section for information on configuration of MSNs. To configure the MSN in your ISDN device, refer to the user guide of your ISDN device.

Connecting by RJ-11

You can connect an analog phone or fax machine to the RJ-11 ports:

- The FAX port is configured for 3.1k service for fax
- The TEL port is configured for speech service for voice calls


To dial, prefix the international number with 00 and terminate with #. For example, to dial a number in the USA, enter: 0018005551234# (00 + Country code + phone number #)

Operational note: *RJ-11 and ISDN handsets cannot be connected at the same time. The 9202 will configure itself to ISDN or RJ-11 mode depending on which type of handset is plugged in first, and will be in this mode thereafter.*

To switch modes, the 9202 must be rebooted with only the desired handset connected. If both types of handsets are connected at power-on, the 9202 will default to ISDN mode and RJ-11 will not be operational.

Coverage Map

The Inmarsat BGAN service is operated with 3 satellites as shown below. The Hughes 9202 terminal will perform best in areas where the elevation angle is 20 degrees or higher but can operate down to 5 degrees.

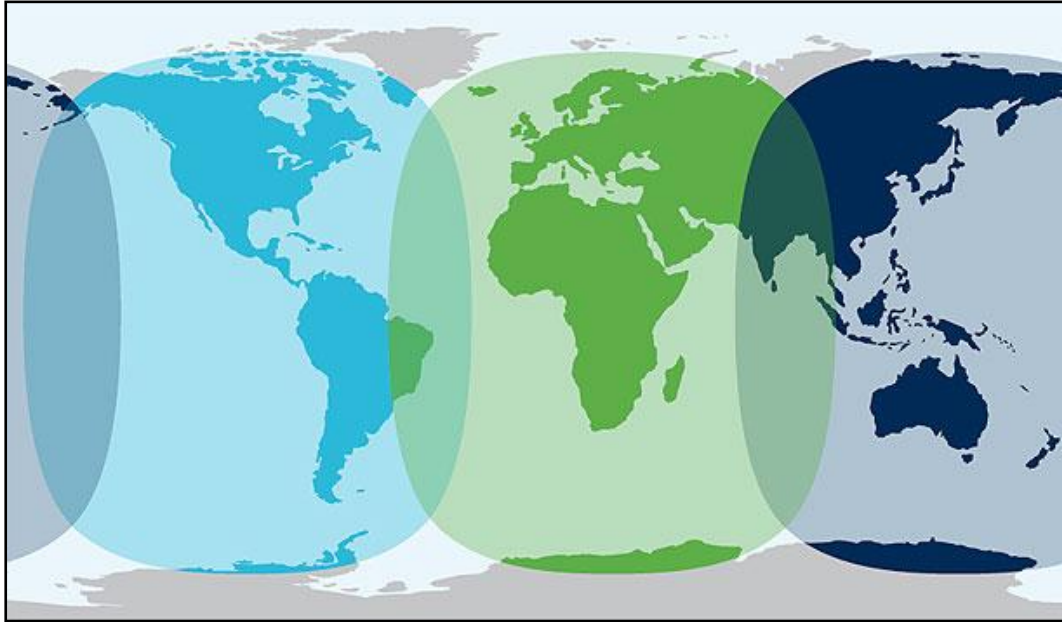

Using the Hughes UT web UI

Accessing the UT web UI

The Hughes UT includes its own internal Web User Interface (UI). To access the web UI, open your favorite Web Browser and type in the internal IP address of the UT e.g.

http://192.168.128.100. The web UI opens up to the “Home” or “Terminal Status” page as shown below:

HUGHES Home Data SMS Settings Usage Support

9202 Terminal Status

STATUS

Connection

Registering...
PS Not Attached
CS Not Attached

Signal Quality: 0

GPS

Acquiring

Location: Waiting
Last Fix: 00/00/00, 00:00

BGAN Terminal

WLAN Disabled

Antenna Unit

Elevation 0°
0.000 MHz

Connecting...

The terminal is currently connecting to the BGAN network. Please wait...

Signal Quality: 0 dB

Visible Satellites

Satellite Name	Compass Direction	Antenna Angle
I-4 EMEA	89.9°	60.7°

Home page

The Home page shows the current terminal status and allows you to setup your initial data connection.

On the left side of the page is the Status bar. These items are updated automatically when the status of any of these items change.

1. **Connection:** This field indicates whether you are Registered with the Network. It also shows the PS and CS status, beam type and receive signal quality.
 - a. **PS Attach Status:** This field indicates whether you are PS (Packet Switch) attached with the Network. You will still need to setup a PDP context in order to send PS data.
 - b. **CS Attach Status:** This indicates whether you are CS (Circuit Switch) attached with the Network. Once you are CS Attached and Registered with the network, you are able to make CS calls.
2. **GPS:** This field displays the current GPS position status. If you have received a GPS fix and the Network GPS policy has been received and it allows the GPS position to be shown to the user, it will display the Latitude, Longitude, Fix Quality, and the Last time the GPS position was updated. Time displayed is UTC time.
3. **BGAN terminal:** This field indicates the WLAN status.
4. **Antenna Unit:** This field indicates the detailed state of the tracking antenna
 - a. The state field indicates the tracking state of the antenna
 - b. Elevation: the current elevation look angle of the antenna
 - c. The frequency of the global beam in MHz that the antenna is attempting to track is displayed. If the unit is experiencing problems, use the table below to verify the antenna is searching for the correct satellite for your location

The frequency is the frequency of the global beam. Possible values are the primary and secondary frequencies of the three satellites.

Satellite ID Satellite Primary	Satellite Longitude	Primary Freq MHZ	Alternate MHz
I4-F1 Asia Pacific	143.5 E	1537.485	1540.825
I4-F2 Europe, Middle East & Africa	25.0 E	1537.920	1541.115
I4- Americas	98.0 W	1537.070	1540.730

In the middle of the page you will find the following items:

Current Connection field allows you to activate data connections for your TE. You can activate a Standard connection or a Streaming connection. For streaming connections use the drop down box to select the data rate for the stream.

Connect using APN field allows you to control the APN used for the connection.

Detail shows the status of the connection for this TE.

Visible Satellites shows the satellites visible for your current location and the pointing information.

NOTICE

Reference the screenshot below. The antenna angle under **Visible Satellites** section (46.5°) may not be exactly the same as seen under the **Antenna Unit** section showing Elevation (35°). This is due to the wide beam width of the antenna

The following figure shows how the UI looks if you activate a Standard connection. Use the **Disconnect** button to deactivate your connection.

Data

The Data icon has three main configuration areas to select from: Manage Contexts, Automatic Context Activation (ACA), and Manage APN. The following section will review each of these pages.

The screenshot shows the Hughes 9 terminal status page. The top navigation bar includes icons for Home, Data, SMS, Settings, Usage, and Support. The 'Data' icon is highlighted with a green box, and a dropdown menu is open, showing three options: 'Manage Contexts', 'Automatic Contexts', and 'Manage APNs', each also highlighted with a green box. The main content area is titled 'Connecting...' and displays 'The terminal is currently connecting. Please wait...'. Below this, a 'Signal Quality' section shows a progress bar at 0 dB. A 'Visible Satellites' table is also present, listing one satellite: I-4 EMEA, with a compass direction of 89.9° and an antenna angle of 60.7°.

Satellite Name	Compass Direction	Antenna Angle
I-4 EMEA	89.9°	60.7°

Manage Connections

HUGHES Home Data SMS Settings Usage Support

9202 Manage Connections

STATUS

Connection

Registering...
PS Not Attached
CS Not Attached

Signal Quality: 0

GPS

Acquiring

Location: Waiting
Last Fix: 00/00/00, 00:00

BGAN Terminal

WLAN Disabled

Antenna Unit

Elevation 0°
0.000 MHz

Close an Active Connection

Owner	Service	API	Global IP
-------	---------	-----	-----------

Close Selected Connection

Open a New Connection

Owner	Service	API
192.168.128.101	Standard	bgan.inmarsat.com

Open Selected Connection

Manage Connections page under the Data tab allows the user to setup and configure PDP contexts (data connection) for any TE that is connected to the UT. It also shows you all current Active Connections.

Open a New Connection - To open a new connection, enter the required data in the lower box.

Owner – Your current IP address is shown by default (.101), but you can change it to control connections for any other device connected to the terminal. The page automatically displays entries for all **detected** devices and these entries can be selected to activate connections for those devices.

Service - Select the service that you want by clicking on the down arrow. The drop down list shows all of the different QoS types: standard, streaming 32K, streaming 64K, and streaming 128K. Select the appropriate service required.

APN - The APN is read from the SIM card, but if you have other APN's defined (go to Manage APN page), you can use the down arrow to select a different APN. Once everything is defined

correctly, click on the “*Open Selected Connection*” button. The new context will appear in the All Active Connections field above.

Close a Connection - In the upper field, all active connections are shown and you can select and close any of these connections unless an Administration Password has been enabled. See **Security** Section for more information about the administration password.

Close an Active Connection			
Owner	Service	APN	Global IP
192.168.128.211	Standard	bgan.inmarsat.com	161.30.23.78
Close Selected Connection			

Username (UN)/Password (PW): Some Service Providers require a username and password to be used when setting up a connection. This is often required when using Static Global IP addresses assigned by the Service provider. These fields can be entered when defining a new APN or when you select a different APN.

Automatic Context Activation (ACA)

This web page allows you to use Automatic Context Activation (ACA) in **two** different ways;

- One way is to use a static IP addresses in the TE device so you can establish an automatic PDP context with any QoS that is offered by the network (upper half of the web page).
- The second way is to use DHCP IP addresses from the UT so you can establish an automatic standard PDP context for any TE that connects via DHCP to the UT (lower part of the web page).
- You can also choose whether the context should be activated as soon as the UT detects the device, or if the context should only be activated when the TE attempts to send data to the satellite link. For the “data activated” option, choose “DA” from the drop down list rather than just On in either static or DHCP sections.

NOTICE

With DA, if the context is ever deactivated, it will be reactivated when more data is sent.

Static IP Automatic Contexts: You can configure your own range of static IP addresses and QoS's to use with a static automatic context.

To turn on a particular range of static addresses, select "On" from the drop down list and choose a range of addresses, low and high to use (e.g. 192.168.128.200 to 192.168.128.202) or you can leave the defaults (192.168.128.200 to 192.168.128.209).

Next select the desired QoS for that range of IP addresses (e.g. *Standard*). The APN listed is the default APN read from the SIM card (bgan.inmarsat.com). If your SIM is provisioned for more than one APN, then you can select a secondary APN from the drop down list.

9202

Automatic Contexts

STATUS

Connection

Registering...
PS Not Attached
CS Not Attached

Signal Quality:

GPS

Acquiring

Location: Waiting
Last Fix: 00/00/00, 00:00

BGAN Terminal

WLAN Disabled

Antenna Unit



Elevation 0°
0.000 MHz

This feature automatically connects Devices based upon their IP Addresses. Static IP Address Ranges cannot intersect with the DHCP Address Range.

Static IP Automatic Contexts

ACA	Enabled	IP Range (192.168.128.x)	Service	APII
1	Off	200 to 209	Standard	bgan.inmarsat.com
2	Off	210 to 219	Standard	bgan.inmarsat.com
3	Off	220 to 229	Standard	bgan.inmarsat.com
4	Off	230 to 239	Standard	bgan.inmarsat.com
5	Off	240 to 249	Standard	bgan.inmarsat.com
6	Off	250 to 254	Standard	bgan.inmarsat.com

ACA	Enabled	IP Range (192.168.128.x)	Service	APII
1	Off	<input type="text"/> to <input type="text"/>	Standard	bgan.inmarsat.com

DHCP Automatic Contexts

	DHCP Address Range (192.168.128.x)	Service	APII
Off	101 to 199	Standard	bgan.inmarsat.com

If you want to setup additional ranges of addresses, please follow the same instructions as above.

NOTICE

You cannot overlap the IP address ranges. If you do, an error will pop-up telling you that you have an overlap region. Check all of the ranges for overlaps and try again.

When you are finished, click on “Apply” and you should see a message saying “Operation Successful”.

DHCP Automatic Contexts: This option allows you to set up the UT for dynamic *standard* ACA. This means that any device connected to the UT via *DHCP*, whether wired or wirelessly will automatically receive a standard context.

To activate this feature, select “On” from the drop down list under DHCP Automatic Context section, select the DHCP range of addresses to use if you don’t want to use the default (.101 - .199), select the APN that you want to use and click on “Apply”.

HUGHES 9202 Automatic Contexts

This feature automatically connects Devices based upon their IP Addresses. Static IP Address Ranges cannot intersect with the DHCP Address Range.

Static IP Automatic Contexts

ACA	Enabled	IP Range (192.168.128.x)	Service	APN
1	Off	200 to 209	Standard	bgan.inmarsat.com
2	Off	210 to 219	Standard	bgan.inmarsat.com
3	Off	220 to 229	Standard	bgan.inmarsat.com
4	Off	230 to 239	Standard	bgan.inmarsat.com
5	Off	240 to 249	Standard	bgan.inmarsat.com
6	Off	250 to 254	Standard	bgan.inmarsat.com

Update Static Settings

DHCP Automatic Contexts

Enabled	DHCP Address Range (192.168.128.x)	Service	APN
Off	101 to 199	Standard	bgan.inmarsat.com

Update DHCP Settings

STATUS
Connection
 Registering...
 PS Not Attached
 CS Not Attached
 Signal Quality: 0

GPS
 Acquiring
 Location: Waiting
 Last Fix: 00/00/00, 00:00

BGAN Terminal
 WLAN Disabled

Antenna Unit
 Elevation 0°
 0.000 MHz

To see if the context has been setup properly, click on the “Data tab>Manage Connections Page and this will show you all contexts that have been setup (active or inactive). See screen shot below.

Close an Active Connection			
Owner	Service	APN	Global IP
192.168.128.211	Standard	bgan.inmarsat.com	161.30.23.78

Manage APNs

Some SIM cards are provisioned with multiple APNs, so you can use this page to pre-configure those additional APNs if needed. Once the APN is defined, you can select it from the drop down list without having to put in the username and password every time.

The screenshot shows the Hughes 9202 web interface for managing APNs. At the top, there is a navigation bar with the Hughes logo and icons for Home, Data, SMS, Settings, Usage, and Support. Below the navigation bar, the page title "Manage APNs" is displayed. On the left side, there is a "STATUS" panel with sections for Connection, GPS, BGAN Terminal, and Antenna Unit. The Connection section shows "Registering...", "PS Not Attached", and "CS Not Attached", along with a "Signal Quality" indicator at 0. The GPS section shows "Acquiring", "Location: Waiting", and "Last Fix: 00/00/00, 00:00". The BGAN Terminal section shows "WLAN Disabled". The Antenna Unit section shows "Elevation 0°" and "0.000 MHz".

The main content area is titled "Manage APNs" and contains the following text: "Enter the information supplied by your service provider to access the BGAN Network. Your APN data will be saved so the terminal can be easily configured."

Below this text is a "Defined APNs" section with a table listing defined APNs. The table has one entry: "bgan.inmarsat.com". A "Remove APN" button is located below the table.

To the right of the "Defined APNs" section is an "Add an APN" form. The form has the following fields: "Access Point Name" (text input), "User Name" (text input), and "Password" (text input). There is a checkbox labeled "Save User Name / Password". At the bottom of the form are two buttons: "Add New APN" and "Save Changes".

Add an APN – Use this field to add an APN that you want to use. Type in the new APN and username and password (if required). If you want to save the username and password so you don't have to re-type it each time, check the Save username and password box and then click on Add. The new APN name will show up in the Defined APNs field. This APN will now be available to use from any APN drop down menu.

Username (UN)/Password (PW): Some Service Providers require a username and password to be used when setting up a connection. This is often required when using Static Global IP addresses assigned by the Service provider.

HUGHES Home Data SMS Settings Usage Support

9202 Manage APNs

STATUS
Connection
Registering...
PS Not Attached
CS Not Attached
Signal Quality: 0

GPS
Acquiring
Location: Waiting
Last Fix: 00/00/00, 00:00

BGAN Terminal
WLAN Disabled

Antenna Unit
Elevation 0°
0.000 MHz

Enter the information supplied by your service provider to access the BGAN Network. Your APN data will be saved so the terminal can be easily configured.

Defined APNs

Defined APNs
APN (User Name)
bgan.inmarsat.com

Remove APN

Add an APN

Access Point Name

User Name

Password

Save User Name / Password

Add New APN Save Changes

You can also edit a defined APN if needed. Click on the APN in the Defined APNs section and click on EDIT. Make the required changes and click Add.

9202

Manage APNs

STATUS

Connection

Registering...
PS Not Attached
CS Not Attached


Signal Quality:

GPS


Acquiring

Location: Waiting
Last Fix: 00/00/00, 00:00

BGAN Terminal

 WLAN Disabled

Antenna Unit

 Elevation 0°
0.000 MHz

Enter the information supplied by your service provider to access the BGAN Network. Your APN data will be saved so the terminal can be easily configured.

Defined APNs

Defined APNs

APN (User Name)
bgan.inmarsat.com

Add an APN

Access Point Name

User Name

Password

Save User Name / Password

Screenshot shows the new APN that was added, in the Defined APNs section.

SMS

You can manage SMS text messages from the SMS pages which provide a similar function to LaunchPad. You must have a valid Service Center number configured in order to send messages – see the SMS Settings Page.

Send/Receive – this page allows you to view your Inbox box messages and Compose a new message. If there are more than 10 messages, you can view the older ones by changing the page number. You can also reply to received messages or forward them to another number.

You may need to periodically delete messages to prevent the SIM from filling up which will prevent the receipt of new messages. You can select a single message by checking the box next to the message and press the “Delete Checked” button. To delete multiple messages just select the check box next to each message you want to delete and click the “Delete Checked” button.

After composing a message you can save it to drafts rather than sending it, by pressing the “Save” button.


The **Sent** Messages section allows you to view previously sent messages. Again, you may need to periodically delete messages to prevent the SIM from filling up. You can also compose a new message from this page.

The screenshot displays the 'Sent Messages' interface. At the top, there is a green header bar with the text 'Sent Messages'. Below this, the interface is divided into two main columns. The left column contains a list of messages, each with a 'To' field and a checkbox. The first message is selected, and its details are shown in the right column. The 'Message Text' field contains the text 'This is a reply to the long message.'. Below the message text, there are two buttons: 'Resend' and 'Forward'. Below these buttons, there is a green header bar for the 'Compose Message' section. The 'To' field in the 'Compose Message' section contains the phone number '+870772420193'. The 'Message Text' field contains the text 'This is a reply to the long message.'. At the bottom of the interface, there is a 'Delete Checked' button, a 'Page' dropdown menu set to '1', a 'Send' button, a 'Save' button, and a 'Characters Remaining' field showing '124'.

The **Saved Drafts** page allows you to view previously saved messages. After editing a message you can resave (Save) or send the message (Send). You can also compose a message from this page.

The screenshot displays the 'Saved Drafts' interface. At the top, a green header bar contains the text 'Saved Drafts'. Below this, the interface is split into two main sections. The left section, titled 'To', shows a list of recipients with a single entry: '+870772420193'. The right section, titled 'Message Text', contains a text area with the draft message: 'This is a reply that I will save as a draft.' Below the text area is an 'Edit' button. Underneath the 'Edit' button is a green header bar for the 'Compose Message' section. This section includes a 'To' field with an empty input box and a larger text area for the message body. At the bottom of the interface, there is a footer bar containing a 'Delete Checked' button, a 'Page' dropdown menu set to '1', 'Send' and 'Save' buttons, and a 'Characters Remaining' indicator showing '160'.

On the **SMS Settings** page you can configure the default settings for messages. You must have a valid Service Center number configured in order to send messages. The default Service Center number is +87077200179.

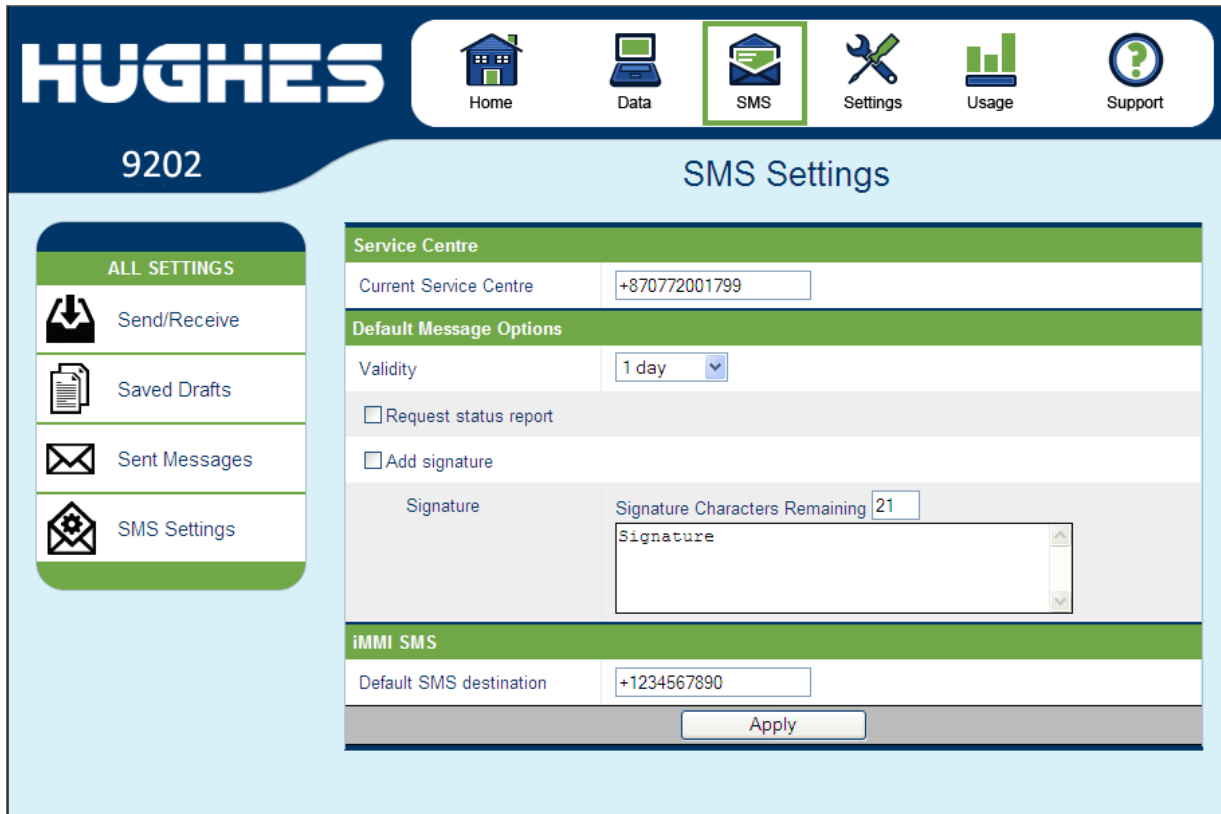

Settings page

General Setup

This page allows the user to configure various parameters of the UT. A description of each item on this page follows:

Terminal Startup – The default configuration for the 9202 terminal has Bypass Antenna pointing and Always power on checked and grayed out due to the tracking antenna.

Connection – The default configuration is always set to Automatic. This parameter is used within a satellite overlap region and allows the user to override the default satellite (selected by the 9202 terminal based upon elevation angle/GPS location) and select a different satellite.

NOTICE

This change does not take effect until the UT is reset. When set to Automatic, the UT will select the satellite based on the unit's GPS position. When set to a specific satellite, it will attempt to use that satellite only. Be careful to select the correct satellite for your position.

The screenshot displays the Hughes 9202 web interface for General Setup. At the top, there is a navigation bar with icons for Home, Data, SMS, Settings (highlighted), Usage, and Support. Below this, the page title is '9202 General Setup'. On the left, a sidebar lists 'ALL SETTINGS' with options: General Setup, IP Address / DHCP, Wireless LAN, WLAN Security, Telephony, and Security. The main content area is titled 'General Setup' and contains three sections: 'Terminal Startup' with two checked options, 'Streaming' with an unchecked 'Enable Streaming Inactivity Timer' and a 'Streaming Timeout' of 5 minutes, and 'Emergency Call Numbers' with a text input field containing '000:008:112:110:118:119:911:999' and an 'Apply Changes' button.

Streaming – By enabling this parameter, the user can turn on a timer for inactivity for a streaming QoS that has been set up. The timer is in either seconds or minutes and will tear down a streaming context after **X** seconds or minutes of inactivity.

Emergency Call Numbers: Allows the user to add the emergency call number that is applicable in the part of the world where the terminal is being used, if it is not already defined.

Apply Changes Button: This button is self-explanatory.

IP Address/DHCP Settings

Terminal Local IP Address: This page allows the user to change the local IP address of the terminal from the default 192.168.128.100 IP address. All four octets are available to change. Once the local IP address is changed on this page and applied, the IP address ranges for the DHCP server, the Manage Context page and ACA page will also be changed automatically.

NOTICE

The screenshot shows the Hughes 9202 web interface for IP Address / DHCP Settings. The interface includes a navigation bar with the Hughes logo and '9202' on the left, and icons for Home, Data, SMS, Settings (highlighted), Usage, and Support on the right. The main content area is titled 'IP Address / DHCP Settings' and contains several sections:

- Terminal Local IP Address:** A section with a green header. Below it, the 'Terminal Local IP Address' is displayed as four input fields containing the values 192, 168, 128, and 100.
- DHCP Server:** A section with a green header. It contains a checked checkbox for 'Enable DHCP Server'. Below this, the 'DHCP Address Range' is set to 192.168.128.101 to 199. The 'Lease Time when Idle' is set to 1 minute, and the 'Lease Time when Connected' is set to 5 minutes.
- Network Operating Mode:** A section with a green header. It contains a dropdown menu for 'Netmode' set to NAT mode.

An 'Apply Changes' button is located at the bottom of the settings area.

Updates to this field will **not** take effect until the UT is **rebooted**.

DHCP Server: allows the DHCP server in the UT to be turned on or off by checking the Enable box.

DHCP Address Range: This allows the user to set the range of DHCP addresses that are given out by the UT to any connected TE.

Lease Time when idle: Idle-mode DHCP Lease Time refers to the DHCP lease time when the UT is not connected to the network. This parameter allows the user to change the default time (60 seconds) that the DHCP lease to the TE is good for. This parameter was introduced because of a problem with some models of Cisco routers that will not accept a short DHCP lease time.

NOTICE

The longer the Idle-mode DHCP lease time, the longer it will take the Network/UT to update the TE with the correct DNS servers for web browsing after establishing a data context.

Lease Time when connected: The Connected-mode DHCP Lease Time refers to the DHCP lease time when the UT is connected to the network. Most users will have no need to change this parameter.

Wireless LAN

The Wireless LAN settings page allows the user to enable, disable, and configure the Wireless LAN functionality of the terminal.

NOTICE

The Wireless LAN Security is controlled on a separate web page – WLAN Security.

The screenshot displays the Hughes 9202 user interface for Wireless LAN Settings. At the top, there is a navigation bar with the Hughes logo and the number 9202 on the left, and icons for Home, Data, SMS, Settings, Usage, and Support on the right. The main content area is titled "Wireless LAN Settings" and is divided into several sections:

- Enable Wireless LAN:** A green header section containing a checkbox labeled "Enable Wireless LAN Interface" which is checked.
- Network Name Settings:** A green header section containing a text input field for "Network Name (SSID)" with the value "BGAN", and a checkbox labeled "Allow Others to see your wireless Network Name" which is checked.
- Region and Channel:** A green header section containing a dropdown menu for "Network Region" set to "X10-FCC (1-11)" and a dropdown menu for "Network Channel" set to "11".

At the bottom of the settings area, there is an "Apply Changes" button. Below the settings area, a red-bordered box contains the following text:

Security is currently disabled on your wireless network.
Click here to modify the security settings.

If you have not previously used the terminal's WLAN interface, it has to first be enabled from this page using a computer connected to the terminal using an Ethernet connection. Once WLAN is enabled/configured, TEs can connect to the terminal wirelessly.

Fields on this page include:

Enable Wireless LAN Interface: Turns the Wireless LAN interface on/off. The default is off (unchecked).

Network Name (SSID): The default is "BGAN", but you can change it to whatever you want.

NOTICE

You can "hide"/prevent the SSID broadcast on the WLAN Security page

Network Region: There is only one region for all countries.

Network Channel: This controls the radio channel number (1 through 11) used by the access point. To meet FCC regulations, channels 12 to 14 are not supported.

NOTICE

If performance issues occur over the WLAN interface, changing the Channel may help.

Wireless LAN Security

This page allows the user to configure WEP Security for use when the terminal is communicating wirelessly to TEs. Additional security measures that can be used with WEP to make it more secure are: 1) Do not broadcast your SSID and 2) enable MAC address filtering so that only the MAC addresses that you select, can connect to the terminal. A maximum of ten (10) addresses can be filtered.

Check the box if you want your SSID name to be broadcast.

Select from the down arrow, No protection, 64 bit WEP and 128 bit WEP.

Mac Address Filtering

Check the box to "Enable MAC Address Filtering"

If any TE is already connected to the terminal wirelessly, the MAC address of that TE will be detected and show up in the "Add a Detected Device" field.

To add the detected MAC address, click on the address to highlight it and then click Add. It will now show up in the “Allowed MAC Address” field.

Telephony

You can establish ISDN data communication by connecting your ISDN equipment directly to the BGAN Terminal's ISDN port with an ISDN cable (which is the same as the Ethernet cable). The Telephony page allows you to activate 40V power sourcing on the ISDN interface, and configure **Device MSN Settings**.

General ISDN Settings:

Enable ISDN Power Sourcing: To turn on the ISDN power sourcing, click the check box in the upper left-hand corner that says "Enable ISDN Power Sourcing" and then click on "Apply". The ISDN device should receive 40V power immediately via the ISDN cable. This field should be on unless you never use ISDN or are using an ISDN device that has its own power source.

Select the outgoing call type using: This box controls the mechanism used by the terminal to select the bearer type for mobile originated calls. By default, "the Device Bearer capability" is set as the trigger in this drop down list. Most ISDN devices correctly signal the call type (speech, 3.1 KHz audio, UDI, RDI) via the bearer capability.

The screenshot shows the Hughes 9202 web interface. At the top, there's a navigation bar with icons for Home, Data, SMS, Settings (highlighted), Usage, and Support. Below this, the page title is '9202 Telephony Settings'. On the left, there's a sidebar menu under 'ALL SETTINGS' with icons and labels for General Setup, IP Address / DHCP, Wireless LAN, WLAN Security, Telephony, and Security. The main content area is titled 'Telephony Settings' and contains the following configuration options:

- Telephony port:** Disabled
- General ISDN Settings:**
 - Enable ISDN Power Sourcing
 - Select the outgoing Call Type using: the Device Bearer Capability
- Device MSN Settings - Voice / FAX Devices:**

Call Type	Multiple Subscriber Number (MSN)
Standard Voice, 4kbps Quality	1
Premium Voice / FAX (3.1 kHz Audio)	2
- Device MSN Settings - 64 kbps Data Devices:**

Data Type	Multiple Subscriber Number (MSN)
64 kbps Clear Data (UDI)	3
64 kbps Restricted Data (RDI)	3

An 'Apply Changes' button is located at the bottom of the settings area.

There is also an option under the drop down arrow to set the trigger to use the **MSN** rather than the bearer. If there is a problem using the bearer capability setting, this field can be changed to use the MSN number instead.

Device MSN Settings - Voice/FAX Devices

Standard Voice: By default, MSN 1 is used for standard voice (speech). To receive incoming calls, you must program the same MSN into your ISDN handset connected to the ISDN port.

Premium Voice/Fax (3.1 kHz Audio): By default, MSN 2 is used for 3.1 KHz Audio. To receive incoming calls, you must program the same MSN into your ISDN fax machine connected to the ISDN port.

Device MSN Setting - 64 kbps Data Devices

64 kbps Clear Data UDI (Unrestricted Digital Information): By default, MSN 3 is used for UDI calls. UDI is a 64 Kbps service that is a European standard ISDN.

64 kbps Restricted Data RDI (Restricted Digital Information): By default, MSN 3 is used for RDI calls. RDI is a 56 Kbps service found in the USA.

Once all changes have been made, click on “Apply”.

NOTICE

You can use different MSNs for any of the ISDN call types above, but your ISDN equipment must be programmed with the same MSN to accept incoming calls, and you must use different numbers for speech, audio and UDI/RDI calls.

Security

You can configure three separate security settings on this page: 1) SIM PIN, 2) Phone to SIM PIN, and 3) Administration Password.

SIM PIN – this is a four digit field can be Enabled and configured by the user to secure the terminal against unwanted use. Once enabled, the terminal will require the SIM PIN at startup.

Phone to SIM PIN – use up to 5 digits to lock the terminal to that particular SIM. The Phone to SIM PIN will have to be

entered any time the SIM card is changed. This setting is similar to your GSM phone's security code. Default password is 12345.

Administration Password – this configuration allows the user to prevent terminal settings from being changed once the terminal is configured properly. This password will have to be entered before any settings can be changed.

The screenshot displays the Hughes 9202 web interface for configuring Security Passwords. The top navigation bar includes Home, Data, SMS, Settings (highlighted), Usage, and Support. The main content area is titled "Security Passwords" and contains three sections:

- SIM PIN:** A four-digit SIM PIN can be used to secure the installed SIM against unwanted use. The terminal will require the SIM PIN to be entered at startup. Status: **SIM PIN is Disabled**. Button: [Change Settings...](#)
- Phone-to-SIM PIN:** A Phone-to-SIM PIN (up to 8 digits) can be used to lock the terminal to the installed SIM. The terminal will require the Phone-to-SIM PIN before another SIM can be used. Status: **Phone-to-SIM PIN is Disabled**. Button: [Change Settings...](#)
- Administration Password:** An Administration Password can be used to prevent terminal settings from being changed. Status: **Administration Password has not been Created**. Button: [Change Settings...](#)

Usage Page

This web page provides an estimate of the amount of Packet Switched data that was sent and received, along with time spent on streaming connections and CS calls. The data is broken up into two types:

Trip Usage Statistics: The trip counter is similar to the trip counter on your vehicle. It can be zeroed out at anytime by the user and it will track the statistics until the user resets it.

Lifetime Usage Statistics: The Lifetime counter is similar to the odometer on your vehicle. It shows the statistics of the terminal since the software version that added this feature was loaded onto the UT. The user **cannot** reset these counters.

HUGHES 9202 Usage Statistics

Home Data SMS Settings Usage Support

STATUS

Connection

Registering...
PS Not Attached
CS Not Attached

Signal Quality: 0

GPS

Acquiring

Location: Waiting
Last Fix: 00/00/00, 00:00

BGAN Terminal

WLAN Disabled

Antenna Unit

Elevation 0°
0.000 MHz

Trip Usage Statistics

Standard Class Data Transfers	Trip Total (MB)	
Standard - Received Data	23.276	Reset Data
Standard - Transmitted Data	0.000	
Streaming Class Connected Time	Trip Total (Time)	
Streaming - Connected	01: 11: 51	Reset Data
Circuit Switched Connected Time	Trip Total (Time)	
Circuit Switch - Connected	00: 27: 14	Reset Data

Lifetime Usage Statistics

Standard Class Data Transfers	Lifetime Total (MB)	
Standard - Received Data	27.561	
Standard - Transmitted Data	0.000	
Streaming Class Connected Time	Lifetime Total (Time)	
Streaming - Connected	02: 38: 52	
Circuit Switched Connected Time	Lifetime Total (Time)	
Circuit Switch - Connected	00: 27: 14	

NOTICE

If the UT power is abruptly disconnected for some reason, the UT will not be able to save the statistics to flash and hence the statistics for the session (**Trip**) may be inaccurate.

Support Page

This web page allows you to display technical and support information about the terminal and retrieve logs.

HUGHES 9202 Support and Information

Home Data SMS Settings Usage Support

STATUS

Connection

Registering...
PS Not Attached
CS Not Attached

Signal Quality:

GPS

Acquiring

Location: Waiting
Last Fix: 00/00/00, 00:00

BGAN Terminal

WLAN Disabled

Antenna Unit

Elevation 0°
0.000 MHz

Terminal Information

Model	BGAN USER TERMINAL, Hughes 9450, Ver 1
Class	2
IMEI	353937-03-100016-5
Software Version	5.8.0.0

SIM Information

IMSI	901112112300239
Default APN	bgan.inmarsat.com

Terminal Support

Website	Unavailable
Telephone	Unavailable
E-mail	Unavailable

Troubleshooting

Terminal Logs

Log Type	Current Log	Archived Log	Reset Log
To download the logs to disk, Click or right-click the links below and select 'Save Target As'.			
System Log	Download Current		
Event Log	Download Current	Download Archive	<input type="button" value="Reset Event Log"/>
Packet Log	Download Current	Not Available	<input type="button" value="Reset Packet Log"/>
Circuit Log	Download Current	Download Archive	<input type="button" value="Reset Circuit Log"/>

Reset Terminal to Factory Defaults

Click this button to restore all terminal settings to their original default values.

Reboot Terminal

Click this button to reboot the terminal software.

Information and Support

Terminal Information

Model: this displays the UT model number.

Class: this indicates the UT Class, such as Class 11 for a land mobile terminal or Class 10 for high gain land mobile terminal.

IMEI: This displays the IMEI (serial) number of the UT.

Software Version: This displays the current version of software that is running on the UT.

SIM Information

IMSI: This displays the IMSI number of the SIM card in the UT. If the IMSI is not displayed, it indicates that there is a problem reading the SIM card, e.g. because there is no SIM, it is installed incorrectly or PIN must be entered.

Default APN: This is read directly from the SIM card.

Terminal Support – contact information retrieved from the SIM card.

Website
Telephone
E-Mail

Troubleshooting

Terminal Log Files: This allows you to extract and save any of the following log files for troubleshooting purposes:

System Log
Event Log
Packet Log
Circuit Log

These files can be e-mailed to Hughes directly for fault analysis if the user experiences any problems.

Reset Terminal to Factory Defaults: Clicking the “Restore To Defaults” button will restore the UT back to the factory default settings and delete any of the user parameters that have been set-up in the UT.

NOTICE

Hughes highly recommends that the user exhaust all possible troubleshooting procedures before using this feature

Reboot terminal: Clicking this button reboots the terminal so that configuration changes can be saved into the configuration file or can be used when just a simple reboot of the terminal is required.

Troubleshooting

Problem	Possible Cause	Possible Solution
Terminal will not turn on	<p>Power switch not on</p> <p>No ignition sense</p> <p>Fuse is blown</p>	<p>Check the power switch is in the ON position and LED is on</p> <p>Check positive voltage is applied to the ignition sense pin of the power connector</p> <p>Remove fuse and check.</p> <p>Refer to Installation Manual</p>
Cannot get SIM card to lock into position	SIM is not correctly oriented for insertion	<p>Ensure the SIM is pressed firmly into the SIM slot</p> <p>Ensure the SIM is oriented as shown in on the terminal and in the Install Guide</p>
The BGAN LaunchPad or web UI will not connect to the terminal	<p>No interface connection between the terminal and computer</p> <p>Your computer is configured with a static IP address in the wrong subnet. Default UT IP address is: 192.168.128.100</p>	<p>Ensure there is a WLAN or Ethernet connection between the terminal and computer, see User Guide</p> <p>Check the IP configuration settings on your computer.</p> <p>Enable DHCP or use a static IP address in the same subnet as the UT local IP address. Default UT IP address is: 192.168.128.100</p>

Problem	Possible Cause	Possible Solution
Terminal will not accept incoming ISDN calls	The MSN programmed into the ISDN device does not match the MSN programmed into the terminal	Ensure the appropriate MSN is programmed into the ISDN device, see User Guide Ensure the appropriate MSN is programmed into the terminal, see ISDN Section of User Guide
Terminal will not make outgoing ISDN calls	ISDN power sourcing is turned off Terminal is not Registered with the Network.	Enable the ISDN power sourcing from the BGAN LaunchPad or ISDN web UI page (unless the ISDN device has a separate power source). Check the Properties page in web UI to make sure the unit is CS attached.
Terminal is connected to the BGAN network, but cannot obtain the requested Quality of Service	Network temporarily not available User tried to set up a 256 Kbps streaming connection.	Retry again. If problem persists, contact your service provider. The Inmarsat Network only supports 256K for Class 1 terminals and only 128K connections for Class 2 UT's
Terminal does not obtain a GPS fix	Terminal's location limits visibility of 3 or more GPS satellites.	Move the terminal to a location where there are few obstructions such as trees or tall buildings, so that as much as possible of the sky is visible.

Problem	Possible Cause	Possible Solution
ISDN device does not operate correctly	<p>The ISDN device is trying to draw too much power from the satellite terminal's ISDN interface</p> <p>The device you are connecting is not an ISDN device. It might be an Ethernet device that you are accidentally connecting to the ISDN port.</p> <p>Make sure that you don't have both RJ-11 and ISDN handsets connected at the same time.</p>	<p>Only connect an ISDN device that draws less than 70mA of current at 40V (equivalent power 2.8W)</p> <p>Make sure you connect only ISDN devices to the ISDN port</p> <p>Remove one of the handsets and reboot the terminal.</p>
None of the above solutions resolve the problem	Terminal may have a hardware or software fault, and needs to be re-booted.	Remove power. Wait 30 seconds. Reconnect the DC power and turn on the terminal.

Technology Overview

GPS

The Global Positioning System (GPS) uses 24 orbital satellites to determine the position of the Terminal anywhere on the globe.

Obtaining a GPS Fix

In normal operation, a GPS receiver, such as that built in to the Tracking Antenna, needs to be able to receive signals from at least four satellites so that it can then calculate a latitude, a longitude and an altitude – this position fix is referred to as a 3-dimensional or 3-D fix. If only three GPS satellites can be seen by the GPS receiver, then the last available altitude measurement is assumed and the GPS receiver calculates a position fix based on latitude and longitude only. This simpler position fix is referred to as a 2-dimensional or 2-D fix and is quicker and easier to obtain than a 3-D fix, but may be less accurate.

The GPS receiver may take between a few seconds and a few minutes to obtain a GPS fix, depending on how frequently the GPS receiver is being used. The frequency of use determines the how quickly the GPS Terminal is able to start.

- Hot start – if the GPS receiver is being used frequently, (that is, in the last two hours), it is regularly updated with data from the GPS satellites, and so only takes a few seconds to obtain a GPS fix after being switched on.
- Warm start – if a GPS receiver has not been used for more than two hours, then it will take up to 45 seconds to obtain a GPS fix.
- Cold start – if the GPS receiver has not been used for some time or is 300 km or more from where it was last used, it can take as long as 15 minutes to obtain a valid position fix.

The time taken to obtain a valid GPS fix can also be affected by the visibility that the GPS receiver has of the GPS satellites. The GPS system is relatively tolerant of atmospheric conditions such as heavy cloud or rainfall. However, physical blockages, such as tall buildings or terrain can significantly degrade the ability of the GPS receiver to obtain a fix. For this reason, ensure that the GPS receiver has a clear view of as much open sky as possible.

GPS and BGAN Registration

BGAN uses the accurate position and timing information obtained from GPS to help ensure efficient registration of a BGAN Terminal with the BGAN network.

ISDN

The Satellite Terminal provides an ISDN (Integrated Services Digital Network) interface to connect devices for Circuit Switched voice and data services. It is a Basic Rate (also known as 2B+D) interface and uses the Euro ISDN protocol. Note that the Satellite Terminal can only provide service for one 64Kbps B-channel at a time.

Dialing and Numbering

Dialing - As the ISDN numbering system follows the same pattern as the normal telephone system, dialing is carried out in exactly the same manner as making a normal telephone call. The subscriber number is used with the same international and area codes as any other telephone network. Start the dialed number with 00 and terminate it with a #.

Multi-Subscriber Numbering (MSN) - ISDN supports Multi-Subscriber Numbering (MSN). MSN is a facility whereby more than one telephone number can be allocated to an ISDN line. The BGAN Satellite Terminal assigns different MSNs for Voice, 3.1KHz Audio, UDI and RDI devices. Each incoming call will be directed to the appropriate MSN depending on the type of call. This allows proper routing of incoming calls to the correct ISDN device (e.g. ISDN phone, data card or Fax).

PDP Context

A Packet Data Protocol (PDP) Context defines connection aspects such as routing, Quality of Service (QoS), security and billing between a mobile user terminal, such as the BGAN Terminal, and a data network. PDP Contexts are essential to the General Packet Radio Service (GPRS) system, which is used by GSM and UMTS-based 3G networks worldwide for transmitting data.

In order for a user to be able to transfer data across a network, a PDP Context must be activated in the Terminal and associated Core Network. The procedure for this is as follows:

1. After registration with the network, the user activates a PDP Context using an application on the computer or Terminal, and requests sufficient radio resources (that is, power and bandwidth) to support the context activation procedure.
2. Once the resources are allocated, the Terminal sends the Activate PDP Context request to the Core Network. This request includes key information about the mobile user's PDP address (for example an IP address), PDP type (that is, static or dynamic address) the QoS requested for this context, the APN of the external network to which connectivity is requested, the user's identity (IMSI) and any necessary IP configuration parameters (for example, security settings).
3. On receiving the Activate PDP Context message, the Core Network checks the user's subscription record to establish whether the request is valid. If the request is valid, a virtual connection is established between the Terminal and the Core Network, and data transfer can then take place between the Terminal and the external data network, within the scope of the current PDP Context. The PDP Context is stored in both the Terminal and the Core Network.

A single Terminal may have multiple PDP Contexts each with different QoS profiles. The primary PDP Context is a PDP Context with default QoS profile attributes and is always activated first. All other PDP Contexts with the same PDP Address are secondary PDP Contexts. Secondary PDP Contexts share the same PDP Address and connect to the same APN but may have different QoS profiles.

Technical Specifications

Satellite TX Frequency	1626.5 – 1660.5 MHz and 1668 – 1675 MHz
Satellite RX Frequency	1518 – 1559 MHz
GPS Frequency	1574.42 – 1576.42 MHz
SAT Continuous TX Time (@128kbps)	Up to 2.5 hours ^{note1}
SAT Continuous RX Time (@128kbps)	Up to 4 hours ^{note1}
SAT Standby Time	Up to 36 hours ^{note1}
Weight	< 1.8Kg
Dimensions	216 mm x 216 mm x 45 mm
Operating Temperature (with battery)	-5°C to +55°C
Operating Temperature (with DC supply)	-25°C to +60°C
Battery Charging Temperature	0°C to +40°C
Storage Temperature (including battery)	-20°C to +80°C
Storage Temperature (excluding battery)	-25°C to +80°C
Humidity	95% RH at +40°C
Wind	Operational wind loading (with stand secured to ground) 40kph (25mph)
Water and Dust	IP 54 Compliant
Non-operational Mechanical Vibration	200-2000Hz, 0.3 m/s ³ MIL-SPEC 810B Method 500.3, Procedure 1
Input Voltage	19V $\overline{\overline{=}}$ 3.4A ^{note2}
Battery	7.2V 2.5Ah Li-Ion, rechargeable
Data Connectivity	RJ45 port (Ethernet 10BaseT) RJ11 port (POTS) RJ45 port (ISDN) 802.11b WLAN
Other Features	Integrated User Interface (iUI) via LCD panel Web User Interface (WebUI) SIM/USIM Slot (behind battery) AC/DC adapter Rechargeable Li-Ion battery ¼ inch UNC threaded hole for tripod mounting Compass to assist pointing

Note:

1. Performance may be affected by a wide range of factors.
2. The Hughes 9202 broadband satellite terminal operates on DC power which can be supplied by an AC or DC power source. To comply with safety requirements, the terminal must be powered with only an AC/DC adapter or DC power adapter supplied or approved by Hughes.

Declaration of Conformity

We,

Hughes Network Systems

(manufacturer's name)

of

9605 Scranton Road, Suite 500, San Diego, CA 92121, USA

(address)

declare under our sole responsibility that the product

Hughes 9202 BGAN Land Portable Terminal

(detailed description of product including name, type, model and supplementary information such as lot, batch or serial number, sources and number of items)

to which this declaration relates, is in conformity with the following standards and/or other normative documents:

For article 3.1(a), Health and Safety of the User:

EN 62311

IEC 60950-1 (2nd Edition)

For article 3.1(b), Electromagnetic Compatibility:

EN 301 489-1, EN 301 489-17, EN 301 489-20

For article 3.2, Effective Use of the Spectrum Allocated:

EN 301 444

EN 300 328

We hereby declare that all essential radio test suites have been carried out and that the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

Identification mark:

The equipment will also carry the Class 2 equipment identifier:



The technical documentation relevant to the above equipment will be held at:

Hughes Network Systems, 9605 Scranton Road, Suite 500, San Diego, CA 92121, USA

(name and address of EU representative)

Bill Lindsay

(name)

Senior Engineering Program Director

(title)

(signature of authorized person)

(date)

FCC Compliance

- This device conforms to the FCC rules. Any changes or modifications to Hughes Network Systems' equipment, not expressly approved by Hughes Network Systems, could void the user's authority to operate the equipment.
- To comply with FCC RF exposure requirements, this device must be operated with a minimum separation distance of one meter or more from a person's body. Other operating configurations should be avoided.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions; (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

EU RoHS (Restriction of Hazardous Substances) Directive

The European Union (EU) Directive 2002/95/EC restricts the use of certain hazardous substances in electrical and electronic equipment.

Unless otherwise noted, all products, assemblies, and sub-assemblies manufactured by Hughes and its sub-contractors will be compliant with this directive and any subsequent revisions or amendments.

EU WEEE (Waste Electrical and Electronic Equipment) Directives

The European Union (EU) Directive 2002/96/EC on waste electrical and electronic equipment mandates recycling of electrical and electronic equipment throughout the EU by August 13, 2005.

Unless otherwise noted, all products, assemblies, and sub-assemblies manufactured by Hughes and its sub-contractors will be compliant with this directive and any subsequent revisions or amendments. This product carries the WEEE label below to demonstrate compliance.

For additional information, contact Hughes Network Systems at: www.hughes.com.



Glossary

APN: An Access Point Name (APN) provides access to an external network. By default, the SIM Card in your terminal is configured with the APN of your Service Provider. You may want to configure further APN's if you have arranged with your Service Provider to use more than one SIM Card.

BGAN Satellite Terminal: Referenced throughout this document as the Satellite Terminal, "The Terminal," or UT. This device implements and manages BGAN satellite communications between your computer and Service Provider's network.

Quality of Service: Quality of Service (QoS) assigns a level of priority to certain types of data traffic, in particular high bandwidth applications such as video and multimedia. QoS attempts to maintain a guaranteed throughput level, and minimize error rates and end to end latency, so providing a higher level of service than "best effort" protocols.

DNS Server: The Domain Name System (DNS) is an Internet service that is required because the Internet does not recognize the text-based Web address or email address that you type into your Web browser or email application. All or part of a Web address or an email address is a domain name, and DNS translates this domain name into an IP address that is recognized by the Internet.

A DNS Server holds a database of domain names and IP addresses, so that when you enter a Web address or email address, you are directed to the correct IP address over the Internet.

Ethernet: Ethernet is a local area networking method used widely throughout the computer industry. It is one of the three communications interfaces supported by the Satellite Terminal.

Fault Code: A number which uniquely references an error in a hardware or software system. In the Satellite Terminal, if there is a fault detected, the fault code and a description are displayed in suitable LaunchPad windows.

GPS: Global Positioning System. The GPS receiver in the Satellite Terminal receives signals from the constellation of GPS satellites. It uses these signals to determine the Terminal's location on earth. That location is used during registration to gain access to the BGAN system.

IP Address: An Internet Protocol address, or IP address, is a number that uniquely identifies the computer accessible over a TCP/IP-based LAN or the Internet that is sending or receiving information. An IP address is a 32-bit numeric address written as four numbers, separated by periods and each number is between 0 and 255. For example, 207.115.79.4 is an IP address. In the BGAN system, IP addresses for the Network and the TE can be dynamic or static.

Network Dynamic IP Address: A network dynamic IP address is a temporary address that is assigned by your BGAN Service Provider when you connect to the BGAN Network.

Network Static IP Address: If required, a static IP address can be assigned by Service Providers to BGAN users when the SIM is provisioned. This static IP address is used every time you connect to the BGAN network and is associated with a specific username and password.

DHCP Address: Local IP address that is assigned by the UT DHCP server to the TE once connected to the UT. This is a private IP address that is not routable within the Internet.

Terminal Local IP Address: IP address of the UT to access the web UI and talk to the UT via LaunchPad. This address is configurable by the user. The default local IP address of the terminal is 192.168.128.100

Standard Connection: A standard connection is charged by volume of data sent. The bandwidth you are allocated depends on terminal type and network availability, but is always 'best effort', that is, you are allocated bandwidth depending on your requirements and the requirements of other users of the BGAN network, or BGAN Terminal. This connection class is suitable for most data types, other than multimedia.

Streaming: A streaming connection gives you a guaranteed data rate and is charged by the amount of time the connection is active. Streams are typically used for multimedia data, such as video.

TE (Terminal Equipment): Terminal equipment refers to the piece of equipment that is connected to the BGAN UT (e.g. laptop, video equipment, phone, etc.)

Traffic Flow Template: A Traffic Flow Template, also called an Application Template, is a series of data filters such as QoS (Quality of Service), PDP Context and security settings, that allow the Core Network to classify packets received from an external network into the correct PDP Context. When incoming data arrives at an access point in the core network, a packet

classifier will make a PDP Context selection based on the Traffic Flow Template, and map the incoming data packets into the PDP Context with the correct QoS attributes. The use of a Traffic Flow Template allows multiple PDP Contexts to be associated with the same PDP address.

UT (User Terminal): The user terminal is the BGAN modem device, i.e. the Hughes 9202.

SIM Card: Your BGAN Service Provider supplies you with a Universal Mobile Telecommunications System Subscriber SIM (SIM) Card.

The SIM card is similar to the SIM Card that is commonly used in a GSM phone. The card holds a microchip that stores information and encrypts voice and data transmissions, making it extremely difficult to listen in on calls. The SIM Card also stores data that identifies the caller to the BGAN Service Provider.

Virtual Private Network: A Virtual Private Network (VPN) enables remote offices or users to gain secure access to their organization's network over the public telecommunications network. This provides the benefits of remote access without the expense of dedicated leased or owned lines. VPNs work by using tunneling protocols, to encrypt data at the sending end, and decrypt the data at the receiving end. This "tunnel" cannot be accessed by data that is not properly encrypted.