

Q11K V2

FCC ID:2AFEJ-HWT19A

 
- | | |
|-----------------------------|-------------------------------------|
| ① Quick Start Guide | ②⑤ Guida rapida |
| ⑤ Guide de démarrage rapide | ②⑨ Guía de inicio rápido |
| ⑨ Schnellstartanleitung | ③③ Guia de início rápido |
| ⑬ 快速指南 | ③⑦ Краткое руководство пользователя |
| ⑰ クイックスタートガイド | ④① Przewodnik szybkiego startu |
| ⑳ 빠른 시작 안내서 | |

WIRELESS GRAPHIC TABLET




Product Overview

FRONT VIEW

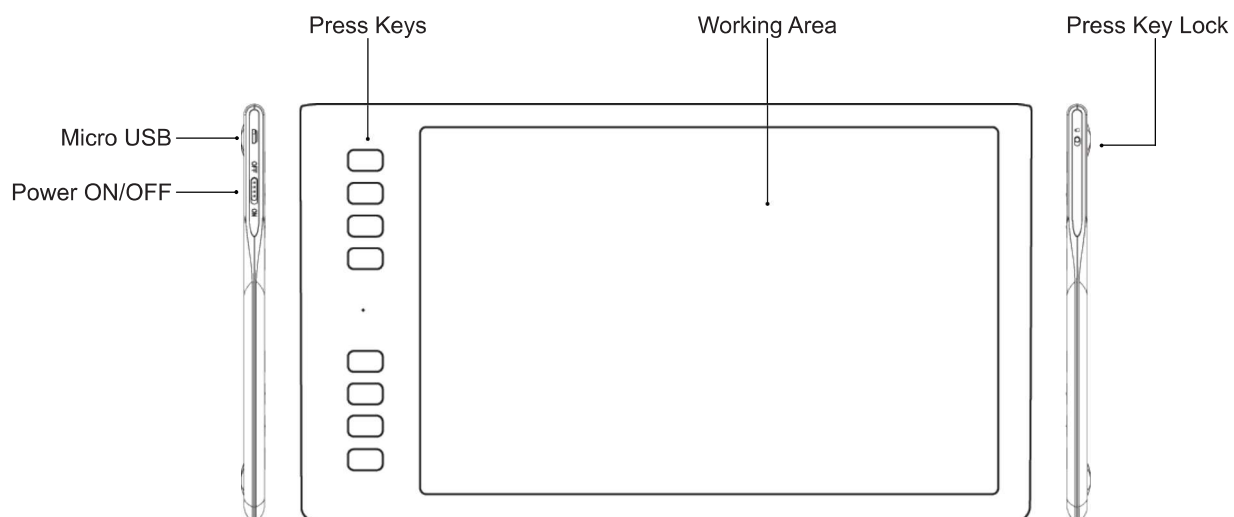


EN

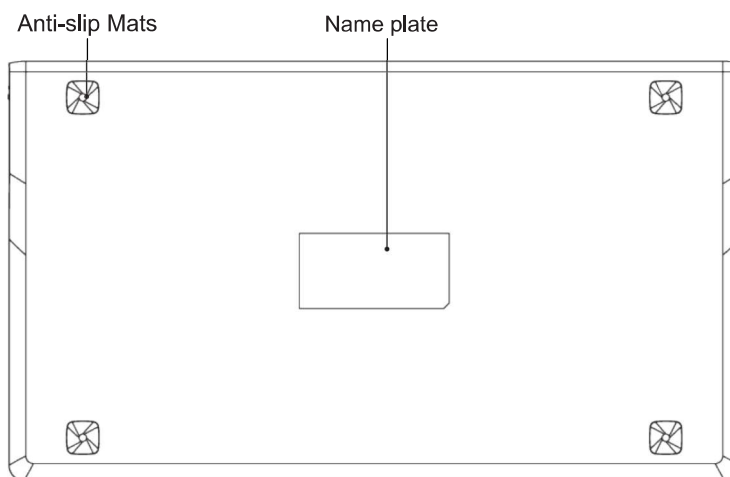 


REAR VIEW

 
Accessories

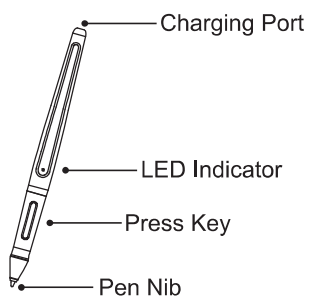


Digital Pen

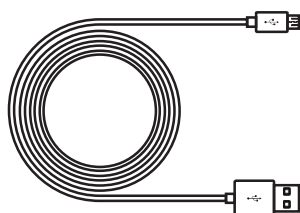 

Micro USB Cable

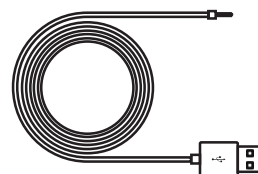 

Pen Charging Cable

 


Replacement Nibs



Wireless Receiver



 
Pen Holder

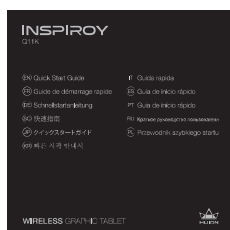

Quick Start Guide


Installation Driver

 1. Before installing driver, please close all graphic software and antivirus program.
2. If you have installed other pen tablet driver, please uninstall it before you install this driver.
3. Please make sure your computer OS are as following:
Windows 7 or later, macOS 10.11 or later.
4. Please download the pen driver and user manual from our website: **www.huion.com/download**.
5. Run the tablet driver program and complete the installation according to the instruction.
6. For more information, please refer to the user manual.

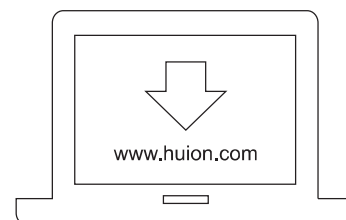


Wired Access Mode

 1. Connect the tablet to your computer with Micro USB cable.

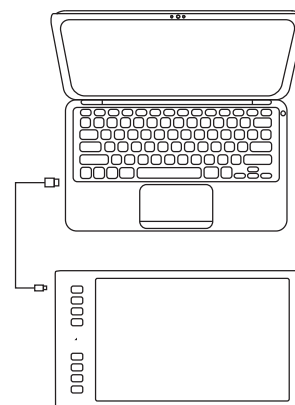

Wireless Access Mode

 
1. Insert wireless receiver to your computer.
2. Toggle the power switch to the left to power on the tablet.
3. When not using for 15mins, the tablet will enter sleep mode.
In this case you need to toggle the switch right - then left to wake the tablet up.

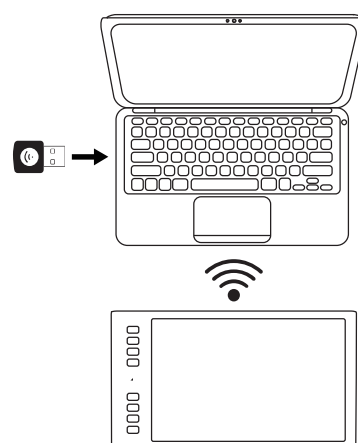

Replace the Pen Nib


When the pen nib was heavily worn out, please replace the nib with clip embedded in the bottom of the pen holder.

 ①

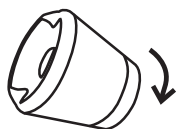


Anticlockwise rotate the holder to open bottom cover

 ②

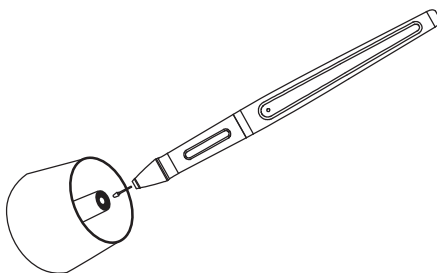

Insert the pen nib into the hole and tilt the pen to pull out the nib

 ③

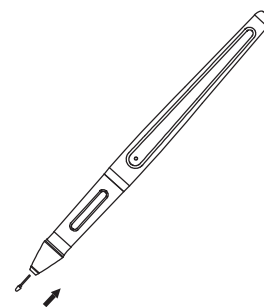


Insert the new nib into the pen and push it straight until it stops

EN

Charge the Pen

 When the LED indicator on the pen shows orange, it means the pen voltage is low, please charge the pen with the attached cable. It can be connected to computer, power supply and power bank.

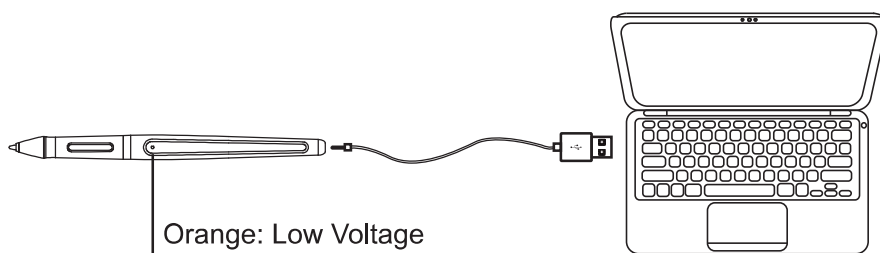

Orange: Low Voltage
Red: Charging
Light Off: Full charge

CE Maintenance

1. Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
2. The product shall only be connected to a USB interface of version USB2.0.
3. EUT Operating temperature range: 0° C to 40° C.
4. The device complies with RF specifications when the device is used at 15m from your body.

Declaration of Conformity

Shenzhen Huion Animation Technology Co., Ltd. hereby declares that this Creative Pen Tablet is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), This product is allowed to be used in all EU member states.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Vue d'ensemble du produit

VUE AVANT

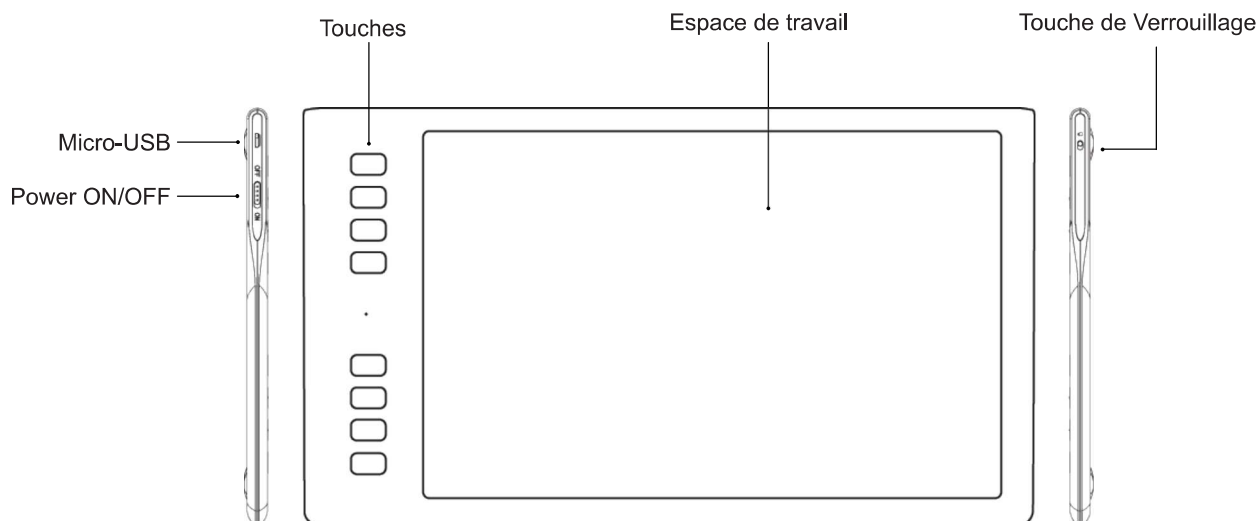


FR

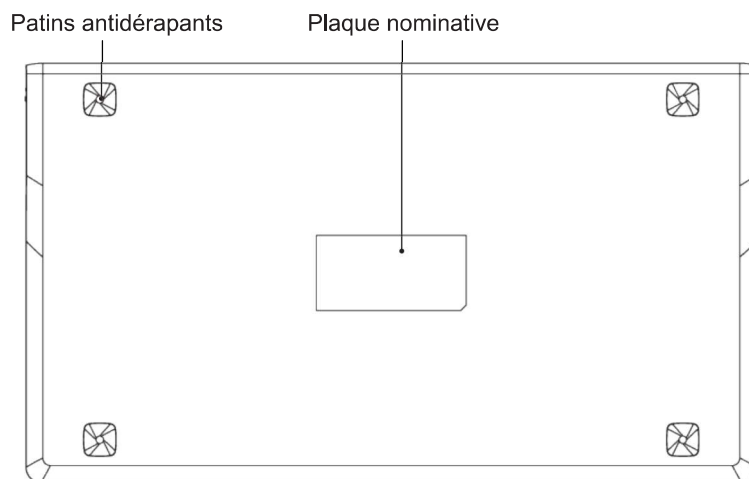 


VUE ARRIÈRE

 
Accessories

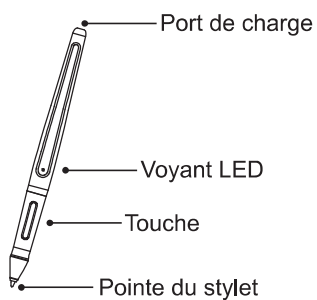


Stylet numérique

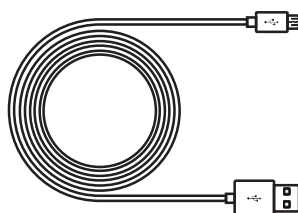 

Câble micro-USB

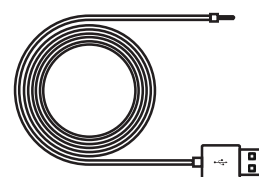 

Câble de charge du stylet

 


Pointes de remplacement



Récepteur sans fil



 
Support de stylet

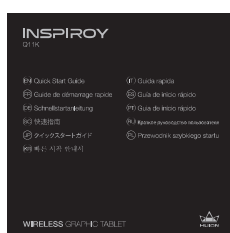

Guide d'aide au démarrage rapide


Installer le pilote

 1. Avant d'installer le pilote, fermez tous les logiciels graphiques et le programme antivirus s'il vous plaît.
2. Si vous avez installé un autre pilote de tablette de stylet, désinstallez-le avant d'installer ce pilote.
3. S'il vous plaît assurez-vous que votre système d'exploitation d'ordinateur sont les suivantes: Windows 7 ou versions ultérieures, macOS 10.11 ou versions ultérieures.
4. Téléchargez le pilote du stylet et le manuel d'utilisation depuis notre site Web: www.huion.com/download.
5. Exécutez le programme du pilote de la tablette et terminez l'installation conformément aux instructions.
6. Pour voir plus d'informations, reportez-vous au Manuel de l'utilisateur.

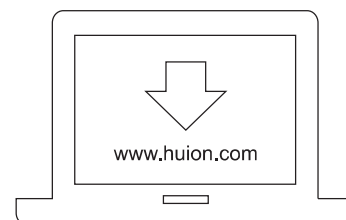


Mode Sans Fil

 1. Connectez la tablette à votre ordinateur au moyen du câble micro-USB.

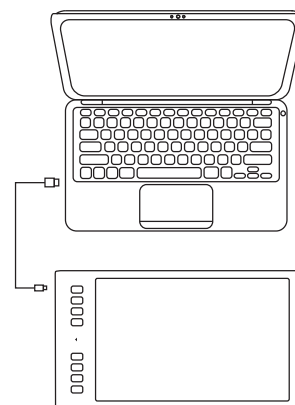

Mode Sans Fil

 1. Reliez le récepteur sans fil à votre ordinateur.
2. Tournez l'interrupteur d'alimentation vers la gauche pour ouvrir la tablette graphique.
3. La tablette graphique ira dans l'hibernation dans les quinze minutes lorsque vous ne l'utilisez pas. À ce moment, vous devez tourner l'interrupteur d'alimentation vers la droite puis vers la gauche pour réveiller la tablette graphique à nouveau.

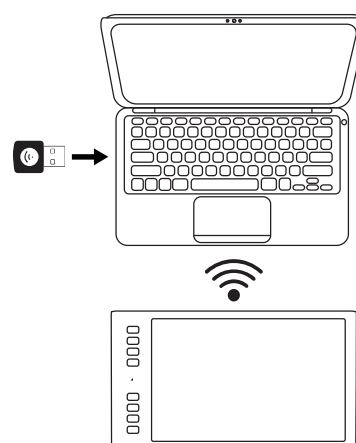

Remplacement de la pointe du stylet

 
Lorsque la pointe de votre stylet est trop abîmée, vous devez la remplacer par une neuve.

①




Faites pivoter dans le sens antihoraire le support pour ouvrir le cache inférieur

②

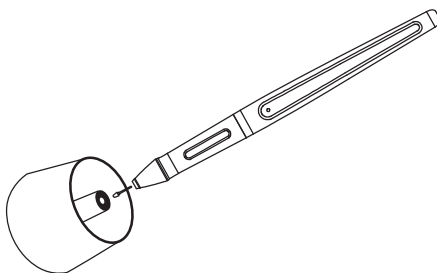

Insérez la pointe du stylet dans la fente et inclinez-le pour extraire le stylet

 ③

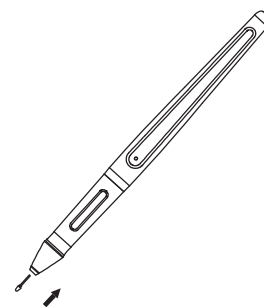


Insérez la nouvelle pointe du stylet et poussez-la jusqu'à sentir une résistance

FR

Charger le stylet

Lorsque la batterie du stylet est vide, chargez le stylet au moyen du câble fourni.

 
Vous pouvez le connecter à votre ordinateur, à une alimentation électrique ou à un socle d'alimentation.

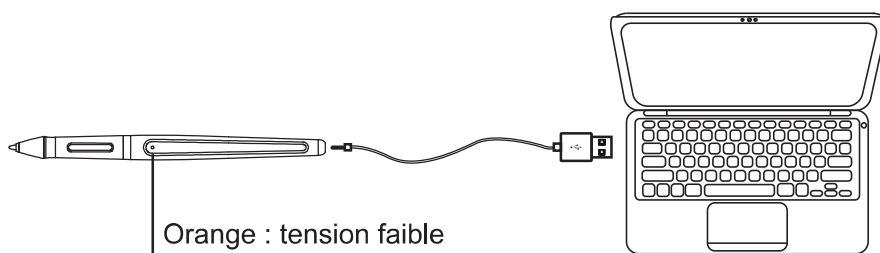


Orange : tension faible
Rouge : en charge
Éteint : charge pleine

Produktübersicht

 ANSICHT VON VORNE

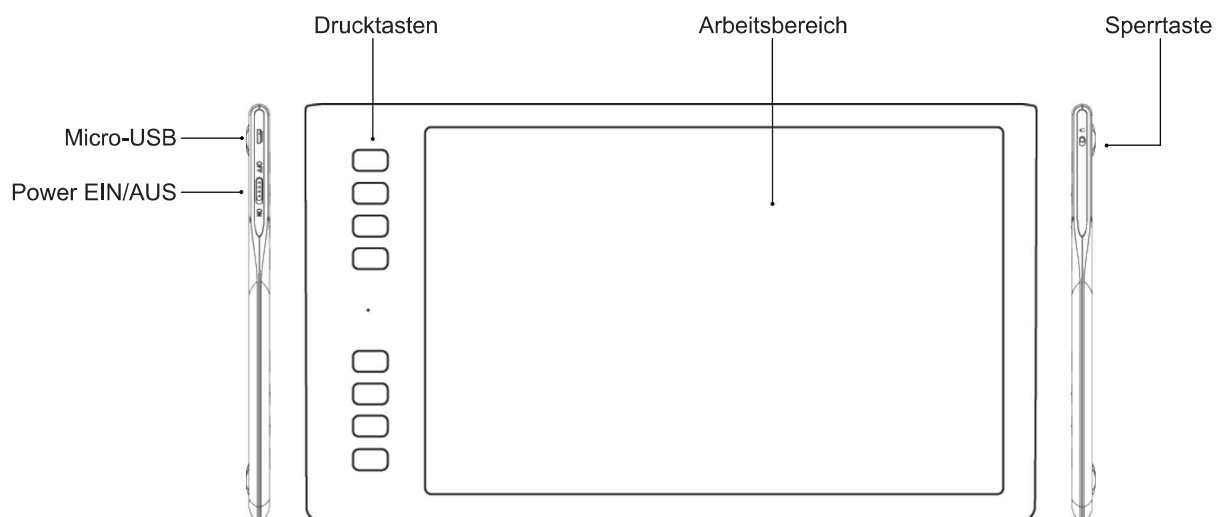


DE

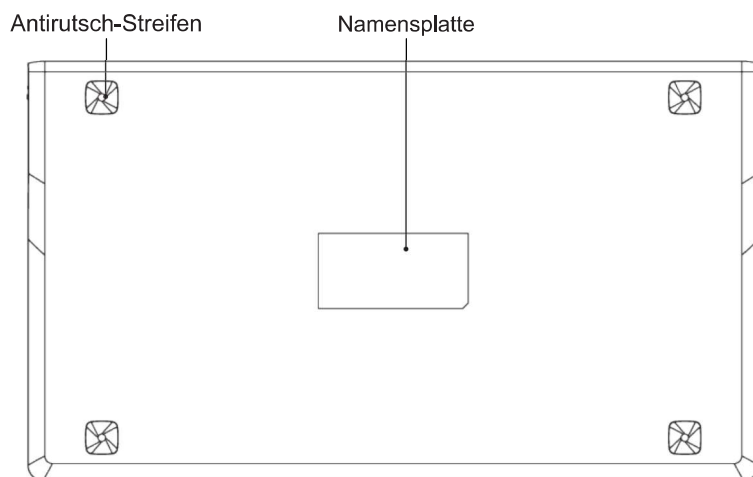 


ANSICHT VON HINTEN

 
Zubehör

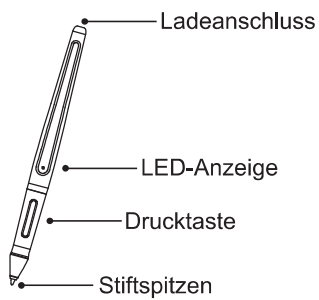


Digitaler Stift

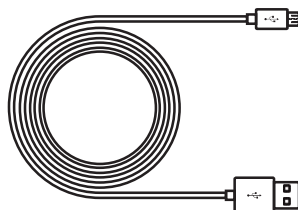 

Micro-USB-Kabel

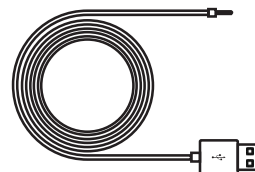 

Stift-Ladekabel

 


Ersatzspitzen



Schnurloser Empfänger



 
Stifthalter

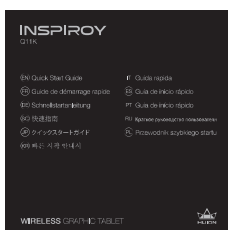

Kurzanleitung


Treiber Installieren

 1. Bevor Sie den Treiber installieren, schließen Sie bitte alle grafischen Software- und Antivirenprogramme.
2. Wenn du einen anderen Pen Tablet-Treiber installiert hast, deinstalliere ihn bitte, bevor du diesen Treiber installierst.
3. Bitte stellen Sie sicher, dass Ihr Computer-Betriebssystem wie folgt ist: Windows 7 oder höher, MacOS 10.11 oder höher.
4. Bitte laden Sie den Stift-Treiber und das Benutzerhandbuch von unserer Website herunter: www.huion.com/download
5. Lassen Sie das Tablett-Treiberprogramm laufen und beenden Sie die Installation gemäss der Anweisung.
6. Weitere Informationen entnehmen Sie bitte der Bedienungsanleitung.

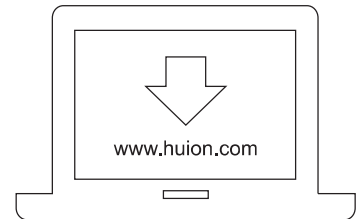


Schnurmodus

 1. Verbinden Sie das Tablet mithilfe des Micro-USB-Kabels mit Ihrem Computer.

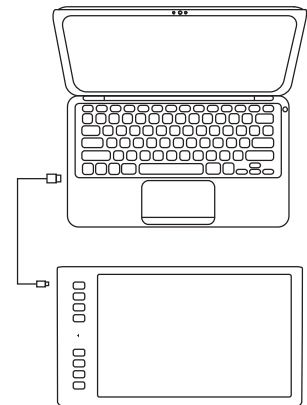

Schnurloser Modus

 1. Schließen Sie den WLAN-Empfänger an Ihren Computer an.
2. Schalten Sie den Netzschalter nach links, um das Tablet zu öffnen.
3. Bei Nichtgebrauch schaltet sich das Tablet nach 15 Minuten in den Schlafmodus, dann müssen Sie den Netzschalter nach rechts und dann nach links drehen, um das Tablet wieder aufzuwachen.

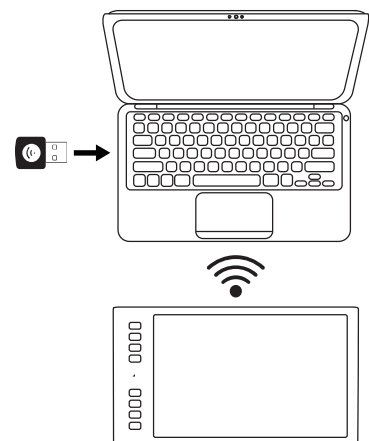

Die Stiftspitze ersetzen

 
Wenn die Stiftspitze stark abgenutzt ist, ersetzen Sie die Spitze mithilfe der beigefügten Stiftklammer.

①




Drehen Sie den Halter gegen den Uhrzeigersinn, um die untere Abdeckung zu öffnen

②

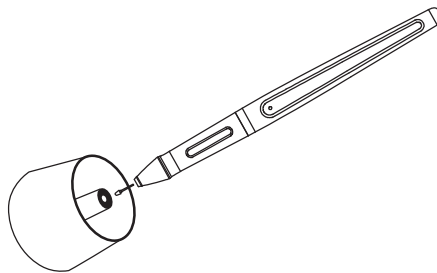

Führen Sie die Stiftspitze in das Loch ein und neigen Sie den Stift, um die Spitze herauszuziehen

 ③

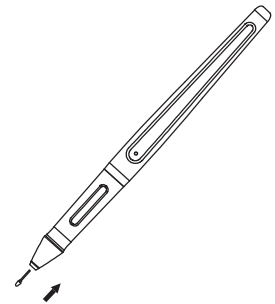


Führen Sie die neue Spitze in den Stift ein und drücken Sie die Spitze gerade


DE

Den Stift aufladen

 
Wenn der Akku des Stifts leer ist, sollten Sie den Stift mithilfe des beigefügten Ladekabels aufladen. Es kann an einen Computer, eine Steckdose und eine Powerbank angeschlossen werden.

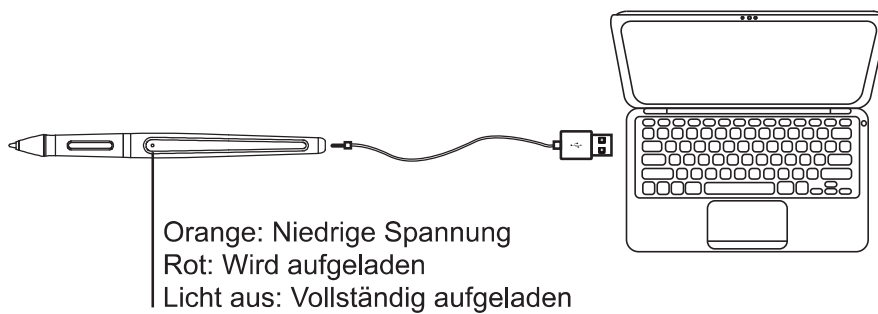

前视图

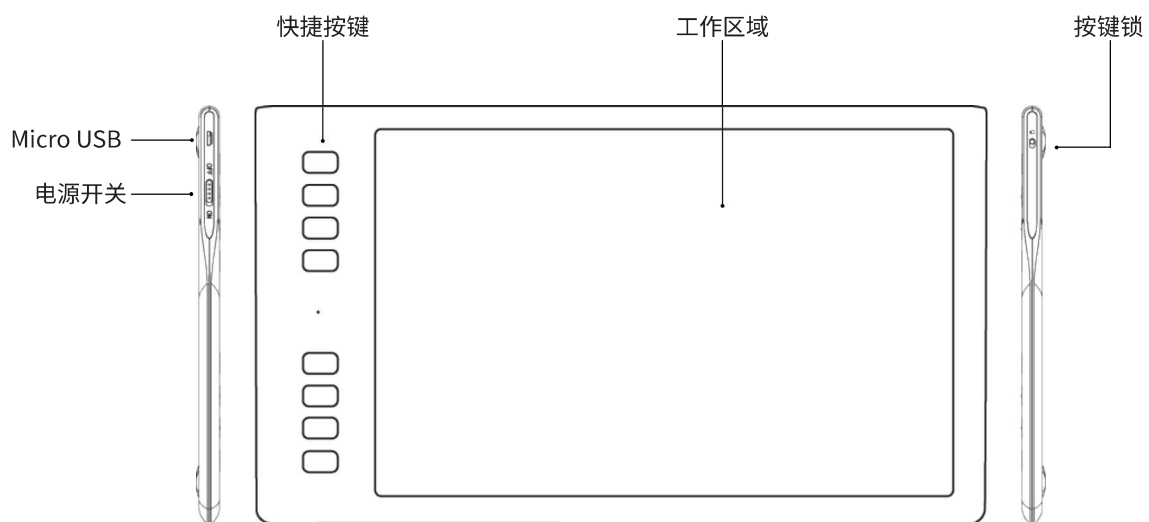 


SC

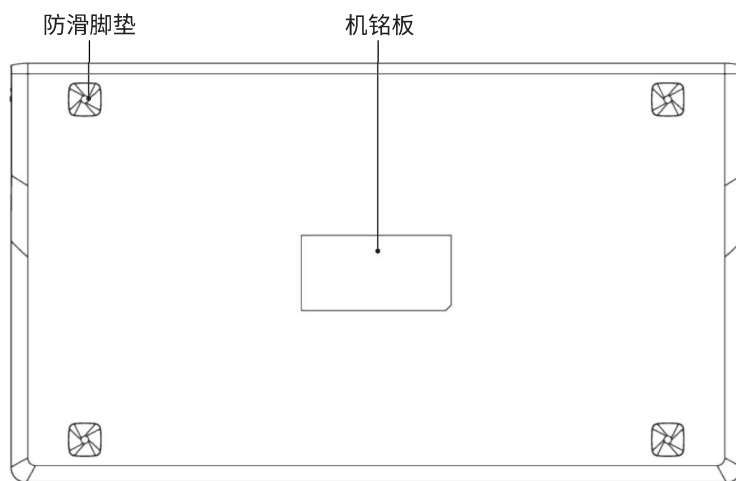 


后视图

 
配件

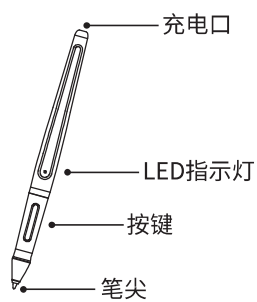


数位笔

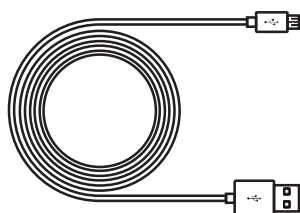 

Micro USB线

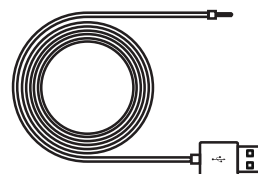 

笔充电线

 


备用笔尖



无线接收器



 笔座

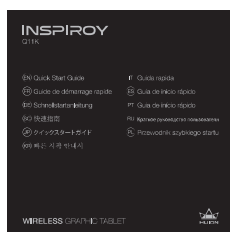

快速指南

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



+86-755-32998548

www.facebook.com/huion

service@huion.com

www.huion.com

[huion-skype](https://www.skype.com/join/32998548)

<https://twitter.com/HuionTab>



HUION FACEBOOK



HUION WEBSITE