

HD Digital Recorder
HD-PVR

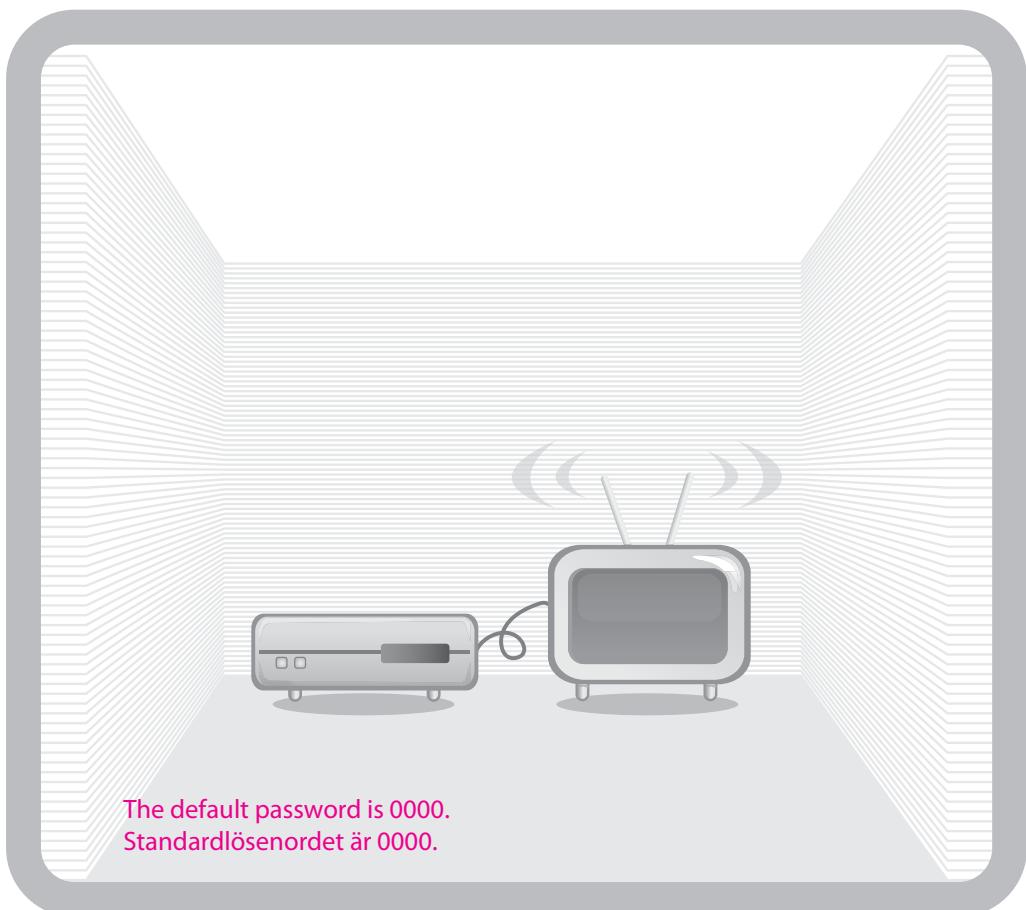

The default password is 0000.
Standardlösenordet är 0000.

User's Manual /Användarmanual

HDPVR-1000C

HUMAX
EASY DIGITAL

Notice



Thank you for purchasing a HUMAX product. Please read this user's manual carefully to be able to safely install, use and maintain the product at maximum performance. Keep this user's manual next to your product for future reference. The information in this user's manual is subject to change without notice.

Copyright (Copyright © 2008 HUMAX Corporation)

Not to be copied, used or translated in part or whole without HUMAX's prior consent in writing except approval of ownership of copyright and copyright law.

Warranty

The warranty does not cover parts which may become defective due to misuse of the information contained in this manual.

Trademarks

- Conax is a trademark of Telenor Conax AS.
- Manufactured under license from Dolby Laboratories.
'Dolby' and the double-D symbol are trademarks of Dolby Laboratories.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

Notice



Warnings, Cautions and Notes

Throughout the whole manual, pay special attention to the following marks that indicate hazardous situations.

- **Warning**
Indicates a hazardous situation which could result in serious injury.
- **Caution**
Indicates a situation which could damage the equipment or other apparatus.
- **Note**
Indicates additional information to make the user aware of possible problems and information of any importance to help understand, use and maintain the installation.

Meaning of Symbols



To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.

 


This symbol indicates **dangerous voltage** inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

Instruction about the WEEE Symbol



This product should not be disposed with other household wastes at the end of its working life. Please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. This will prevent possible harm to the environment or human health from uncontrolled waste disposal.

Domestic users:

Please contact either the retailer where you purchased this product or their local government office for details of where and how they can take this item for environmentally safe recycling.

Business users:

Contact your supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Safety Warning



This product has been manufactured to comply with international safety standards. Please read the following safety precautions carefully.

Safety Instructions and Precautions

- 1. MAINS SUPPLY**
90-250V a.c., 50/60Hz
 - Operate this product only from the type of power supply indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your local power company.
 - Disconnect the product from the mains before you start any maintenance or installation procedures.
- 2. OVERLOADING**
 - Do not overload a wall outlet, extension cord or adapter as this may result in electric fire or shock.
- 3. LIQUID**
 - The product should not be exposed to liquid of any kind. In addition, no objects filled with liquid should be placed on the apparatus.
- 4. CLEANING**
 - Disconnect the product from the wall outlet before cleaning.
 - Use a light damp cloth (no solvents) to dust the product.
- 5. VENTILATION**
 - The slots on top of the product must be left uncovered to allow proper airflow into the unit.
 - Do not stand the product on soft furnishings or carpets.
 - Do not stack electronic equipments on top of the product.
- 6. ATTACHMENTS**
 - Do not use any unsupported attachments as these may be hazardous or cause damage to the product.
- 7. CONNECTION TO THE CABLE TV SIGNAL**
 - Connect all components before plugging any power cords into the wall outlet. Always turn off the product, TV and other components before you connect or disconnect any cables.
- 8. CONNECTION TO THE TV**
 - Disconnect the product from the mains before connecting or disconnecting the cable from the TV. Failure to do so can damage the TV.
- 9. LOCATION**
 - Place the product indoors to avoid exposing it to lightning, rain or sun.
 - Do not place it near a radiator or heat register.
 - We recommend that the product has 10 cm clearance from any other appliances susceptible to electromagnetic influences, such as a TV or a VCR.
 - Do not block the openings with any object, and do not place the product on a bed, sofa, rug, or other similar surface.
 - If you place the product on a rack or a bookcase, ensure that there is adequate ventilation and that you have followed the manufacturer's instructions for mounting.
 - Do not place the product on an unstable cart, stand, tripod, bracket, or table where it can fall. A falling product can cause serious injury to a child or adult, and serious damage to the appliance.

Safety Warning



10. LIGHTNING, STORM or NOT IN USE

- Unplug the product from the wall outlet and disconnect the antenna during a thunderstorm or when left unattended and unused for long periods of time. This will prevent damage to the unit due to lightning and power-surges.

11. EXTRANEous OBJECTS

- Do not insert anything through the openings in the unit, where they can touch dangerous voltage points or damage parts.

12. REPLACEMENT of PARTS

- When replacement of parts is required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitution may result in additional damage to the unit.

Warning

1. To avoid damage of the power cord or plug;

- Do not modify or process the power cord or plug arbitrarily.
- Do not bend or twist the power cord.
- Make sure to disconnect the power cord holding the plug.
- Keep heating appliances as far as possible from the power cord in order to prevent the cover vinyl from melting.
- The mains plug, as a disconnection device, shall remain readily accessible by the user.

2. To avoid electrical shock;

- Do not open the main body.
- Do not insert metal or inflammable objects inside the product.
- Do not touch the power plug with wet hands.
- Disconnect the power cord in case of lightning.


3. To avoid damage of product;

- Do not use the product when it is out of order. If you continue to use the product when defective, serious damage can be caused to it. Make sure to contact your local product distributor if the product is out of order.
- Do not insert metal or alien substance into the slots for the modules or Smartcards. It may cause damage to the product and reduce its life span.

4. Hard Disk Drive

- Do not move the product or turn the power off suddenly while the hard disk drive is running.
- The company shall not be liable for any corruption of data on the hard disk drive caused by the carelessness or misuse of users.

Contents

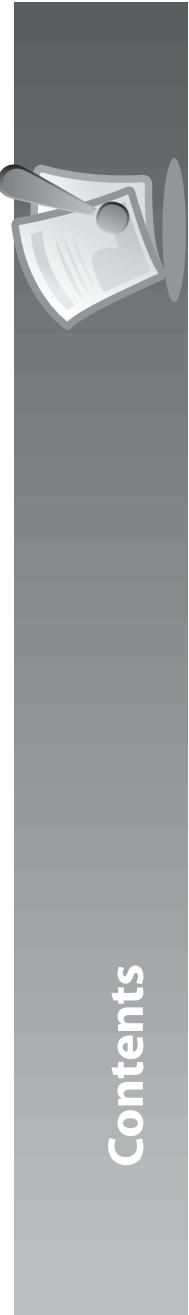

1. Before Using the Product	GB7
1.1 Package Contents	GB7
1.2 Front Panel	GB8
1.3 Conditional Access	GB8
1.4 Rear Panel	GB9
1.5 Remote Control	GB10
1.6 Remote Control Batteries	GB11
2. Setup	GB15
2.1 Using HDMI Cable	GB15
2.2 Using DVI Converter	GB16
2.3 Using Component Cable	GB18
2.4 Using SCART Cable	GB19
2.5 Powering On	GB20
3. Installation Wizard	GB21
3.1 Language	GB21
3.2 Search Channels	GB21
3.3 Display	GB22
3.4 HDD Partition	GB22
3.5 Result	GB23
3.6 Installation Checklist	GB23
4. Basic Operation	GB24
4.1 Switching Channel	GB24
4.2 Volume Control	GB24
4.3 Resolution	GB24
4.4 Sleep	GB25
4.5 Wide	GB25
4.6 Audio	GB26
4.7 Subtitle	GB26
4.8 Teletext	GB27
4.9 Programme Information (i-plate)	GB27
5. Channel List	GB29
5.1 My TV List	GB29
5.2 Favourite List	GB31
5.3 HD List	GB31
5.4 History List	GB32
5.5 Pay Per View Channels	GB32
6. TV Guide	GB33
6.1 Using TV Guide	GB33
6.2 EPG List	GB34
6.3 Schedule	GB34
6.4 Find	GB36

Contents




7. Preferences	GB38
7.1 Parental Control	GB38
7.2 Language Setting	GB40
7.3 Time Setting	GB42
7.4 Media Setting	GB44
7.5 A/V Setting	GB46
7.6 Other Settings	GB48
8. Edit Channels	GB49
8.1 Edit Channel List	GB49
8.2 Edit Favourite List	GB51
9. Installation	GB53
9.1 Channel Search	GB53
9.2 Software Update	GB54
9.3 Default Setting	GB54
10. System	GB55
10.1 Status	GB55
10.2 Signal Detection	GB55
10.3 Conditional Access	GB56
11. Media List	GB58
11.1 Video	GB58
11.2 Radio	GB62
11.3 Music	GB64
11.4 Photo	GB66
12. Personal Video Recorder (PVR)	GB68
12.1 Play bar	GB68
12.2 Time Shifted Recording (TSR) and Playback	GB68
12.3 Recording	GB70
12.4 Bookmark	GB72
13. Software Update	GB73
13.1 OTA (Over the Air)	GB73
14. Appendix	GB74
14.1 Menu Map	GB74
14.2 Trouble Shooting	GB75
14.3 Error Message	GB77
14.4 Specification	GB78
14.5 Glossary	GB80
14.6 Service and Support	GB82
14.7 Remote Control Code List	GB84

1. Before Using the Product

This chapter provides detail instructions on the product and its accessories.

1.1 Package Contents

Please check all package contents before using your product.

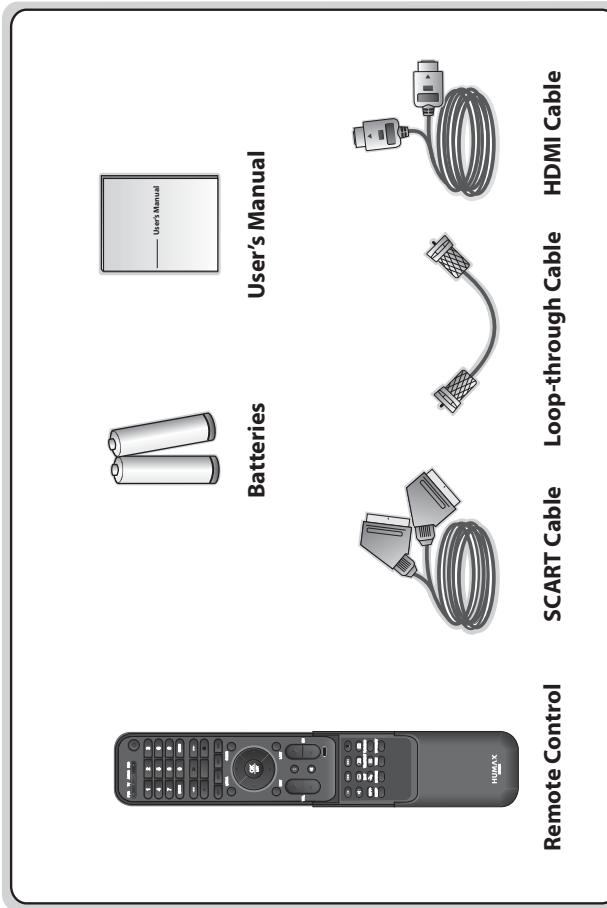


Note:

- Faults may occur if the remote control is left without battery for a long time. Always keep the battery inserted in the remote control.
- Package contents may vary according to area.


Caution:

- The company shall not be liable for problems caused by changing hard disk drive by user.
- The company shall not be liable for problems caused by the installation of hard disks bigger than 320GB.

1. Before Using the Product

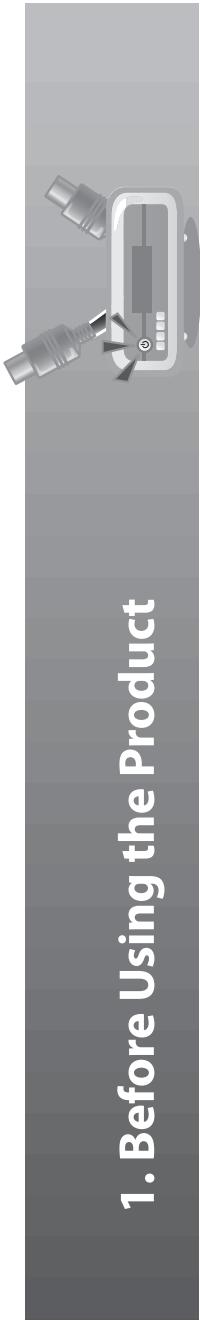

1.2 Front Panel

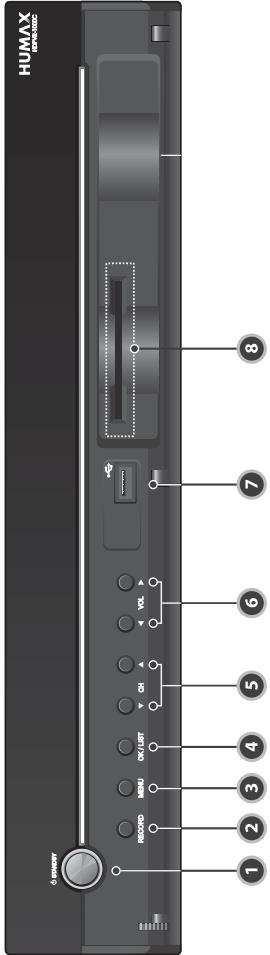

1. **STANDBY BUTTON**
Switches between operation and standby modes.
2. **RECORD BUTTON**
Records programme.
3. **MENU BUTTON**
Displays the menu.
4. **OKLIST BUTTON**
Confirms the selected operation or displays the channel list in normal viewing mode.
5. **CH-/CH+ BUTTON**
Moves the TV/radio channel up or down.
6. **VOL-/VOL+ BUTTON**
Adjusts the audio volume.
7. **USB Host**
Connect to the USB memory or external HDD.
8. **SMARTCARD SLOT**
A slot for a Smartcard.

Note: The front of the product is subject to change without notice.

1. Before Using the Product

1.3 Conditional Access

Although some TV and radio services are free to air, others are available on a subscription basis and can only be enjoyed via a Conditional Access component. The Conditional Access component is a removable Smartcard.

1. Inserting the Smartcard

The Smartcard looks similar to a credit card and is inserted into the slot behind the right-hand front flap of the product. A valid Smartcard entitles you to view and listen to all the channels you choose to subscribe to. The Smartcard slot on the product can be used for CONAX Smartcard only.


1. Open the flap on the front panel of the product to expose the card slot.
2. Hold the Smartcard horizontally with the electronic chip (small square-shaped, gold in colour) facing upwards.
3. Insert the Smartcard into the slot.



1. Before Using the Product



1.4 Rear Panel

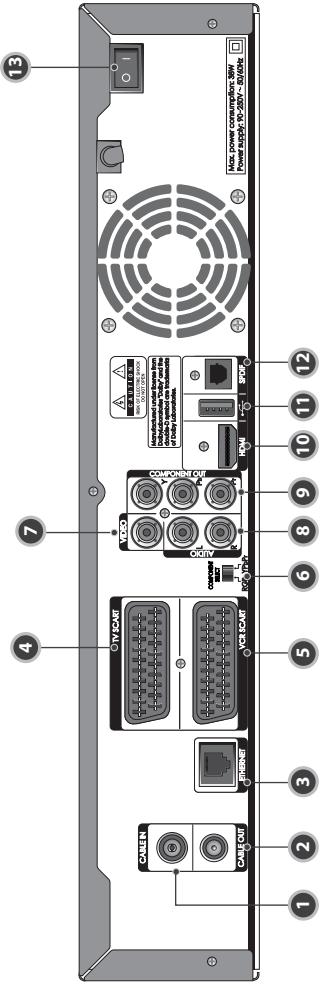

1. **CABLE IN**
Connects an antenna cable.
2. **CABLE OUT (TV/VCR or LOOP OUT)**
Connects to the RF IN of the TV or VCR using an RF cable.
3. **ETHERNET**
Ethernet port (for future use).
4. **TV SCART**
Connects to the TV using a TV SCART cable.
5. **VCR SCART**
Connects to the VCR or DVD using a VCR SCART cable.
6. **COMPONENT SELECT**
Switch for changing video. (default: YPbPr)
7. **VIDEO**
Connects to the TV or VCR using an RCA cable.
8. **AUDIO**
Connects to the TV or VCR using an RCA cable.
9. **COMPONENT(YPbPr)**
Connects to the TV or VCR using a component cable.
10. **HDMI**
Connects to the TV using an HDMI cable.
11. **USB Host**
Connects to the USB memory or external HDD.
12. **S/PDIF**
Connects to the audio system using an S/PDIF cable. (digital audio)
13. **ON/OFF**
Powers on/off.

Note: The rear panel of the product is subject to change without notice.


1. Before Using the Product



1.5 Remote Control

Note:

- The remote control of the product is subject to change without notice.
- This remote control can also control your TV, DVD and audio. To set the remote control for your TV, DVD and audio, please refer to **14.7 Remote Control Code List**.

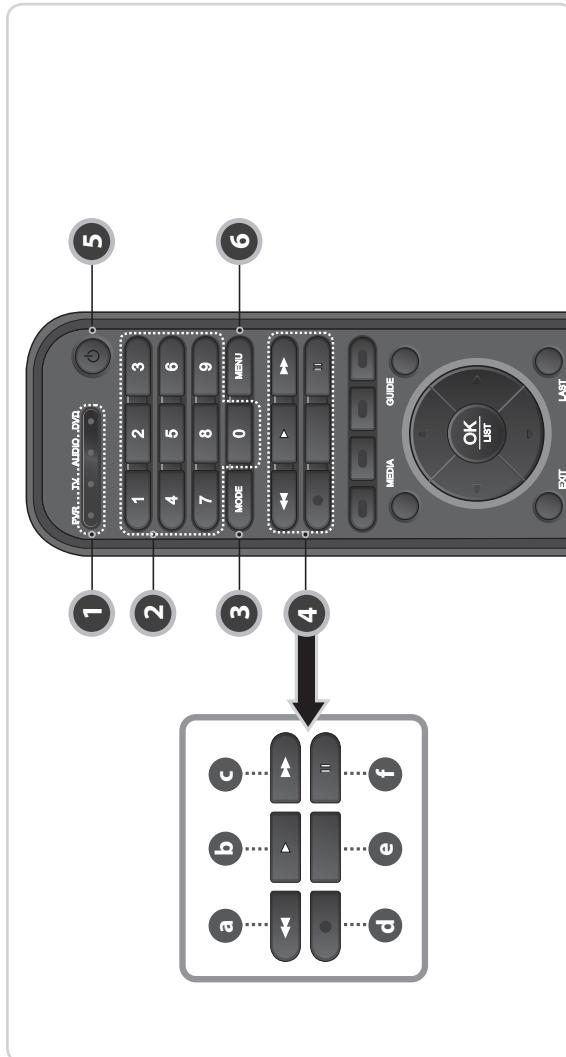

1. Universal LED

Displays the operation mode of each device.

2. NUMERIC(0-9) BUTTONS

Enters a TV/radio channel number or menu option number.

3. MODE

Changes the mode from PVR, TV, audio and DVD.

4. PLAYBACK CONTROL BUTTONS

a. FAST REWIND

Rewinds at high speed. Each time you press this button the rewind speed is increased.

b. PLAY

Plays at normal speed or resumes.

c. FAST FORWARD

Fasts forward at high speed. Each time you press this button the fast forward speed is increased.

d. RECORD

Records programme.

e. STOP

Stops a recording or goes to the live programme.

f. PAUSE

Pauses the live programme or recording.


5. STANDBY

Switches between operation and standby modes.

6. MENU

Displays the main menu.


1. Before Using the Product

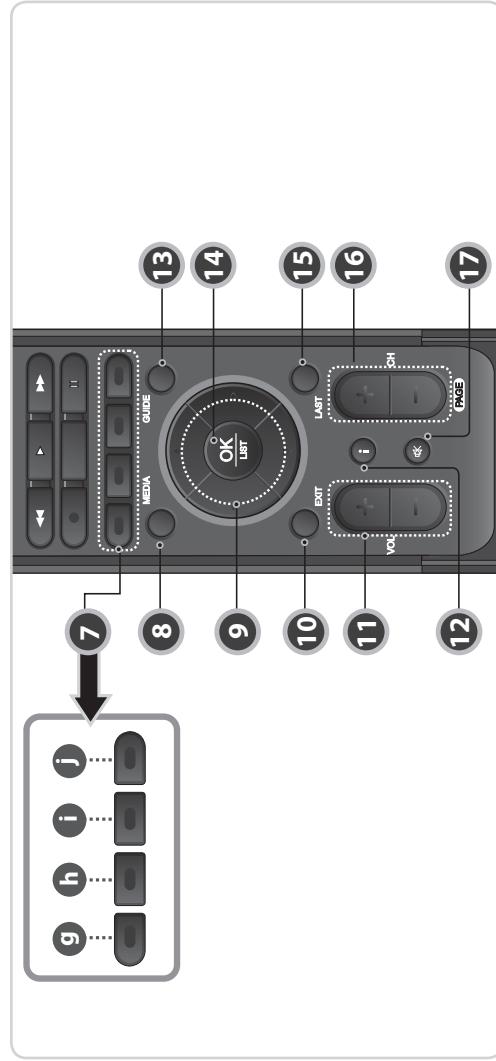

7. COLOUR BUTTONS

- g. **RED**
Displays the channel list in normal viewing mode.
- h. **GREEN**
Displays the favourite channel list in normal viewing mode.
- i. **YELLOW**
Displays the HD channel list in normal viewing mode.
- j. **BLUE**
Displays the history channel list in normal viewing mode.
- 8. **MEDIA**
Displays the media list.
- 9. **ARROW BUTTONS**
Navigates through the menu options.
- 10. **EXIT**
Exits all On-Screen Display (OSD) screens.
- 11. **VOL+ / VOL-**
Adjusts the audio volume.
- 12. i (**INFORMATION**)
Displays the channel and programme information.
- 13. **GUIDE**
Displays the programme guide.
- 14. **OK / LIST**
Selects a menu or confirms the selected operation. Displays the channel list while watching a programme.
- 15. **LAST**
Returns to the previous channel.
- 16. **CH+ / CH-**
Changes the channel.
- 17. **MUTE**
Mutes or unmutes the audio temporarily.

1. Before Using the Product

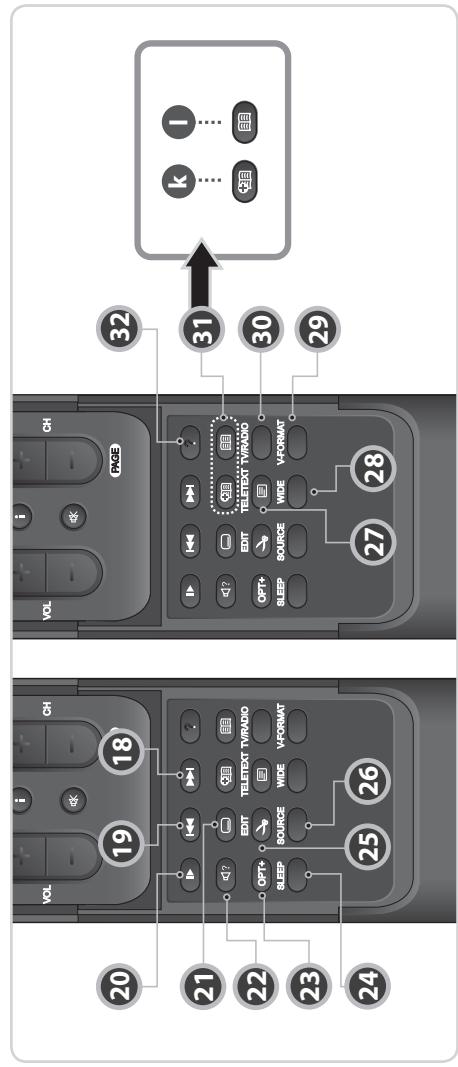

18. NEXT
Goes to the next chapter.

19. PREVIOUS
Goes to the previous chapter.

20. SLOW
Plays the programme in slow motion.

21. SUBTITLE
Displays the subtitle language list.

22. AUDIO
Displays the audio list.

23. OPT+
Select favourites, lock, delete or rename channels.

24. SLEEP
Sets the sleep time.

25. EDIT
Displays the edit screen.

26. SOURCE
Controls the output of TV SCART.

27. TELETEXT

Switches between the teletext and TV modes.

28. WIDE

Sets the display format.

29. V-FORMAT

Changes the resolution of video.

30. TV/RADIO

Switches between TV and radio modes.

31. BOOKMARK

k. ADD BOOKMARK
Saves the current viewing position as a bookmark during playback.

l. BOOKMARK LIST

Displays the list of saved viewing positions during playback.

32. ? (Help)


(Currently not supported)

1. Before Using the Product




1.6 Remote Control Batteries

1. Press down the top of the battery cover and slide the cover off.
2. Insert the new batteries. Make sure the plus (+) ends meet the plus markings on the battery case.
3. Slide the cover back into place.

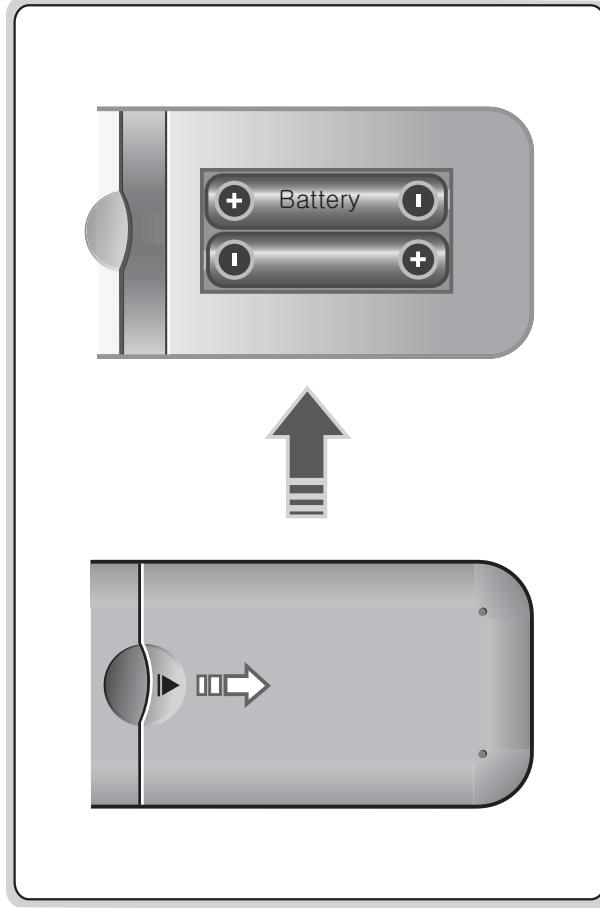

2. Setup

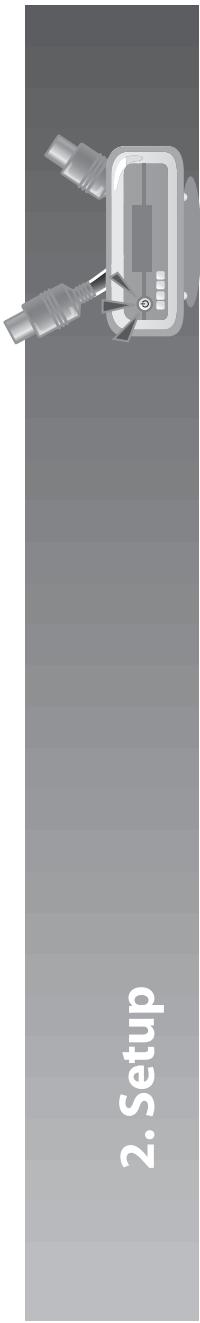

This chapter describes how to connect your product to the TV with the particular equipments for gaining optimum signal quality. The product provides various interfaces to connect to the TV, VCR or other devices. Select the most appropriate procedure depending on the equipment you have.


Note:

- If you encounter any problems setting up your product, please contact your local product distributor.
- The rear image of the TV and VCR may differ depending on the manufacturer and model.

2.1 Using HDMI Cable

The HDMI connection is recommended for Digital TV. In case the TV has an HDMI input connector, a special all-digital interface that provides the highest picture quality, connect the product and the TV using an HDMI cable as follows.

1. Connect your CATV line to the CABLE IN.
2. Connect the product and TV using an HDMI cable.

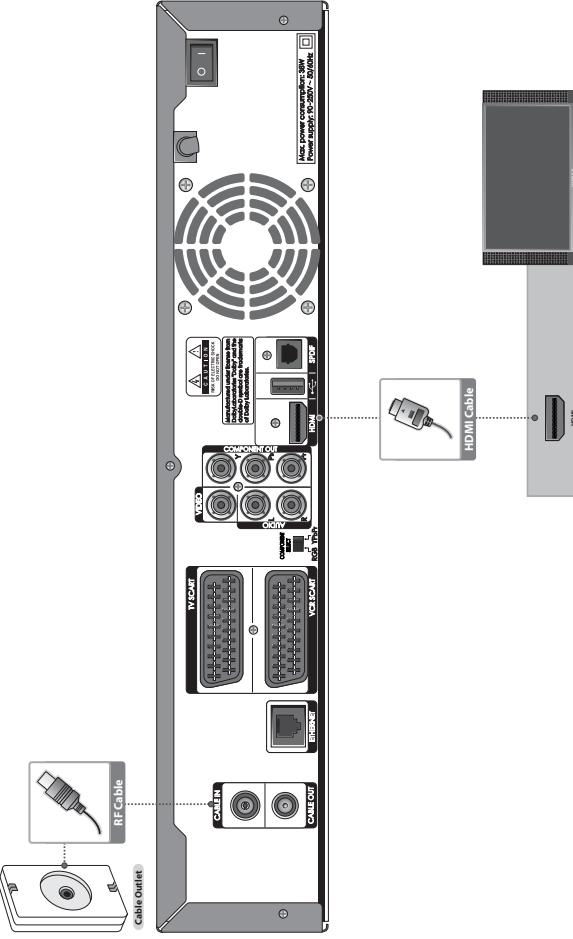

2. Setup




2.2 Using DVI Converter


The DVI connection using an HDMI to DVI converter is recommended for Digital TV. In case the TV has a DVI input connector, connect the product to the TV with an HDMI cable using an HDMI to DVI converter as follows.

1. When equipped with an A/V receiver

1. Connect your CATV line to the CABLE IN.
2. Connect one end of the HDMI cable to the HDMI input on the product and the other end to the HDMI to DVI converter.
3. Connect the DVI converter to the TV.
4. Connect the product and the Dolby Digital decoder using an S/PDIF cable.

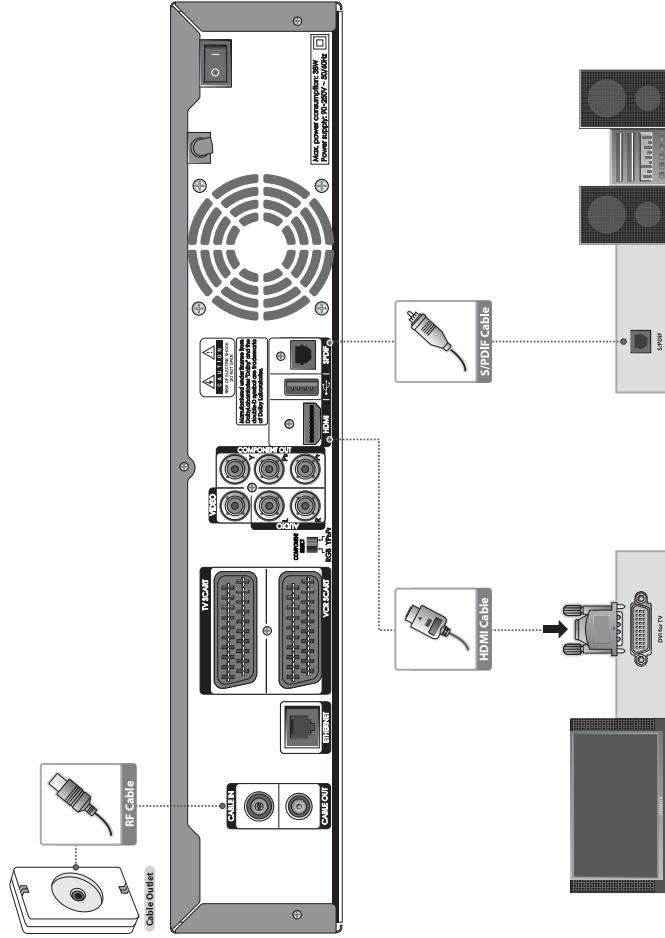

2. Setup

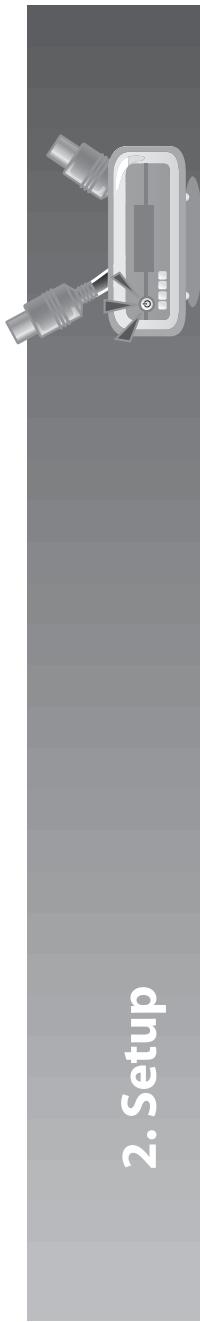


2. When there is no A/V receiver available

In case you are not equipped with an A/V receiver, connect the product and the TV using an audio cable as follows.

1. Connect your CATV line to the CABLE IN.
2. Connect the product and the TV using an RCA cable.
3. Connect one end of the HDMI cable to the HDMI input on the product and the other end to the HDMI to DVI converter.
4. Connect the DVI converter to the TV.

Note: You can also connect the product to the TV using the 3.5 Stereo Jack Cable to 2 RCA Y Cable.

Caution: DO NOT CONNECT TO HEADPHONE CONNECTOR ON TV!

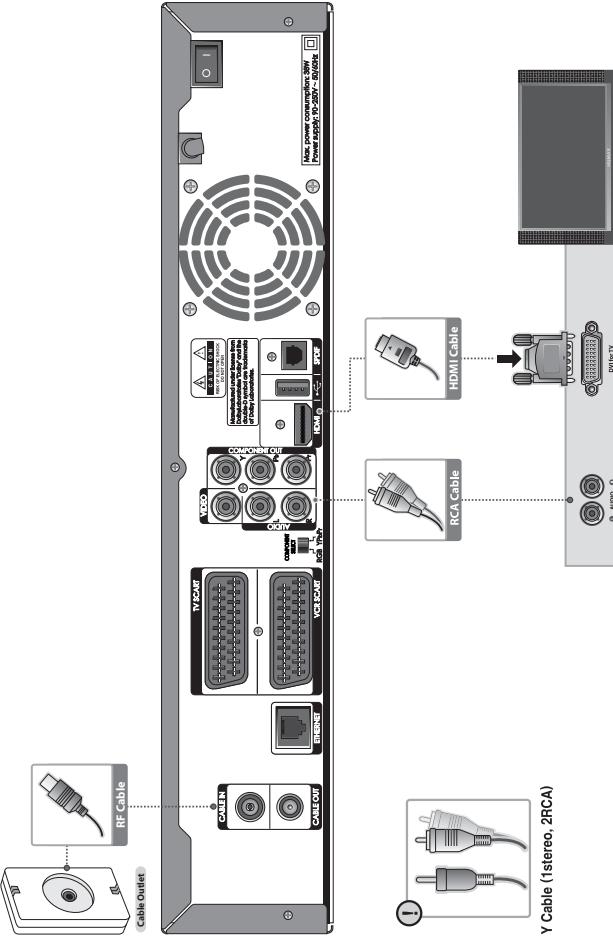


2. Setup




2.3 Using Component Cable

The component connection is recommended for Digital TV. Connect the product and the TV using a component cable as follows.

1. Connect your CATV line to the CABLE IN.
2. Connect the product and the TV using a component cable.
3. You can either:
 - Connect the product and the TV using an RCA cable (Audio L/R),
 - Connect the product and the Dolby Digital decoder using an S/PDIF cable.

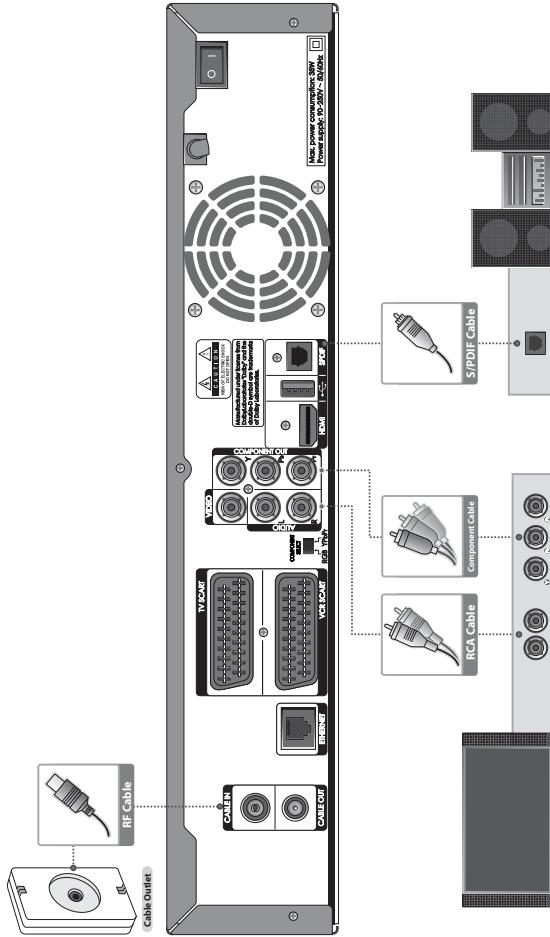

2. Setup

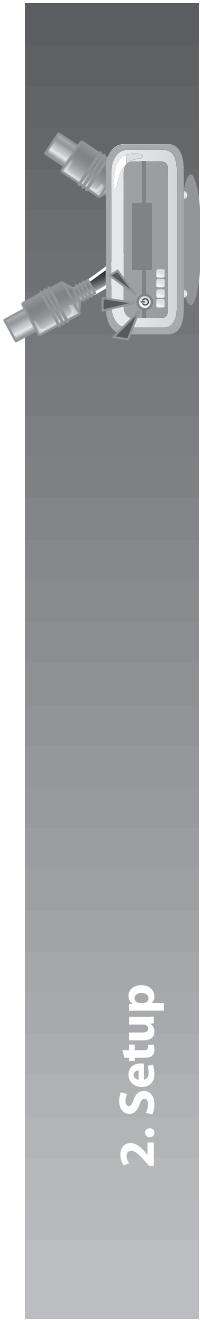


2.4 Using SCART Cable

A SCART cable connection is recommended for analogue TV or VCR. Connect the product and the TV using a SCART cable as follows.

1. Connect your CATV line to the CABLE IN.
2. Connect the product and the TV using a SCART cable.
3. Connect the product and the VCR using a SCART cable.

Note: Connecting your TV directly to the audio/video output of the product will assure a more vivid picture and enhance your viewing enjoyment.

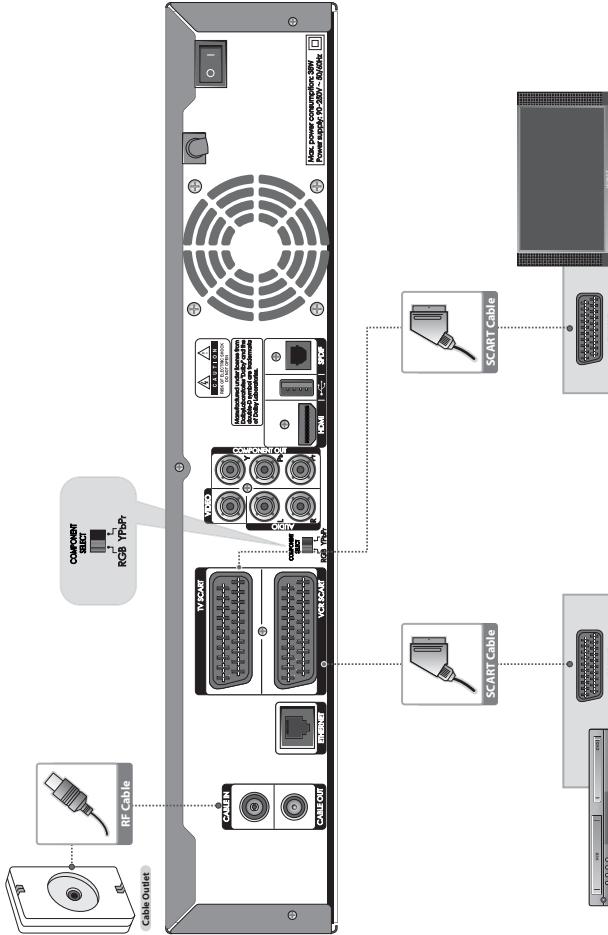


2. Setup




2.5 Powering On

1. Connect the power cord of the product to a wall outlet.
2. Turn on the power switch located at the back left side of the product.
3. Power on by pressing the **STANDBY** button or the **STANDBY** button at the front of the product.

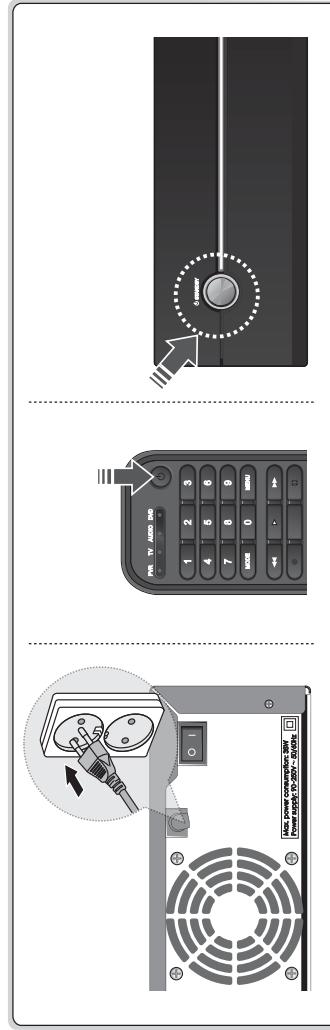

3. Installation Wizard

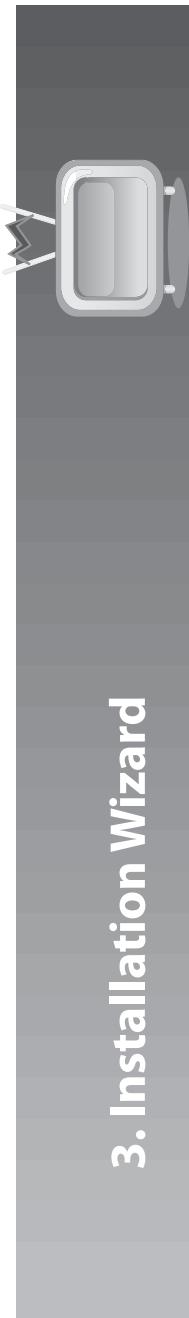

When powering on your product for the first time after purchase, the installation wizard will operate automatically.

Tip: The default password is **0000**. If you have forgotten your password, please contact your local product distributor.

3.1 Language

Language allows you to select the main language.

Select the appropriate language from the list. Press the **OK** button to save.



3.2 Search Channels

Search Channels allows you to configure the channel search setting and activate channel search.

1. Select **Frequency** and select the frequency.
You can enter the frequency directly using the **NUMERIC(0-9)** buttons.
2. Select **Symbol Rate** and select the symbol rate.
You can enter the symbol rate directly using the **NUMERIC(0-9)** buttons.
3. Select **Network ID** and select the network ID.
You can enter the network ID directly using the **NUMERIC(0-9)** buttons.
4. Select **Search** and press the **OK** button.
The channel search will start.
5. To stop the search, press the **OK** button during channel search.
6. The results will appear. Select **Save** and press the **OK** button.



3. Installation Wizard

3.3 Display

Display enables you to set the screen ratio, display format and resolution of the screen. Select the value for **Screen Ratio**, **Display Format** and **Resolution**. Select **Next** and press the **OK** button.




3.4 HDD Partition

HDD Partition enables you to view the current status of the Hard Disc Drive (HDD) storage and also format the HDD. View the HDD storage status and select **Next**. To format the HDD, select **Format HDD** and press the **OK** button. A popup will appear.

Select **Yes** and press the **OK** button. You will be prompted to enter your password. Enter the password and assign the partition size. Select **OK** and press the **OK** button. Select **Next** and press the **OK** button.



3. Installation Wizard

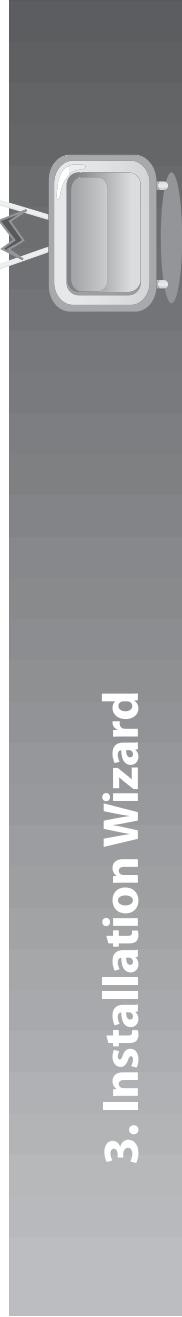

3.5 Result

After all setting is complete, you can view the result screen.

Select **Finish** and press the **OK** button to complete the installation wizard.



3.6 Installation Checklist

Before using the product, please make sure that you have completed the following steps.

Step	Page	Done?
Is the CATV line connected correctly?	GB15	
Is the product connected to your TV?	GB15	
Is the power cord plugged in the wall outlet?	GB20	
Is the power switch located at the back of the product switched on?	GB20	
Is the product in operation mode (not Standby mode)?	GB20	
Have you performed channel search in the installation wizard?	GB21	

Note: If you exit the installation wizard without fully completing the channel searching procedure, you may not have all of the channels available. In this case, you can use the installation menu to search for more channels.

4. Basic Operation

This chapter describes the basic functions the product provides such as switching channel, volume control and other common features.

4.1 Switching Channel

You can switch the current channel by pressing the **CH+/-** button or entering the channel number directly using the **NUMERIC(0-9)** buttons. Press the **TV/RADIO** button to switch between TV channels and radio channels.

Note: You can switch channels using the channel list or TV guide. To return to the previous channel, press the **LAST** button.

4.2 Volume Control

You can adjust the audio volume. Press the **VOL+/-** button to adjust the audio volume. Press the **MUTE** button to stop the audio temporarily.

Note: The mute function remains set while you switch channels.




4.3 Resolution

You can set the resolution of the screen.

Press the **V-FORMAT** button while watching a programme. The current resolution will be displayed. Each time you press the **V-FORMAT** button, the resolution changes in the following sequence:
576i→576p→720p→1080i→Original




4. Basic Operation

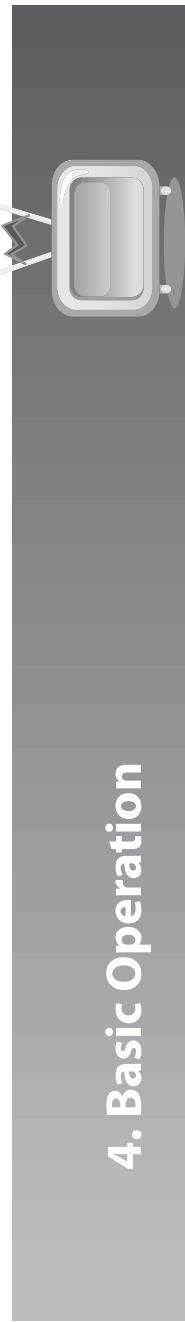

4.4 Sleep

You can set the automatic turn off time.

Press the **SLEEP** button while watching a programme to set the sleep time. Each time you press the **SLEEP** button, the sleep time changes in the following sequence: 10, 20, 30, 60, 90, 120 minutes.

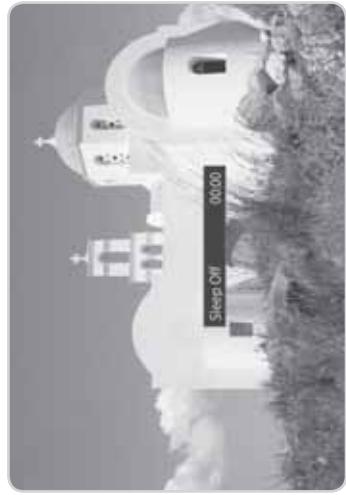

4.5 Wide

You can set the display format.

Press the **WIDE** button while watching a programme to change the display format. Each time you press the **WIDE** button, the display format changes.

Note: For more information about display format, refer to **7.5.7 Display Format**.



Screen ratio 4:3		Screen ratio 16:9	
Format	Icon and Text	Format	Icon and Text
Letter Box	Letter Box	Pillar Box	Pillar Box
Pan & Scan	Pan & Scan	Zoom	Zoom
Auto	Auto	Auto	Auto

4. Basic Operation

4.6 Audio

You can select the language you prefer in **Audio** if the current programme is available in multiple audio languages.

1. Press the **AUDIO** button.
2. Select the audio language you prefer.
3. Select audio direction (left, right, stereo) using the **◀/▶** button.

Note: If the programme is broadcast in Dolby Digital, you cannot set the audio direction.



4.7 Subtitle


You can select the language for the subtitle if the programme provides subtitle information.

1. Press the **SUBTITLE** button.
2. Select the required subtitle language and press the **OK** button. The subtitle will be displayed in the selected language at the bottom of the screen.
3. Select **Off** from the subtitle language list to hide the subtitle from the screen.

Note: When there is no subtitle available, **Off** does not appear.



4. Basic Operation

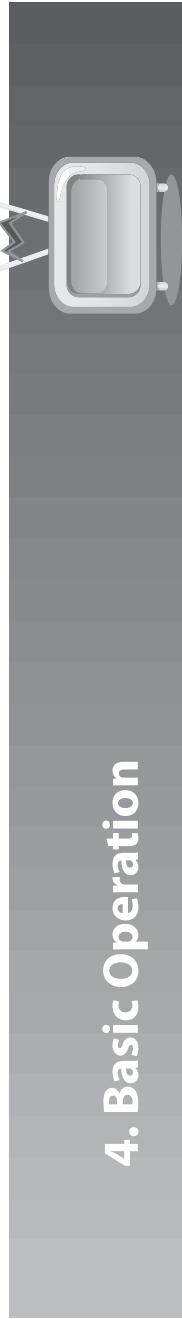

4.8 Teletext

All teletext supporting channels have the teletext icon on the i-plate.

1. Press the **TELETEXT** button.
 2. To display the teletext menu, press the **MENU** button in teletext mode.
 3. Select the teletext function you want and press the **OK** button.
- 

4.9 Programme Information (i-plate)

The i-plate is always displayed for a certain period of time whenever you switch channels. You can view the programme information by pressing the **i** button while watching a programme. Press the **EXIT** button to hide the i-plate.


After switching to a channel, press the **◀▶** button to display navigation mode.

Press the **◀▶** button to view the previous/next programme information.

Press the **▲▼** button to view the programme information of other channels.

1. General Information

The general information is displayed on the screen as the following.

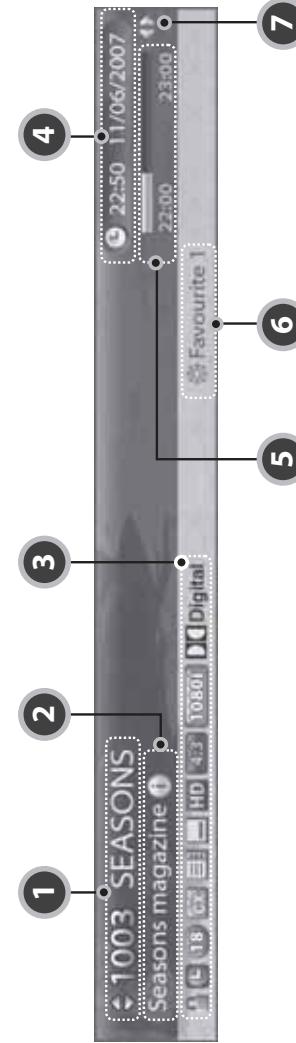

4. Basic Operation

1. Channel number and name
2. Programme name
3. Icons



Displayed only when the channel is a locked channel.



Displayed only if the programme is reserved for recording.



Represents parental level. Indicates the minimum level of age for viewing the programme.



Displayed only when the channel is a scrambled channel.



Displayed only when there is any teletext information.



Displayed only when subtitle information is available.



Displayed only when the channel provides HD programmes.



Displays the screen ratio of the current programme.



Displays the resolution of the current programme.



Displayed only when the programme is broadcast in Dolby Digital.

4. Current time & date
5. Programme broadcasting time and progress bar: Displays programme playing time and progress bar.

6. Group name: Displays the group the channel belongs to.

7. Previous/Next programme information: Displayed if previous/next programme information is provided. Press the ▲/▼ button to display previous/next programme information.


Note: If there is no programme information available, programme information is not displayed.

2. Detailed Programme Information


You can see the detailed information about the current programme.
Press the **i** button when the i-plate is displayed to view detailed information. Press the **i** button once more to hide the i-plate.

Note:

- If the detailed programme information is over one page, use the ▲/▼ button to move to the previous or next page.
- Press the ▲/▼ button to display previous/next programme information.

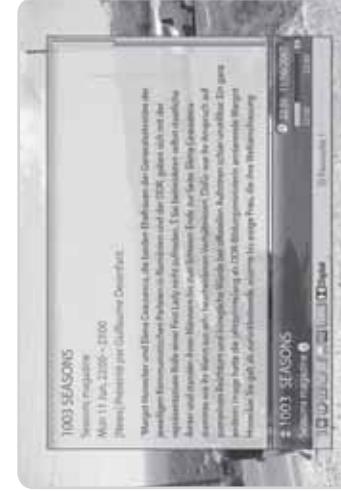

5. Channel List

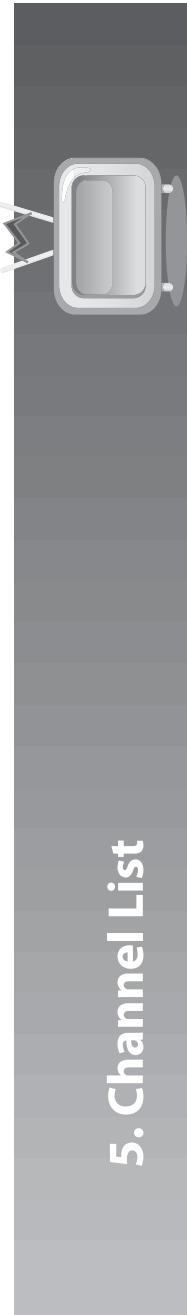

This chapter will help you manipulate the channel list. You can display the channel list by pressing the **OK** button while watching a programme.

Six types of channel lists are provided for quick and easy channel search.

My TV (RED)	TV: The list of all TV channels. Radio: The list of all radio channels.
Favourite (GREEN)	The list of the favourite channels in five groups.
HD (YELLOW)	The list of all HD TV channels.
History (BLUE)	Most Viewed: The list of the most viewed channels. Recently Viewed: The list of the recently viewed channels.

Note:

- Press the **EXIT** button to exit the channel list.
- The sub-groups of favourite channel list exist only after configuration.

5.1 My TV List

My TV List is the list of all channels available including both TV and radio channels.

1. Press the **OK** button while watching a programme to display the channel list.
2. Press the **RED** button while the channel list is displayed.
3. Select the channel you wish to view and press the **OK** button. You can also enter the channel number using the **NUMERIC(0-9)** buttons.
4. Press the **RED** button again or use **◀/▶** buttons to change the subgroup.

Note: You can switch between TV and radio by simply pressing the **TV/RADIO** button.



5. Channel List

1. Option

1. Select a channel and press the **OPT+** button.
 2. To add the channel to the favourite group, select **Favourite**. Select the group using the **◀▶** button and press the **OK** button.
 3. To lock the channel, select **Lock** and press the **OK** button.




2. Configuration

1. Press the **MENU** button.
 2. To display the icon, enable **Show Icon** and press the **OK** button.
 3. To display the channel number, enable **Show Channel/Number** and press the **OK** button.
 4. To close the channel list automatically by pressing the **OK** button, enable **Close automatically** and press the **OK** button.
 5. To change the list type, select from **Simple**, **One Column** and **Two Column** and press the **OK** button.



5. Channel List

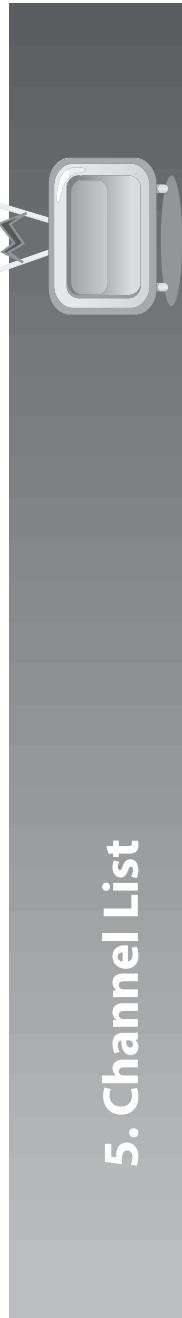

5.2 Favourite List

Favourite List is the list of the favourite channels you can select yourself from the entire channel list. There are five favourite groups in total.

1. Press the **OK** button while watching a programme.
2. Press the **GREEN** button to display the list of favourite groups.
3. Press the **GREEN** button again and select a favourite group using the **◀/▶** button.



5.3 HD List

HD List is the list of all HD channels.

1. Press the **OK** button while watching a programme.
2. Press the **YELLOW** button to display the HD list.



5. Channel List

5.4 History List

History List is the list of the most or recently watched channels.

1. Press the **OK** button while watching a programme.
2. Press the **BLUE** button to display the history list.
3. Press the **BLUE** button again and select **Most Viewed** and **Recently Viewed** using the **◀▶** button.




5.5 Pay Per View Channels

You can order programmes in PPV channels. When switching to a PPV channel, information of the programme such as the title, time, or price will appear.

1. Follow the instructions on the screen.
2. If you press the **OK** button, you will be prompted to enter the CA PIN.

Note: When the PPV channel is locked due to maturity lock, you will be prompted to enter the CA PIN.
You can change the CA PIN in **10.3 Conditional Access**.

6. TV Guide

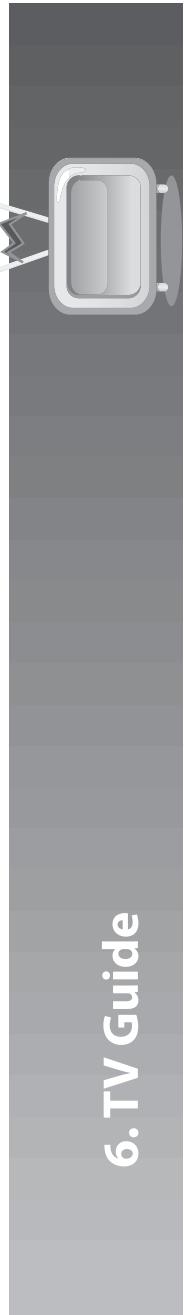

The **TV Guide** displays the programme information of each channel, in time and date order. You can customize your own programme guide to list the channels or programmes of interest to you and schedule your viewing using the programme information.

Note: Press the **GUIDE** or **EXIT** button to exit the TV guide screen.

6.1 Using TV Guide

You can view the programme information of all channels in time and date order.

1. Press the **GUIDE** button.
2. Press the **RED** button.

1. Table Guide

1. Move to the previous/next programme within the same channel using the **◀▶** button.
2. Move to another channel using the **▲▼** button. If the contents are more than one page, use the **CH+/-** button to skip to the next page. Enter the number of the channel you wish to move using the **NUMERIC(0-9)** buttons.
3. Jump back/ahead two hours using the **FAST REWIND/FAST FORWARD** button.
4. Move to the previous/next day using the **PREVIOUS/NEXT** button.
5. Select the programme you want and press the **OK** button to play the programme in the PIG (Picture in Guide). Press the **OK** button again to view the programme.



6. You can reserve it if it is a future programme. Select a future programme and press the **OK** button to see the reservation popup. Select the reservation mode and repeat frequency.

Record	Reserved for recording.
Watch	Reserved for watching.

7. Select a reserved programme and press the **OK** button to cancel the reservation.
8. Press the **OPT+** button to display the channels of each channel list. Change the channel list using the **◀▶** button.
9. Press the **WIDE** button to change the length of the time scale in 30, 60, 90, 120 min order.

6. TV Guide

2. Instant Reservation

1. Select a programme in the EPG table and press the **RECORD** button. The selected programme will become reserved and the recording icon will appear immediately.
2. To cancel the reservation, select the programme and press the **STOP** button. The reservation will be canceled immediately.

Note: You cannot reserve new programmes when the HDD is already full. Please delete another recorded programme.


6.2 EPG List

EPG List displays the programme information for approximately a week. The features are similar as in EPG table.

1. Press the **GUIDE** button.
2. Press the **GREEN** button to switch to EPG list.

Note:

- Press the **TV/RADIO** button to switch to TV or radio.
- You can reserve the programme after viewing the programme information.

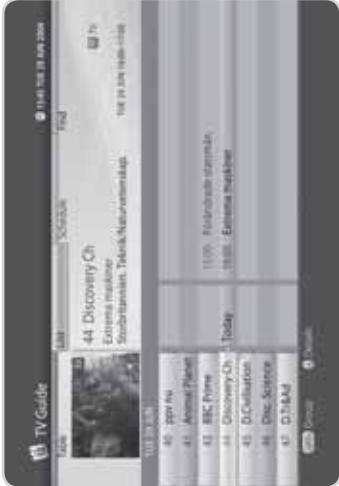

6.3 Schedule

Schedule displays the list of the programmes reserved. You can modify, delete or make new reservations.


1. Press the **GUIDE** button.
2. Press the **YELLOW** button to display the schedule of reservations.
3. Press the **YELLOW** button again to switch from watching list to recording list.

Note:

- Press the **LAST** button to sort the list in time or alphabetical order.
- Press the **TV/RADIO** button to switch to TV or radio list.




6. TV Guide

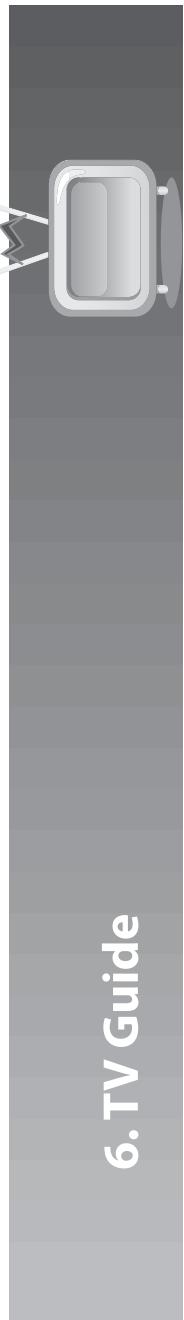

1. Editing Reservations

1. Select a reservation you want to edit and press the **OK** button. The reservation popup will appear.
2. Select **Channel** and press the **OK** button to display the channel list. Select the channel.
3. Select **Date** and press the **OK** button to view the calendar. Select the date.
4. Select **Start Time** or **End Time** and enter the time using the **NUMERIC(0-9)** buttons.
5. Select **Repeat** and change the repeat frequency using the **◀▶** button.
6. Select **Mode** and switch from **Record** to **Watch**.
7. Select **OK** and press the **OK** button.

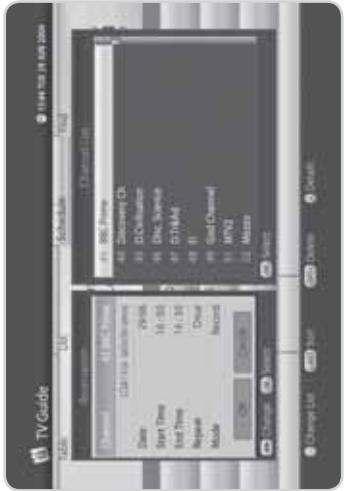

2. Deleting Reservations

1. Select a reservation you want to delete.
2. Press the **OPT+** button to delete the reservation.

3. New Reservation

1. Select a blank space and press the **OK** button.
2. The reservation popup will appear. Enter the channel number, date, start/end time, repeat frequency and mode and then press the **OK** button.

Note:

- Reservations for deleted channels or past programmes are automatically deleted.
- In case the channel number has changed, reservation has to be done again.



6. TV Guide




6.4 Find

Find enables you to find the programme you want by entering the genre, name, time and day of the programme.

1. Press the **GUIDE** button.
2. Press the **BLUE** button to find programme.
3. Enter the keyword, genre, time & day of the programme and select **Search** and then press the **OK** button.


1. Search by Keyword

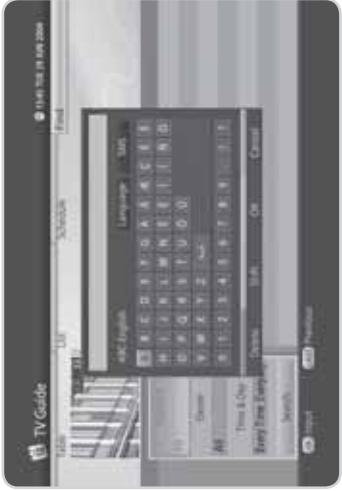

1. Press the **OK** button while the cursor is on **Keyword**.
2. A keyboard will appear. Enter the keyword.
3. Select **Language** and choose the language of the keyword.
4. Select **SMS** to switch to SMS keyboard.
5. Press the **YELLOW** button to complete.

Note: Press the **LAST** button to display seven of the most recent keywords that have been entered.

2. Search by Genre

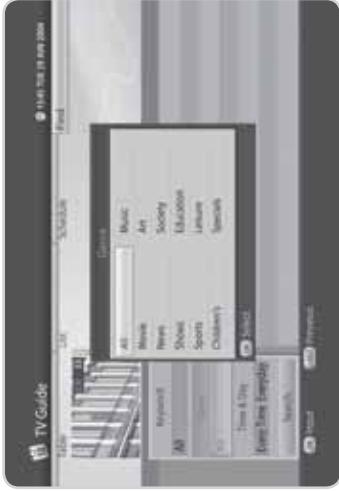

1. Press the **OK** button while the cursor is on **Genre**.
2. The list of genres will appear. Select a genre and press the **OK** button.

6. TV Guide




3. Search by Time and Day

1. Press the **OK** button while the cursor is on **Time & Day**.

2. The time & day popup will appear. Select the time and day using the **OK** and **◀▶** button.

3. Select **OK** and press the **OK** button.

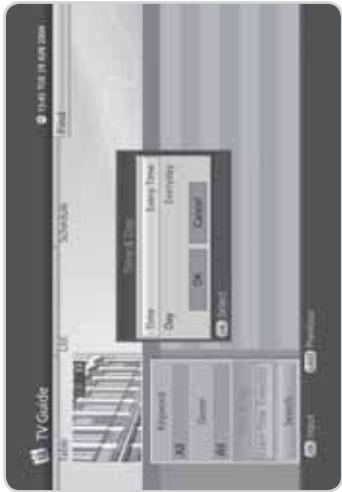

4. Search Result

1. Select **Search** and press the **OK** button to proceed.
 2. The search result of the entered values will appear.
 3. To reserve a programme, select a future programme and press the **OK** button.



7. Preferences

In this chapter you can set parental control, language setting, time setting, media setting, A/V setting and other configuration items to keep limitations where you want them for the viewers.

Note: Press the **EXIT** button to save the changes and return to the previous menu. Press the **MENU** button to exit the menu screen.

7.1 Parental Control

Parental Control allows you to set rating limits for each programme according to the age of the viewer or change your previous password. You can also lock the changes you have made using installation lock.

Tip: The default password is **0000**.

1. Press the **MENU** button.
2. Select **Preferences** using the **▲/▼** button and press the **OK** button.
3. Select **Parental Control** using the **▲/▼** button and press the **OK** button.
4. You will be prompted to enter your password. Enter the password using the **NUMERIC(0-9)** buttons.



1. Age Limit

Age Limit enables you to place certain restrictions on the viewers by setting age limits. The password is required to view the blocked programmes.

1. Select **Age Limit** and press the **OK** button.
2. Select the age limit you wish to set.

View All	All programmes can be watched. (No age limitation)
7, 12, 15, 18	Programmes are blocked for children under the age 7, 12, 15, 18.
Lock All	All programmes are blocked.



Note: You must enter your password to watch programmes blocked by the age restriction.

7. Preferences

2. Change Password

Change Password allows you to change the current password.

1. Select **Change Password** and press the **OK** button.
2. Enter the password in **New Password** using the **NUMERIC(0-9)** buttons.
3. Enter the password again in **Verify Password** to confirm.



3. Installation Lock

Installation Lock allows you to block access to the installation menu settings you have previously made.

1. Select **Installation Lock**.
2. Select **Enable** or **Disable** using the **OK** or **◀▶** button.

4. CA-PIN for Reservation

When reserving programmes that are locked by parental control, the CA-PIN is required. Enable this menu and enter the CA-PIN to assure the CA-PIN is asked when watching the recorded programme.

1. Select **CA-PIN for Reservation** and press the **OK** button.
2. Enter the CA-PIN to enable.

Note: If this option is disabled, recording may not operate properly.

7. Preferences

7.2 Language Setting

Language Setting enables you to set the basic language and subtitle options such as menu language, audio language, subtitle language, subtitle display and subtitle font.

1. Press the **MENU** button.
2. Select **Preferences** using the **▲/▼** button and press the **OK** button.
3. Select **Language Setting** using the **▲/▼** button and press the **OK** button.



1. Menu Language

Menu Language is the language for all menus and OSD screens.

1. Select **Menu Language** and press the **OK** button.
2. Select the language you want and press the **OK** button.



2. Audio Language

Audio Language is the audio language that is selected automatically when the channel is changed.

1. Select **Audio Language** and press the **OK** button.
2. Select the audio language you want and press the **OK** button.

7. Preferences

3. Subtitle Language

Subtitle Language is the subtitle language that is selected automatically when the channel is changed.

1. Select **Subtitle Language** and press the **OK** button.
2. Select the subtitle language you want and press the **OK** button.

4. Subtitle Display

Subtitle Display allows you to display the subtitle automatically. This service is provided when subtitles are available.

1. Select **Subtitle Display**.
2. Select **Auto** or **Manual** using the **OK** or **◀▶** button.

Auto	Subtitles are displayed automatically in the predefined subtitle language.
Manual	Subtitles are displayed only when you press the SUBTITLE button and set subtitle.

5. Subtitle Font

Subtitle Font enables you to select the font of the subtitle.

1. Select **Subtitle Font**.
2. Select **Variable** or **Fixed** using the **OK** or **◀▶** button.

Variable	Uses the horizontally variable subtitle font of the on-screen display.
Fixed	Uses the fixed subtitle font as in teletext.

7. Preferences

7.3 Time Setting

Time Setting allows you to set the current time and set the time you want to turn the product on or off.

1. Press the **MENU** button.
2. Select **Preferences** using the **▲/▼** button and press the **OK** button.
3. Select **Time Setting** using the **▲/▼** button and press the **OK** button.



1. Power ON

You can set the time the product turns on automatically.


1. Select **Power ON**.
2. Enter the powering on time using the **NUMERIC[0-9]** buttons or select **Disable** using the **OK** or **◀▶** button.



2. Power ON Channel

You can select the channel to watch when the product turns on at the preset wakeup time.

1. Select **Power ON Channel** and press the **OK** button to display the channel list.
2. Select the channel and press the **OK** button.

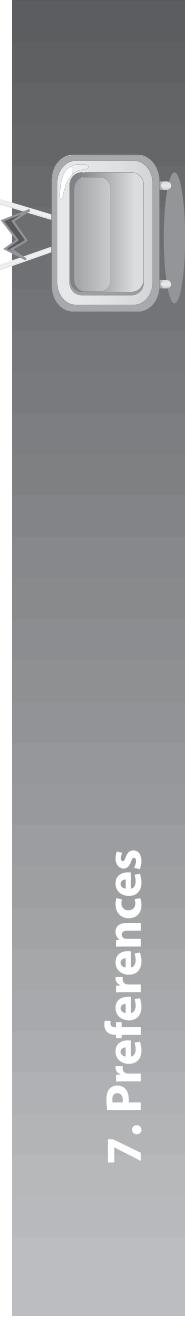

7. Preferences

3. Power OFF

You can select the time the product turns off automatically.

1. Select **Power OFF**.
2. Enter the powering off time using the **NUMERIC(0-9)** buttons or select **Disable** using the **OK** or **◀▶** button.

4. System Update Time

You can set the time the system automatically updates. If you select **Disable**, system update will not occur.

1. Select **System Update Time** and press the **OK** button.
2. Select the system update time using the **◀▶** or **NUMERIC(0-9)** buttons.

7. Preferences

7.4 Media Setting

Tip: The default password is **0000**.

1. Press the **MENU** button.
2. Select **Preferences** using the **▲/▼** button and press the **OK** button.
3. Select **Media Setting** using the **▲/▼** button and press the **OK** button.



1. HDD Control

You can format the video/radio partition, music/photo partition or the hard disk drive.

1. Select **HDD Control** and press the **OK** button
2. To format the video/radio partition, select **Format Video/Radio Partition** and press the **OK** button. Enter the password to proceed.
3. To format the music/photo partition, select **Format Music/Photo Partition** and press the **OK** button. Enter the password to proceed.
4. To format the hard disk drive, select **Format HDD** and press the **OK** button. Enter the password and assign the partition size using the **◀/▶** button. Select **OK** and press the **OK** button.



2. USB Control

You can format the USB storage.

1. Select **USB Control** and press the **OK** button
2. To format the USB storage, select **Delete all files** and press the **OK** button. A popup will appear. Select **Yes** and press the **OK** button. You will be prompted to enter your password. Enter the password using the **NUMERIC(0-9)** buttons.

7. Preferences

3. Recording Options

You can set the recording padding time in case the recording starts earlier or ends later than scheduled.

1. Select **Start/End Padding** and press the **OK** button.
2. Select the padding time using the **OK** or **◀/▶** button.



7. Preferences

7.5 A/V Setting

You can configure the audio and video output settings.

1. Press the **MENU** button.
2. Select **Preferences** using the **▲/▼** button and press the **OK** button.
3. Select **A/V Setting** using the **▲/▼** button and press the **OK** button.



1. TV SCART

You can select the TV SCART output option.

1. Select **TV SCART** and press the **OK** button.
2. Select among **CVBS**, **S-Video** and **RGB** and press the **OK** button.

Note: You can select **RGB** only when the Component Select switch at the rear is on **RGB**.



2. VCR SCART

You can select the VCR SCART output option.

1. Select **VCR SCART**.
2. Select **CVBS** or **S-Video** using the **OK** or **▲/▼** button.

7. Preferences

3. Audio Output

You can select the audio output option.

1. Select **Audio Output**.
2. Select **Stereo** or **Mono** using the **OK** or **◀▶** button.

4. Dolby Digital Output

You can set Dolby Digital automatically. If you select **On**, Dolby Digital audio will be output via S/PDIF.

1. Select **Dolby Digital Output**.
2. Select **Off** or **On** using the **OK** or **◀▶** button.

5. Lip-Sync

You can adjust the sound difference of audio and video.

1. Select **Lip-Sync** and press the **OK** or **▶** button.
2. Adjust the sync using the **◀▶** button.
3. Press the **LAST** button to complete.

Note: Lip-Sync is applied to all channels when once adjusted.

6. Screen Ratio

You can select the screen ratio option.

1. Select **Screen Ratio**.
2. Select **4:3** or **16:9** using the **OK** or **◀▶** button.

7. Display Format

You can select the display format according to the screen ratio.

1. Select **Display Format** and press the **OK** button.
2. When choosing **4:3** as screen ratio, select among **Auto**, **Letter Box**, **Pan & Scan** and press the **OK** button.
3. When choosing **16:9** as screen ration, select among **Auto**, **Pillar Box**, **Zoom** and press the **OK** button.

Screen Ratio	4:3	16:9
Display Format	Letter Box, Pan & Scan, Auto	Pillar Box, Zoom, Auto

7. Preferences

7.6 Other Settings

You can configure other settings such as info display time and OSD transparency.

1. Press the **MENU** button.
2. Select **Preferences** using the **▲/▼** button and press the **OK** button.
3. Select **Other Settings** using the **▲/▼** button and press the **OK** button.



1. Info Display Time

You can set the automatic display time of the information box when the channel is switched.

1. Select **Info Display Time** and press the **OK** button.
2. Select a value between **Disable**, **1~20** seconds and press the **OK** button.

Note: When set to **Disable**, the i-plate will not be displayed when you switch the channel.


2. OSD Transparency

You can set the transparency of the On-Screen Display.

1. Select **OSD Transparency** and press the **OK** button.
2. Select among **Disable**, **25%**, **50%** and **75%** and press the **OK** button.

Disable	Fully opaque screen
25%, 50%, 75%	The bigger the number, the more transparent the screen.

8. Edit Channels

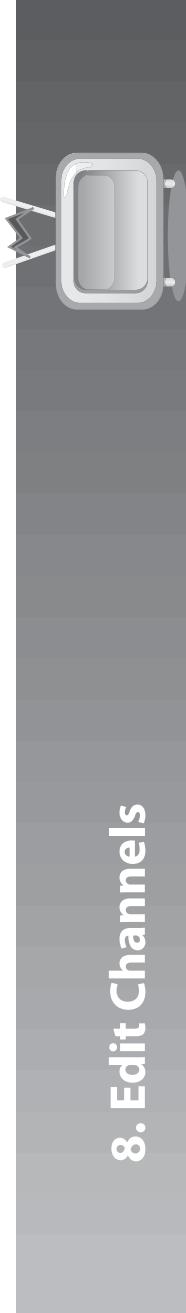

In this chapter you can edit all channels in the channel list or make changes to the favourite lists of the channels you have chosen.

Note:

- Press the **EXIT** button to save the changes and return to the previous menu. Press the **MENU** button to exit the menu screen.
- Press the **TV/RADIO** button to move to TV or radio channel list directly.

8.1 Edit Channel List

Edit Channel List enables you to select or lock/unlock the channels in the channel list conveniently.

1. Press the **MENU** button.
2. Select **Edit Channels** using the **▲/▼** button and press the **OK** button.
3. Select **Edit Channel List** using the **◀/▶** button and press the **OK** button.



1. Locking/Unlocking Channels

Tip: The default password is **0000**.

1. Select the channel you want to lock and press the **OK** button. Press the **RED** button.
2. To unlock a locked channel, select the channel and press the **OK** button. Press the **RED** button.

Note: To watch locked channels, you must enter the password using the **NUMERIC(0-9)** buttons.



8. Edit Channels

2. Selecting a Channel Group

1. Press the **GREEN** button to display the list of groups.
2. Select the group you want and press the **OK** button.



3. Select/Release All

1. To select all channels, press the **YELLOW** button.
2. To release all channels, press the **BLUE** button.



8. Edit Channels

8.2 Edit Favourite List

You can add or remove channels from the favourite groups, move favourite channels, rename favourite groups and move the favourite groups.

1. Press the **MENU** button.
2. Select **Edit Channels** using the **▲/▼** button and press the **OK** button.
3. Select **Edit Favourite List** using the **▲/▼** button and press the **OK** button.



1. Adding/Removing Channels

1. Select the channels you want to add to the favourite channel list and press the **OK** button.
2. Press the **RED** button to add the channels to the favourite list you have chosen.
3. To remove channels from the favourite list, select the channels from the list and press the **RED** button.

Note: When the cursor is on the left column, the red button is marked **Add**; when the cursor moves to the right column, it becomes **Remove**.



2. Selecting Favourite Groups

1. Press the **GREEN** button to display the list of groups.
2. Select the favourite group you want and press the **OK** button.

3. Select All/Release All

1. Press the **YELLOW** button to select all channels in the favourite list.
2. To release all channels, press the **YELLOW** button again.

8. Edit Channels

4. Renaming Favourite Groups


1. Select the favourite group you want to rename and press the **OK** button.
 2. Press the **BLUE** button.
 3. Select **Rename Group** and press the **OK** button.
 4. A keyboard will appear. Enter the name of the favourite group using the keyboard.
 5. Press the **YELLOW** button to complete.
- Note:** The **YELLOW** and **BLUE** buttons become activated only when the cursor is placed on the right column.



5. Moving Favourite Channels

1. Select the favourite channels to move within the favourite channel list and press the **OK** button.
2. Press the **BLUE** button.
3. Select **Move** and press the **OK** button.
4. Move the cursor to the destination using the **▲/▼** button, and press the **OK** button.
5. The selected channel is moved to the new location.

9. Installation

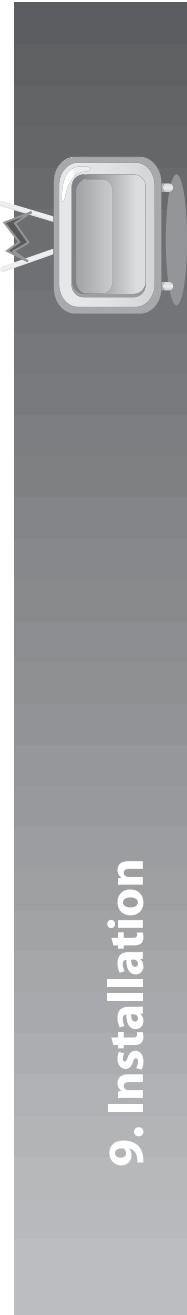

In this chapter you can configure the installation setting and perform channel search. Menus such as channel search, software update and default setting are included in this section.

Note: Press the **EXIT** button to save the changes and return to the previous menu. Press the **MENU** button to exit the menu screen.

9.1 Channel Search

1. Press the **MENU** button.
2. Select **Installation** using the **▲/▼** button and press the **OK** button.
3. Select **Channel Search** using the **▲/▼** button and press the **OK** button.
4. Select **Frequency** and select the frequency. You can enter the frequency directly using the **NUMERIC(0-9)** buttons.
5. Select **Symbol Rate** and select the symbol rate. You can enter the symbol rate directly using the **NUMERIC(0-9)** buttons.
6. Select **Network ID** and select the network ID. You can enter the network ID directly using the **NUMERIC(0-9)** buttons.
7. Select **Search** and press the **OK** button. The channel search will start.
8. To stop the search, press the **OK** button during channel search.
9. The results will appear. Select **Save** and press the **OK** button.

Note: If there are no channels available, a message indicating the result will pop up.



9. Installation

9.2 Software Update

Software Update allows you to update the system software.

1. Press the **MENU** button.
2. Select **Installation** using the **▲/▼** button and press the **OK** button.
3. Select **Software Update** using the **▲/▼** button and press the **OK** button.
4. When new software is detected, you can choose to download the software immediately or save for later.

Note: When there is no new software to update, a popup will appear.



9.3 Default Setting

Tip: The default password is **0000**.

Default Setting enables you to restore the product to the factory default.

Warning: Please note that one you perform **Default Setting**, all data such as antenna setting information, channel list and all user configured data will be deleted.

1. Press the **MENU** button.
2. Select **Installation** using the **▲/▼** button and press the **OK** button.
3. Select **Default Setting** using the **▲/▼** button and press the **OK** button.
4. Select **Yes** and press the **OK** button to restore all setting to factory default. To return to the previous menu, select **No** and press the **OK** button.
5. You will be prompted to enter your password again before starting to load default setting. Enter the password to proceed.
6. When default setting is completed, installation wizard pops up automatically and assists channel search.

Note: For detailed information about the installation wizard, refer to **Chapter 3. Installation Wizard**.

10. System

10.1 Status

You can view the model name, software version, loader version, system ID, STB ID, Chip ID, update date, Micom version and MAC address of the product.

1. Press the **MENU** button.
2. Select **System** using the **▲/▼** button and press the **OK** button.
3. Select **Status** and press the **OK** button.
4. The system status information will be displayed.



10.2 Signal Detection

You can view the antenna, transponder information, signal strength and quality of the two tuners.

1. Press the **MENU** button.
2. Select **System** using the **▲/▼** button and press the **OK** button.
3. Select **Signal Detection** and press the **OK** button.
4. The information of the two tuners will be displayed.



10. System

10.3 Conditional Access

1. Press the **MENU** button.
 2. Select **System** using the **▲▼** button and press the **OK** button.
 3. Select **Conditional Access** and press the **OK** button.

1. Subscription Status

You can view the subscription status of the channels subscribed. Press the ▲/▼ button to scroll up/down the list.



2. Event Status

You can view the status of the reserved events. Press the **▲▼** button to scroll up/down the list.

3. Tokens Status

You can view the tokens status. Press the **▲▼** button to scroll up/down the list.

4. Change CA PIN

You can change the current CA PIN.

2. A popup will appear. Enter the CA PIN in the

3. Enter the new CA PIN and confirm the new CA PIN to complete.



10. System

5. Maturity Rating

You can change the maturity rating setting.

1. Select **Maturity Rating** and press the **OK** button.
2. Select **Change Maturity Rating** and select the rating value using the **OK** or **►** button.




6. Messages

You can view the conditional access messages. Press the **▲/▼** button to scroll up/down the list.

7. About Conax CA

You can view the Smartcard information.

11. Media List

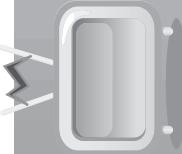


There are four types of lists for different kinds of media files. You can display each list by pressing the colour buttons on the remote control. Press the **MEDIA** button. The media list will appear.

Video (RED)	The recorded file list
Radio (GREEN)	The radio file list
Music (YELLOW)	The music file list
Photo (BLUE)	The photo file list

11.1 Video

Press the **RED** button while displaying the media list to display the recorded file list. The recorded file list is displayed as the following.

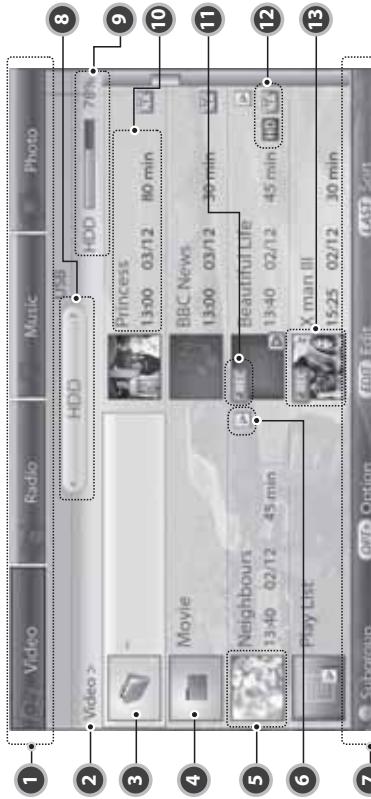


1. First group name
2. Path of present folder
3. Icon of parent folder
4. Icon of folder
5. Thumbnail of recording
6. Icon of file in play list
7. Key help
8. Second group name of storage
9. Used size of HDD or USB storage
10. File name, time, date, duration
11. Icon of recording file
12. HD/CAS icon
13. Block picture

Note:

- Press the **LAST** button to sort the files by name or time.
- The icon (▶) will be displayed when the file is being played.
- When a USB memory stick or external HDD is connected to the USB host, the title of the group becomes USB. Use the colour keys to access the **USB** of each mode.

11. Media List

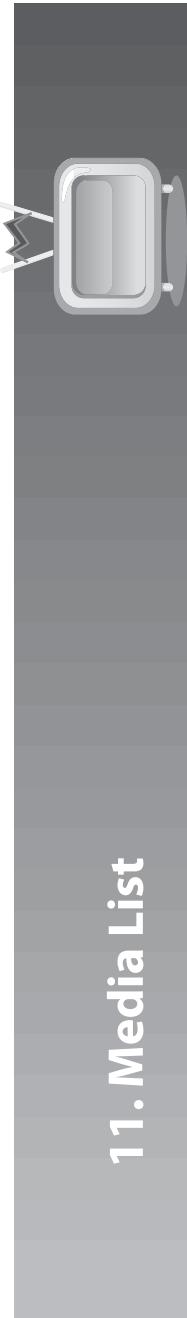

1. Play Option

1. Select a recorded file you want to playback and press the **OK** button. A popup will appear to display the play option.
2. Select **Play from the start** and press the **OK** button to play the recorded file from the beginning.
3. Select **Play from the last played position** and press the **OK** button to play the recorded file from the point it has been stopped.
4. Select **Desramble a file** and press the **OK** button to close the media list and desramble the file.
5. Select **View a playlist** and press the **OK** button to view the play list of the current folder.
6. Select **Delete a file** and press the **OK** button to delete the file. Select **Yes** and press the **OK** button.
7. Select a still image and press the **◀/▶** button to select the chapter you wish to view.

Note:

- If the file you have selected is a scrambled file, select **Desramble a File**.
- When time delay occurs, you may not be able to desramble or play the scrambled file.
 - A chapter is made automatically by dividing a file into eight smaller files and capturing a still image of each smaller file. Chapters are used in play option and in normal playback by pressing the **PREVIOUS** and **NEXT** buttons.



2. Play List

1. Select **View a playlist** in **Play Option** or select **Make List** in edit mode and press the **OK** button.
2. Select a file in the playlist and press the **OK** button to play the selected file.
3. Press the **RED** button to delete the file and renumber the list.
4. Press the **GREEN** button to move the file within the list. Press the **OK** button to complete.



11. Media List

3. Option

-
1. Select a file in the video list and press the **OPT+** button.
 2. To lock the file, select **Lock** and press the **OK** button. When unlocking a locked file, you will be prompted to enter your password. Enter the password and press the **OK** button.
 3. To delete the file, select **Delete** and press the **OK** button. A popup will appear. Select **Yes** and press the **OK** button.
 4. To rename the file, select **Rename** and enter the name directly using the keyboard displayed on the screen. Press the **YELLOW** button to complete.
 5. To move the file to another folder, select **Move** and press the **OK** button. The list of folders will appear. Select the folder you want to move the file to and move it. Press the **OK** button to complete.
 6. To hide the file, select **Hide** and press the **OK** button. The file will be hidden the next time you display the media list. To show the hidden file, press the **OPT+** button again and select **Show Hidden Files** and press the **OK** button. Enter the password to proceed. To cancel hiding, press the **OPT+** button and select **Cancel Hiding** and press the **OK** button.



Tip: The default password is 0000.

11. Media List

4. Edit Mode

You can edit more than one file at the same time using edit mode.



1. Press the **EDIT** button while displaying the video list.
2. Select the files to edit and press the **OK** button.
3. To delete a file, press the **RED** button. A popup will appear. Press the **OK** button. When deleting a locked file, you will be prompted to enter your password. Enter the password and press the **OK** button.
4. To make a playlist of the selected files, press the **GREEN** button.
5. To move the file to another folder, press the **YELLOW** button. The list of folders will appear. Select the folder you want to move the file to and move it. Press the **OK** button to complete.
6. To make a folder, press the **BLUE** button. Enter the name of the folder in the keyboard displayed and press the **YELLOW** button.
7. To rename files, press the **OPT+** button. Select **Rename** and enter the name directly using the keyboard displayed on the screen. Press the **YELLOW** button to complete.
8. To lock files, press the **OPT+** button. Select **Lock** and press the **OK** button. When unlocking a locked file, you will be prompted to enter your password. Enter the password and press the **OK** button.
9. To hide the files, press the **OPT+** button. Select **Hide** and press the **OK** button. The file will be hidden the next time you display the media list. To show the hidden file, press the **EDIT** button and **OPT+** button again and select **Show Hidden Files** and press the **OK** button. Enter the password to proceed. To cancel hiding, press the **EDIT** button and **OPT+** button again and select **Cancel/Hiding** and press the **OK** button.
10. To select/release all files, press the **OPT+** button. Select **Select All** or **Release All** and press the **OK** button.

Tip: The default password is **0000**.

11. Media List



Note: When deleting or moving a locked file, you will be prompted to enter your password. Enter the password using the **NUMERIC(0-9)** buttons.

Tip: The default password is **0000**.

11.2 Radio

Press the **GREEN** button while displaying the media list to display the radio list. The radio list is similar to the video list.

1. Play Option

1. Select a file you want to playback and press the **OK** button. A popup will appear to display the play option.
2. Select **Play from the start** and press the **OK** button to play the file from the beginning.
3. Select **Play from the last played position** and press the **OK** button to play the file from the point it has been stopped.
4. Select **View a playlist** and press the **OK** button to view the play list of the current folder.
5. Select **Delete a file** and press the **OK** button to delete the file. Select **Yes** and press the **OK** button.


2. Play List

1. Select **View a playlist** in **Play Option** or select **Make List** in edit mode and press the **OK** button.
2. Select a file in the playlist and press the **OK** button to play the selected file.
3. Press the **RED** button to delete the file and renumber the list.
4. Press the **GREEN** button to move the file within the list. Press the **OK** button to complete.

3. Option

1. Select a file in the radio list and press the **OPT+** button.
2. To lock the file, select **Lock** and press the **OK** button. When unlocking a locked file, you will be prompted to enter your password. Enter the password and press the **OK** button.
3. To delete the file, select **Delete** and press the **OK** button. A popup will appear. Select **Yes** and press the **OK** button.
4. To rename the file, select **Rename** and enter the name directly using the keyboard displayed on the screen. Press the **YELLOW** button to complete.
5. To move the file to another folder, select **Move** and press the **OK** button. The list of folders will appear. Select the folder you want to move the file to and move it. Press the **OK** button to complete.

11. Media List

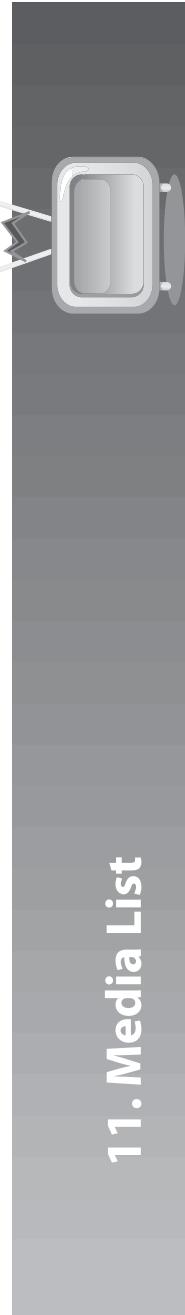

4. Edit Mode

You can edit more than one file at the same time using edit mode.

1. Press the **EDIT** button while displaying the radio list.
2. Select the files to edit and then press the **OK** button.
3. To delete files, press the **RED** button. A popup will appear. Press the **OK** button.
4. To make a playlist, press the **GREEN** button to make a playlist of the selected files.
5. To move files to another folder, press the **YELLOW** button. The list of folders will appear. Select the folder you want to move the file to and move it. Press the **OK** button to complete.
6. To make a folder, press the **BLUE** button. Enter the name of the folder in the keyboard and press the **YELLOW** button.
7. To lock files, press the **OPT+** button. Select **Lock** and press the **OK** button. When unlocking a locked file, you will be prompted to enter your password. Enter the password and press the **OK** button.
8. To rename files, press the **OPT+** button. Select **Rename** and enter the name directly using the keyboard displayed on the screen. Press the **YELLOW** button to complete.
9. To select/release all files, press the **OPT+** button. Select **Select All** or **Release All** and press the **OK** button.

11. Media List

11.3 Music

Press the **YELLOW** button while displaying the media list to display the music file list. The music file list is displayed as the following.



1. Play Option


1. Select a music file you want to play and press the **OK** button. A popup will appear to display the play option.
2. Select **Play music file** and press the **OK** button to play the music file.
3. Select **View a playlist** and press the **OK** button to view the play list of the current folder.
4. Select **Delete a file** and press the **OK** button to delete the file. Select **Yes** and press the **OK** button.

2. Music Player

1. Select the music file you want and press the **PLAY** button to play.
2. Press the **STOP** button to stop playing.
3. Press the **PAUSE** button to pause.
4. To play the previous/next music file, use the **PREVIOUS/NEXT** button.
5. Press the **▼** button or **OK** button to display the play list.
6. Use the **OPT+** button to repeat or shuffle.



11. Media List

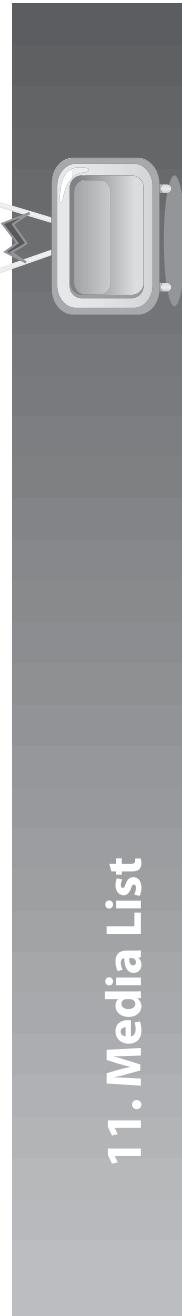

3. Option

1. Press the **OPT+** button while displaying the music list.
2. To delete the file, select **Delete** and press the **OK** button. A popup will appear. Select **Yes** and press the **OK** button.
3. To rename the file, select **Rename** and enter the name directly using the keyboard displayed on the screen. Press the **YELLOW** button to complete.
4. To move the file to another folder, select **Move** and press the **OK** button. The list of folders will appear. Select the folder you want to move the file to and move it. Press the **OK** button to complete.

4. Edit Mode

1. Press the **EDIT** button while displaying the music list.
2. Select the files to edit and press the **OK** button.
3. To delete a file, press the **RED** button. A popup will appear. Select **Yes** and press the **OK** button. When deleting a locked file, you will be prompted to enter your password. Enter the password and press the **OK** button.
4. To make a playlist of the selected files, press the **GREEN** button.
5. To move the file to another folder, press the **YELLOW** button. The list of folders will appear. Select the folder you want to move the file to and move it. Press the **OK** button to complete.
6. To make a folder, press the **BLUE** button. Enter the name of the folder in the keyboard and press the **YELLOW** button.
7. To rename files, press the **OPT+** button. Select **Rename** and enter the name directly using the keyboard displayed on the screen. Press the **YELLOW** button to complete.
8. To select/release all files, press the **OPT+** button. Select **Select All** or **Release All** and press the **OK** button.

Tip: The default password is **0000**.

5. File Information

Press the Info button while playing a music file to view the file information.

11. Media List

11.4 Photo

Press the **BLUE** button while displaying the media list to display the photo file list. The photo file list is similar to the music file list.

1. Play Option

1. Select a photo file you want to view and press the **OK** button. A popup will appear to display the play option.
2. Select **View photo** and press the **OK** button to view the photo file.
3. Select **View slide show** and press the **OK** button to view the photo in slide show.
4. Select **Delete a file** and press the **OK** button to delete the file. Select **Yes** and press the **OK** button.

2. Option

1. Press the **OPT+** button while displaying the photo list.
2. To delete the file, select **Delete** and press the **OK** button. A popup will appear. Select **Yes** and press the **OK** button.
3. To rename the file, select **Rename** and enter the name directly using the keyboard displayed on the screen. Press the **YELLOW** button to complete.
4. To move the file to another folder, select **Move** and press the **OK** button. The list of folders will appear. Select the folder you want to move the file to and move it. Press the **OK** button to complete.


3. Edit Mode

1. Press the **EDIT** button while displaying the photo list.
2. Select the files to edit and press the **OK** button.
3. To delete a file, press the **RED** button. A popup will appear. Select **Yes** and press the **OK** button. When deleting a locked file, you will be prompted to enter your password. Enter the password and press the **OK** button.
4. To move the file to another folder, press the **YELLOW** button. The list of folders will appear. Select the folder you want to move the file to and move it. Press the **OK** button to complete.
5. To make a folder, press the **BLUE** button. Enter the name of the folder in the keyboard and press the **YELLOW** button.
6. To rename files, press the **OPT+** button. Select **Rename** and enter the name directly using the keyboard displayed on the screen. Press the **YELLOW** button to complete.
7. To select/release all files, press the **OPT+** button. Select **Select All** or **Release All** and press the **OK** button.

Note: When deleting or moving a locked file, you will be prompted to enter your password. Enter the password using the **NUMERIC[0-9]** buttons.

Tip: The default password is **0000**.

11. Media List

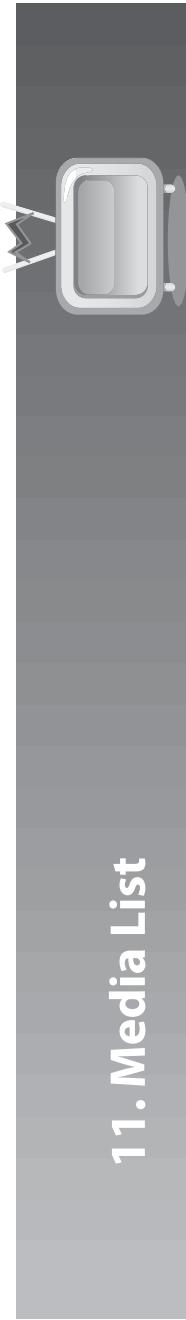

4. Photo Viewer

1. Select the image file you want and press the **OK** button to enlarge the image.
2. Press the **EXIT** button to close the viewer. Press the **PLAY** button to go back.
3. Go to previous file or next file using the **◀/▶** buttons.



5. Slide Show

1. Select **View slide show** and press the **OK** button in Play option to start slide show. The files will appear in full screen for five seconds each.
2. Press the **◀/▶**, **i** or **OK** button to stop the slide show.
3. Press the **LAST** or **EXIT** button to return to the photo file list.


12. Personal Video Recorder (PVR)



The product automatically saves the programme to the built-in hard disk drive temporarily; this enables you to pause, play, fast rewind or fast forward the current broadcast.

12.1 Play bar

Press the **PLAY** button while watching a recording to display the play bar. Play bar displays the current operation status, the time gap between the broadcasting point and watching point and the amount of temporarily saved programme.

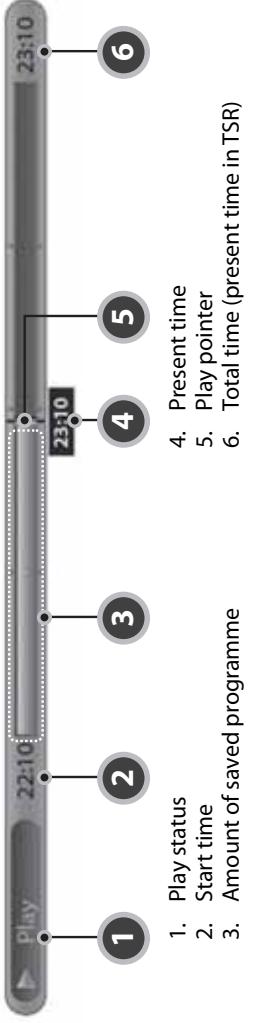

To move to the specified time point directly, enter the time you want using the **NUMERIC(0-9)** buttons. To move the watching point bar to the time point you want, press the **◀▶** button while playing back and then press the **OK** button to play the programme from the specified time point. If you do not press the **OK** button after moving the watching point, it will move automatically. Press the **STOP** button to stop the current file and go to live TV.

12.2 Time Shifted Recording (TSR) and Playback.

You can perform Time Shifted Recording (TSR) and other VCR functions within TSR using the playback control buttons while playing a programme.

1. Playback

You can view the recorded files in the **Media List→Video**. Press the **MEDIA** button to access the recorded file list easily.

1. Press the **PREVIOUS** button to start playback from the previous chapter.
2. Press the **NEXT** button to start playback from the next chapter.
3. Press the **◀** button to jump back and play from that point. Press the **STOP** button to return to live video.
4. Press the **▶** button to jump ahead and play from that point. Press the **STOP** button to return to live point.

Note:

- Enter the **NUMERIC(0-9)** buttons during playback and press the **OK** button to move to that specific time point.
- For more information about playback, refer to **11.1.1 Play Option**.

12. Personal Video Recorder (PVR)



2. TSR

You can perform fast rewind, fast forward, slow motion and pause while playing back a recorded file from the media list.

Fast Forward

1. Press the **FAST FORWARD** button to fast forward the programme.
2. Each time you press the **FAST FORWARD** button, the speed increases in the following sequence: x2, x4, x16, x32, x64.
3. If you press the **PLAY** button, the fast forward operation stops and the programme is played at normal speed.

Note: You can use the fast forward operation only when there is a time gap between the current watching point and the broadcasting (live) point caused by previous operations such as pause, slow motion or fast rewind. You can fast forward to the current broadcasting point. If the watching point reaches the broadcasting (live) point, the programme is automatically played at normal speed.



Fast Rewind

1. Press the **FAST REWIND** button to watch missed scenes.
2. Each time you press the **FAST REWIND** button, the rewind speed increases in the following sequence: x2, x4, x16, x32, x64.
3. If you press the **PLAY** button, the fast rewind operation stops and the programme is played at normal speed.

Note: You can fast rewind back to the start point. If you reach the start point while rewinding, the programme is automatically played at normal speed from that point.



Slow Motion

1. Press the **SLOW** button to playback the file in slow video.
2. If you press the **PLAY** button, the slow video operation stops and the programme is played at normal speed.

12. Personal Video Recorder (PVR)

Pause

1. Press the **PAUSE** button to pause the current programme.
2. If you press the **PAUSE** button once again, the programme is resumed from that point.

Note: Pause makes the time gap or delay between the broadcasting (live) point and watching point. The time gap is equivalent to the period the programme has been paused. Operations such as slow motion and fast rewind also make the time gap. Press the **STOP** button to close the time gap and go to live programme.



12.3 Recording

Using the built-in hard disk drive, you can record a programme without external media devices such as a VCR.

Note:

- Ensure that there is enough free space before recording. If the free space on the hard disk drive is insufficient, recording will stop. Recording a one-hour programme may require up to two or three GB of hard disk space. The space necessary for recording a one-hour programme may be different depending on the programme.
- You can record radio programmes also.
- Pressing the **STANDBY** button while recording will not stop the recording. The product will go to standby mode after completing recording.
- Press the **i** button to display the recording list and i-plate.

1. General Recording

1. Press the **RECORD** button to record the current programme instantly.
2. Press the **RECORD** button again while recording to adjust the recording end time. You can adjust the recording end time by -/+10 minutes using the **◀/▶** button.
3. When recording a current programme which has almost reached the end time, the following programme will be recorded and the ending time of that programme will appear on the play bar. Press the **RECORD** button to move from the current programme to the next programme.



12. Personal Video Recorder (PVR)



2. Multi-Channel Recording

1. To record another channel, change channels while recording and press the **RECORD** button again.
2. You can record up to four channels simultaneously.
3. If you press the **RECORD** button while recording four other channels, you will be prompted to select a recording you want to stop and replace with a new recording.



3. Recording Duration

1. Press the **RECORD** button while recording to set the recording duration time.
2. The default recording duration time is two hours from the recording start time.
3. Press the **◀/▶** button to add or reduce the recording time in 10 minute units. The **RECORD** button functions as the **▶** button.

4. Stop Recording

1. Press the **STOP** button to stop recording one of the four other channels.
2. You will be prompted to select one among the current recordings. Select the channel you want to stop recording using the **▲/▼** button.
3. Select **OK** and press the **OK** button.

12. Personal Video Recorder (PVR)

12.4 Bookmark

1. Adding Bookmark


You can jump to a position directly using the bookmark feature in recorded file playback. Use bookmarks to search a specific scene quickly and conveniently.

Press the **ADD BOOKMARK** button at the location you want to set a bookmark while playing back a recorded file. The bookmark icon is displayed at the lower right of the screen.

Note: The bookmark function is available for recorded files only.


2. Bookmark List

1. Press the **BOOKMARK LIST** button after adding a bookmark.
2. Select the location you wish to view using the **◀/▶** button. The bookmark image is displayed at the lower right of the screen.
3. Press the **BOOKMARK LIST** button again to return to the play bar.
4. To delete a location, select the location you want to delete and press the **ADD BOOKMARK** button.

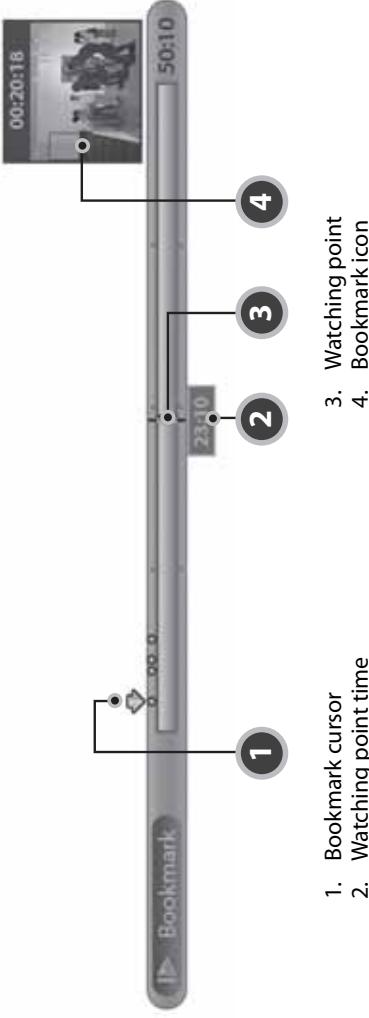

1. Bookmark cursor
2. Watching point time
3. Watching point
4. Bookmark icon

13. Software Update

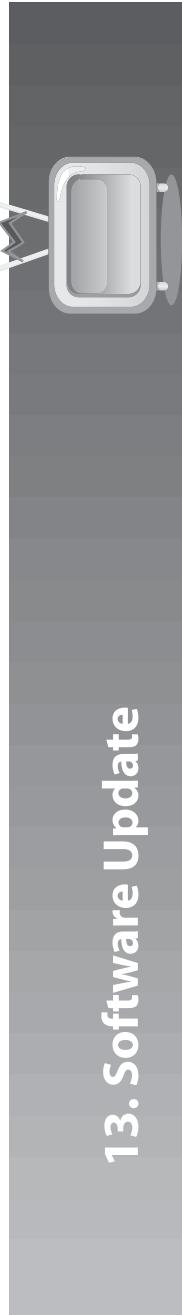

In order to maintain proper performance of the product, it is essential to have the most up-to-date software. Visit the Humax website to check the latest news and newly released software versions. (<https://www.humaxdigital.com>) It is recommended that you periodically check for the availability of software update.

13.1 OTA (Over the Air)

OTA, an abbreviation of Over-the-Air, is a standard for the transmission of software through a broadcast system.

The manufacturers reserve the right to decide when and where an update is made available. The new software version is then downloaded via cable. The software update via cable will only occur under the following circumstances.

1. The equipment should have the appropriate loader software.
Caution: Please note that if the normal loader software is not equipped, the product may not be updated or operate properly after software update.
2. The manufacturer transmits the software via cable. The new version of the software is generally detected automatically, but in case it is not, you should perform automatic or manual update.

Caution:

- Please be careful to keep the power on and the power cord plugged in during software update. If the power is off during software update, fatal damage may be caused to the product.
- Please be careful not to pull out the signal line (coaxial cable) during software update. Update may be interrupted and the product may not operate.

Note:


- It may take 5~10 minutes to update software.
- Other functions will not activate while software update takes place.
- You cannot schedule programmes during software update.

1. Software update while watching a programme

When new software is detected, you can choose to download the software immediately or save for later. In case there is no software currently available, select **Next** and press the **OK** button to proceed to the next step.

14. Appendix

14.1 Menu Map

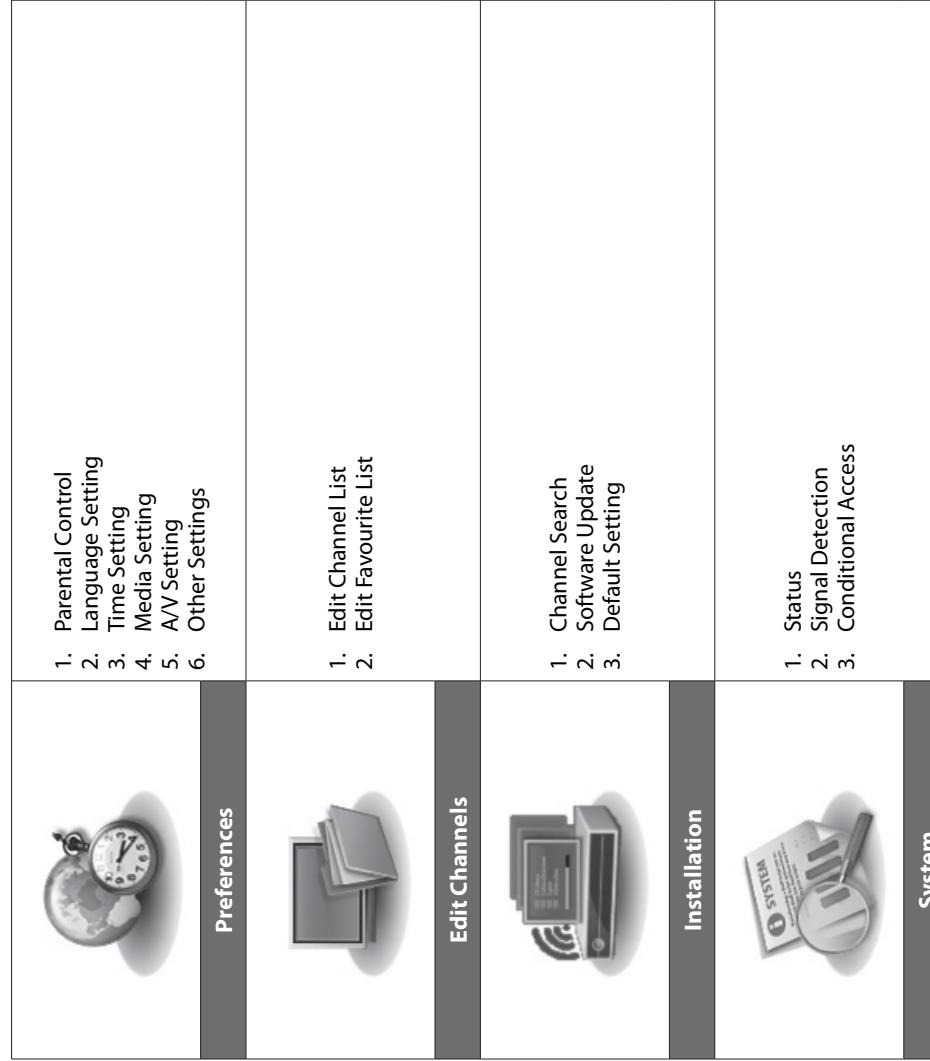


14. Appendix

14.2 Trouble Shooting

Before contacting your local service centre, please read the tips below carefully. If the problem persists after completing the following procedure, please contact your local product distributor or service centre for further instructions.

- 1. No message displayed on the front panel. (The product will not switch on.)**
 - Check the main power cable and make sure it is plugged into a suitable power outlet.
 - Check that the mains supply is switched on.
 - Check that the power switch is on at the rear of the product. (where applicable)
 - Connect the power cable to a different power outlet.
- 2. No picture on TV set**
 - Make sure that the product is powered on and in operation mode. (Press the STANDBY button)
 - Make sure that the AV cable is firmly connected to the TV.
 - Make sure that the cable is properly connected to the product.
 - Be sure to activate channel search.
 - Check the brightness level of the TV.
 - Check if the channel is currently on air. Contact the broadcaster to ensure that the channel is running.
 - Press the SOURCE button if the product is in external input mode.
- 3. No or poor sound**
 - Check that your AV cable is connected correctly.
 - Check the volume levels of your TV set and the product.
 - Check if the product or TV is on mute.
 - Check audio type or soundtrack option in the AV menu.
- 4. Remote control does not operate.**
 - To control the product, the top end of the remote control should point directly towards the receiving part of the product.
 - Remove and reinsert the batteries in the remote control.
 - Replace the batteries in the remote control for a new set.
- 5. Cannot make reservations.**
 - Check that no previous reservations are conflicting with the new reservation.
- 6. No password information is given.**
 - The default password is always 0000.
- 7. Channel search does not work.**
 - Check that your cable is connected correctly.
- 8. Cannot update new software.**
 - You can get an update. If the product does not show a message requesting update, that means no software is available.
- 9. Cannot watch scrambled channels.**
 - Check that you have the appropriate Smartcard or CI-Module. Reinsert the Smartcard or CI-Module and make sure it initializes correctly.
 - Check in the menu that the product is detecting the Smartcard or CI-Module.
 - Check in the menu that you have a valid and working subscription to the channels you wish to view.
 - Ensure that the Smartcard or CI-Module is not damaged.
 - It may take up to 60 minutes to receive authorization for the subscription.

14. Appendix

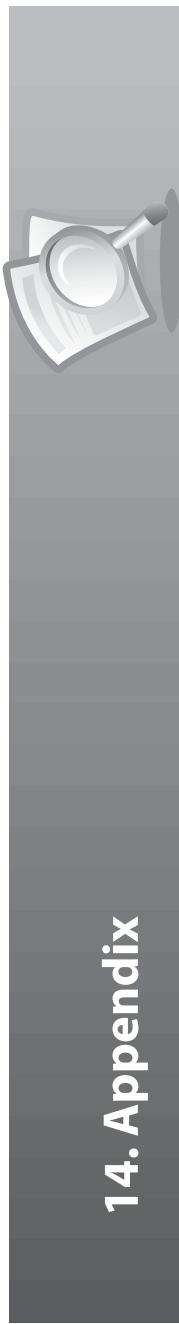

10. Cannot watch pay channels.

- Check in the menu that you have a valid and working subscription to the channels you wish to view.
- Contact your network operator for more information.

11. Cannot record programmes.

- The hard disk is full. Delete unnecessary programmes and make space for new recording.
- Check if recording is overlapped with another channel. Stop the current recording or wait until the recording is finished.

• Check that the product is switched on when starting recording.

12. Cannot operate the TSR (Time Shifted Recording).

- The TSR may not be available during the recording. Wait until the recording is finished.

- Delete unnecessary programmes and make space for new recording.

13. The product makes a humming noise.

- The noise is from the fan; the hard disk is operating normally. This kind of noise is inevitable but seldomly noticeable.


14. Cannot playback.

- To play back the recorded file of a scrambled channel, use the Smartcard. In case it has been a long time since you last recorded, this may not work. Contact the product distributor.
- The signal during the recording may be weak or the hard disk too full.

15. Cannot change channel while recording.

- Certain channels may not be changed due to restriction of the tuner type.


14. Appendix

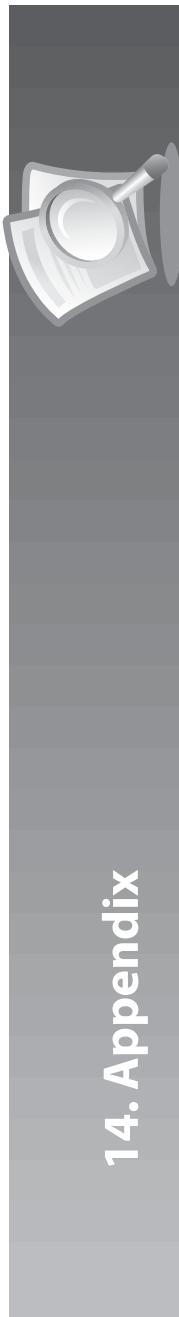

14.3 Error Message

Error message	Possible causes	What to do
No or bad signal	The cable is not connected.	Make sure the cable is connected correctly.
	The cable may be damaged or defective.	Exchange the cable.
	The channel is not broadcasting.	
The channel is scrambled or not available.	The channel has signal, but no video.	Confirm if the channel is currently on air.
	The channel is deleted by the broadcasting company.	
	The channel is for data broadcasting.	
The audio is not available.	The channel has signal, but no audio.	Press the audio button to confirm if the channel has audio.
No access	No subscription to this channel.	Make sure you are subscribed to the channel.
	No authorization.	If the product has been turned off for a long time (standby or power off), please wait for authorization. It may take up to 60 minutes.
No card inserted.	Smartcard is not inserted.	Insert Smartcard.
Incorrect card	Wrong Smartcard is inserted.	Insert appropriate Smartcard.
	Smartcard is not inserted correctly.	Pull out the Smartcard and reinsert it.
	Smartcard is broken.	Replace the Smartcard.


14. Appendix

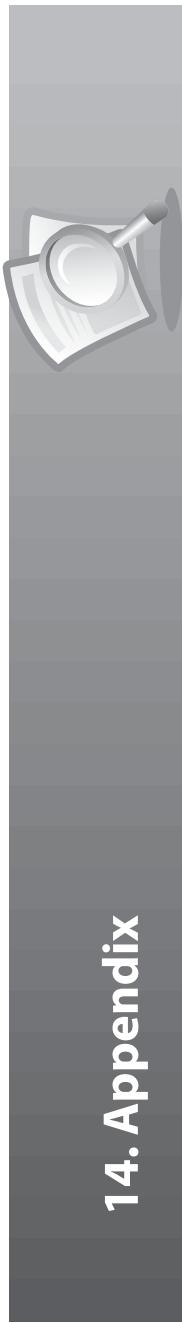

14.4. Specification


Tuner & Channel	
No of Tuners	2
Input Connector	F-Type, IEC 169-24, Female
Frequency Range	51MHz to 858MHz
Signal Level	-15dBmV to +15dBmV
Modulation	QAM
MPEG Transport Stream A/V Decoding	
Transport Stream	MPEG-2 ISO/IEC 13818-1
Profile Level	MPEG-2MP@ML, MPEG-2MP@HL, MPEG-4 AVC/H 264 HP@L4
Input Rate	Max. 15MB
Video Format	4:3, 16:9
Video Resolution	1080i, 720p, 576p, 576i
Audio Decoding	MPEG/MusiCam Layer I & II
Audio Mode	Single channel/Dual channel/Joint stereo, AC3 Downmix
Memory	
Flash Memory	64MB
RAM	256MB
EEPROM	8KB
HDD	320GB
Audio/Video/Data In/Out	
Video	TV SCART(CVBS,S-Video,RGB) VCR SCART(CVBS,S-Video) RCA-Type(CVBS), YPbPr(RCA), HDMI/HDCP
Audio	TV SCART,VCR SCART,Audio L/R/S/PDIF(Digital Audio Output)
File Format	JPEG(jpeg,jpg,jpf,jff), MP3(mp3,mp2,mp1)

14. Appendix

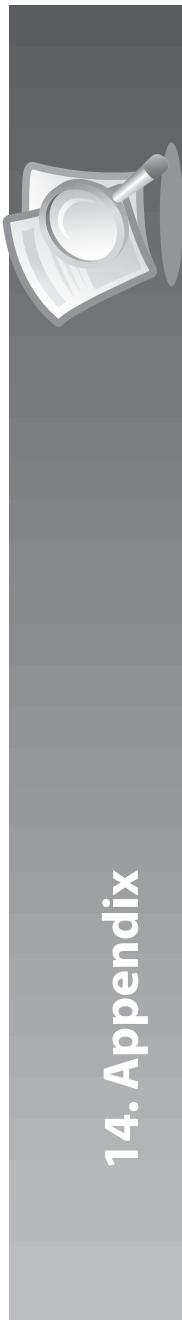

Data Port	USB	USB 2.0 Host (5V==500mA Max.)
Power Supply		
Input Voltage		100-240 a.c., 50/60Hz
Type	SMPs	
Power Consumption	Max. 38W	
Protection		Separate internal fuse & lightning protection
Physical Specification		
Size		380mm × 70mm × 281mm
Weight (Net)		3.5kg
Operating Temperature		0 °C to +45 °C
Storage Temperature		-10 °C to +70 °C


14. Appendix

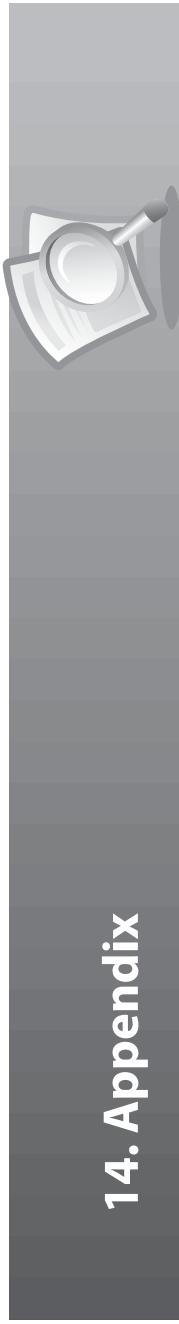

14.5 Glossary

1. **Dolby Digital**
An encoding system that digitally compresses up to 5.1 discrete channels of audio (left front, centre, right front, left surround, right surround) into a single Bitstream. A low frequency effect (LFE) channel is included providing the sound needed for special effects.
2. **DVB (Digital Video Broadcasting)**
Set of standards that define digital broadcasts using satellite, cable or terrestrial systems.
3. **EPG (Electronic Programme Guide)**
An electronic equivalent to a printed television listings magazine; it is an application used with digital set-top boxes and digital television sets to list current and scheduled programs that are or will be available on each channel, including a short summary or commentary for each program. The information supplied in the EPG is sent and updated by the channel broadcaster.
4. **Frequency**
The property of a signal measured in cycles per second (=Hz).
5. **FTA (Free- To-Air)**
An unscrambled broadcaster allowing customers to view channels or services without paying any subscription.
6. **HDD (Hard Disk Drive)**
The primary computer storage medium, which is made of one or more aluminum or glass platters, coated with a ferromagnetic material.
7. **Hi-Fi (High Fidelity)**
The characteristics of audio devices that can play back all the audio frequencies a person can detect, which is the range of 16Hz~20KHz. Sometimes it is used to indicate good quality of audio devices such as stereo tape recorders.
8. **OSD (On Screen Display)**
OSD displays the basic information necessary for the users to configure monitor or TV settings. OSD information may include brightness, contrast, tuning, RGB adjustment, and screen size and position.
9. **OTA (Over the Air)**
A standard for the transmission of software for equipment, through a broadcast system. Manufacturers reserve the right for deciding the release of the software for their products.
10. **PVR (Personal Video Recorder)**
Video recorder that can record and playback programmes directly using the embedded hard disk drive(s).
11. **RF (Radio Frequency)**
Television signals are modulated onto RF signals and are then demodulated by your television's or STB's tuner.
12. **RF Modulator**
Enables you to output the receiver's digital signals to a TV's RF (Aerial) input, allowing you to connect the receiver to a TV set without a SCART connection.

14. Appendix

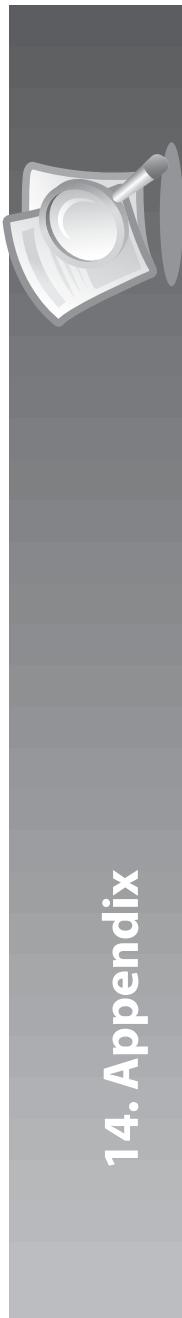

13. SCART

A 21-pin connector standard to connect two pieces of Audio-Visual equipment such as a TV and a VCR. Each device will have a 21-pin female connection; a cable with male connection at both ends is used for connecting the devices.

14. Smartcard

A credit card sized card that contains updateable chip memory. It is used for accessing Pay TV (encrypted) channel or services when inserted into an appropriate receiver.

15. S/PDIF (Sony/Philips Digital Interface format)

A standard format for the transfer of digital audio signals. It allows the transfer of digital audio between two devices without any conversion to and from analogue, which could degrade the signal quality.

16. S-Video (Super-Video)

Sometimes referred to as Y/C video; a technology for transmitting video signals via a cable. It is a video signal transmission in which the luminance (brightness) and the chrominance (colour) signals are transmitted separately to achieve superior picture clarity.


17. Trick-Play

Pause, Fast Forward/Fast Rewind, Slow Motion, Instant Replay, Commercial Skip, Repeat A-B.

18. TSR (Time Shifted Recording)

A function that records the present programme temporarily to support trick-play.

14. Appendix

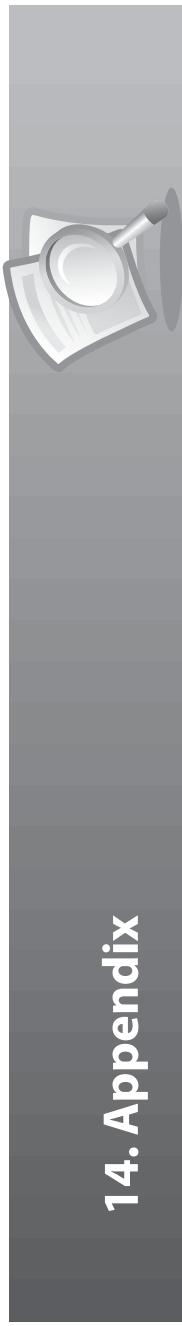

14.6 Service and Support

Information concerning troubleshooting, software upgrade and product support is provided in the following websites and call centers. Should your product require warranty service, please contact HUMAX to obtain the appropriate authorization.

Note: For hardware repair, please visit our website.

Deutschland

Tel: 01805-778870 (€ 0,14/Min)
Öffnungszeiten: Mo-Fr 8:00-23:00 Uhr, Sa-So 8:00-20:00 Uhr
E-mail: support@humax-digital.de
Website: www.humax-digital.de
Sprache: Deutsch/Englisch/Türkisch

UK

Tel: 0870 247 8800
Opening Hours: Mon-Fri 8:30-21:00
E-mail: uksupport@humax-digital.co.uk
Website: www.humax-digital.co.uk
Language: English

Australia

Tel: 1800 613 011
Opening Hours: Mon- Fri 9:00-17:30
E-mail: techinfoau@humaxdigital.com
Website: www.humaxdigital.com/australia
Language: English


Italia

Tel: 899 100 080 (€1+ VAT/min)
Orario: Lun.-Ven. 8:00-18:00
Lingua: Italiano

Sverige

Tfn: +46 (0)550 85527
Öppettider: Mån-fre 08:00-16:30
Språk: Svenska/Engelska

14. Appendix

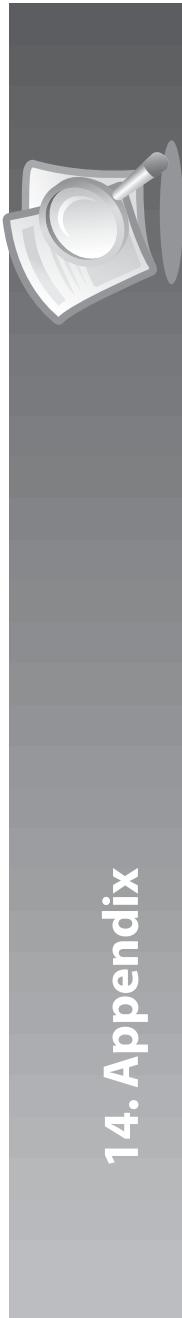


Suomi

Puh: +358 9 56186 1130
Aukio/ojat: ma-pe 8:00-16:00
Kiel: Suomi/Englanti

Austria

Tel: 0820 400675 (€0.14/min)
Opening Hours: Mon-Sun 8:00-23:00
E-mail: support@humax-digital.de
Website: www.humax-digital.de
Language: Deutsch/English/Turkish

14. Appendix

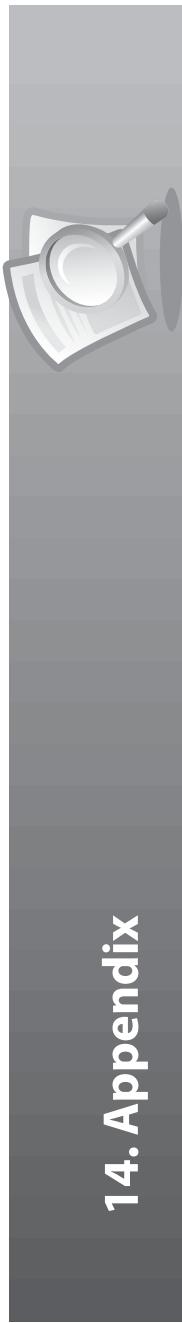

14.7 Remote Control Code List

1. Using the universal remote control

1. Press the **MODE** button. The remote control LED will blink once.
2. Press the **MODE** button for 3 seconds until the TV LED turns on. The LED will stay on even after the button is released.
3. Select the product you want to set pressing the MODE button. Every time you press the button, the remote control LED will blink in the following order; TV, AUDIO, DVD, TV,...
4. Enter the 3-digit code. Every time you enter a number, the LED will blink. When the third number is entered, the LED will blink twice. The power key code of the selected model will appear.
5. After the power key code appears, the product will power off.
6. Press **OK** and the LED will blink three times. The setup is complete.
7. If the product does not power off, repeat the instructions from 4 to 6.

Note:

- When no code is entered for one minute the Universal setting mode will switch to normal mode.
- Try several setting codes and select the code that has the most functions.


Remote Control Function List

The keys on the remote control function as in the list below.

Note: Some keys may not function depending on the product.

Button	TV	DVD	AUDIO
STANDBY	POWER	POWER	POWER
1	1	1	TUNER
2	2	2	CD
3	3	3	DVD
4	4	4	VCR
5	5	5	TV
6	6	6	CABLE
7	7	7	SAT
8	8	8	AUX
9	9	9	TAPE
0	0	0	PHONO
MENU	MENU	MENU	MENU/MODE
◀	-	FAST REWIND	-

14. Appendix

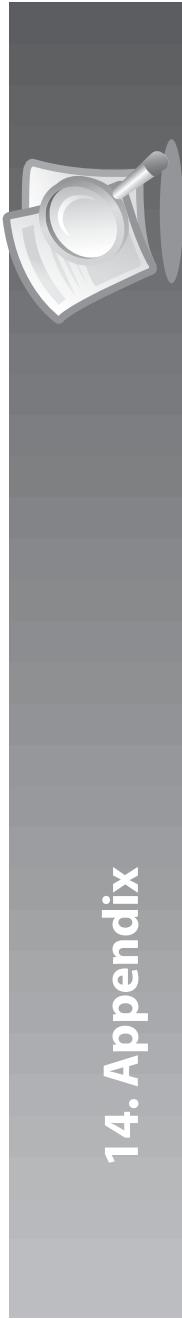

Button	TV	DVD	AUDIO
▲	-	PLAY	-
◀▲	-	FAST FORWARD	-
●	-	RECORD	-
■	-	STOP	-
	-	PAUSE	-
RED	RED	-	-
GREEN	GREEN	-	-
YELLOW	YELLOW	-	-
BLUE	BLUE	-	-
EXIT	-	CLEAR	-
OK	OK	OK	OK
UP	UP	UP	UP
LEFT	LEFT	LEFT	LEFT
RIGHT	RIGHT	RIGHT	RIGHT
DOWN	DOWN	DOWN	DOWN
VOL+	VOL+	VOL+	VOL+
VOL-	VOL-	VOL-	VOL-
■	-	-	DISPLAY
¶	MUTE	MUTE	MUTE
CH+	CH+	CH+	PRESET+
CH-	CH-	CH-	PRESET-
SOURCE	SOURCE	SOURCE	SOURCE

14. Appendix



2. TV Code List

Brand	Code	
A MARK	002	004, 064
ABEX	016	018, 087, 097, 099, 102, 108, 175, 176, 177, 178, 181, 185
ACCENT	004	052
ACTION	110, 124	050
ACURA	004	099, 110, 124
ADMIRAL	030, 042, 076, 099, 123, 159, 160	040, 099, 108, 109, 110, 172, 177
ADVENTURA	177	161, 162, 163, 164, 165
ADYSON	016, 063	009
AIKO	029	006, 038, 106
AKAI	015, 099, 109, 124, 161, 172, 177	018
AKURA	064, 071, 161	063
ALARON	051, 062	158
ALBA	004, 017, 018, 064, 123, 117	040, 106, 108, 172
ALBIRAL	157, 158	059, 060, 061
ALLORGAN	118	064
ALLSTAR	161	075
AMBASSADOR	049	063
AMPLIVISION	063	098
AMSTRAD	004, 018, 047, 049, 145	075
AMWAY	161	BRANDT ELECTRONIQUE 171
ANAM	003, 004, 052	BRADFORD 052
ANAM NATIONAL	024	BRINKMANN 123
ANITECH	004, 071, 161	BRITANNIA 062
ANSONIC	127	BRIONVEGA 159
AOC	002, 009, 015, 056	BRIORRYEGA 160
ARC EN CIEL	171	BROCKWOOD 009, 172, 177
ARCAM	062, 063	BROKSONIC 002, 067, 085, 172, 177
ARCHER	002	BROTHER 071
ASA	159, 160, 161	BRUNS 126, 158, 159, 160
ASBERG	158	BSR 093, 118
ASUKA	064, 071	BTC 064
ATLANTIC	098	BUSH 004, 017, 018, 064, 075, 093, 099, 117, 172
AUDINAC	081	CAMPLE 172, 177
AUDIOSONIC	018, 071	CANDLE 015, 025, 057
AUDIOVOX	002, 029, 052, 084	CAPEHART 124, 172
BANG & OLUFSEN	160	CAPSONIC 071
AUMARK	026	CARNIVALE 015
AUTOVOX	068, 076, 097, 160	CARREFOUR 017
BARCO	086	

14. Appendix




CARVER	023, 046	DECCAVIDEO	161
CASCADE	004	DENON	035
CATHAY	018	DESMET	098
CCE	063, 018, 078	DIXI	003, 004, 018, 126
CCI	115	DUAL	097
CENTURION	018	DUAL-TEC	063
CENTURY	159, 160	DUMINT	127
CGE	101, 123	DUMONT	007, 009, 158, 159, 160, 172, 177
CIE	133, 161	DYNATECH	063, 172, 177
CIMLINE	004, 117	EB TELECOM	105
CINERAL	029, 084, 172	ECR	172
CIRCUIT CITY	177	ECTEC	081
CITIZEN	015, 019, 025, 026, 029, 040, 057, 074	ELBE	116, 168
CLAIRTON	056	ELBIT	160, 161
CLARIOX	018, 125, 168	ELECTROBAND	056, 177
CLATRONIC	098, 127, 158, 161	ELECTROHOME	080, 106, 110, 172, 177
CME	004, 005, 017, 018, 028, 042, 049, 063, 065, 066, 068, 076, 079, 087	ELECTROVENDA	161
CONCERTO	025	ELEKTRA	071
CONDOR	098, 158, 161	ELEKTRONIKA	161
CONIC	110, 172	ELIN	018, 161
CONTEC	004, 017, 052, 056, 062, 172	ELITE	040, 064, 098, 106, 172
CONTINENTAL EDISON	141, 171	ELMAN	127, 158, 163
COSMOS	161	ELTA	004
CRAIG	052	EMERSON	009, 019, 038, 049, 050, 051, 053, 054, 056, 067, 072, 074, 075, 085, 158, 159, 161, 172, 177
CRYPTOVISION	105	EON	172
CROSLEY	023, 110, 159, 160, 172, 177	ENVISION	015
CROWN	004, 018, 019, 052, 127, 158, 161	ERRES	018
CS ELECTRONICS	062	ESC	161
CTC	098, 158	EURO-FEEL	071
CURTIS MATHEWS	006, 015, 019, 020, 021, 023, 026, 030, 035, 038, 035, 040, 044, 084, 106, 172	EUROMANN	071
CXC	052	EUROPHON	127, 158
CYBERTRON	064	FERGUSON	018, 163, 166, 167, 168, 169
DAEWOO	004, 009, 018, 019, 029, 084, 133, 161	FIDELITY	062, 097, 104
DAINICHI	064	FINLADIA	106
DANSAI	018	FINLUX	018, 028, 051, 093, 129, 158, 160, 161
DAYTON	004, 009, 019, 108	FIRST LINE	118, 004, 062, 063
DE GRAAF	066, 097, 161	FISHER	038, 041, 063, 097, 106, 108, 126, 160, 172
DECCA	018, 028, 129, 161	FORMENTI	018, 098, 103, 160, 161
		FORTRESS	160, 172

14. Appendix



FRABA	161	HUANYU	062
FRONTECH	042, 071, 099	HUMAX	151, 152, 153, 154
FUJITSU	028, 051, 124, 172, 177	HUSPI ELEKTRONIK	123
FUNAI	047, 051, 052, 071, 118, 172, 177	HYPERVISION	134
FUTURETECH	052	HYPSON	018, 071, 075
GALAXIS	123, 142, 158, 161	ICE	063, 071, 161
GALAXY	158	ICES	064
GBC	099	IMA	172, 177
GE	011, 013, 020, 021, 024, 030, 034, 050, 075, 084	IMPERIAL	092, 099, 101, 123, 161
GEC	018, 028, 063, 095, 110, 129, 161	INDESIT	068
GELOSO	004, 099	INDIANA	018
GENEXXA	042, 064	INFINITY	023
GIBRALTER	007, 009, 015	INGEKEN	139
GO VIDEO	026	INGELEN	042, 164
GOLDSTAR	156, 001, 009, 015, 016, 018, 019, 025, 033, 050, 063, 071, 093, 110, 124, 140, 161	INNOHIT	028, 124
GOODMANS	017, 018, 028, 051, 063, 133, 161	INNOVA	018
GPM	064	INTEQ	007
GRADIENTE	022, 025, 046, 082	INTERBUY	071
GRADIN	098	INTERFUNK	018, 042, 095, 097, 099, 159, 160, 161
GRAETZ	042, 099	INTERVISION	018, 063, 071, 127, 144, 158, 161
GRANADA	018, 028, 063, 097, 109, 124, 161	ISUKAI	064
GRANDIN	075	ITT	042, 099, 108
GRUNDIG	018, 059, 060, 068, 137	JACSON	129
GRUNPY	051, 052	JBL	023
HALIEAX	071	JCB	137, 177
HALLMARK	050, 172, 177	JVC	017, 022, 045, 054, 172
HANSEATIC	018, 089, 097, 098, 099, 118, 119	JEC	040
HARLEY DAVIDSON	051, 172, 177	KAISUI	004, 062, 063, 064, 075
HARMAN KARDON	023	KAMP	062
HARRAD	172, 177	KAPSCH	042, 095, 099
HARVARD	052, 172, 177	KARCHER	161
HCM	004, 071, 075, 161	KATHREIN	089
HEATHKIT	177	KAWASHO	062, 077
HEMMERMANN	097	KEC	052
HIFIVOX	171	KENDO	018, 099, 117, 119, 127, 158, 161
HINARI	004, 017, 018, 051, 064, 161, 172	KENWOOD	009, 015
HISAWA	075, 159	KINGSLEY	062
HITACHI	016, 017, 025, 031, 032, 035, 037, 042, 048, 063, 094, 095, 096, 097, 099, 102, 108, 109, 110, 111, 112, 113, 114, 124, 148, 172, 177	KLH	124, 172, 177
		KLOSS	012
		KNEISSEL	161

14. Appendix

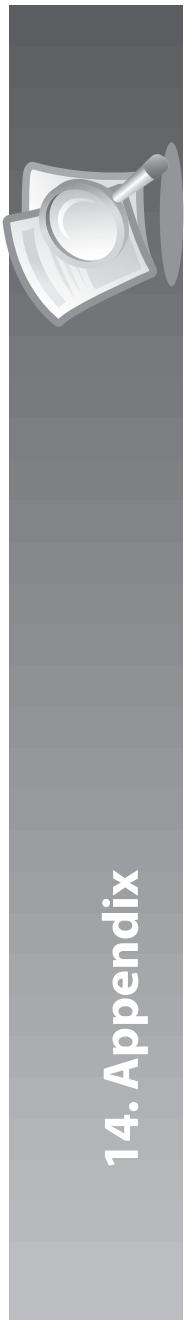


KMC	033	MEGATRON	002, 035, 050, 109
KOLSTER	158	MEI	056
KONIG	004, 005, 017, 018, 042, 061, 068	MEMOREX	004, 006, 025, 026, 033, 036, 038, 050, 070, 071, 106
KORPEL	018	MEMPHIS	124
KORTING	098, 160	METZ	159, 160, 161
KOYODA	004	MGA	009, 015, 036, 039, 050
KTV	015, 019, 052, 056, 063, 074, 172, 177	MIDLAND	007, 016, 019, 020, 021, 034
KUBA ELECTRONIC	097	MINERVA	068
KURA	097	MINUTZ	011
Lenco	071, 133, 146, 018, 028, 071, 118, 124, 158, 161	MITSUBISHI	009, 017, 030, 036, 039, 050, 068, 159, 160, 172
LG	025, 154, 161	MIVAR	062
LIESENK & TTER	018, 161	MOTOROLA	024, 030
LIFETEC	071, 161	MTC	009, 015, 025, 026, 056, 062, 097
LINITRON	172	MULTISTANDARD	127
LLOYD	177	MULTITECH	004, 052, 062, 063, 099, 127, 158, 172, 177
LLOYTRON	016, 172	MULTIMEDIA	132
LOEWE	159, 160	NAD	040, 044, 050, 172
LOGIK	156, 006	NAONIS	099
LUMA	099	NATIONAL	068
LUXMAN	025	NEC	009, 015, 017, 025, 046, 172
LUXOR	068, 094, 097, 099, 102, 124	NECKERMANN	018, 059, 087, 089, 097, 102, 159, 160, 161, 177, 185, 189
LXI	007, 020, 023, 038, 040, 050, 106	NEI	018, 161
MELECTRONIC	004, 018, 042, 063, 097, 127, 163, 172	NESCO	051
MAGNADYNE	158, 159, 160	NETSAT	018
MACY'S	172	NIKKAI	016, 018, 028, 040, 062,, 064, 071, 124
MAGNAFON	127, 158, 167	NIKKO	007, 015, 020, 029, 038, 040, 050, 161
MAGNASONIC	106, 161	NISATO	081
MAGNAVOX	010, 012, 014, 015, 017, 023, 051, 057, 058, 110, 172	NOBLEX	083
MAJESTIC	006	NOBLIKO	158
MANDOR	071	NOGAMATIC	171
MANESTH	063, 071, 098, 117	NOKIA	071, 094, 095, 096, 097, 099, 106, 108, 143, 161
MARANTZ	015, 018, 023, 089, 161	NORDMENDE	160, 163, 171
MARCY'S	172	MARK	161
MARELLI	160	MATSU	004, 005, 018, 049, 063, 092, 097, 117, 161
MARK	018	NOSHİ	008
MATSU	021, 070	NTC	029
MATSUSHITA	110	OCEANIC	042, 099, 106, 118
MC MICHAEL	018	OKANO	161
MEDIATOR			

14. Appendix



ONWA	052	PROFEX	004, 161
OPTIMUS	038, 044, 070	PROFITRONIC	158, 161
OPTIONICA	030, 043	PROLINE	119
ORAVA	161	PROSCAN	015, 020
ORION	018, 049, 051, 067, 085, 097, 098, 118, 117, 161, 172, 177	PROTEC	099, 127
OSAKI	016, 028, 063, 064, 071, 124,	PROTECH	004, 018, 063, 071
OSO	064	PROTON	002, 050
OSUME	016, 028, 124	PULSAR	007, 009, 110, 124
OTTO VERSAND	017, 018, 059, 063, 087, 089 093, 097, 098, 099, 102, 108, 117, 118, 161, 163, 172, 175, 176, 177, 178, 181, 182, 185, 186, 189	QUASAR	021, 024, 043, 070, 158
PALLADIUM	099, 160	QUELLE	005, 018, 087, 093, 097, 099, 108, 117, 118, 172, 175, 176, 177, 178, 181, 185, 186, 189, 192, 193
PANAMA	063, 071	QUESTA	017, 172
PANASONIC	156, 020, 021, 022, 023, 024, 026, 030, 036, 038, 040, 042, 043, 050, 065, 068, 070, 079, 099	RADIO SHACK	009, 015, 016, 019, 020, 025, 038, 043, 050, 052, 106
PATHE CINEMA	062, 098	RADIOLA	018, 161
PATHE MARCONI	171	RADIOMARELLI	160
PAUSA	004	RADIOTONE	071, 161
PCE/PEC	040, 106, 108, 172	RADIX	108
PENNEY	001, 102, 008, 009, 011, 013, 015, 016, 019, 020, 021, 025, 026, 034, 040, 050	RANK ARENA	017
PERFORMANCE	172, 177	RCA	008, 009, 020, 021, 030, 034
PHASE	016	REALISTIC	009, 015, 016, 019, 025, 038, 043, 050, 052, 106
PHILCO	009, 010, 012, 014, 015, 023, 035, 057, 058, 085, 123, 159, 160, 161, 172	REKORD	149
PHILIPS	007, 008, 009, 010, 011, 012, 013, 014, 018, 019, 023, 089, 110, 124, 138, 160, 161, 172, 177	REVOX	018
PHOENIX	160	REX	042, 071, 076, 099
PHONOLA	018, 098, 160	RFT	088, 126, 160
PILOT	009, 015, 019	RHAPSODY	056, 062
PIONEER	042, 044	R-LINE	018
POLICOM	068, 158	RM-U301	174
POLYRON	071	ROADSTAR	004, 064, 071, 161
PORTLAND	009, 019, 029, 177	ROYAL LUX	131
PRANONI PRINCE	099, 158	RTF	018
PRIMA	040, 106, 172	RUNCO	007, 015
PRINZ	124	SABA	042, 095, 099, 163, 170, 171
PRISM	021	SAGEM	139
PRO VISION	161	SAISHO	004, 005, 049, 071, 117
		SAKIO	071
		SALORA	042, 094, 097, 099, 102, 106, 124
		SAMBERS	127, 158
		SAMPO	015, 016, 019
		SAMSUNG	004, 009, 015, 016, 018, 019, 025, 026, 050, 063, 071, 078, 089, 124, 137, 161

14. Appendix

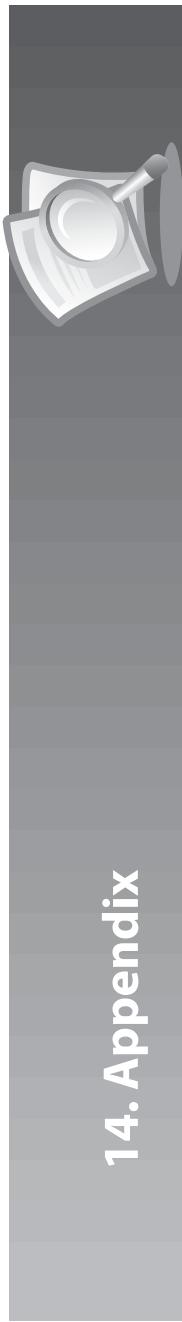


SAMSUX	019	SONOKO	004, 018, 071
SANDRA	062	SONOLOR	042
SANSEI	084	SONTEC	018, 161
SANSUI	085		005, 017, 039, 087, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194
SANYO	005, 017, 028, 038, 041, 106, 107, 108, 124, 129, 172	SONY	
SBR	018	SOUND&VISION	127
SCHAUB LORENZ	099	SONDESIGN	050, 051, 052, 057, 172, 177
SCHNEIDER	018, 064, 071, 097, 136, 143, 147, 161	SOUNDWAVE	018
SCIMITSU	009	SPECTRA	133
SCOTCH	050	SPECTRICON	002
SCOTT	009, 050, 051, 052, 067, 172, 177	SQUAREVIEW	047
SEARS	020, 023, 025, 038, 040, 041, 047, 050, 051, 106	SR2000	106
SEG	017, 063, 071, 126, 127, 158, 161, 172, 193	SSS	009, 052
SEI	049	STANDARD	004, 063, 064, 098
SEI-SINUDYNE	097, 099, 117, 118, 122, 158, 159, 160, 161, 177, 181	STARLITE	052, 161
SELECO	042, 076, 099, 100, 119, 120, 122	STERN	042, 076, 099
SEMIVOX	052	SUNKAI	117, 118
SEMP	040	SUNSTAR	161
SENTRA	040	SUPERTECH	097, 161
SHARP	017, 019, 030, 043, 172	SUPRA	025
SHINTOM	161, 177	SUSUMU	064
SHINTOSHI	161	SUPREMACY	172
SHIVAKI	161	SUPREME	177
SHOGUN	009	SULVANIA	010, 012, 014, 015, 023, 057, 058, 080
SHORAI	118	SYMPHONIC	047, 172, 177
SIAREM	127, 158, 159, 160	SYSLINE	018
SICATEL	121	TADISTAR	161
SIEMENS	018, 059, 060, 061, 161	TADNDY	124
SIGNATURE	006, 040, 177	TANDY	028, 030, 042, 063, 064
SILVER	017, 172	TASHIKO	110, 161, 172
SIMPSON	057, 058	TASHKO	017, 063
SINGER	127, 159, 160, 161	TATUNG	002, 018, 024, 028, 063, 124
SINUDYNE	049	TEC	063, 133, 161
SKANTIC	099	TECHLINE	127, 158
SKY	018	TECHNEMA	098
SOGERA	098	TECHNICS	007, 020, 021, 070
SOLAVOX	016, 042	TECHNISAT	130, 161
SONITRON	108	TECHNOLACE	051
		TECHWOOD	002, 021, 025, 177
		TECNISON	161

14. Appendix



TEKNIKA	006, 009, 019, 023, 025, 026, 029, 036, 051, 052, 057	UNIVERSUM	018, 071
TELEAVIA	171	UNIVOX	159
TELECO	135	URANYA	158
TELEFUNKEN	025, 163	VECTOR RESEARCH	015
TELEMEISTER	098	VESTEL	018, 161
TELETECH	004	VICTOR	022
TELETON	017, 057, 063, 097, 099	VIDEOTECHNIC	063
TELEVIDEO	098	VIDEOTON	094
TENSAI	064, 093, 098, 118, 158, 161	VIDIKRON	023
TESLA	135	VIDTECH	009, 017, 050
TEXET	062, 064	VISA	004, 005, 017, 018, 042, 068
THOMAS	110, 124, 177	VISION	098, 161
THOMSON	068, 155, 163, 170, 171	VOXSON	042, 099, 159, 160
THORN	018, 028, 040, 087, 107, 108, 110, 112, 128, 129, 161, 163, 165, 168, 172, 177	VTQ	126
TMK	025, 049, 050	WALTHAM	063, 094, 099
TOKAI	124	WARDS	006, 009, 010, 011, 013, 014, 015, 023, 025, 034, 040, 043, 050, 051, 058
TOMASHI	075	WATSON	018, 098, 161
TOSHIBA	017, 026, 038, 040, 069, 106, 108, 172	WATT RADIO	097, 127, 158
TOSONIC	056	WEGA	017, 160, 172
TOTEVISION	019	WHITE WESTINGHOUSE	018, 062, 098, 106, 158, 161
TOWADA	099, 127, 158	WORLD-TECH	133
TRIUMPH	049, 069	YAMAHA	009, 015
TV TEXT	089	YOKO	018, 063, 071, 133, 161
UHER	098, 127, 158, 161, 173	YORK	108
ULTRA	081, 124	ZANUSSI	076, 099
ULTRAVOX	127, 158, 159, 160, 161	ZENITH	006, 007, 029, 177
Universal	011, 013	ZONDA	002

14. Appendix

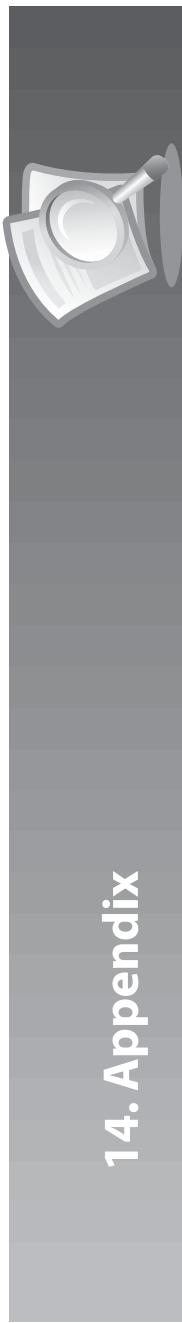

3. DVD Code List

Brand	Code	
DVD Players		
AIWA	146	POLAROID 233
ALPINE	098	POLKAUDIO 035, 066
APEX DIGITAL	087, 111, 115	PROCEED 086
BROKSONIC	130	PROSCAN 026, 027
CINEVISION	091	RCA 026, 027
DENON	007, 080, 173	SAMSUNG 036, 070, 119, 137, 159, 165, 170
DURABRAND	091	SANSUI 154
DVD 2000	017	SANYO 147
EMERSON	091, 143	SEARS 147
FISHER	147	Sensory Science 222
FUNAI	143	SHARP 094
GE	026, 027	SONY 033, 118, 126, 145, 191
GOLDSTAR	091	SYLVANIA 143
GO VIDEO	137, 091, 220, 221, 222	SYMPHONIC 143
HARMAN KARDON	084, 140	TATUNG 102
HITACHI	101	TECHWOOD 088
INTEGRA	142, 180	THOMPSON 026, 027
JBL	084	TIVO 234, 235
JVC	012	TOSHIBA 035, 034, 130, 141, 164, 188
KENWOOD	151	VENTURI 149
KLH	135	YAMAHA 066, 089, 138, 195, 197
KRELL	104	ZENITH 057, 074, 091
LEXICON	148	DVD Recorders
LG	057, 074, 091	GO VIDEO 220, 221, 222
MAGNAVOX	066, 096	PANASONIC 139
MARANTZ	095, 105	SENSORY SCIENCE 222
MERIDIAN	153	SONY 191
MICROSOFT	027	TOSHIBA 188
MITSUBISHI	017	TV/DVD Combo
MYRYAD	102, 134	AIWA 146
NAD	088	FUNAI 143
NAKAMICHI	103	SAMSUNG 165
ONKYO	035, 076, 180	SYLVANIA 143
ORION	130	SYMPHONIC 143
PANASONIC	021, 138, 139, 144, 150	TOSHIBA 130
PHILIPS	066, 095, 105	TV/DVD/VCR Combos
PHILIPS-MAGNOVOX	035, 066	MAGNAVOX 143
PIONEER	131	PANASONIC 144
		SYLVANIA 143

14. Appendix




TOSHIBA	164
DVD/VCR Combos	
GO VIDEO	137
PANASONIC	150
PHILIPS	105 (VCR Functions for VCR 067)

SAMSUNG	137, 159
SANSUI	154
SONY	145
TOSHIBA	141
ZENITH	091 (VCR Functions for VCR 101)

4. Audio & AUX Code List

Brand	Code	
LINN	124, 206	
LUXMAN	004, 009, 052, 115, 137, 139, 165	
MAGNAVOX	086, 152, 164, 208	
MARANTZ	006, 015, 028, 031, 040, 056, 063, 185, 186	
MCINTOSH	053, 238	
MERIDIAN	012, 013, 100	
MITSUBISHI	204, 242, 243	
MONDIAL	042, 043, 081, 112, 157, 158	
MYRYAD	030, 099	
NAD	038, 113, 186, 210, 216	
NAKAMICHI	054, 111, 172, 183, 244, 245	
NIRO	135	
NILES	241	
ONKYO	017, 029, 046, 080, 108, 209	
OPTIMUS	026, 041	
OUTLAW	134	
PANASONIC	032, 098, 177, 195, 219, 221	
PARASOUND	003, 103, 105, 125, 126, 129, 130, 132	
PHILIPS	063, 249, 250	
PIONEER	014, 035, 039, 044, 069, 078, 116, 168	
POLKAUDIO	251	
PROCEED	021, 144	
RCA	010, 048, 055, 067, 117, 156	
REALISTIC	019, 073, 075	
ROTEL	074, 083, 085	
RUSOUND	223, 239	
SAMSUNG	016	
SANSUI	040, 048, 063, 065, 110, 228	
SANYO	047, 059	
SCOTT	019	
SHARP	026, 094, 131, 175	

14. Appendix

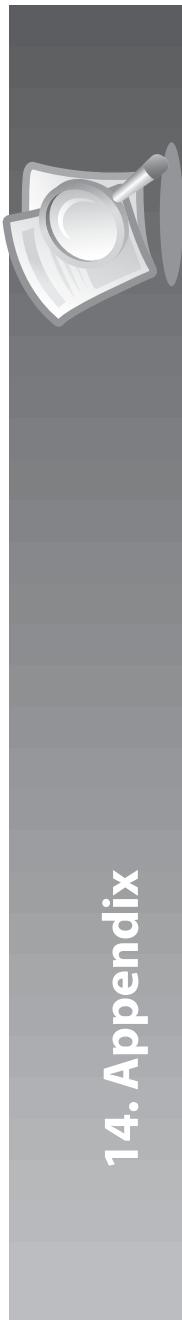

SHERWOOD	024, 102, 106, 246
SONY	018, 025, 101, 166, 179, 180, 184, 218, 220, 247, 248
SOUNDESIGN	036
SUNFIRE	142, 143, 146
TEAC	005, 019, 049, 111, 212, 217
TECHNICS	007, 122, 177, 178, 193, 200, 219, 254
THETA DIGITAL	136
TOSHIBA	033, 060, 087
YAMAHA	011, 026, 027, 051, 067, 089, 169, 173, 181, 205, 232, 253
MEDIA PC Controls	
DELL	190, 194


MDB1.0

GATEWAY	190, 194
HP	190, 194
SONY	190, 194
TOSHIBA	190, 194
WINBOOK	190, 194
XM Radios	
DELPHI	251
KENWOOD	252
POLKAUDIO	251
SONY	220

www.humaxdigital.com



 ROHS/MANUAL/HDPVR1000C/200GBSV



20000-000060PT