

Huntwise Inc.

Remote control fittings Description

For using the remote control and electric turkey receiver controller.

Parts list:

1 remote control receiver

1 remote control transmitter

Step 1: will the remote control key indicator.

Note: Be sure to save power, for future use, and the remote control is useless.

Without the remote control, the machine will not operate.

Step 2: turkey in the electric control receiver under the battery box, battery loaded AA1.5 * 4.

Step 3: Open the location of the power switch to the "ON" (remote control function). Use Handset to activate ELECTRICAL turkey. When not in use, the switch to the "OFF" position.

Step 4: Remove the remote control receiver under the battery.

Troubleshooting:

Your remote control kit is pre-programmed at the factory. Although it is rare, it is possible looseness

Its connection with the remote receiver duck. If your remote control does not work

Box, re-set your remote control and your electric turkey, perform the following steps.

1) control the receiver switches to the "OFF" position, LED off lights.

2) press horde remote control key, then press the control switch to the "ON" position of the receiver. Red LED

Bright on the blackboard. At this point, the receiver is programmed to work in which the remote.

If these steps do not come back to work, check to see if the battery is fresh

Does not dry up. If you still have problems, please contact the customer service center.

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by Huntwise Inc. may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.