

Preface


Thanks for your favor in our product. This manual is helpful for you to quickly know how to use the product. For detailed features and operations, please refer to the Feature Book along with the product.

This manual is applicable to the following product:

PD66Xi Um Digital Portable Radio

(X may represent 2, 5, 6 or 8)

DIGITAL PORTABLE RADIO

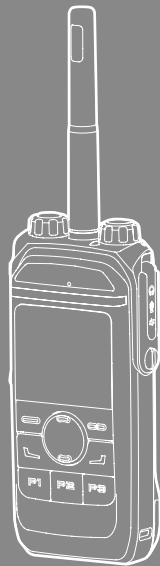

Instructional Icons



Indicates functions that are available on digital channel only.



Indicates functions that are available on analog channel only.

Functions marked with neither the above icons are available on both analog and digital channels.

Disclaimer

Hytera Communications Corporation Limited (the Company) endeavors to achieve the accuracy and completeness of this manual, but no warranty of accuracy or reliability is given. All the specifications and designs are subject to change without notice due to continuous technology development. No part of this manual may be copied, modified, translated, or distributed in any manner without the express written permission of us.

We do not guarantee, for any particular purpose, the accuracy, validity, timeliness, legitimacy or completeness of the Third Party products and contents involved in this manual.

If you have any suggestions or would like to learn more details, please visit our website at: <http://www.hytera.com>.

RF Radiation Information

This product must be restricted to operations in an occupational/controlled RF exposure environment. Users must be fully aware of the hazards of the exposure and able to exercise control over their RF exposure to qualify for the higher exposure limits.

RF Radiation Profile

Radio Frequency (RF) is a frequency of electromagnetic radiation in the range at which radio signals are transmitted. RF technology is widely used in communication, medicine, food processing and other fields. It may generate radiation during use.

RF Radiation Safety

In order to ensure user health, experts from relevant industries including science, engineering, medicine and health work with international organizations to develop standards for safe exposure to RF radiation. These standards consist of:

- United States Federal Communications Commission, Code of Federal Regulations; 47CFR part 2 sub-part J;

- American National Standards Institute (ANSI)/Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1992;
- Institute of Electrical and Electronic Engineers (IEEE) C95.1-1999;
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998;

FCC Regulations

Federal Communication Commission (FCC) requires that all radio communication products should meet the requirements set forth in the above standards before they can be marketed in the U.S, and the manufacturer shall post a RF label on the product to inform users of operational instructions, so as to enhance their occupational health against exposure to RF energy.

EU Regulatory Conformance

As certified by the qualified laboratory, the product is in compliance with the essential requirements and other relevant provisions of the Directive 2014/53 /EU.

Please note that the above information is applicable to EU countries only.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. Verification of harmful interference by this equipment to radio or television reception can be determined by turning it off and then on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a different circuit to that of the receiver's outlet.
- Consult the dealer or an experienced radio/TV technician for help.

Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Note: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Compliance and Control Guidelines and Operating Instructions

To control your exposure and ensure compliance with the occupational/controlled environmental exposure limits, always adhere to the following procedures. Guidelines:

- Do not remove the RF Exposure Label from the device.
- User awareness instructions should accompany device when transferred to other users.
- Do not use this device if the operational requirements described herein are not met.





Operating Instructions:

- Transmit no more than the rated duty factor of 50% of the time. To transmit (talk), push the Push-To-Talk (PTT) key. To receive calls, release the PTT key. Transmitting 50% of the time, or

less, is important because the radio generates measurable RF energy only when transmitting (in terms of measuring for standards compliance).

- Keep the radio unit at least 2.5 cm away from the face. Keeping the radio at the proper distance is important as RF exposure decreases with distance from the antenna. The antenna should be kept away from the face and eyes.
- When worn on the body, always place the radio in a Hytera-approved holder, holster, case, or body harness or by use of the correct clip for this product. Use of non-approved accessories may result in exposure levels which exceed the FCC's occupational/controlled environmental RF exposure limits.
- Use of non-approved antennas, batteries, and accessories causes the radio to exceed the FCC RF exposure guidelines.
- Contact your local dealer for the optional accessories of the product.

Content

Items in the Package -----	1		
Product Overview -----	2		
Product Controls-----	2		
Programmable Keys-----	3		
Before Use -----	3		
Assembling the Radio-----	3		
Charging the Battery-----	4		
Checking the Battery Power-----	5		
Status Indication -----	5		
LCD Icon-----	5		
LED Indicator-----	7		
Menu Navigation -----	8		
Basic Operations -----	9		
Powering On/Off-----	9		
Adjusting the Volume-----	9		
Selecting a Zone-----	9		
Selecting a Channel-----	9		
Managing the Contacts-----	9		
Call Service -----	10		
Private Call  -----	10		
		Group Call  -----	10
		Call on Analog Channel (No Signaling)  -----	11
		Emergency Call-----	11
		Message Service  -----	11
		Troubleshooting -----	12
		Care and Cleaning -----	14
		Optional Accessories	42



Items in the Package

Please unpack carefully and check that all items listed below are received. If any item is missing or damaged, please contact your dealer.



Note


The frequency band is marked on the label of the antenna; if not, refer to the label on the radio for frequency band information.

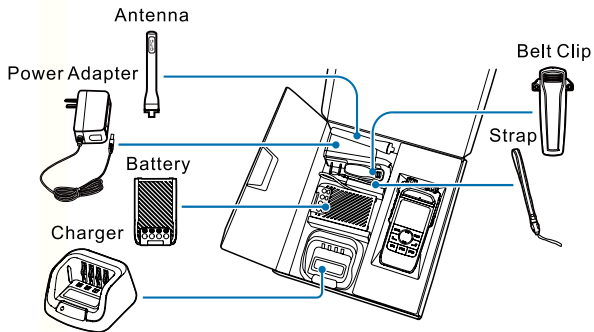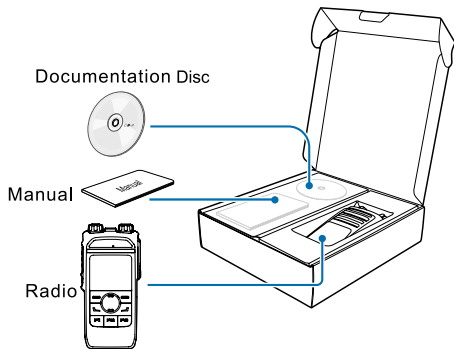



Note

All pictures in this manual are for reference only.

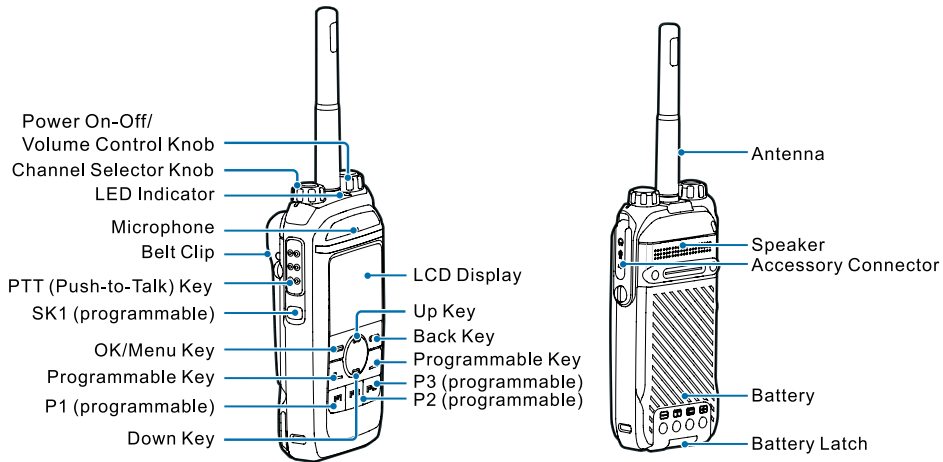Product Controls




Programmable Keys

For enhanced convenience, you may request your dealer to program the SK1, , , P1, P2 and P3 as shortcuts to certain functions. Please refer to the corresponding Feature Book for more details.

Assembling the Radio


1. Assembling the Battery

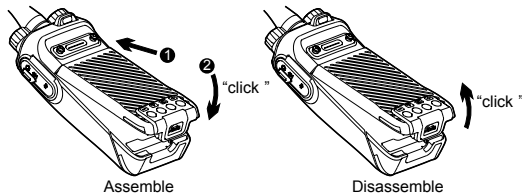

Note

To remove the battery, please turn off the radio first. Then slide the battery latch upwards to unlock the battery.


2. Assembling the Antenna

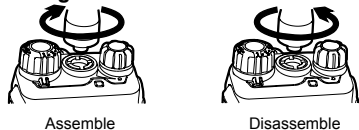


Caution

Do not hold the radio by its antenna, otherwise the performance and lifespan of the antenna will be reduced.

3. Assembling the Belt Clip

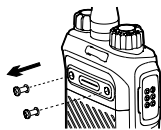


①
Remove the screws

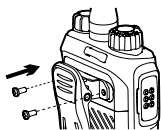

②
Assemble the Belt Clip

4. Assembling the Accessories

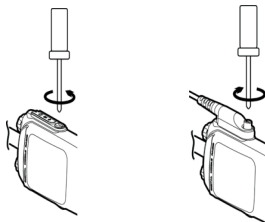

Charging the Battery

Please use the charger specified by the Company to charge the battery. Charging Diagram is listed below.

LED Indication	Charging Status
The LED Indicator flashes red slowly	Standby (no load)
The LED Indicator glows red	Charging
The LED Indicator glows orange	90% charged
The LED Indicator glows green	Fully charged
The LED Indicator flashes red rapidly	Charging error

- Make sure the radio is powered off before charging.
- Read the Safety Information Booklet in advance to get necessary safety information.
- To achieve optimal battery performance, please charge the battery for at least 5 hours before initial use.

Checking the Battery Power

You may check the current battery power by holding down the programmed **Battery Power Indicator** key preset by your dealer. And release the key to exit. Battery power indications are listed below:

























LED Indication	Battery Power
● The LED indicator glows green	High
● The LED indicator glows orange	Medium
● The LED indicator glows red	Low
● The LED indicator glows red and low battery alert sounds	Under the low battery threshold. Charge or replace the battery for proper radio operation

LCD Icon

Name	Icon	Radio Status
GPS Icon		The GPS feature is enabled, and valid GPS data is received.
Battery Power Icon		The GPS feature is enabled, but no valid GPS data is received.
TX Power Icon		More bars indicate more battery power.
Accessory Icon		Low TX power for the current channel.
Work Order Icon		High TX power for the current channel.
Operation Mode Icon		An accessory is connected.
		One or more new work orders are received.
		Direct Mode Operation: Under this mode, the radio communicates with other radios directly.
		Repeater Mode Operation: Under this mode, the radio communicates with other radios via a repeater.







Status Indication

Name	Icon	Radio Status
Monitor Icon		The Monitor feature is enabled.
Emergency Icon		The radio is in emergency state (except for silent emergency type) or an emergency call is received.
Roam Icon		The radio is roaming.
Scrambler/Encrypt Icon		The Scrambler/Encrypt feature is enabled.
Scan Icon		The radio is scanning.
		The radio stays on a non-priority channel.
		The radio stays on Priority Channel 1.
		The radio stays on Priority Channel 2.
VOX Icon		The VOX feature is enabled.
Missed Call Icon		Missed call(s).
Message Icon		Unread message(s).
		Inbox is full.

Name	Icon	Radio Status
RSSI Icon		No signal.
		More bars indicate better signal strength.
Speaker Icon		The speaker is unmuted.
LQO Icon		The LQO feature is enabled.
Call/Contact Icon		Indicates Private Call during a call.
		Indicates Private Contact in the contact list.
		Indicates Group Call during a call.
		Indicates Group Contact in the contact list.
		Indicates All Call during a call.
		Indicates All Call Contact in the contact list.

LED Indicator




LED Indication	Product Status
 The LED indicator flashes green	Powering on
 The LED indicator glows green	Receiving
 The LED indicator glows red	Transmitting
 The LED indicator flashes orange slowly	Scanning or Roaming
 The LED indicator flashes orange rapidly	Emergency
 The LED indicator glows orange	Call hung. During a call, you can hold down the PTT key to talk to the other party before the call hang time expires.

Menu Navigation


The following diagram outlines the menu structure of the radio. You can personalize menu option displayed in the radio via your dealer.

To select and confirm the options shown in the menu, press the **Menu** key to enter the main menu, and then press the **Up/Down** key to select the appropriate option, finally press the **OK** key. This manual only describes the paths to the menus in terms of menu operations, for example, to access the contact list, go to "Contact -> Contact List".


The radio supports menu reset function. If you do not operate the menu for a predefined time period set by the dealer, the radio will automatically return to the home screen. You may request your dealer to configure the auto reset time or disable the feature.

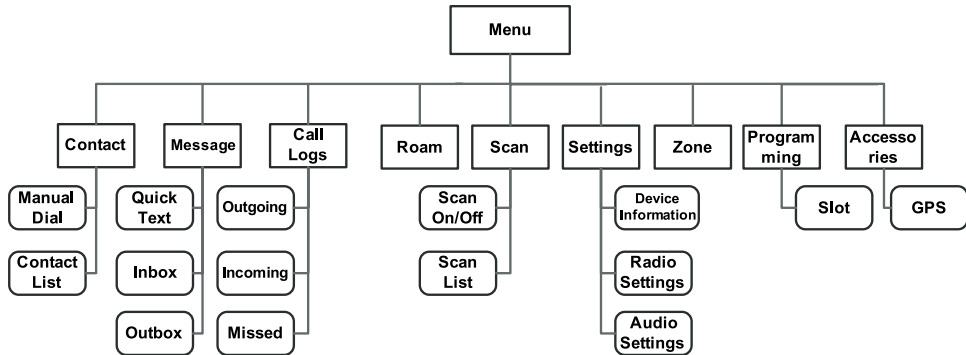

Powering On/Off

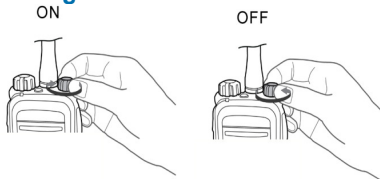

Adjusting the Volume

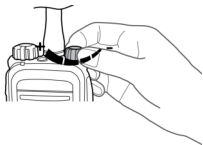

Selecting a Zone

A zone is a group of channels exhibiting the same property, which is programmed by your dealer and can facilitate convenient management over the channel. The radio supports up to 3 zones, each with a maximum of 16 channels. You can switch to the appropriate zone by pressing the programmed **Zone Up** or **Zone Down** key preset by your dealer.

Selecting a Channel

After the radio is powered on, you can rotate the Channel Selector Knob to select an appropriate channel. You can also switch to the designated channel by pressing the programmed **Preset Channel** key preset by your dealer.

If the Channel Notify feature is enabled, you will hear the corresponding channel number when switching to any channel.


Managing the Contacts

You can manage the contacts via the "Contact" menu.

The contact list saves the information of private call, group call and all call contacts. To view this list, go to the "Contact -> Contact list" menu or press the programmed **Contact List** key.


You can view contact details, edit or delete the private call contact in the "Contact List" menu. You can send to a private call contact the following commands: Alert Call, Radio Check, Remote Monitor, Radio Enable or Radio Disable. Please refer to Feature Book for details.

After the radio is powered on, you can make and receive calls. To ensure optimal volume of the receiving radio, keep the microphone about 2.5 to 5 centimeters away from your mouth when transmitting.

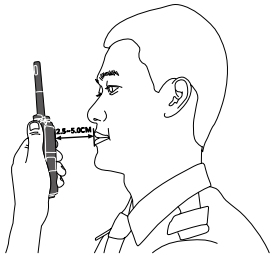

Private Call

Initiating a Private Call

When initiating a private call, the radio will display the icon . You can make a private call through the following ways:

Preset Contact

In the home screen, hold down the **PTT** key to initiate a Private Call to the Private Call contact preset for the current channel.

You may request your dealer to preset a regular Private Call contact, Group Call contact or an All Call contact for each digital channel.


Contact List or Call Logs

Step 1 Go to "Menu -> Contact -> Contact List" or "Menu -> Call Logs -> Outgoing/Incoming/Missed".

Step 2 Use the **Up/Down** key to select an appropriate contact.


Step 3 Hold down the **PTT** key to initiate a Private Call.

Receiving and Responding to a Private Call

After receiving a private call, the radio will display the icon , then you can listen without any operation. You can hold down the **PTT** key to call back within the preset time. If you do not respond to it, the radio will display appropriate indications.

Group Call

Initiating a Group Call

When initiating a group call, the radio will display the icon . You can make a group call through the following ways. The operation is similar to initiating a private call.

Preset Contact

In the home screen, hold down the **PTT** key to initiate a Group Call to the Group Call contact preset for the current channel.

Contact List


Step 1 Go to "Menu -> Contact -> Contact List".

Step 2 Use the Up/Down key to select an appropriate contact.

Call Service

Step 3 Hold down the **PTT** key to initiate a Group Call.

Receiving and Responding to a Group Call

After receiving a group call, the radio will display the icon . You can hold down the **PTT** key to call back within the preset time.

Call on Analog Channel (No Signaling)

On an analog channel, you can hold down the **PTT** key and talk to the microphone to transmit, and release the **PTT** key to receive.

Please refer to the corresponding Feature Book for operation description on how to make and receive calls on the analog channel with signaling.

Emergency Call

In case of emergency, you can use this feature to ask for help from your companion or the control center. The Emergency Call has the highest priority which can terminate the ongoing calls with lower priorities on the current channel. You can make an emergency call even when your radio is transmitting or receiving.

This feature needs to be configured and enabled by your dealer. Please refer to the corresponding Feature Book for details.

Message Service



You can send the Quick Text or forward the message saved in the InBox, OutBox or Drafts.


Quick Text

The radio supports quick text message preset by your dealer. You can directly send the message or edit it prior to sending.

Inbox



The radio saves the received messages into the Inbox and marks every message with a corresponding icon to indicate its status.

- : Read message
- : Unread message

When the Inbox is full, the radio will display the icon , and the earliest message will be overwritten by the latest one automatically.

Outbox

The radio will save the sent messages into the OutBox and marks every message with a corresponding icon to indicate its status.

- : The message is sent successfully.
- : The message is not sent successfully. In this case, you can resend it.

When the Outbox is full, the earliest message will be overwritten by the latest one automatically.

Troubleshooting

If the solutions below cannot fix your problems, or you may have some other queries, please contact us or your local dealer for more technical support.

Phenomena	Analysis	Solution
The radio fails to power on.	The battery may be improperly installed.	Remove the battery and then reattach it.
	The battery power may be used up.	Recharge or replace the battery.
	The battery may be poorly connected due to dirtied or damaged battery contacts.	Clean the battery contacts. If the problem cannot be solved, contact your dealer or authorized service center for inspection and repair.
During receiving, the voice is weak, discontinuous or totally inactive.	The battery voltage may be low.	Recharge or replace the battery.
	The volume level may be low.	Increase the volume by rotating the Volume Control Knob.
	The antenna may be loosened or improperly installed.	Reattach the antenna after turning off the radio.
	The speaker may be blocked or damaged.	Clean the surface of the speaker. If the problem cannot be solved, contact your dealer or authorized service center for inspection and repair.
You cannot communicate with other members.	The frequency or signaling may not match that of other members.	Set your TX/RX frequency and signaling to the same as that of other members.
	The channel type (digital/analog) may be set inconsistently.	Make sure all members are on the same digital/analog channel.
	You may be too far away from the group members.	Move towards other members.

Phenomena	Analysis	Solution
Irrelevant communication or noise is heard on the channel.	You may be interrupted by radios using the same frequency.	Change the frequency, or adjust the squelch level.
	The radio may be set with no signaling.	Set signaling for all member radios to avoid interference at the same frequency.
The noise is too loud.	You may be too far away from other members.	Move towards other members.
	You may locate in an unfavorable position. For example, your communication may be blocked by high buildings or frustrated in the underground areas.	Move to an open and flat area, and restart the radio to try again.
	You may suffer from external disturbance (such as electromagnetic interference).	Stay away from equipment that may cause interference.

To guarantee optimal performance as well as a long service life of the product, please follow the tips below.

Product Care

- Do not pierce or scrape the product.
- Keep the product far away from substances that can corrode the circuitry.
- Do not hold the product by the antenna or earpiece cable.
- Close the accessory connector cover when no accessory is in use.

Product Cleaning



Turn off the product and remove the battery before **Caution** cleaning.

- Clean up the dust and fine particles on the product surface and charging piece with a clean and dry lint-free cloth or a brush regularly.
- Use neutral cleanser and a non-woven fabric to clean the keys, control knobs and front case after long-time use. Do not use chemical preparations such as stain removers, alcohol, sprays or oil preparations, so as to avoid surface case damage.
- Make sure the product is completely dry before use.

Optional Accessories

Contact your local dealer for the optional accessories used with the product.

Caution

Use the accessories specified by Hytera only; otherwise, the Company will not be liable for any loss or damage arising out of the use of any unauthorised accessories.
