

CHILDMINDER

Instructions

King Ring Unit

1. See back of Key Ring Unit.
2. Remove battery compartment cover and insert two (2) alkaline or lithium AAA batteries in the battery compartment of Key Ring Unit
3. Replace Battery compartment cover
4. Key Ring Unit is now ready for operation

Smart Clip (*active child safety seat shoulder harness clip*)

1. See back of Smart Clip Part A
2. Remove battery compartment cover and insert two (2) AAA alkaline or lithium batteries in the battery compartment of Smart Clip Part A
3. Replace battery compartment cover

Operation

1. Arming / Activation of ChildMinder

1. Insert Smart Clip Part B to Smart Clip Part A
2. Smart Clip Part A will begin to beep and its surface red light are now flashing
3. Press and release the test button on the Key Ring Unit. The Key ring unit will beep once and the Smart Clip Part A will stop beeping
4. The green lights on Smart Clip Part A and the green light on the Key ring Unit are now flashing indicating that ChildMinder is now activated (**armed**).

2. Alarm Engaged

1. Upon the proximity of Key ring Unit becoming greater than 30 meters from the activated Smart Clips' part A&B, the Key ring Unit will begin to beep (**alarm**).
2. The Key Ring Unit will continuously beep until the Smart Clip has been either deactivated (*see below*) or the Key Ring Unit is return to proximity of less than 30 meters of the Smart Clip.

3. Deactivation of Child Minder

1. Press and hold down the Release button on Smart Clip Part B while gently pulling outward on both Parts A & B
2. Separate parts A from Part B,
3. Allow 4 seconds.
4. The Key Ring Unit will beep 3 times then the Smart Clip will beep 3 times. ChildMinder is now deactivated (**disarmed**).

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.