

***Star* LX505** ***IDTECK* LX505SR**

Proximity / PIN
Access Controller



Table of Contents

1. IMPORTANT SAFETY INSTRUCTIONS	5
2. GENERAL	6
3. FEATURES	6
4. SPECIFICATION	7
5. IDENTIFYING SUPPLIED PARTS	8
6. PRODUCT OVERVIEW	9
6.1 FEATURES.....	9
6.2 PRODUCT EXPLANATION.....	11
6.2.1 Panel Description.....	11
6.2.2 Connection Layout.....	11
6.2.3 Color Coded & Wring Table	12
7. INSTALLATION TIPS & CHECK POINT.....	13
7.1 CHECK POINTS BEFORE INSTALLATION.....	13
7.1.1 Selection of Cable	13
7.1.2 Recommended Cable Type and Permissible Length	14
7.2 CHECK POINT DURING INSTALLATION	14
7.2.1 Termination Resistor	14
7.2.2 How to Connect Termination Resistors	15
7.2.3 Grounding System for Communication Cable	15
7.2.4 Reverse Diode Connection	16
8. INSTALLATION OF THE PRODUCT.....	16
8.1 WALL MOUNT (UNIT: MM).....	16
8.2 SYSTEM INITIALIZATION (EXTERNAL READER PORT).....	17
8.3 WALL MOUNT INSTALLATION	17
8.4 WIRING.....	17
8.4.1 Power Connection	17
8.4.2 Input Connection	17
8.4.3 Output Connection	19
8.4.4 External Reader Connection	19
9. COMMUNICATION	20
9.1 RS232 COMMUNICATION PORT CONNECTION	20
9.2 RS485 COMMUNICATION PORT CONNECTION	21
9.2.1 RS485 Connection (Standalone Unit)	21
9.2.2 RS485 Connection (Multiple Units)	22
9.3 TCP/IP COMMUNICATION PORT CONNECTION (OPTIONAL)	23
9.4 SERIAL PRINTER CONNECTION	23
10. BASIC SETTING	24
10.1 INITIALIZATION OF LX505	24
10.2 HOW TO ENTER THE SETUP MENU	25
10.3 LANGUAGE SETTING	25
10.4 DATE /TIME SETTING	26

10.5 ID REGISTRATION	26
11. OPERATIONS	29
11.1 NORMAL OPERATION	29
11.2 DEFAULT SETTING.....	29
12. SETTING CHANGES	30
12.1 F1 SETUP MENU	31
12.1.1 Language.....	32
12.1.2 Date and Time Setting.....	32
12.1.3 Reader #1 Mode.....	32
12.1.4 Reader #2 Mode.....	33
12.1.5 Reader #1 PIN Input.....	33
12.1.6 Reader #2 PIN Input.....	33
12.1.7 Communication Address Setting.....	33
12.1.8 Baud Rate Setting.....	34
12.2 F2 SETUP MENU	35
12.2.1 Event Memory.....	36
12.2.2 ID Display	36
12.2.3 Time Unit Setting	36
12.2.4 Output T/S + ID	37
12.2.5 Anti-pass-back Mode	37
12.2.6 Duress Mode.....	38
12.2.7 Wiegand Output	38
12.2.8 Door Open Alarm Time Setting.....	39
12.3 F3 SETUP MENU	40
12.3.1 Print Output	40
12.3.2 Voice Volume.....	41
12.3.3 Arm/Disarm	41
12.3.4 Two Men Mode.....	41
12.3.5 One Time Read.....	42
12.3.6 Max. User Setup	42
12.4 F4 SETUP MENU	43
12.4.1 Time Schedule	43
12.4.2 Holiday.....	44
12.4.3 Holiday Code	45
12.4.4 Reader#1 Mode Time Schedule	45
12.4.5 Reader#2 Mode Time Schedule	45
12.5 F5 SETUP MENU	46
12.5.1 Exit Button Output Setting.....	47
12.5.2 Door Contact Output Setting.....	48
12.5.3 Aux Input#1 Output Setting.....	48
12.5.4 Aux Input#2 Output Setting.....	48
12.5.5 Tamper Alarm Output Setting	48
12.5.6 Cut Off Alarm Output Setting.....	48
12.5.7 Duress Alarm Output Setting	48
12.5.8 Arm/Disarm Output Setting.....	48
12.5.9 DR TIME Output Setting	48
12.5.10 Output Time Schedule Setting.....	48
12.5.11 Input Time Schedule Setting	48
12.5.12 Cut Off Check Setting	49
12.5.13 Input Type Setting	49
12.6 F6 SETUP MENU	50
12.6.1 Output Setting for Reader#1 ID OK Level 1	51
12.6.2 Output Setting for Reader#1 ID OK Level 2	52

12.6.3 Output Setting for Reader#1 ID OK Level 3	52
12.6.4 Output Setting for Reader#1 ID OK Level 4	52
12.6.5 Output Setting for Reader#1 ID Error	52
12.6.6 Output Setting for Reader#1 T/S Error	52
12.6.7 Output Setting for Reader#1 APB Error	52
12.6.8 Output Setting for Reader#2 ID OK Level 1	52
12.6.9 Output Setting for Reader#2 ID OK Level 2	52
12.6.10 Output Setting for Reader#2 ID OK Level 3.....	52
12.6.11 Output Setting for Reader#2 ID OK Level 4.....	53
12.6.12 Output Setting for Reader#2 ID Error	53
12.6.13 Output Setting for Reader#2 T/S Error.....	53
12.6.14 Output Setting for Reader#2 APB Error	53
12.7 F7 SETUP MENU	54
12.7.1 ID Registration	54
12.7.2 ID Deletion.....	56
12.7.3 ID List	57
12.7.4 Master ID Registration.....	57
12.7.5 ID Count.....	58
12.7.6 Event Count.....	58
12.8 F8 SETUP MENU	59
12.8.1 System Initialize	59
12.8.2 Event Clear	60
12.8.3 ID Clear	60
12.8.4 MASTER ID CLEAR.....	60
12.8.5 TIME SCHEDULE CLEAR	61
12.8.6 DEFAULT SETTING.....	61
12.9 F9 SETUP MENU	62
12.9.1 Version Check.....	62
12.9.2 Input Test.....	63
12.9.3 Output Test	63
12.9.4 LCD Test	63
12.9.5 Keypad Test	64
12.9.6 Reader Test	64
12.9.7 Memory Test	64

1. Important Safety Instructions

When using Proximity / PIN Access Controller, you are recommended to follow the basic safety precautions below to reduce the risk of fire, electrical shock, and injury to persons.

1. **Fully** read and understand all instructions and follow them completely.
2. **Follow** all warnings and instructions marked on the product.
3. **Do not** use liquid or aerosol cleaners. Use a damp cloth for cleaning. If necessary, use mild soap.
4. **Do not** use this product near water.
5. **Only** operate this product using the type of power source indicated. If you are not sure of the type of power supplied to your installation site, consult the personnel of local power company.
6. **Never** insert objects of any kind into the product or through the cabinet slots as they may touch voltage points and/or short circuit parts possibly resulting in fire or electric shock.
7. **Never** spill liquid of any kind on the product.
8. **Never** disassemble this product by yourself; take the unit to a qualified service center whenever service or repair is required. Opening or removing the covers may expose you to dangerous voltages or other risks. Also, incorrect reassembly can cause electric shock when the unit is subsequently used.
9. **Unplug** this product from the Direct Current (DC) power source and refer to qualified service personnel under these conditions:
 - a. When the power supply cord or plug is damaged or frayed.
 - b. If liquid has been spilled on the product.
 - c. If the product does not operate normally after following the operating instructions in this manual, adjust only those controls that are covered by the operating instructions in this manual. Improper adjustment of other controls that are not covered by this manual may damage the unit and will often require extensive work by a qualified technician to restore normal operation.
 - d. If the product exhibits a distinct change in performance.

2. General

The **Star LX505 / IDTECK LX505SR** is ideal to use for Single Door Access Control and Time & Attendance. The **Star LX505 / IDTECK LX505SR** has 4 input ports, 2 Form-C relay outputs, 2 TTL outputs, an RS232/RS485 communication port and an optional TCP/IP communication port to meet various customer requirements.

This user-friendly device allows you to register up to 10,000 IDs and 20,000 event transactions. All events can be uploaded and saved to the database of the host PC and the software can create a report to MS-Excel, HTML and Text files for the Time & Attendance management purpose.

The **Star LX505 / IDTECK LX505SR** has a built-in proximity card reader with IDC 26bit Wiegand format and a 24-key keypad (10 numeric keys, 2 control keys and 12 function keys) for a wide range of applications. The **Star LX505 / IDTECK LX505SR** allows access to the door with any combination of Proximity Card/PIN and/or password. The **Star LX505 / IDTECK LX505SR** has 4 external input ports to be connected to an exit button, a motion detector, a door contact sensor and an existing alarm system to prevent unauthorized access.

The **Star LX505 / IDTECK LX505SR** has 2 relay outputs to control a door lock and an alarm relay that is used to warn any error. The graphic LCD supports multiple languages so that the unit can be operated anywhere in the world.

All setup menus can be programmed using the front keypad or via the Windows-based software. The **Star LX505 / IDTECK LX505SR** is a cost effective system to be used stand alone or networked. Dual tamper switches prevent unauthorized access.

3. Features

- 125KHz(default) Proximity/13.56MHz(optional) contactless smart card reader and PIN
- Dual function for Access Control and Time & Attendance
- 10,000/20,000 Users / 20,000/10,000 Event Buffers (Selectable)
- Operating Mode selectable by Individual ID
- 4 Level Door Open Time Setting by Individual ID
- Time Schedules Setting by Individual ID, Input Port, Output Port and Reader Mode
- Network Communication via RS232, RS485 and built-in TCP/IP
- 26bit Wiegand Output
- Serial Printer Port for event ticket issuing
- Supervised input ports
- User Name & Function Key Definition Display on LCD
- ARM/DISARM Function for Alarm Panel

- 2 Men Operation Mode
- Duress Alarm Function
- Multiple Master IDs Registration
- Graphic LCD of Multi Languages Display
- Voice Guide Programmable for Other Language
- Voice announcement Programmable by user via serial communication
- Door Phone Function (Optional)
- Software Selection: STARWATCH TIME PRO 2006, LX ACCESS PRO II

4. Specification

Model		LX505
CPU		32bit ARM9, 8bit and 16bit Microprocessor
Controller	Program Memory	256KByte ROM
	Data Memory	512KByte Flash Memory
ID User		10,000 / 20,000 Users (Selectable)
Event Buffer		20,000 / 10,000 Event Buffers (Selectable)
Read Range	Passive Type	IDK50 / IMC125 : Up to 2 inches (5cm) IDC80 / IDC170: Up to 4 inches (10cm)
	Active Type	IDA150 / IDA200 compatible
Reading Time (Card)		30ms
Verification Time		Less than 1sec.
Identification Time		Less than 2sec.
Power / Current		DC 12V / Max.650mA
External Reader Port		1ea (26bit Wiegand, 4 / 8bit Burst for PIN) for Anti-Pass Back
Communication		RS232 / RS485 (Max.32ch) TCP/IP (Internal LAN Converter Required/Optional)
Baud Rate		19,200bps (recommended) / 9,600bps / 38,400bps / 57,600bps (selectable)
Input Port		4ea (Exit Button, Door Sensor, Aux# 1, Aux#2)
Output Port		2ea (2 FORM-C Relay Output (COM, NO, NC) / DC12V~18V, Rating Max.2A) 2ea (TTL Output / DC5V, Rating Max.20mA)
LCD		Graphic LCD (128 x 64 dots) 72.5mm x 39.5mm (2.85" x 1.56") Screen


Keypad		24-key Keypad with Back Lighting (12 Function Keys included)
Language	LCD Display	English, Spanish, Portuguese (Selectable) Arabic, Chinese, Korean, Japanese (Optional)
	Voice Output	English, Spanish, Portuguese, Arabic, Chinese, Korean, Japanese (Programmable)
LED Indicator		3 Array LED Indicators (Red, Green and Yellow)
Beeper		Piezo Buzzer
Operating Temperature	LCD	0° to +50°C (+32° to +122°F)
	Controller	-15° to +70°C (+5° to +158°F)
	RF Reader	-35° to + 65°C (-31° to +149°F)
Operating Humidity		10% to 90% relative humidity (non-condensing)
Color / Material		Black, Red, Gray, Silver, Dark Gray, Gold, Black & Gold Combo / Polycarbonate
Dimension (W x H xT)		192mm x 160mm x 45mm (7.56"x6.29"x1.77mm)
Weight		800g(1.76lbs)
Certification		UL, FCC, CE, MIC

5. Identifying Supplied Parts

Please unpack and check the contents of the box. If any of these parts are missing, please contact a near-by distributor or IDTECK as soon as possible.




Main Unit
(1ea)

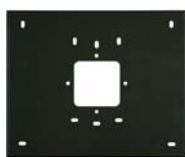


Wall Mount
(1ea)




CD-ROM
(1ea)

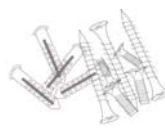

Screws
(4ea)

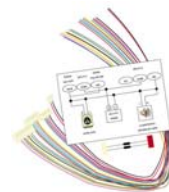

**Cable &
Diode &
Resistor**
(4 & 2ea)

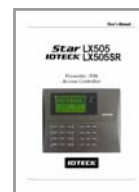

**User's
Manual**
(1 copy)

6. Product Overview

6.1 Features

Standalone Operation

The **Star LX505 / IDTECK LX505SR** is capable of having an external reader (for 1 Door Control). This access controller receives card ID numbers and determines whether to allow or deny access to the door. When an input signal is received, for example from a sensor activated or an exit button pressed, the controller generates and logs an appropriate response. All events are stored into the memory buffers. The access controller is a true standalone device that, in the event of malfunction, will not affect other units when used in conjunction with one another.

Operation with Host Computer

All event transactions can be managed via the host computer. The data transmitted from the controller can be displayed and stored on the host PC.

Keypad

If the **Star LX505 / IDTECK LX505SR** is not connected to a host PC, the built-in keypad and LCD module can be used for the entire operations and configuration process.

Input / Output

The **Star LX505 / IDTECK LX505SR** has 4 built-in input ports and 4 output ports (2 relay outputs and 2 TTL outputs) which can be used to manipulate a wide variety of controls.

Time Schedule Setup

You can program up to 10 time schedules and apply one time schedule to each user. Each time schedule has 8 different time zones from Monday-Sunday (7 time zones) and one holiday. Each time zone has 5 different time codes so you can program 5 different time codes for each day. You can also program time schedules for individual inputs and outputs. That is, if a time schedule for an input device is activated, that input device will be working only during the time assigned by that time code. Each time schedule is linked to one holiday schedule.

Holiday Schedule Setup

Excepting Sunday, you can program 100 holidays to one holiday schedule. Each holiday schedule is linked to one time schedule which has a time code for holidays. You can program all holidays to a holiday schedule and the time code for holidays is programmed to be the holiday time zone of time schedule.

- Example:**
- A.** Holiday schedule 01 linked to time schedule 01,
Holiday schedule 02 linked to time schedule 02
 - B.** Holiday schedule 02 linked to time schedule 01,
Holiday schedule 01 linked to time schedule 03

Forced Door Open Alarm

When the door is opened by force, the door contact sensor will be activated. For this application, you have to install the door contact sensor and properly set the door contact time and outputs to the alarm devices. The Forced Door Open Alarm will be generated until the alarm is disconnected.

Door Open Timeout Alarm

The Door Open Timeout Alarm will be generated when the door is open for longer than a certain time limit, even after the door is opened followed by a normal authentication process. The Overtime Door Open Alarm will continue to ring until the door is closed.

Anti-pass back

If an additional proximity reader is used, the Anti-pass back mode can be applied. In the Anti-pass back mode, a user is not allowed to enter or exit when the user violates the one entry/one exit rule. For example, an identical user won't be able to enter if he or she previously exited the door without going through a proper authentication process.

Duress Alarm

In case of duress, enter the 2-digit Duress Password and press the <ENT> key before the normal access process. The door can be opened as usual, but the duress alarm is also generated at the same time. The duress alarm output will be sent to the TTL output and an alarm event will be sent to the host PC.

ARM / DISARM Function for Alarm Panel

While a device is in the ARM condition, its reader ports are all frozen and inputs to the ports are not processed so that no one can get access to the door. When this mode is applied, the **Star LX505 / IDTECK LX505SR** sends signals to other connected security devices so that they can function accordingly.

Two Men Operation

This feature is to set the **Star LX505 / IDTECK LX505SR** to allow a certain user (e.g. a visitor) to pass the door only when that user is accompanied by another special user (e.g. a guider.) Both of the visitor and the guide should be authorized together for the door to be opened.

4-Level Individual Door Opening Time Setting

This feature is used only for setting four different door opening times.

6.2 Product Explanation

6.2.1 Panel Description

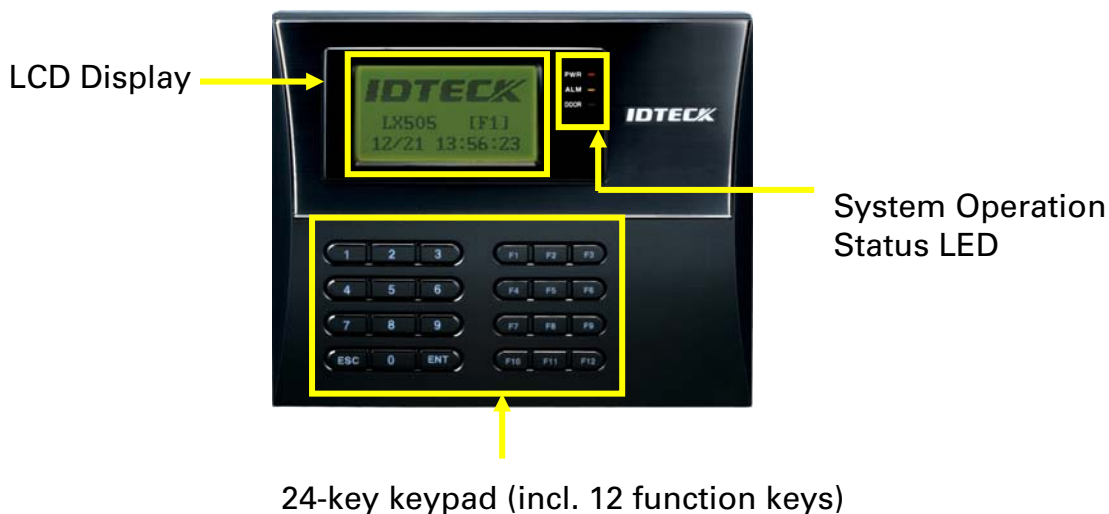


Figure: Description of LX505 Front Panel

- *LCD Module:* The LCD screen displays the status of the LX505.
- *System Operation Status LED:*
 - When the power is applied to the LX505, the red LED is turned on.
 - When the Relay #1 operates, the green LED is turned on.
 - When the Relay #2 operates, the yellow LED is turned on.
- *24-key Keypad:* The keypad can be used to manually operate the LX505 with ease.
- *Function Keys:* The LX505 has 12 function keys ([F1] ~ [F12]).

6.2.2 Connection Layout

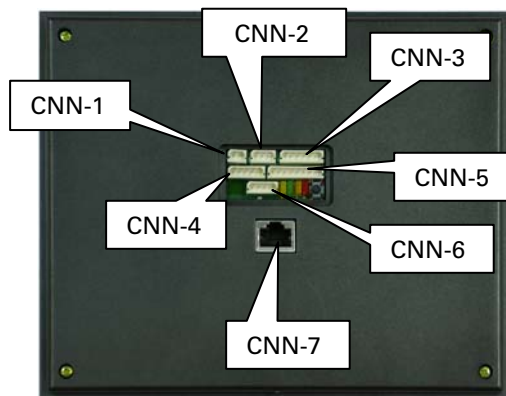


Figure: Connector Layout

6.2.3 Color Coded & Wiring Table

I/O PORT NAME	SIGNAL NAME	WIRE COLOR
CNN-1(2PIN CONNECTOR)		
Main Power (+12V)	DC 12V	Red
Power Ground	GND 0V	Black
CNN-5 (5PIN CONNECTOR)		
RS485-RTX(+)	RS485-A(+)	Yellow wire
RS485-RTX(-)	RS485-B(-)	Gray wire
RS232-TX	TXD	Black wire with White stripe
RS232-RX	RXD	Red wire with White stripe
RS232-GND	GND	Black
CNN-3 (6PIN CONNECTOR)		
TTL OUTPUT #1	TTL#1, WD0	Orange wire with White stripe
TTL OUTPUT #2	TTL#2, WD1	Brown wire with White stripe
Aux Input #1	IN#1	Green
Aux Input #2	IN#2	Green wire with White stripe
Wiegand DATA 0	DATA-0	Pink
Wiegand DATA 1	DATA-1	Cyan
CNN-4 (8PIN CONNECTOR)		
Door RELAY(NC)	NC(1)	Blue wire with White stripe
Door RELAY(COM)	COM(1)	Gray wire with Red stripe
Door RELAY(NO)	NO(1)	White wire with Red stripe
Alarm RELAY(NC)	NC(2)	Purple wire with White stripe
Alarm RELAY(COM)	COM(2)	White
Alarm RELAY(NO)	NO(2)	Purple
Exit Button	EXIT	Orange
Door Sensor	CONTACT	Yellow wire with Red stripe
CNN-2 (3PIN CONNECTOR)		
RS232-RX	RXD	Pink wire with White stripe
RS232-TX	TXD	Cyan wire with White stripe
RS232-GND	GND	Black
CNN-6 (4PIN CONNECTOR)		
DP_VCC		Orange wire with Red wire
DP_GND		Orange wire with Black stripe
DP_D0	DATA-0	Blue
DP_D1	DATA-1	Brown
CNN-7: TCP/IP RJ45 CONNECTOR		

7. Installation Tips & Check Point

7.1 Check Points before Installation

7.1.1 Selection of Cable

The system installation cables should be connected as follows;

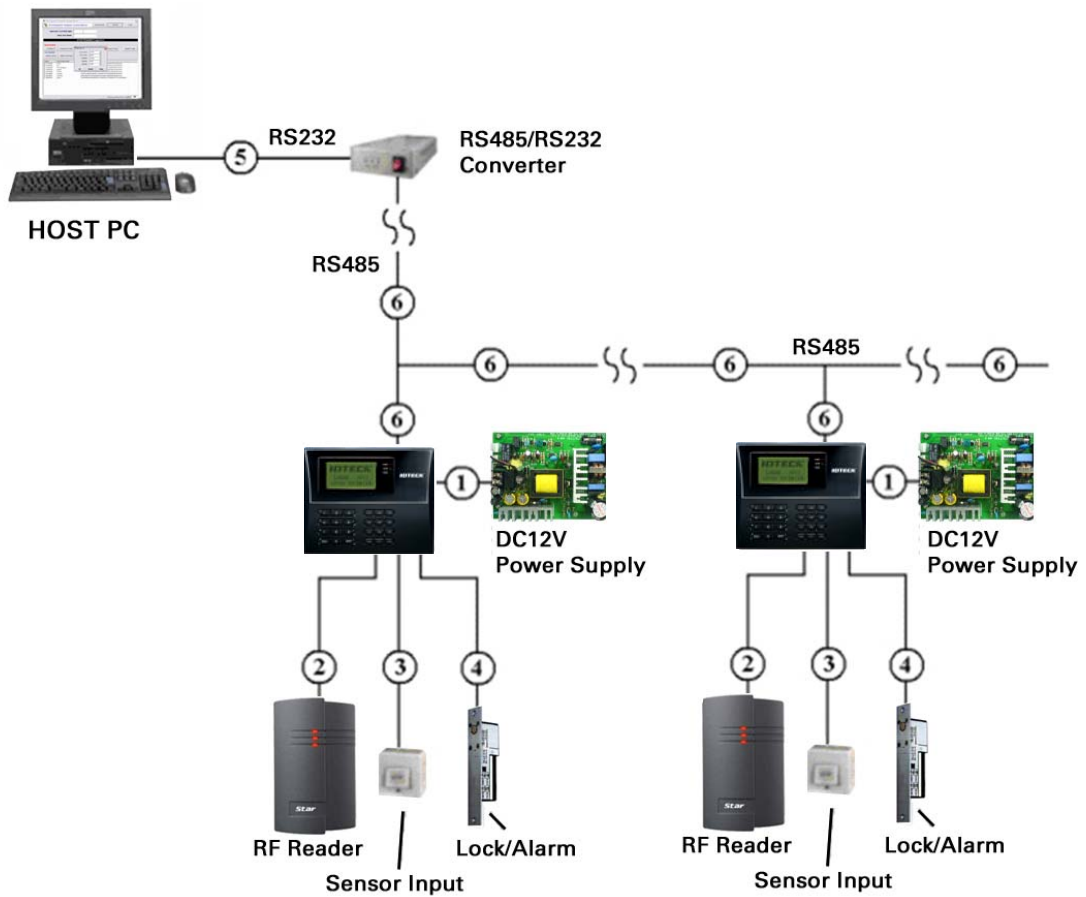


Figure: System Installation Layout

7.1.2 Recommended Cable Type and Permissible Length

Reference	Description	Cable Specification	Maximum Distance
1	LX505 Power (DC12V) DC Power -> LX505	Belden #9409, 18 AWG 2 conductor, unshielded	30m
2	Reader (Power and Data) Exit Reader -> RF20	Belden #9512, 22 AWG 4 conductor, shielded	150m
		Belden #9514, 22 AWG 8 conductor, shielded	
3	Door Contact Exit Button Sensor Input Input -> LX505	Belden #9512, 22 AWG 4 conductor, shielded	300m
		Belden #9514, 22 AWG 8 conductor, shielded	
4	Door Lock, Alarm Device Lock (Alarm) -> LX505	Belden #9409, 18AWG 2 conductor, unshielded	300m
5	RS232 Cable Converter -> Host P.C.	Belden #9829, 24 AWG 2-twisted pair, shielded	15m
6	RS485 Cable LX505 -> LX505 LX505 -> Converter	Belden #9829, 24 AWG 2-twisted pair, shielded	1,200m

*: **Thicker wires are needed if you connect the reader with high current consumption.**

7.2 Check Point during Installation

7.2.1 Termination Resistor

Termination resistors are used to match impedance of the network to the impedance of the transmission line being used. When impedance is mismatched, the transmitted signal is not completely absorbed by the receiver and a portion of signal is reflected back into the transmission line. The decision whether or not to use termination resistors should be based on the cable length and data rate used by the communication system.

For example, if you use 9,600 baud rate and 1,200m length of cable, the propagation velocity of cable is 0.66 x speed of light (This value is specified by the cable manufacturer), if we assume the reflections will damp out in three round trip up and down the cable length, the transmitted signal will stabilize 18.6us after the leading edge of a bit. Since the data bit is captured in the middle of the bit which is approximately 52us after the leading edge of a bit. The reflection stabilizing time 18.6us is much before the center of the bit therefore the termination resistors are not required.

However, if you install the cable to maximum length, the impedance of cable and network is mismatched and the transmitted signal is overlapped by the reflected signal. In this case, it is recommended to add termination resistors to the end of the receiver lines. A 120Ω resistor can

be used for termination resistor in parallel between the receiver lines "A" and "B" for 2 wires RS485 system. A termination resistor of less than 90Ω should not be used and no more than 2 terminations should be used in one network system.

7.2.2 How to Connect Termination Resistors



Figure: Termination resistors for 2 wire RS485 communication system

7.2.3 Grounding System for Communication Cable

We recommend you to use a proper grounding system for the communication cables. The best grounding method is to put the shield wire of the communication cable to the 1st class earth grounding; however bringing the earth ground to the communication cable isn't easy and the installation cost increases. There are three grounding points you can find during installation;

1. Earth Ground
2. Chassis Ground
3. Power Ground

The most important point about grounding system is not to connect both ends of shield wires to the grounding system; in this case, there will be a current flow through the shield wire when the voltage level of both ends of shield wire is not equal and this current flow will introduce some noise and interference to communications. For better grounding, we advise you connect ONLY one end of shield wire of communication cable to the grounding system; If you find earth ground nearby, then connect one end of the shield wire to the earth ground; If you do not have earth ground nearby, then find chassis ground and connect one end of shield wire to chassis ground; If you do not find either earth ground or chassis ground, then connect one end of shield wire to power ground. (GND of LX505) Note that if the chassis ground is not properly connected to the earth and floated from the ground level, then grounding to the chassis ground will give the worst communication. Therefore, we recommend to using power ground instead of chassis ground if that is the case.

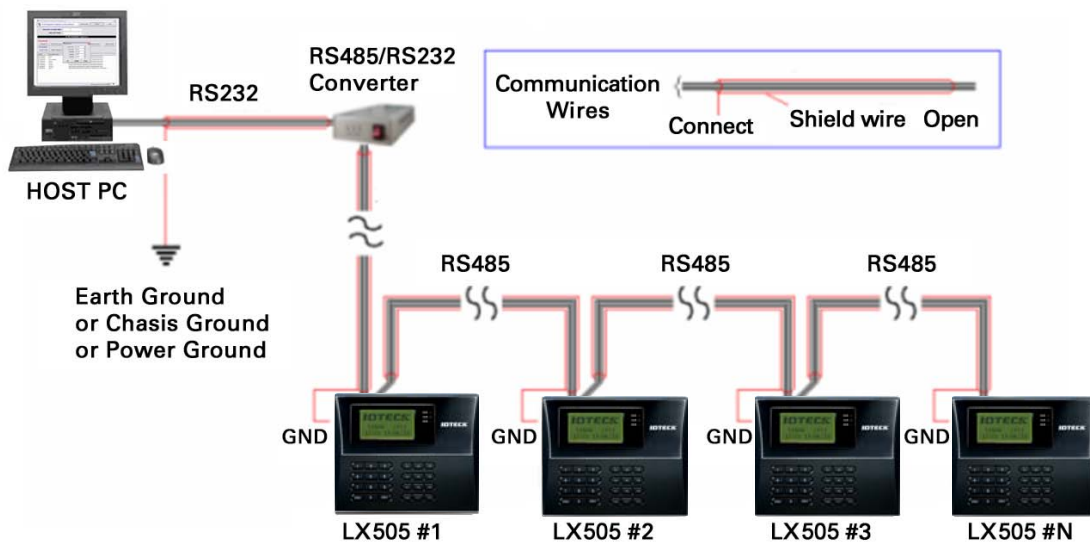


Figure: Grounding system

7.2.4 Reverse Diode Connection

If you connect an inductor (Door Locks or Alarm device) to the output relays, there will be a high surge voltage created while the inductor is turning on and off. If you do not connect a reverse diode, the surge voltage will transfer and damage the electronic circuit of the controller. It is strongly recommended to add a reverse diode between the inductor coils to absorb this surge voltage.



Figure: Reverse Diode connection

8. Installation of the Product

8.1 Wall Mount (Unit: mm)


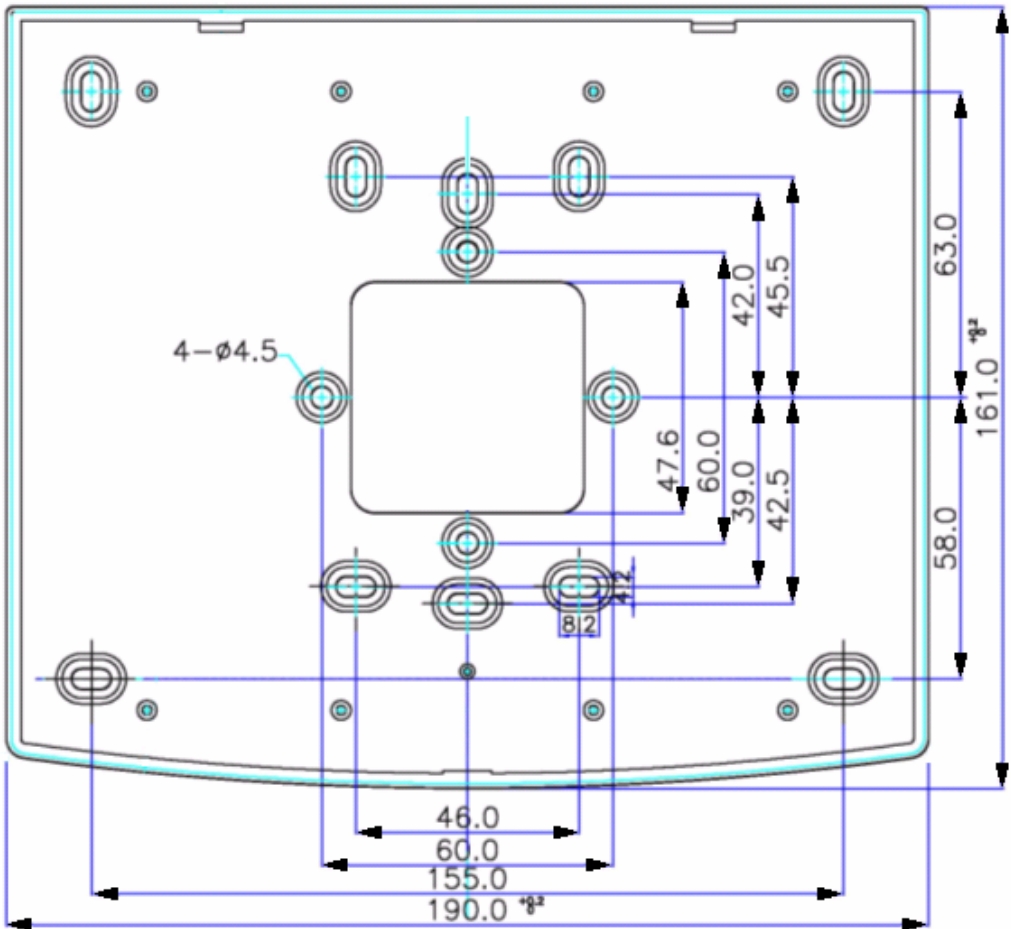


Figure: Wall Mount Layout

8.2 System Initialization (External Reader Port)

After the installation and connections are completed, apply power (DC12V) to LX505 with the initialization button being held down. Then, the LCD will first display **“Initialize OK? 0:No 1:Yes”**. Press **<1>** key if you want to initialize the system. After all the initialization process is completed, the system will be operating on the normal mode and the LCD will display **“IDTECK, LX505 [F1], Date Time”**.

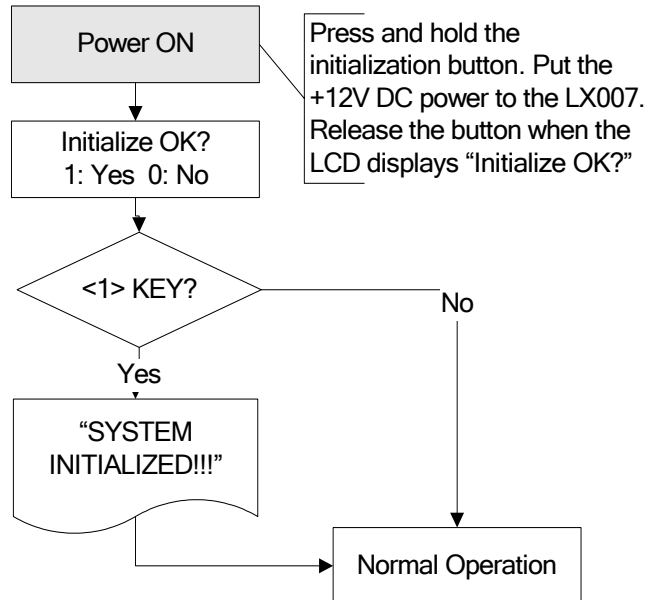

8.3 Wall Mount Installation

1. Position the Wall Mount to the location at which you want to install the unit and mark 4 x drilling positions. Drill 6-32 holes for at least 4 mounting points.
2. Drill a 1/2" hole on the center of the Wall Mount.
3. Using 4 screws, install the Wall Mount to the proper location.
4. Take out the cable through the center hole.
5. After the wiring is done as explained in the next section, put the Main Unit on the Wall Mount and screw it.

8.4 Wiring

8.4.1 Power Connection

1. Connect (+) wire of DC 12V Power Supply to Red wire.
2. Connect GND (-) wire of DC 12V Power Supply to Black wire.

8.4.2 Input Connection

Exit Button Connection

1. Connect one wire from Exit Button to Orange wire.
2. Connect the other wire from Exit Button to the GND.

Door Contact Sensor Connection

1. Connect one wire from Door Contact Sensor to Yellow wire with Red stripe.
2. Connect the other wire from Door Contact Sensor to GND.

Auxiliary Input Connection

(Applicable to Aux Input #1(Green wire), Aux Input #2(Green wire with white stripe))

1. Connect one wire from Auxiliary Input Device to one of Aux Input #1 or Aux Input #2.
2. Connect the other wire from Auxiliary Input Device to GND.

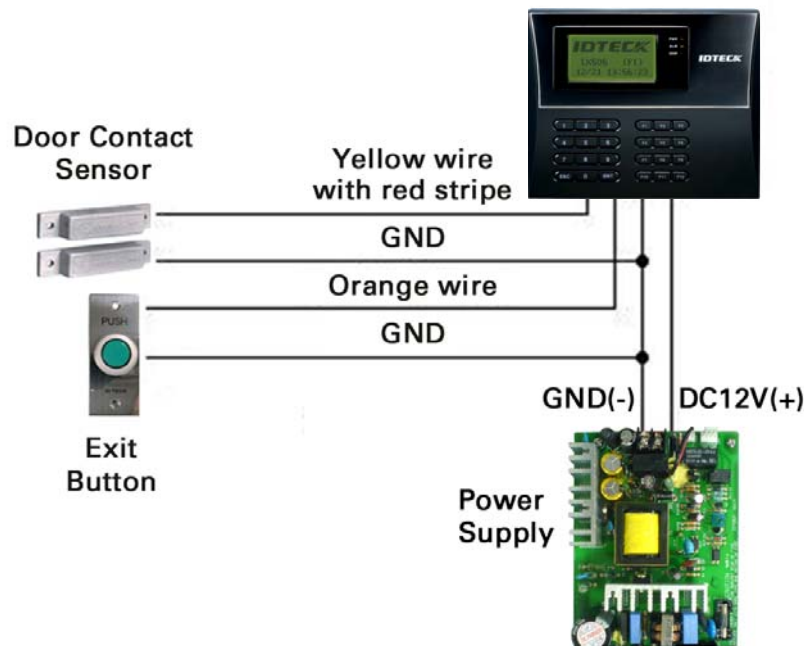


Figure: Input Device Connection

2.2K Resistor Connection for Cut Off Check

You have to connect a 10K resistor between the input wire (e.g. Orange wire) and the GND to apply the Cut Off Check feature. First, select whether or not to check the cutoff status of each device from [F5 SETUP MENU] -> Cut Off Check. Second, configure the desired output that you want to be generated in the event of a cutoff from [F5 SETUP MENU] -> Cut Off Alarm.

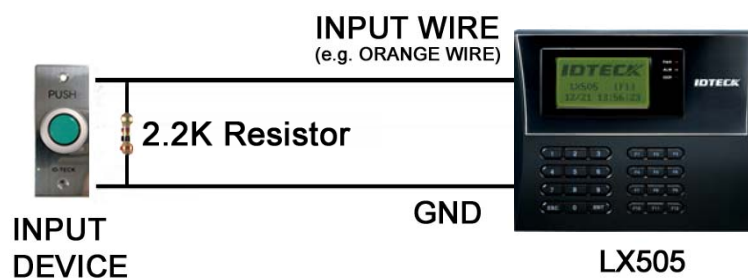


Figure: 2.2K Resistor Connection for Cut Off Check

8.4.3 Output Connection

Door Lock (Power Fail Safe) Connection (Door Relay)

1. Connect COM wire of Door Relay, White wire with red stripe to +12V.
2. Connect NC wire of Door Relay, Blue wire with white stripe to (+) wire of Door Lock.
3. Connect GND wire to (-) wire of Door Lock.

Door Lock (Power Fail Secure) Connection (Door Relay)

1. Connect COM wire of Door Relay, Gray wire with Red stripe to +12V.
2. Connect NO wire of Door Relay, White wire with Red stripe to (+) wire of Door Lock.
3. Connect GND wire to (-) wire of Door Lock.

Alarm Device Connection (Alarm Relay)

1. Connect COM wire of Alarm Relay and White wire to +12V.
2. Connect NO wire of Alarm Relay, Purple wire to (+) wire of Alarm device.
3. Connect GND port to (-) wire of Alarm device.

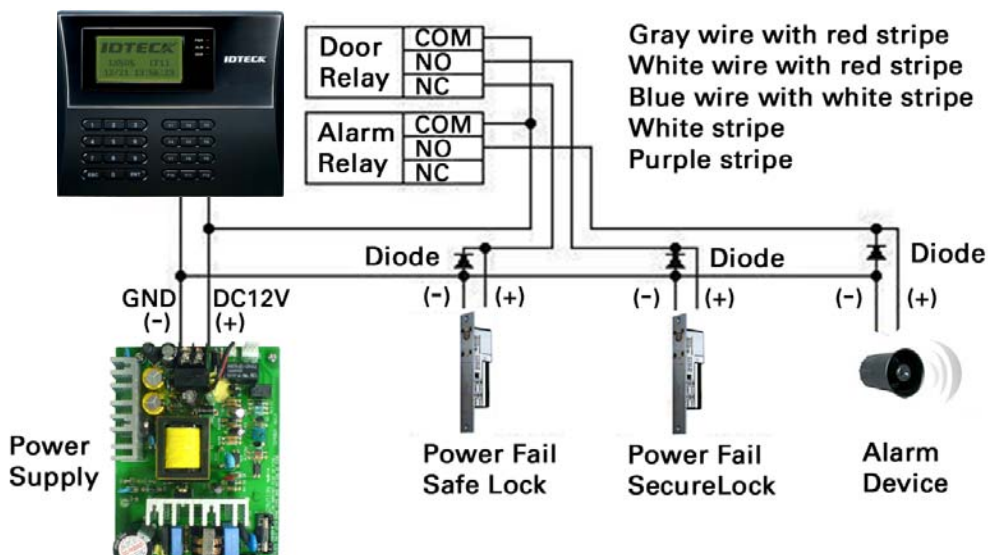


Figure: Door Lock, Alarm Device Connection

CAUTION: You should connect REVERSE DIODES as shown in the picture above. A desirable DIODE is a Fast Recovery DIODE (current=min. 1A), 1N4004 - 1N4505 or similar.

8.4.4 External Reader Connection

Proximity Reader Connection

1. Connect (+) wire of the Proximity Reader to DC +12V.
2. Connect (-) wire of the Proximity Reader to GND.
3. Connect Data-0 wire of the Proximity Reader to Pink wire.
4. Connect Data-1 wire of the Proximity Reader to Cyan wire.

- **Compatible Readers (External Reader):**

- **Star LX505:**

- Standard 26bit Wiegand Format Proximity Readers

- Standard 26bit Wiegand + 8bit Burst Format Proximity and keypad Reader

- **IDTECK LX505SR:**

- Standard 34bit Wiegand Format Proximity Reader

- Standard 34bit Wiegand + 8bit Burst Format Proximity and keypad Reader

- **Recommended Readers**

- **Star LX505:** RF TINY, RF10/20/30/70/500, RFK101, FGR006, FGR006EX

- **iPASS IP-LX505:** IP10/20/30, IPK101

- **IDTECK LX505SR:** SR10/20/30, SRK101, FGR006SRB

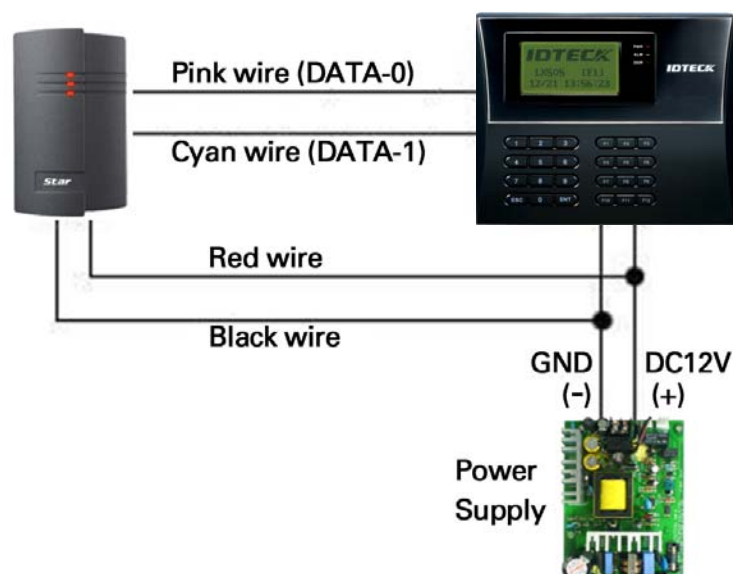


Figure: External Reader Connection

9. Communication

9.1 RS232 Communication Port Connection

A 9-pin connector (Serial communication connector, female) is required to connect the LX505 with a host computer via RS232 communication.

Please follow the steps below.

1. Connect RS232-TX, Black wire with white stripe to the pin #2 (RXD) of the 9-pin connector.
2. Connect RS232-RX, Red wire with white stripe to the pin #3 (TX) of the 9-pin connector.
3. Connect GND, Black wire to the pin #5 of the 9-pin connector.
4. Plug in the 9-pin female connector to COM1 or COM2 Port of the host PC.
5. Install and run the LX505 Application Software.

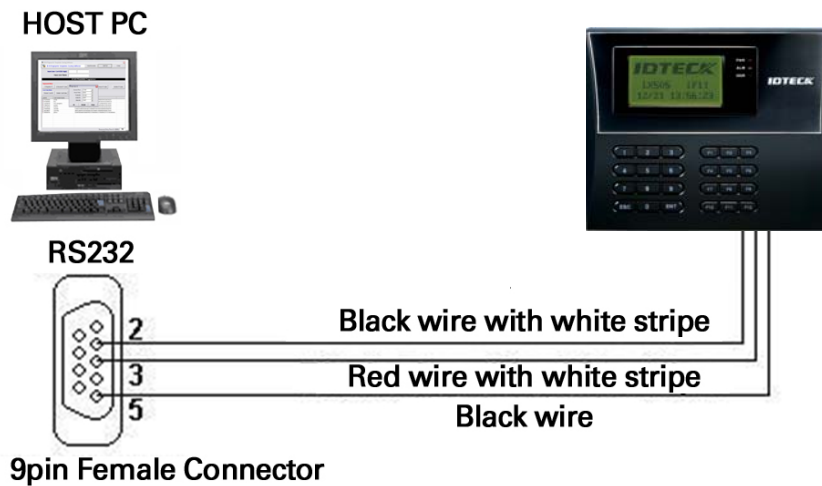


Figure: RS232 COMMUNICATON

9.2 RS485 Communication Port Connection

9.2.1 RS485 Connection (Standalone Unit)

An RS485/RS232 converter is required to use the RS485 communication between the LX505 and a host PC. Please follow the steps below.

1. Connect RS485-RTX (+), Yellow wire to RS485-A port of the converter.
2. Connect RS485-RTX (-), Gray wire to RS485-B port of the converter.
3. Plug the RS232, 9-pin connector of the converter into the COM1 or COM2 port of the host PC.

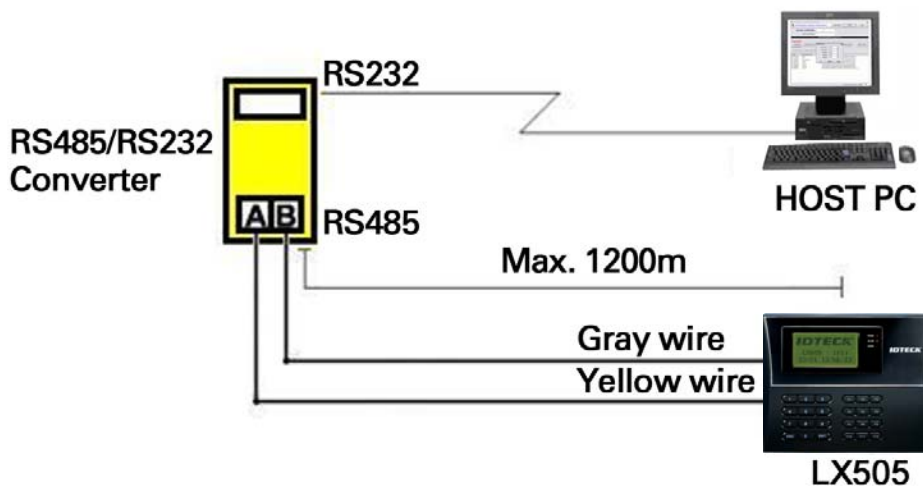


Figure: RS485 Connection between LX505 units and a host PC

9.2.2 RS485 Connection (Multiple Units)

An RS485/RS232 converter is required to use RS485 communication between multiple LX505 and a host PC. Please follow the instructions below.

*First, connect all RS485 port of the LX505 units in parallel.
(max of 32 LX505 Units can be connected)*

1. Connect RS485-RTX (+) (the Yellow wire) of one LX505 to RS485-RTX (+) (the Yellow wire) of another LX505.
2. Connect RS485-RTX (-) (the Gray wire) of one LX505 to RS485-RTX (-) (the Gray wire) of another LX505.
3. Set different COMM IDs for each LX505.

Second, connect one of RS485 ports of the LX505 units to the RS485/RS232 converter.

1. Connect RS485-RTX (+) (the Yellow wire) of one LX505 to RS485-A port of the converter.
2. Connect RS485-RTX (-) (the Gray wire) of one LX505 to RS485-B port of the converter.
3. Plug the RS232 (9-pin connector) of the converter into the COM1 or COM2 port of the host PC.
4. Install and run the LX505 application software.

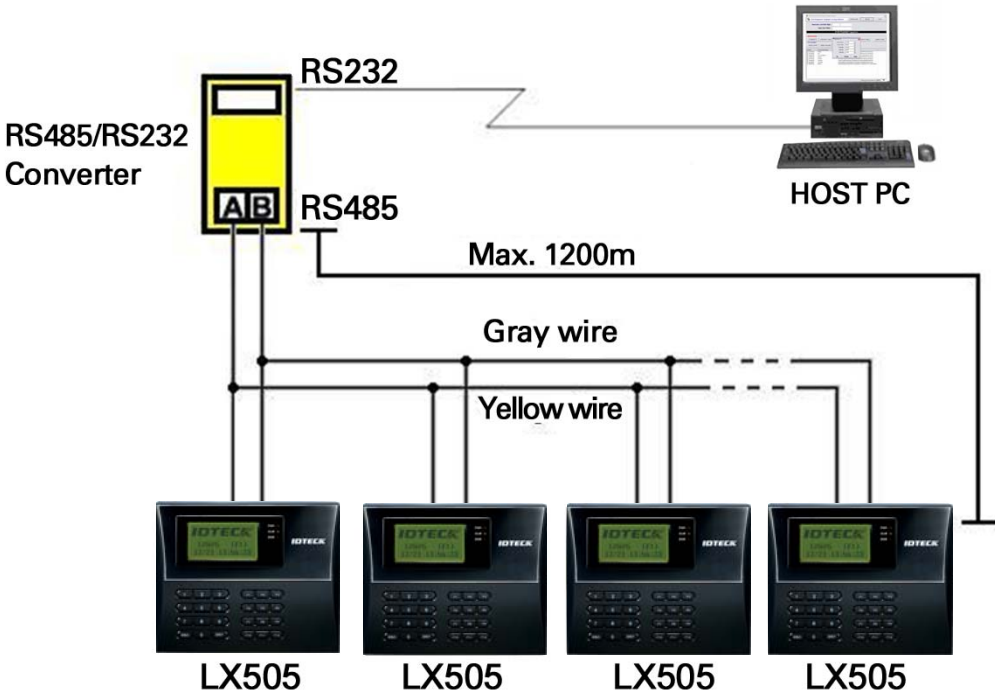


Figure: RS485 Communication between multiple LX505 units and a host PC

9.3 TCP/IP Communication Port Connection (Optional)

An optional TCP/IP Module is required for TCP/IP communication to the host PC. Follow the next instruction.

1. Connect RJ45 plug, LAN cable of the network system to RJ45 jack of the LX505.
2. If you install multiple LX505s and only one TCP/IP port is available, you may connect one LX505 to TCP/IP and then connect all the LX505s using the RS485 multiple communication as shown in the below figure.
3. Set different COMM IDs for each LX505.
4. Install and run the LX505 Application Software.

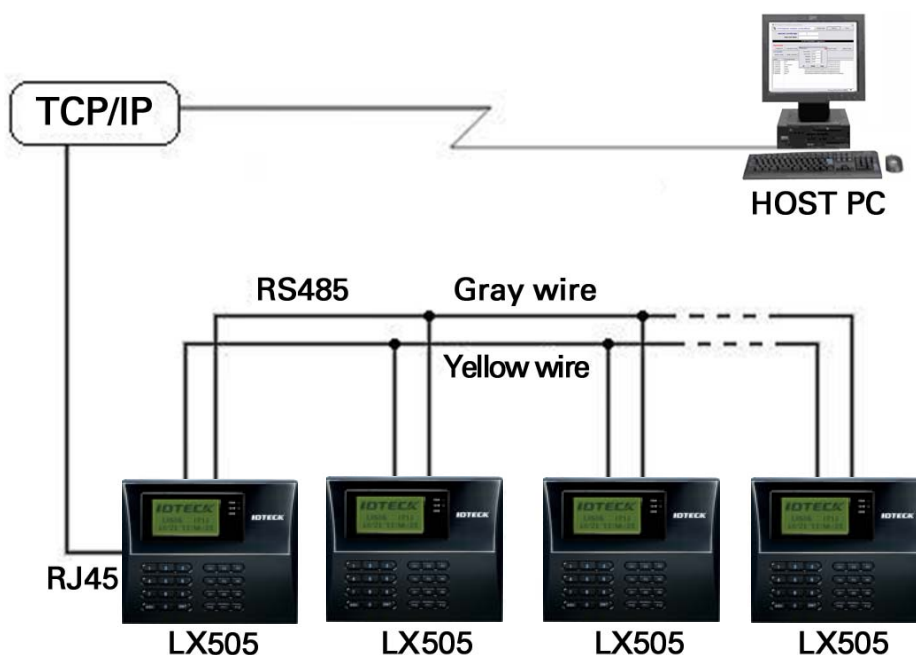


Figure: TCP/IP Communication between multiple LX505 units and a host PC

9.4 Serial Printer Connection

A 9-pin connector (Serial communication connector, female) is required to connect the LX505 with a serial printer via RS232 communication. Please follow the steps below.

1. Connect RS232-TX, Cyan wire with white stripe to the pin #2 (RXD) of the 9-pin connector.
2. Connect RS232-RX, Pink wire with white stripe to the pin #3 (TX) of the 9-pin connector.
3. Connect GND, Black wire to the pin #5 of the 9-pin connector.
4. Plug in the 9-pin female connector to COM1 or COM2 Port of the serial printer.
5. Set the **Print Output** setting to 'Auto Print' or 'Manual Print' from **[F3 SETUP MENU]**.


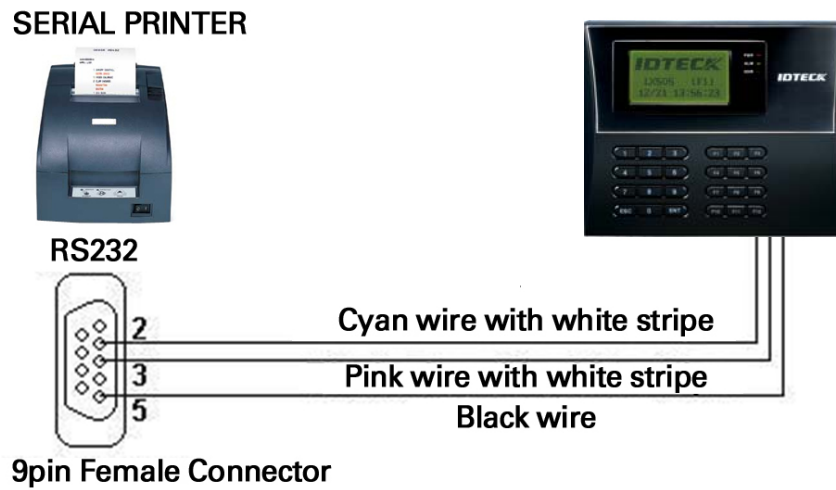


Figure: RS232 Communication between the LX505 and a Serial Printer

10. Basic Setting

10.1 Initialization of LX505


After the installation and connections are completed, supply power (+12V DC) to LX505 with the initialization button being held down. Then, the LCD will first display “**Initialize OK? 0:No 1:Yes**”. Press <1> key if you want to initialize the system. After all the initialization process is completed, the system will be operating on the normal mode and the LCD will display “**IDTECK, LX505 [F1], Date Time**”.

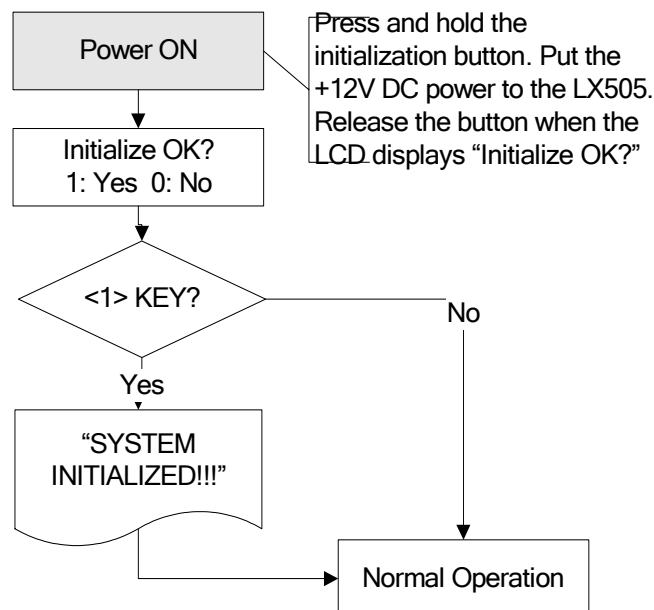

10.2 How to Enter the SETUP MENU


To set up the LX505 or to change the settings, you have to enter the **SETUP MENU** first. To do so, press **<0>** key eight (or ten) times and **<ENT>** key on the keypad. (The **Default Master ID** is '00000000'. For **LX505SR**, it's '0000000000'.)

There are **9 SETUP MENUS** and you automatically [**F1 SETUP MENU**] first. You can move to other **SETUP MENUS** by pressing **<F1>** to **<F9>** keys. For example, if you want to go to [**F2 SETUP MENU**] then press **<F2>** key, to enter [**F5 SETUP MENU**], press **<F5>** key and so on and on. There are several **SUBMENU** inside each **SETUP MENU** and you can scroll up and down the **SUBMENU** by pressing **<4>** and **<6>** key. If you don't press any key within 60 seconds or if you press **<ESC>** key, the LX505 will exit the **SETUP MENU** and return to the normal operating mode. You can change the **Master ID** in the [**F7 SETUP MENU**].

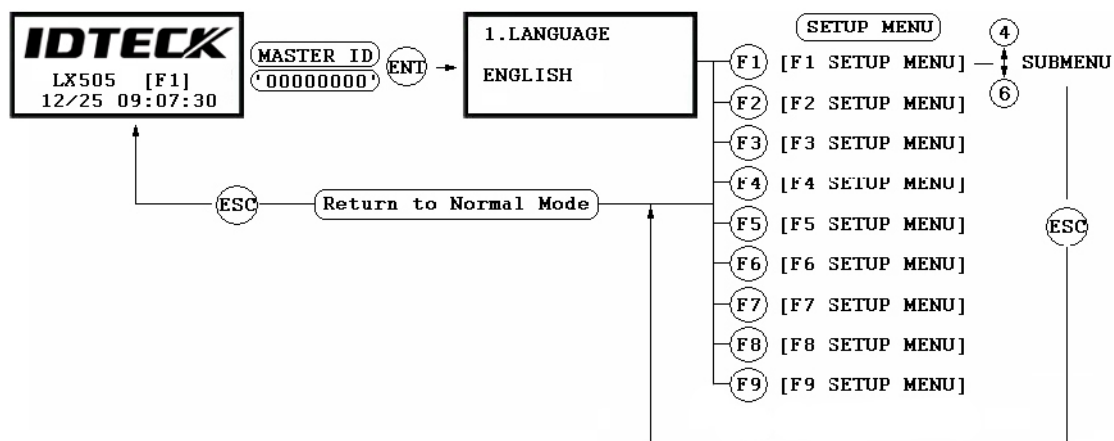


10.3 Language Setting

Select [**LANGUAGE**] in the [**F1 SETUP MENU**] then press **<ENT>** key to select which **LANGUAGE** to use. The steps below show how to choose **CHINESE**, for example.

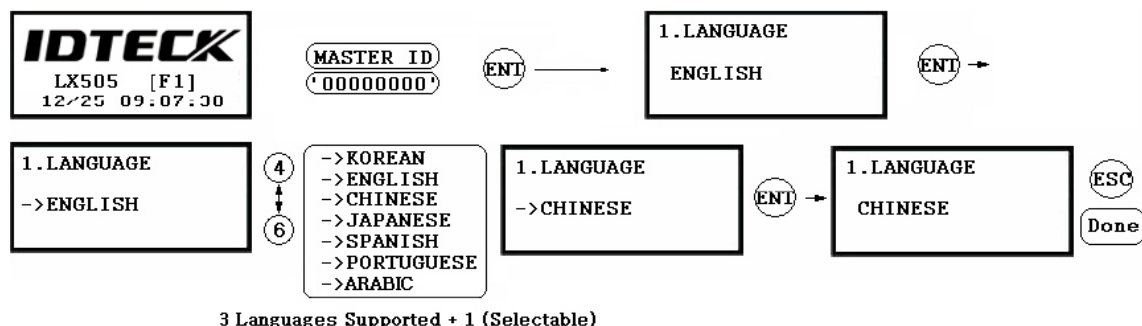


10.4 DATE /TIME SETTING

Select **[SET DATE/TIME]** in the **[F1 SETUP MENU]** and enter the total of 15 digits (*i.e.* Year / Month / Date / Hour / Minute / Second / Day) as shown below. The LCD will display the new Date and Time after the time setting is completed but the year and day will not be displayed. The LX505 has a 24 hours system. The day codes are 1 for Sunday, 2 for Monday, 3 for Tuesday, 4 for Wednesday, 5 for Thursday, 6 for Friday and 7 for Saturday.

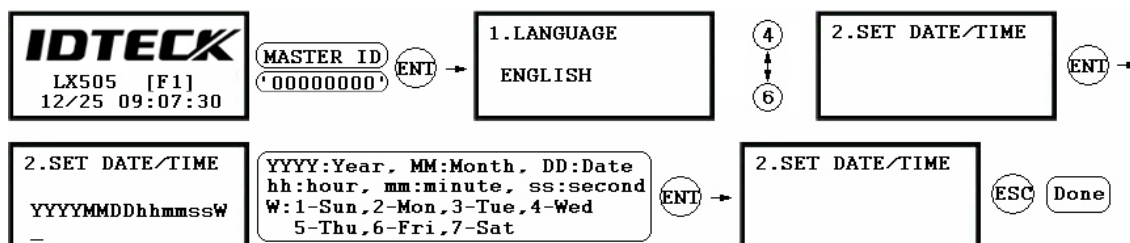


10.5 ID REGISTRATION


To register a User ID to the LX505, select **[F7 SETUP MENU]** -> **[REGISTRATION]**. You can choose to register an ID **a)** using the card or **b)** by entering the PIN.

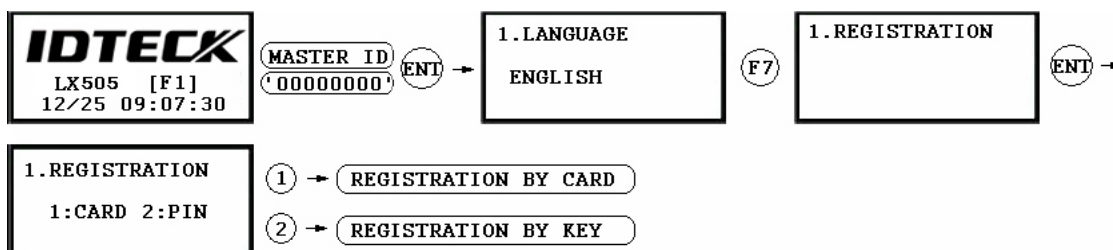

a) Registration by Card

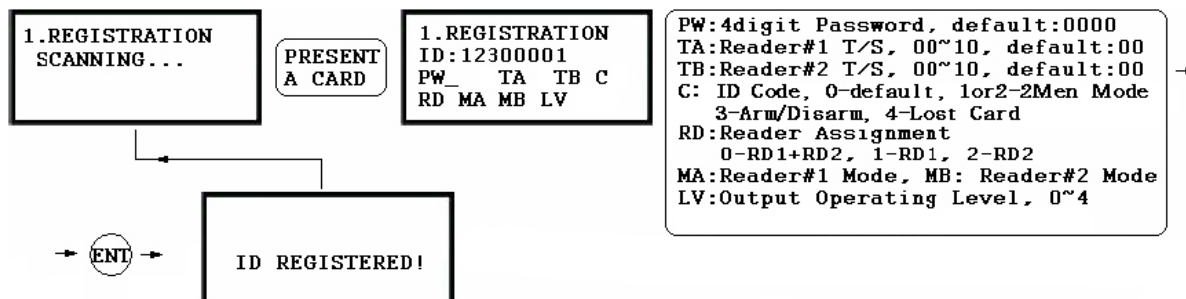

b) Registration Using Keypad

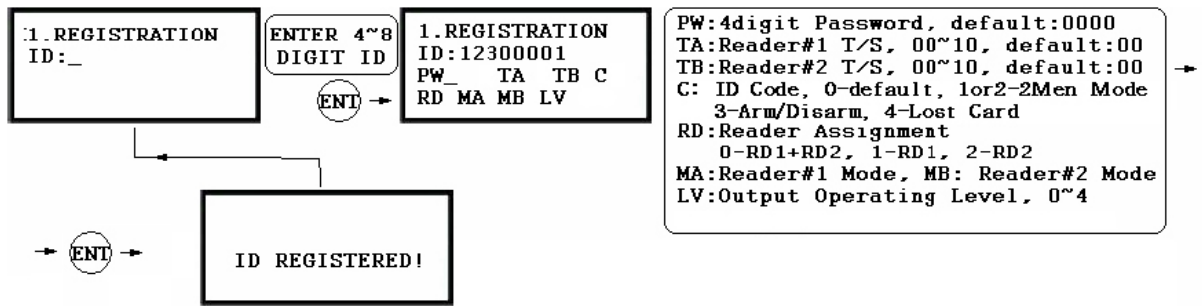

NOTE| In case you make a typing mistake during the registration process, you can press F1 button to erase your errors.

1. **Scanning** – means the reader is waiting for an ID number to be entered. The card number for the card will appear with a beep sound when you present the card.
2. **ID** – is a Personal Identification Number (PIN) that consists of 4-8 digits. Enter a 4-8digit ID number (PIN) and press <ENT> key. (For LX505SR, the ID number consists of 4-10 digits.
3. **PW** – stands for a password that is required for verification in the RF + Password operating mode.
4. **TA** – refers to the Time Schedule code ('00' ~ '10') for the Reader#1 (*i.e.* the built-in reader). Cardholders are granted access only during the Time Intervals of the Time Schedule code entered to this TA field. To set the Time Intervals for each Time Schedule code, refer to the instructions on the Time Schedule Setup in the **[F4 SETUP MENU]**. If you want allow the cardholder access to the door anytime, then enter the default Time Schedule code '00' for the value.
5. **TB** – refers to the Time Schedule code ('00' ~ '10') for the Reader#2 (*i.e.* Exit Reader). Cardholders are granted access only during the Time Intervals of the Time Schedule code entered to this TB field. To set the Time Intervals for each Time Schedule code, refer to the instructions on the Time Schedule Setup in the **[F4 SETUP MENU]**. If you want allow the cardholder access to the door anytime, then enter the default Time Schedule code '00' for the value.
6. **RD** – refers to the Reader Assignment code for the cardholder. Entering the code '0' assigns both readers (Built-in Reader and Exit Reader) to grant access to the user that is being registered, code '1' only assigns Reader#1 (Built-in Reader) and code '2' assigns Reader#2 (Exit Reader). If you enter '1' in the RD field(Only Reader#1 assigned) and try to exit through Reader#2 (Exit Reader) then LX505 generates an error message ("Access Door Error") on the LCD display.

7. **C** – stands for the ID code. Code '0' is default and code '1' or '2' is a code used for the TWO MEN MODE. Code '3' is used for the ARM/DISARM function and code '4' is assigned for lost cards.

8. **MA** – refers to the Operating Mode of the Reader#1 (*i.e.* the built-in reader) for the cardholder. If you enter '1' for MA, for example, Reader#1 will be operating always on RF Only Mode.
 - **'0'** – System Operating Mode (Path: [**F1 SETUP MENU**] > [**READER#1 MODE**])
 - **'1'** – ID Only Mode
 - **'2'** – ID + Password Mode

9. **MB** – refers to the Operating Mode of the Reader#2 (Exit Reader) for the cardholder. If you enter '1' for MB, for example, Reader#2 will be operating always on RF Only Mode.
 - **'0'** – System Operating Mode (Path: [**F1 SETUP MENU**] > [**READER#1 MODE**])
 - **'1'** – ID Only Mode
 - **'2'** – ID + Password Mode

10. **LV** – refers to the Output Operating Level for the cardholder. Output operating time can be set for each user. To configure an Output operating time for each level, refer to the instructions on Output Setting in the [**F6 SETUP MENU**].
 - **'0' or '1'** – Level #1
 - **'2'** – Level #2
 - **'3'** – Level #3
 - **'4'** – Level #4

11. OPERATIONS

11.1 Normal Operation

Power on

When power is applied to the LX505, the Red LED is lit.

Registered card reading

When a registered card (or a PIN) is read (and his/her password is verified), the Door (Relay#1) will open for 3 seconds (Default) with the Green LED on.

Exit Button

When the Exit button is pressed, the Door (Relay#1) will open for 3 seconds with the Green LED on.


Alarms

When an unregistered card is read or his/her password is not verified, the access is denied and the Alarm (Relay#2) will be activated for 3 seconds with the Yellow LED on.

11.2 Default Setting

When you operate the system for the first time or the system has been initialized, the factory setting values (*i.e.* the default settings) will be stored in the memory. You can change the settings for the desired application.


12. Setting Changes

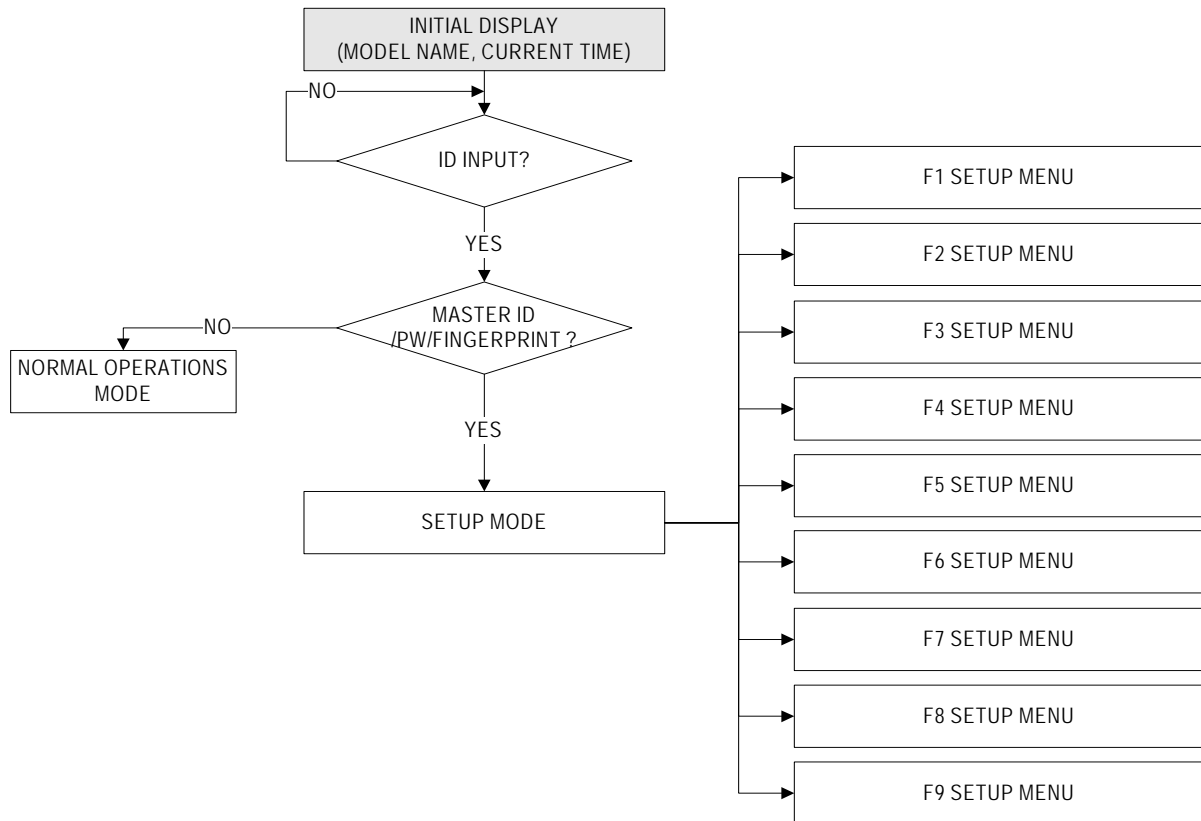


To set up the LX505 or to change the settings, you have to enter the **SETUP MENU** first. To do so, press **<0>** key eight (or ten) times and **<ENT>** key on the keypad. (The **Default Master ID** is '00000000'. For **LX505SR**, it's '0000000000'.)

There are **9 SETUP MENUS** and you automatically enter [**F1 SETUP MENU**] first. You can move to other **SETUP MENUS** by pressing **<F1>** to **<F9>** keys. For example, if you want to go to [**F2 SETUP MENU**] then press **<F2>** key, to enter [**F5 SETUP MENU**], press **<F5>** key and so on and on. There are several **SUBMENUS** inside each **SETUP MENU** and you can scroll up and down the **SUBMENU** by pressing **<4>** and **<6>** key. If you don't press any key within 60 seconds or if you press **<ESC>** key, LX505 will exit the **SETUP MENU** and return to the normal operating mode. You can change the **Master ID** in the [**F7 SETUP MENU**].

12.1 F1 SETUP MENU

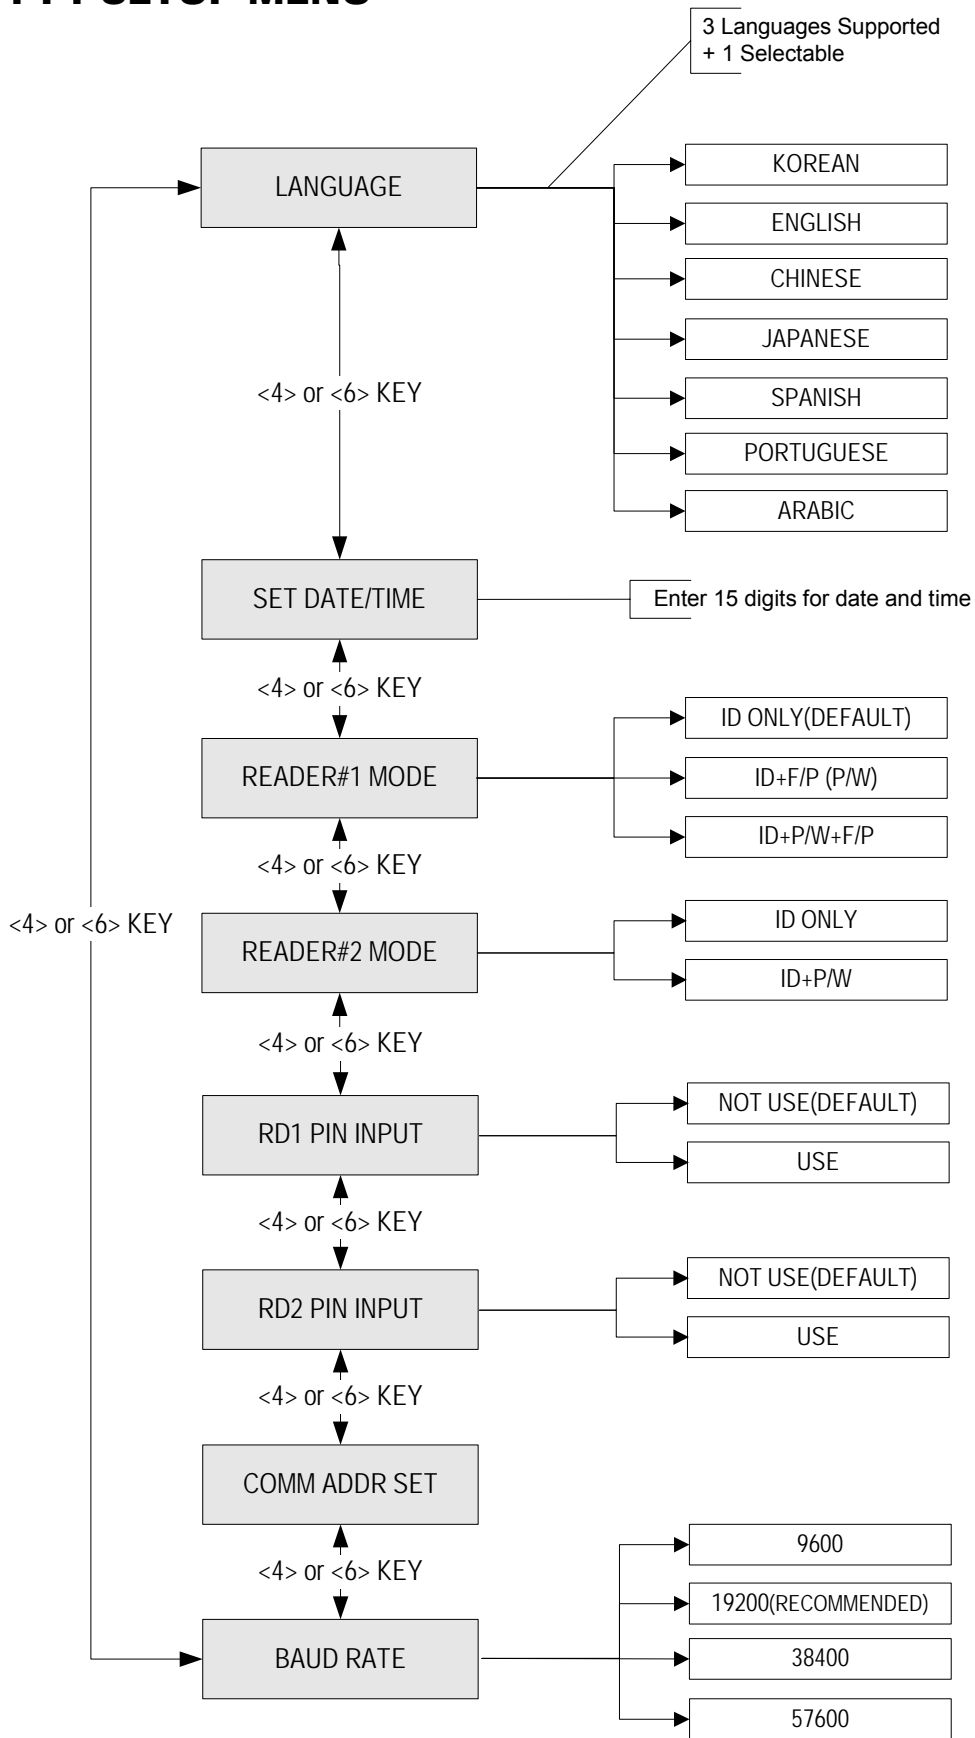

12.1.1 Language

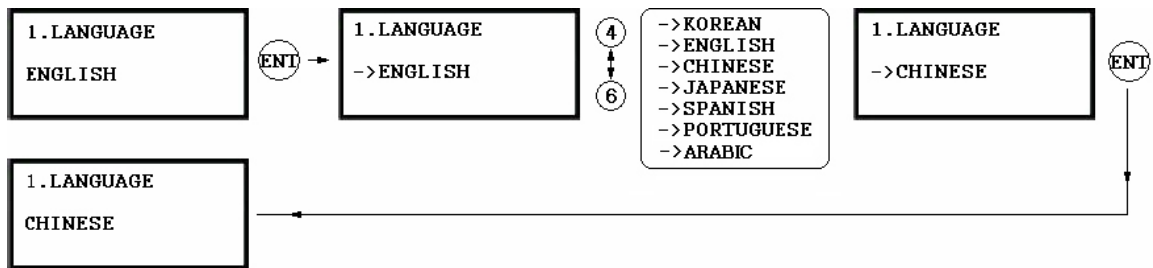


- ✓ The default language is English.
- ✓ Supported languages include English, Spanish, Portuguese and one of Chinese, Korean, Japanese and Arabic (selectable).

12.1.2 Date and Time Setting



- ✓ e.g. 200302101330152 = Feb. 10, 2003, 13:30:15, Monday

12.1.3 Reader #1 Mode

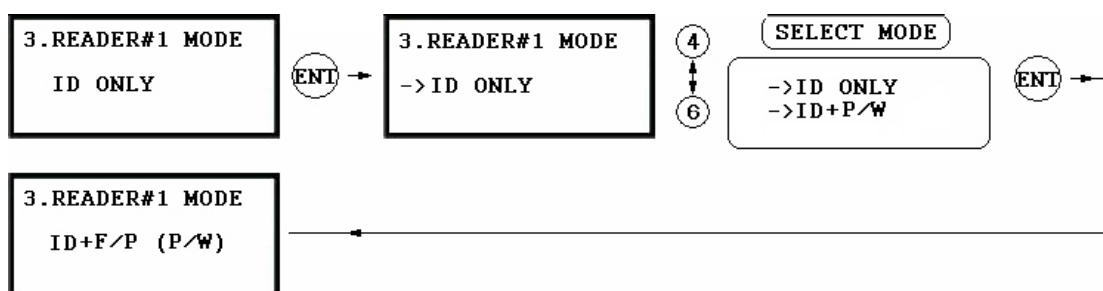

- Note: READER#1 is the built-in proximity reader in the unit.**
- ✓ **ID(PIN) ONLY:** In this mode, users can access the door by simply presenting their card or entering their ID number.
 - ✓ **ID+ P/W:** In this mode, users can access the door by presenting their card or entering their ID number and then verifying their identity by a password.


12.1.4 Reader #2 Mode

The READER#2 MODE setting menu is the same as READER#1 MODE setting menu in the previous section.

Note: READER#1 is the Exit Reader connected to the LX505.

- ✓ **ID ONLY:** In this mode, users can exit/enter the door by simply presenting their card or entering their ID number.
- ✓ **ID+P/W:** In this mode, users can exit/enter the door by presenting their card or entering their ID number and then verifying their identity through a password.

12.1.5 Reader #1 PIN Input

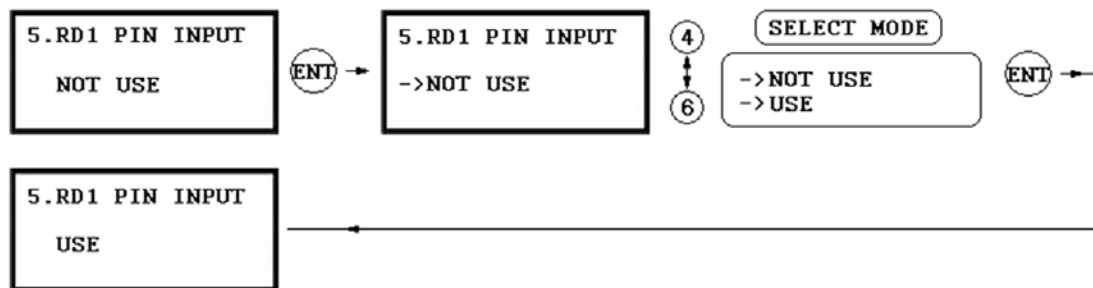


This setting allows you to decide whether to USE or NOT USE the keypad inputs for the Reader#1. The default setting is NOT USE the keypad inputs. If you want to access the door by entering the user ID by keypad, set this mode USE.

Note: Set this mode to USE when you use the password verification method.

12.1.6 Reader #2 PIN Input


READER#2 PIN INPUT setting can be configured in the same way as READER#1 PIN INPUT setting in the previous entry

12.1.7 Communication Address Setting

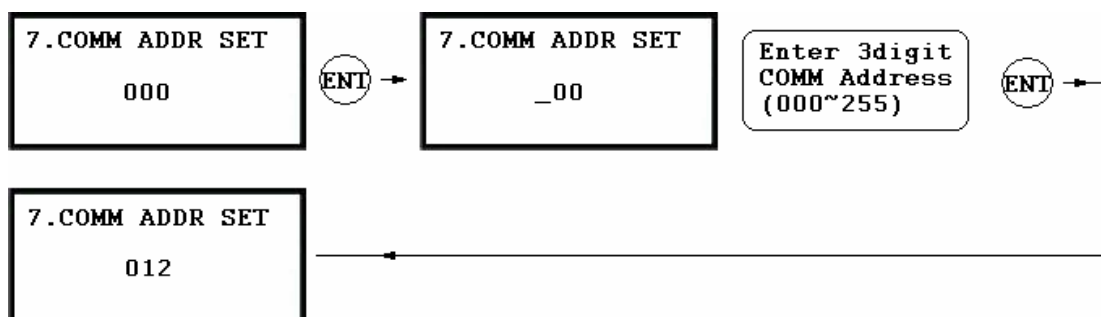


The default Communication Address is "000"
Set different communication addresses for each unit in the loop.

12.1.8 Baud Rate Setting

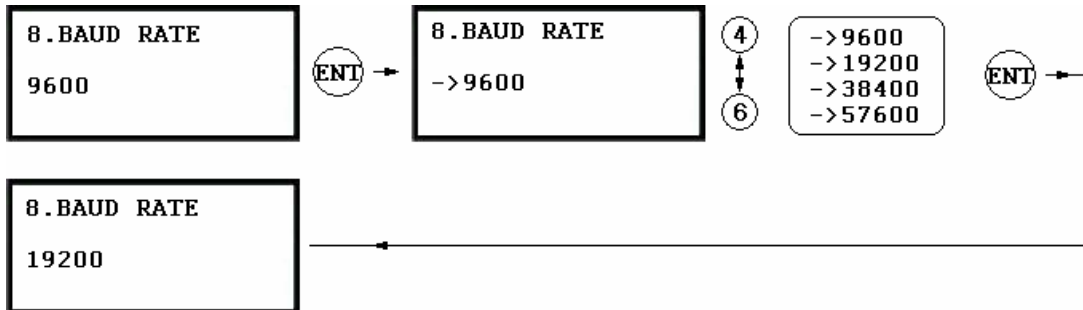


- ✓ The LX505 supports different Baud Rates of 9600, 19200, 38400 and 57600bps. The recommended Baud Rate is 19200bps. An incorrect Baud Rate setting will result in communication errors. Note that you should always set the same Baud Rate for the same communication network.
- ✓ If you have a communication problem, please check the followings;
 - Check the Communication Address for both the LX505 and the host PC in the Software.
 - Check the Baud Rate setting of both the LX505 and the host PC software.
 - Check the COM port and the cable.
 - Check the COM port settings of the host PC
(Parity Bit: None, Data Bit: 8 bits, Stop Bit: 1 bit)

12.2 F2 SETUP MENU

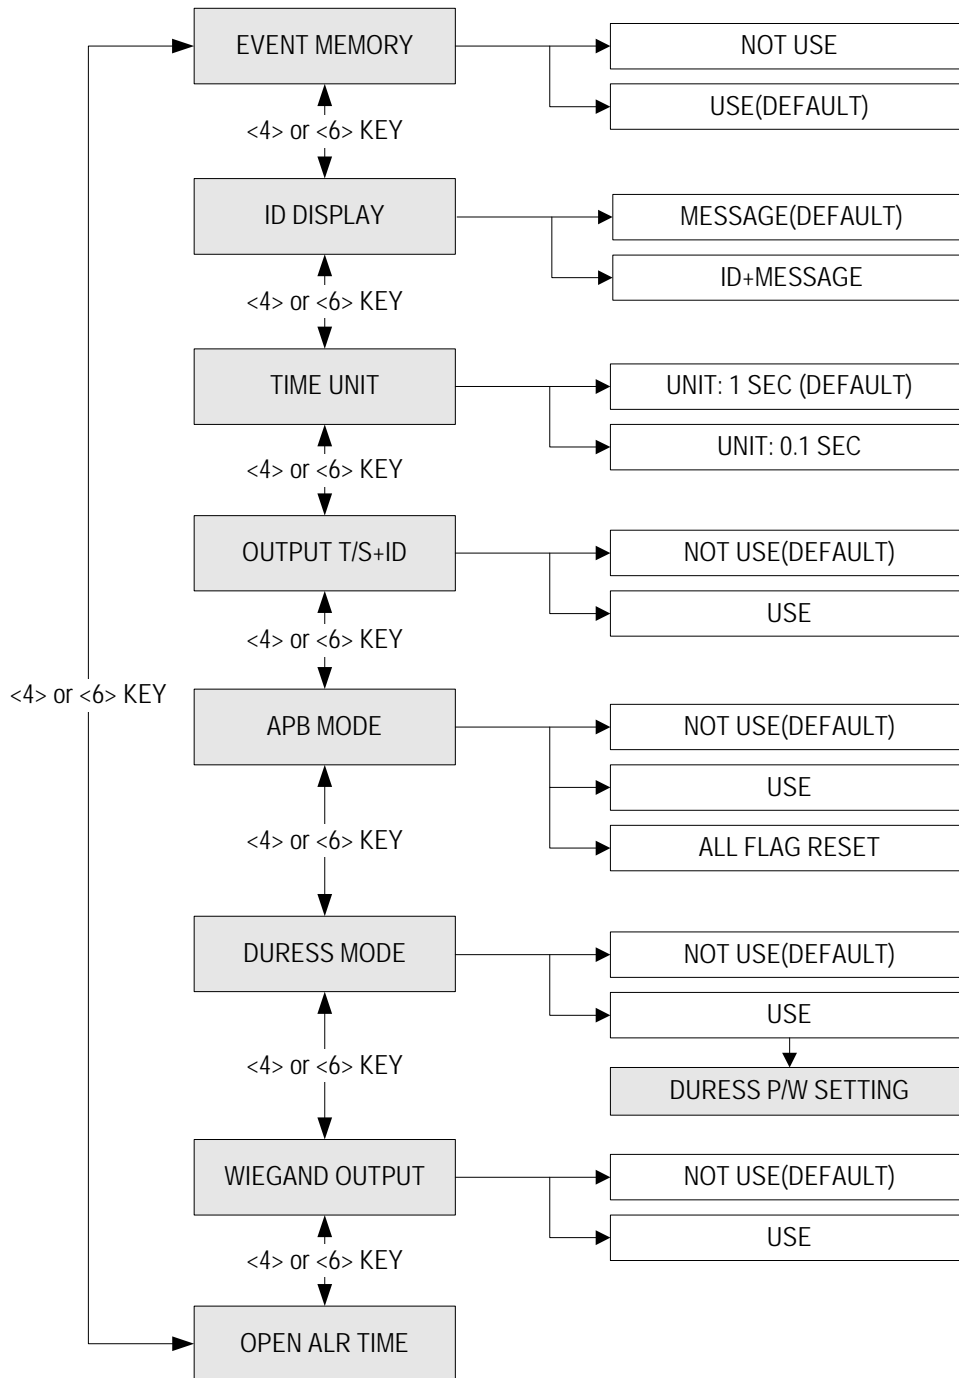


12.2.1 Event Memory

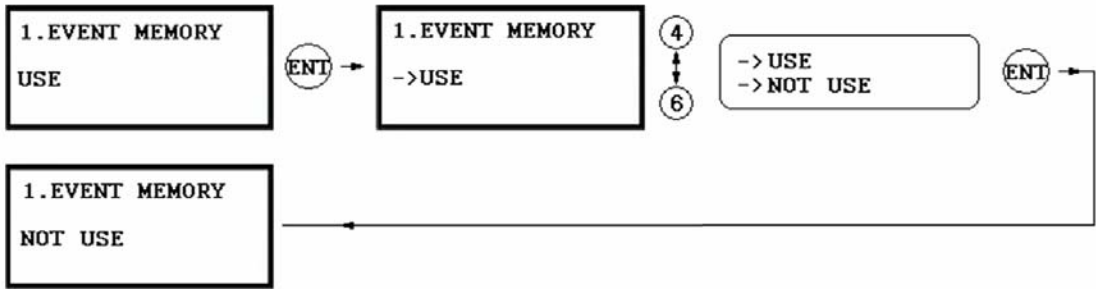

You can select whether to activate the event memory or not. If you set the event memory to USE, the LX505 generates an error message and keeps all event transactions stored in the memory. If you select NOT USE, however, the LX505 will not generate an error message and new events will be overwritten into the event buffers. If you use the LX505 in a stand alone configuration (just for door access), select NOT USE.


12.2.2 ID Display

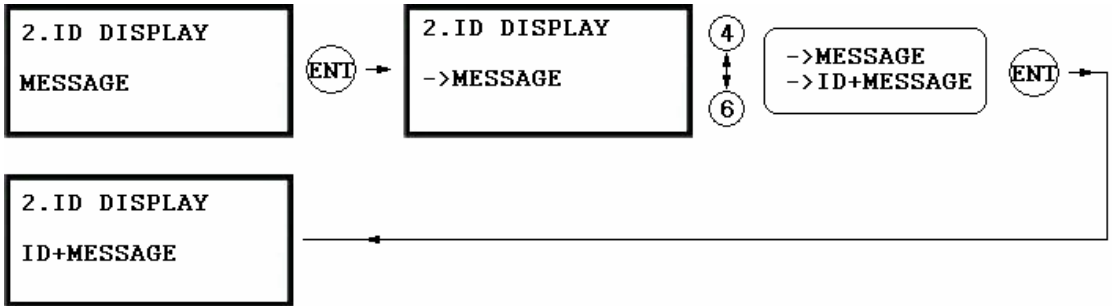

If you want to display user ID numbers on the LCD, select ID+MESSAGE.

- ✓ **MESSAGE:** A text message and asterisks "*****" will appear and the user ID number won't be displayed.
- ✓ **ID+MESSAGE:** The user ID number will be displayed on the LCD with a text message.
- ✓ The default setting is 'MESSAGE'.

12.2.3 Time Unit Setting

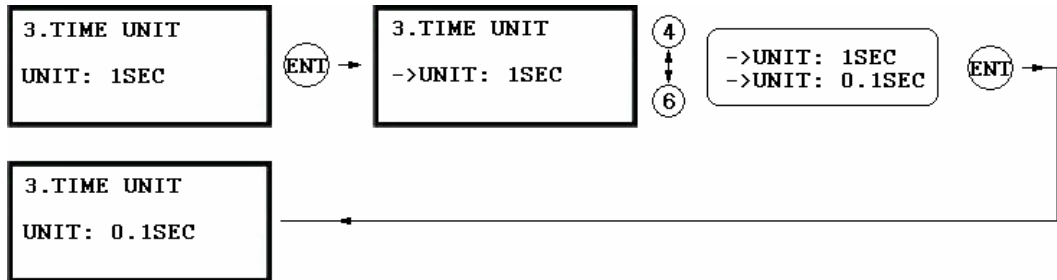

This setting allows you to define the unit of time.

- ✓ **1sec:** Output Time is calculated in the time unit of 1 second for the IN/OUT definition.
- ✓ **0.1sec:** Output Time is calculated in the time unit of 1/10 second (or 100ms) for the IN/OUT definition


e.g. If you want to activate the Door Relay (Relay #1, DR) for 3 seconds, appropriate setting values are as follows;

- The Time Unit should be set to 1 SEC.
- The Door Relay (DR) Output Time should be set to "03".

e.g. If you want to activate Door Relay (Relay #1, DR) for 0.5 second, appropriate setting values are as follows;

- The Time Unit should be set to 0.1 SEC.
- The Door Relay (DR) Output Time should be set to "05".


12.2.4 Output T/S + ID

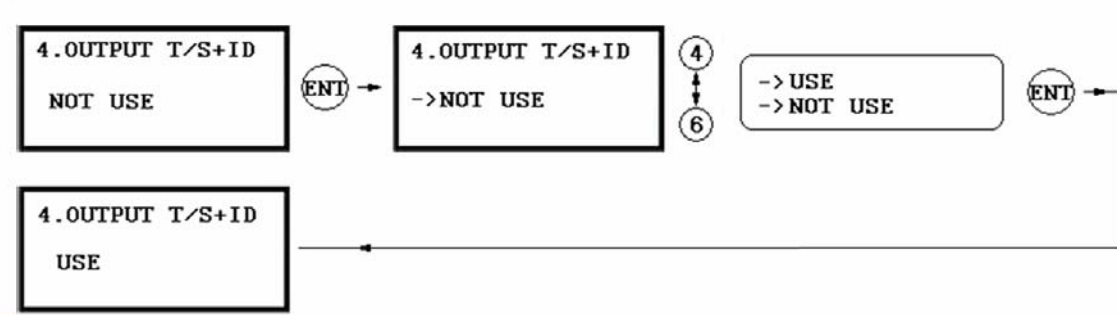

The 'Output Time Schedule' setting can be used to generate outputs and keep the door open for a certain assigned period of time. If you set this 'Output Time Schedule + ID' feature to NOT USE here, however, the door won't open when time comes, until someone is allowed access. Of course, the door is automatically closed after the assigned time is over.

- ✓ **NOT USE:** The door unlocks at the beginning of the Time Interval of the Time Schedule code.
- ✓ **USE:** The door unlocks when a registered user is allowed to access the door for the first time after the Time Interval of the applied Time Schedule begins.
- ✓ The default setting is NOT USE


12.2.5 Anti-pass-back Mode

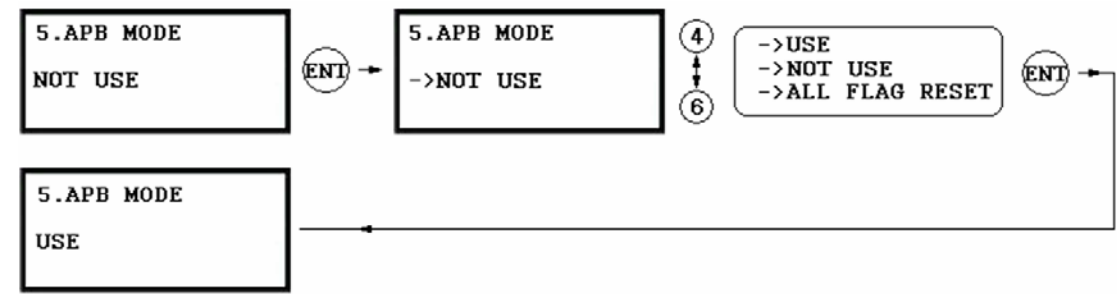

The Anti-pass back feature is used to prevent an identical user from entering or exiting the door more than twice in a row. This mode can be applied only when an Exit Reader is installed. Do not set this mode to USE if an Exit Button is not installed.

- ✓ **NOT USE:** The Anti-pass back feature is disabled.
- ✓ **USE:** The Anti-pass back feature is enabled.
- ✓ **ALL FLAG RESET:** All Anti-pass back flags are reset, and access will be allowed one time regardless of the status of the existing flags.

12.2.6 Duress Mode

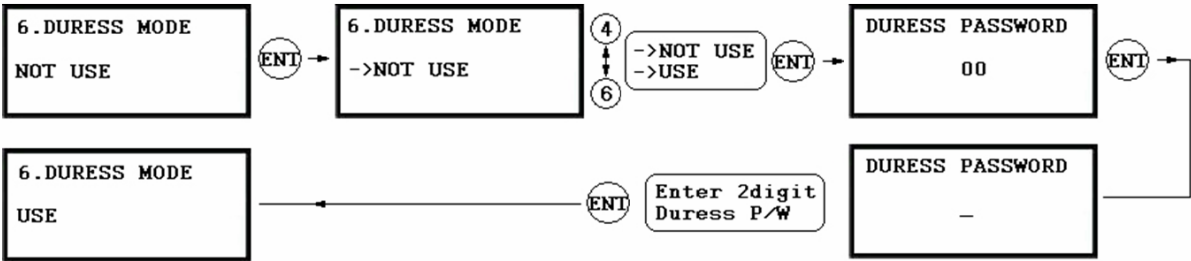


You can set Duress Mode for Reader#1. The default setting is NOT USE. If you select USE, the LCD will display the default Duress Password '00'. You can enter the desired 2-digit Duress Password.

Note | While the LX505 is in the Duress condition, enter the 2-digit Duress Password and press <ENT> key prior to presenting the card. The door will be opened as usual, but the Duress Alarm will be generated and reported to the host PC.

CAUTION | The Duress password and ARM code and DISARM code must differ.


12.2.7 Wiegand Output

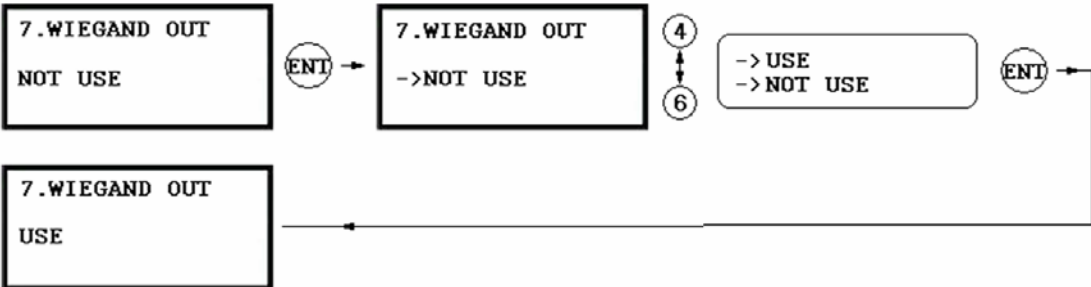

This feature allows you to use the LX505 as a reader (rather than as a controller). If this setting is set to USE, the LX505 sends 26bit Wiegand Output through two TTL output ports.

- ✓ **NOT USE:** Normal TTL outputs will be activated.
- ✓ **USE:** 26bit Wiegand outputs will be generated through TTL1 and TTL2 ports. When a registered card is read, the "CARD SCCANNING OK" message will appear on the LCD. (TTL1 : Data 0 TTL2 : Data 1)

12.2.8 Door Open Alarm Time Setting

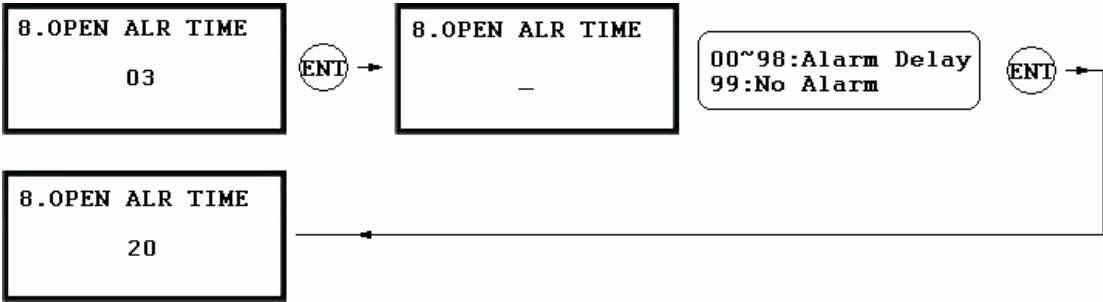


The 'Door Open Alarm Delay' is the time period between the Door Open Time and the point at which the Door Open Alarm starts ringing.


- ✓ **00:** The alarm will ring if the door isn't closed after the Door Relay time.
- ✓ **01~98:** The alarm will ring if the door is not closed after the door open time and over the alarm delay time. (01~98 sec.)
- ✓ **99:** No alarm.

Note | A Door Contact Sensor must be installed on the door for this application.

12.3 F3 SETUP MENU

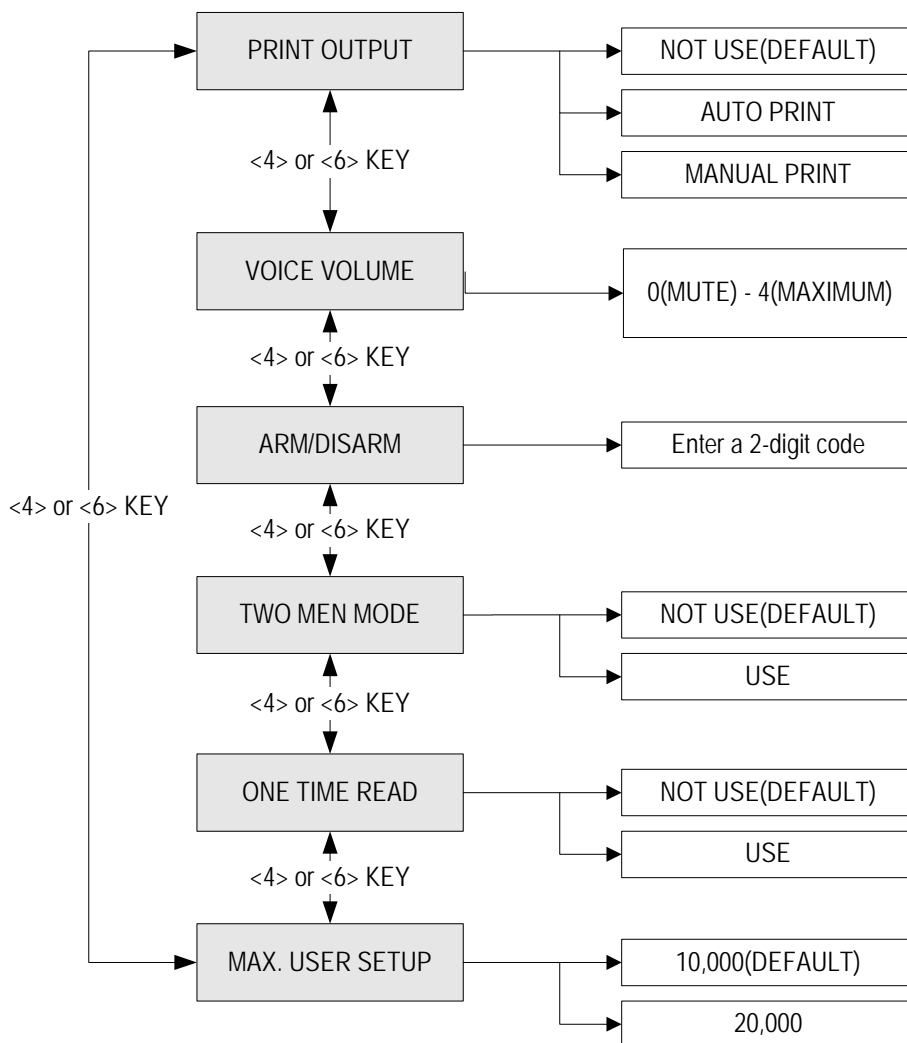


12.3.1 Print Output

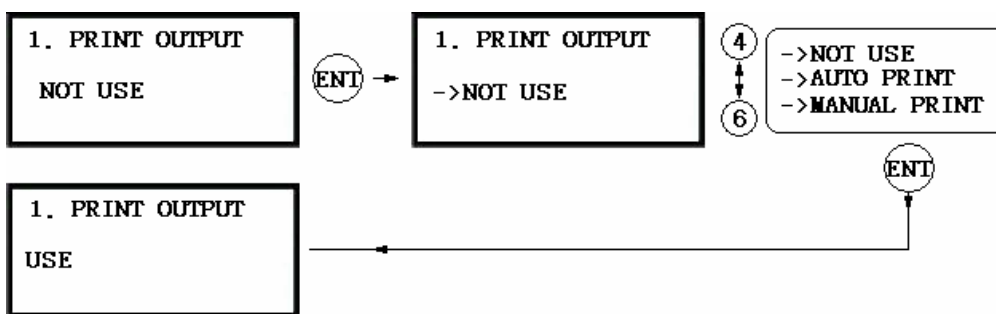

If connected to a serial printer, the LX505 can send the printer the details of new events including ID, data, time, function key, etc.


- ✓ **AUTO PRINT:** Print outputs are generated for every new event.
- ✓ **MANUAL PRINT:** By pressing '0' (no printing) or '1' (printing) key, you can manually select whether or not to print a new event.
- ✓ **NOT USE:** No printing output.

12.3.2 Voice Volume

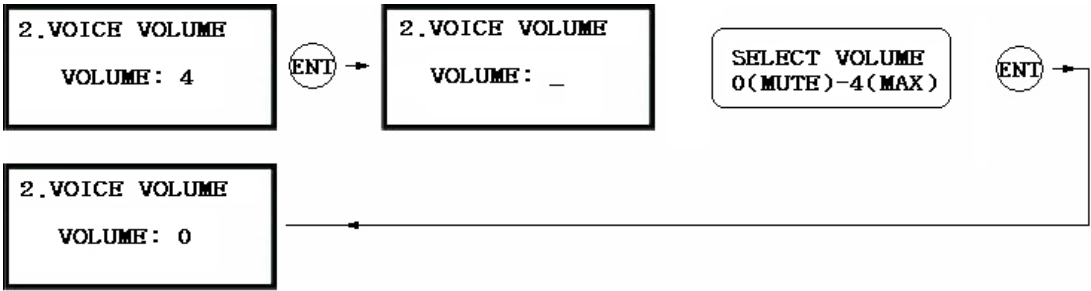


The LX505 tells you its status out loud. You can adjust the volume of the voice from 0 (mute) to 4 (maximum). New voices can be downloaded through communications with the host PC.

12.3.3 Arm/Disarm

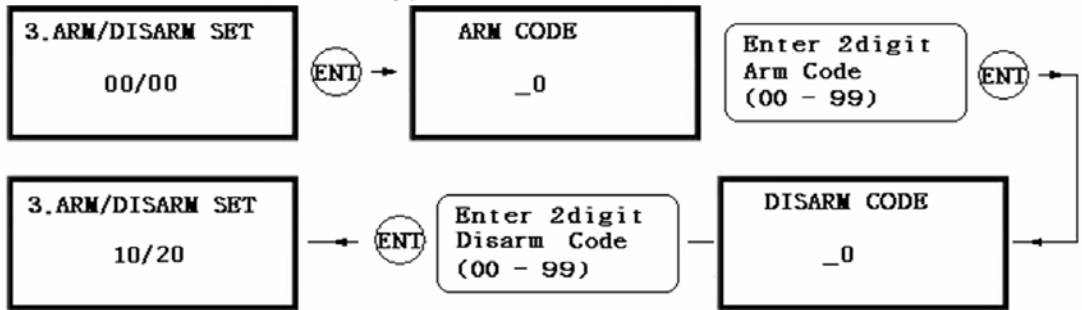


This setting allows you to set the Arm Code and the Disarm Code. After setting the Arm Code or Disarm Code, you can set the LX505 to the ARM mode by entering the ARM code and presenting an ARM/DISARM card (i.e. a card that was registered with Code 3). In this mode, the LX505 can generate outputs so that it can operate with other security systems. Once this mode is set, all readers stop reading cards. To DISARM the LX505, enter the Disarm Code and present an ARM/DISARM card.
CAUTION | The ARM Code, DISARM Code, and Duress Code must all differ.

12.3.4 Two Men Mode

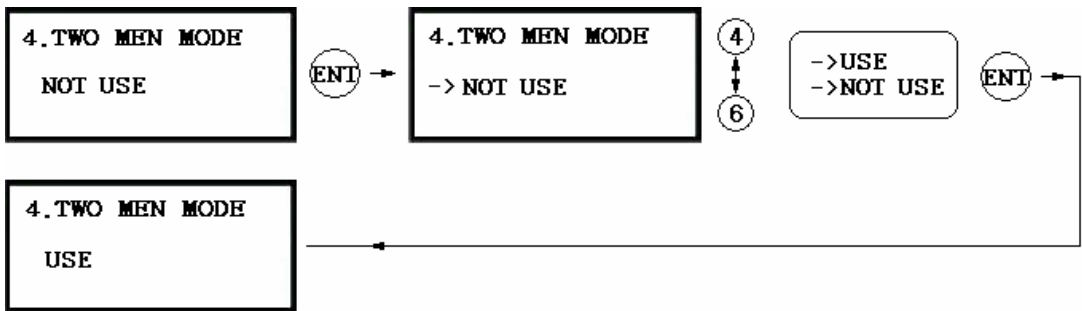


To apply this feature, cards designated for guides should be registered into the Admin Group(C:1) as ID(1) and visitor cards into the Visitor Group(C:2) as ID(2). If configured in the two-man mode, the LX505 won't grant access until one ID(1) guide card and one ID(2) visitor card are presented in a series within a certain time length.

12.3.5 One Time Read

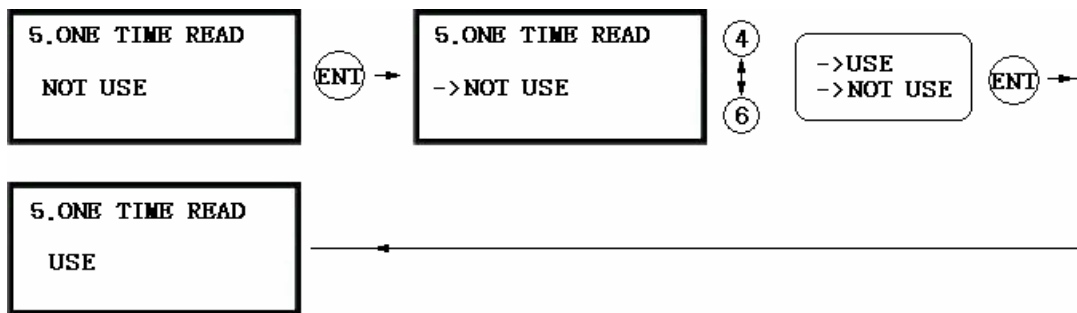

If this mode is set to USE, an identical ID won't be read twice within 30 seconds.


12.3.6 Max. User Setup

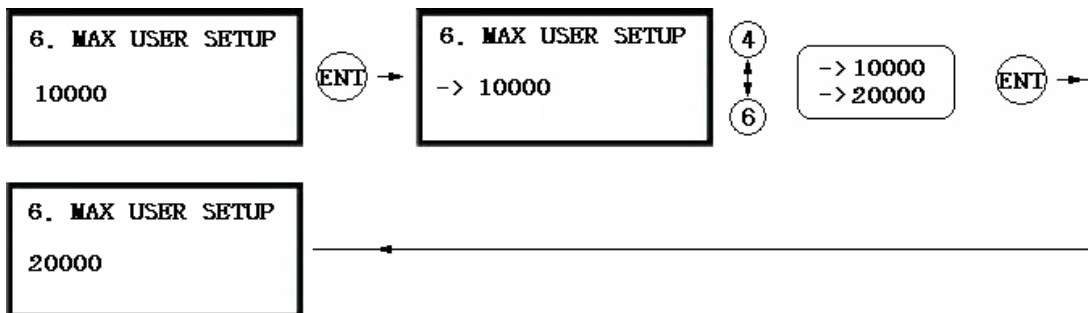


You can select the maximum number of user registrations; 10,000 or 20,000. If the maximum number of registrants is set to 20,000, the maximum number of event transactions becomes 10,000.

CAUTION: Before changing the maximum number of users, you should initialize the device.

12.4 F4 SETUP MENU

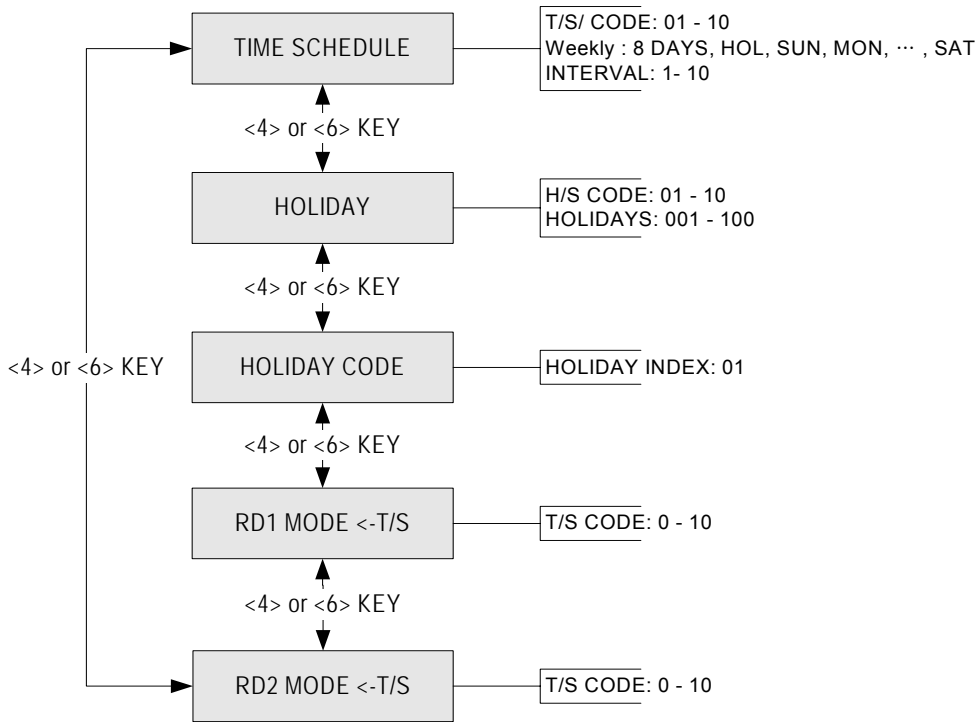


12.4.1 Time Schedule

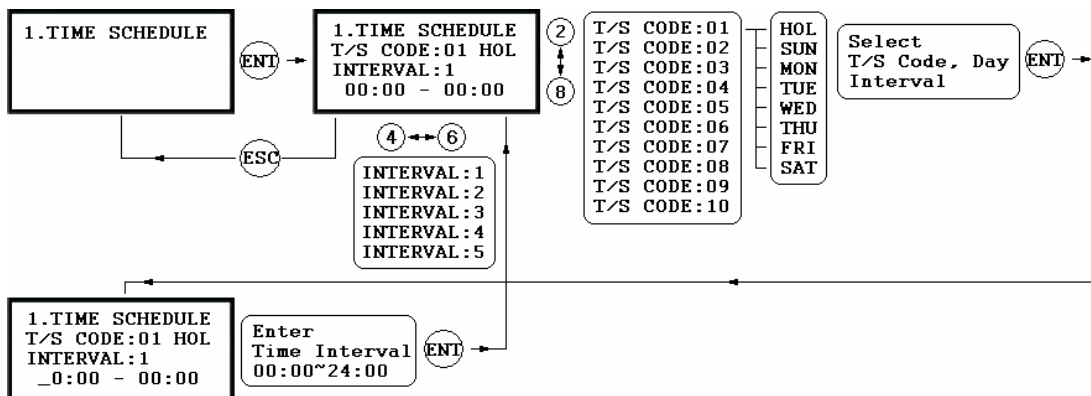


- ✓ There are 10 Time Schedule Codes available for users. Time Schedule Code "00" is the default setting that allows access to all users at any time. The user can program the Time Schedule Codes 01 to 10. Each Time Schedule Code has 8 programmable days (i.e. Sun, Mon, Tue, Wed, Thu, Fri, Sat and Holiday) and each day has 5 Time Intervals (i.e. Shift time or Accessible time zone.)
- ✓ The LCD will show the current Time Schedule settings such as T/S Code, Day, Time Interval and time period. Use <2> or <8> key to scroll up and down the Time Schedule Code (01~10) and a day of the week. (Mon - Sun and Holiday). Use <4> or <6> key to select Time Interval between 1 and 5. The Holiday in this Time Schedule will be linked to the Holiday Schedule Code. Select one of the Time Schedule Code, Day and Interval, and then press <ENT> key. This system is based on 24-hour system and therefore the time 00:00 and 24:00 refer to the same time and 12:00 refers to 12 O'clock afternoon. Enter the hour and minute of the start time and hour and minutes for end time of the Time Interval then press <ENT> key to store T/S to the memory. Press <ESC> key to return to the menu.

12.4.2 Holiday

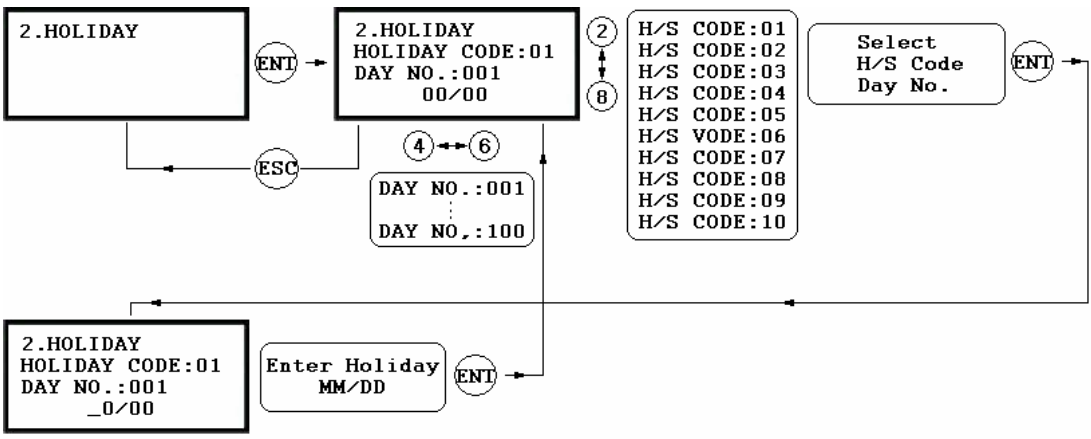


- ✓ There are 10 Holiday Schedule Codes available for users. Holiday Schedule Code "00" is the default code, which includes no Holidays in it. The user can program the Holiday Schedule Codes 01 to 10. Each Holiday Schedule Code can have up to 100 programmable holidays.
- ✓ The LCD will show current H/S settings including H/S Code, Holiday number and Date. Use <2> or <8> key to scroll up and down from the Holiday Schedule Code 01 to 10 and use <4> or <6> key to select from Holiday number 001 to 100. Select one of the Holiday Schedule Code and Holiday number then press <ENT> key. Enter the month and date of the holiday, then press <ENT> key to store the Holiday Schedule to the memory. To return to the previous menu. press <ESC> key.

12.4.3 Holiday Code

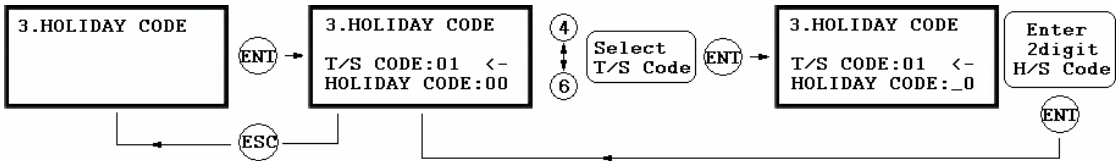

- ✓ The Holiday Code setting allows you to link a Holiday Schedule to a Time Schedule. A Time Schedule has 5 Time Intervals for holidays and the Time Intervals are applied only to the dates of this Holiday Schedule. The default Holiday Schedule Code is '00' which means no holidays are applied to the Time Schedule.
- ✓ Use <4> or <6> key to scroll up and down from the T/S Code 01 to 10 and press <ENT> key. Then, enter a 2-digit Holiday Schedule Code and press <ENT> key to store the changed Holiday Index settings to the memory. To return to the previous menu, press <ESC> key.

12.4.4 Reader#1 Mode Time Schedule

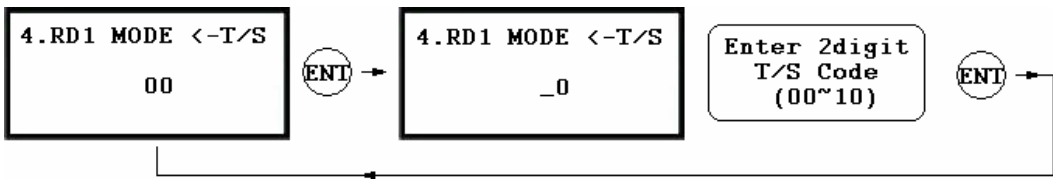


- ✓ There are 2 system operations modes including RF Only Mode, RF+PW Mode. You can select one of these system operations modes at [R1 MODE SETTING] from [F1 SETUP MENU]. If, however, you want to apply a different operating mode to all users during a certain Time Interval. For example, you may want to access the door by only presenting a card from 09:00 to 17:00 and you want to use Password verification for the rest of the time. Then, you can do so by setting [R1 MODE SETTING] to RF+PW Mode, which is for the system operating mode, and then program T/S Code 01 so it can include a Time Interval between 09:00 and 17:00. Then link the Time Schedule Code 01 to the R1 MODE Time Schedule setting in this menu. To link a Time Schedule Code (01~10) to Reader#1 Mode, first, press <ENT> key and get into the setting mode. Then, enter the 2-digit Time Schedule Code and press <ENT> key to store and apply the Time Schedule Code to R1 MODE. To return to the previous menu, press <ESC> key.

12.4.5 Reader#2 Mode Time Schedule

The READER#2 MODE TIME SCHEDULE setting can be configured in the same way as READER#1 MODE T/S setting, which is explained in the previous section.


12.5 F5 SETUP MENU

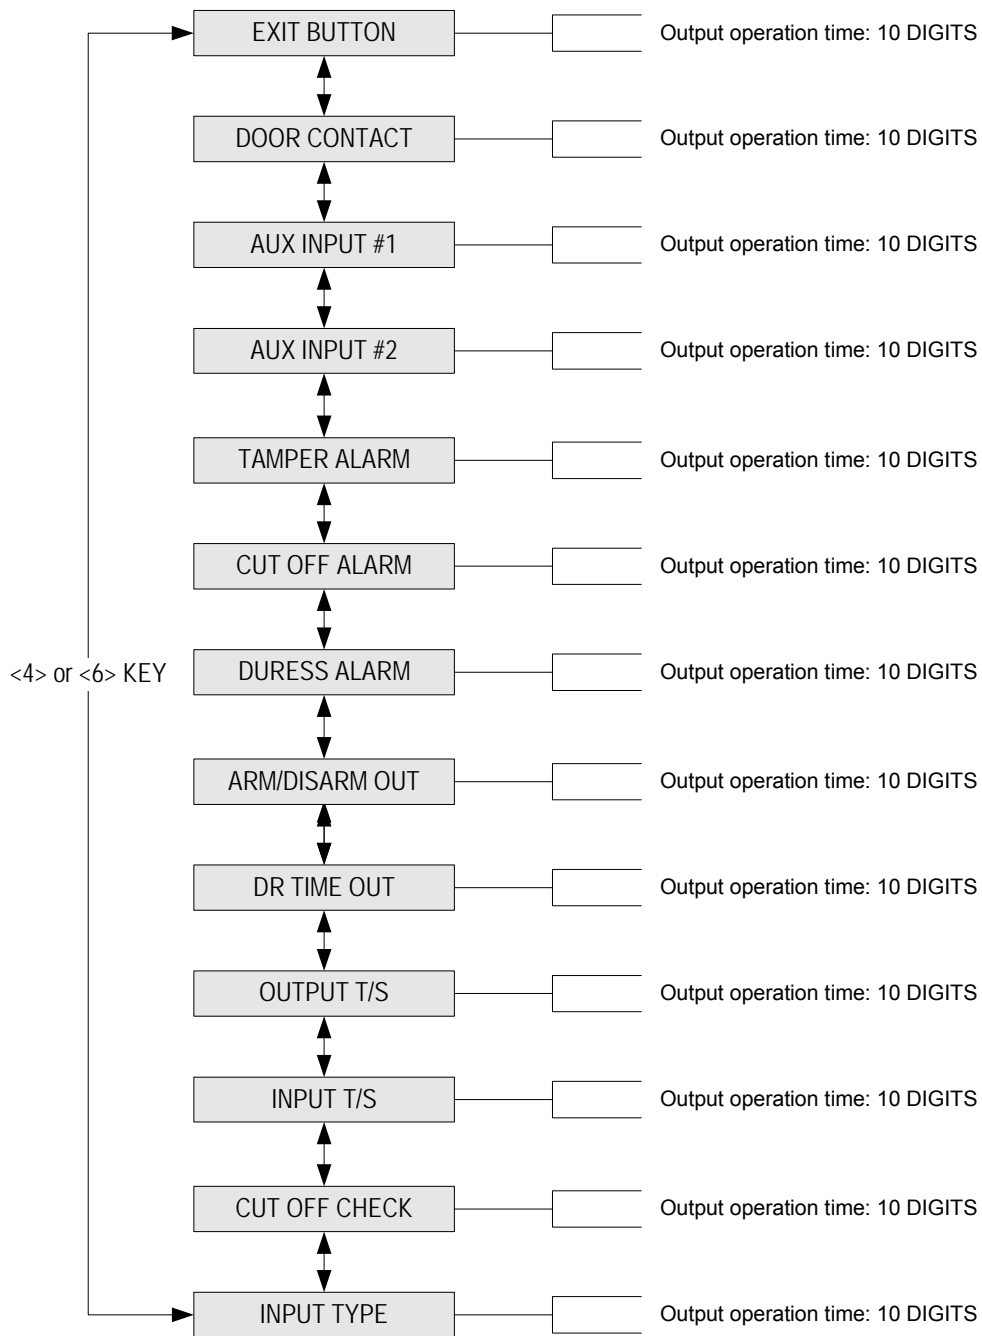

Default Output Settings for Input Sources

OUTPUT	Door Relay (DR)	Alarm Relay (AR)	TTL#1 (T1)	TTL#2 (T2)	Buzzer (BZ)
[1] EXIT BUTTON	03	00	00	00	00
[2] DOOR CONTACT	00	99	00	00	00
[3] AUX Input #1	00	00	00	00	00
[4] AUX Input #2	00	00	00	00	00
[5] TAMPER ALARM	00	99	99	99	99
[6] CUT OFF ALARM	00	00	00	00	00
[7] DURESS ALARM	00	00	00	00	00
[8] ARM/DISARM OUT	00	00	00	00	00
[9] DR TIME OUT	00	00	00	00	00
[10] OUTPUT TIME SCHEDULE	00	00	00	00	00
[11] INPUT TIME SCHEDULE	00	00	00	00	00
[12] CUT OFF CHECK	00	00	00	00	00
[13] INPUT TYPE	00	00	00	00	00

12.5.1 Exit Button Output Setting

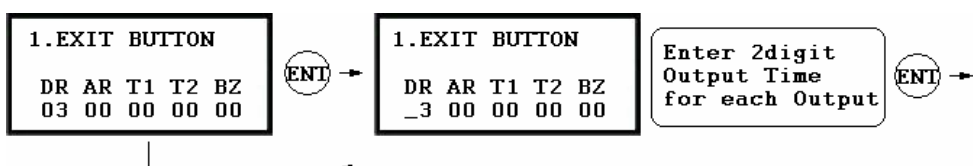

You can program the Output Activation Time, the length of time for which the output is activated after the EXIT button is pressed.

Let's say, we put '03' for one of the fields, If the unit of time is set to '1 sec', then the activation time will be 3 seconds. If the unit of time is set to '0.1 sec', then the activation time will be 0.3 seconds (or 300 ms.)

You can set the time somewhere between 00 and 98 seconds (or between 0.0 and 9.8 seconds if the Time Unit is set to 0.1 sec.) If you put "99", the corresponding output will be activated forever until you reset the output.

- ✓ **DR:** Door Relay Output
- ✓ **AR:** Alarm Relay Output
- ✓ **T1:** TTL#1 Output
- ✓ **T2:** TTL#2 Output
- ✓ **BZ:** Buzzer Output

12.5.2 Door Contact Output Setting

12.5.3 Aux Input#1 Output Setting

12.5.4 Aux Input#2 Output Setting

12.5.5 Tamper Alarm Output Setting

12.5.6 Cut Off Alarm Output Setting


12.5.7 Duress Alarm Output Setting

12.5.8 Arm/Disarm Output Setting

12.5.9 DR TIME Output Setting

The rest of output activation time settings above can be configured in the same way as the Exit Button Output Setting in the section 12.6.1, which means you can refer to that section to get some idea as to how to do the configuration.


12.5.10 Output Time Schedule Setting

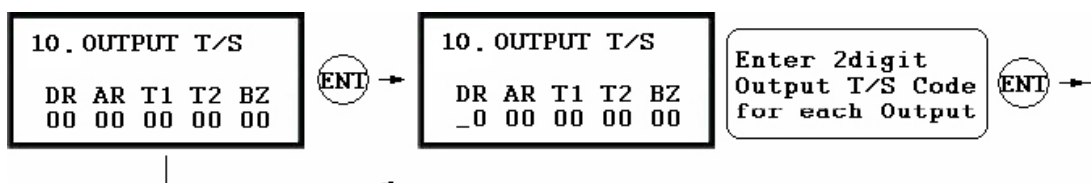

You can assign a Time Schedule Code to each output. The default Time Schedule Code for every output is "00", which means no Time Schedule is applied to them. Changing these settings can be very useful when you want to open the door during a certain Time Term. Press <ENT> key enter the setting mode and enter a 2-digit Time Schedule Code for each output.

- ✓ **DR:** Door Relay Output T/S Code
- ✓ **AR:** Alarm Relay Output T/S Code
- ✓ **T1:** TTL#1 Output T/S Code
- ✓ **T2:** TTL#2 Output T/S Code
- ✓ **BZ:** Buzzer Output T/S Code

12.5.11 Input Time Schedule Setting

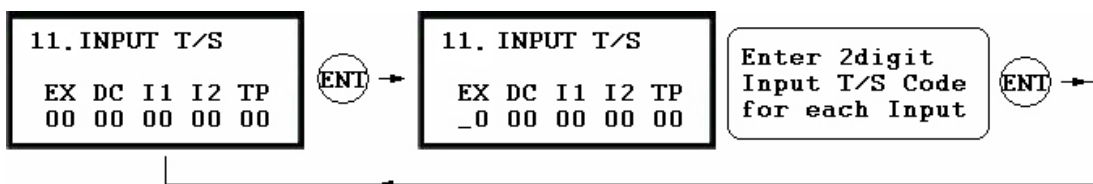


You can assign a Time Schedule Code to each Input. The default Time Schedule Code for every input is "00", which means no Time Schedule is applied to them. Changing these settings can be very useful when you want to activate PIR sensor input during a certain period of time.

Press <ENT> key to enter this setting mode, then enter a 2-digit Time Schedule Code for each input.

- ✓ **EX:** EXIT Button Input T/S Code
- ✓ **DC:** Door Contact Sensor Input T/S Code
- ✓ **I1:** Aux Input#1 T/S Code
- ✓ **I2:** Aux Input#2 T/S Code
- ✓ **TP:** Tamper Switch Input T/S Code


12.5.12 Cut Off Check Setting

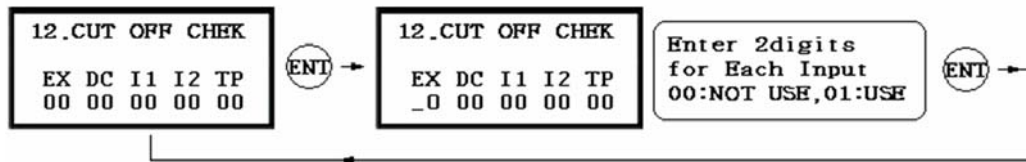

You can choose whether or not to check the connection cutoff of each input port. '00' means not using this feature and '01' means using it.


CAUTION: Before setting this setting to USE, a 2.2K resistor should be connected between the input wire and the GND.

12.5.13 Input Type Setting

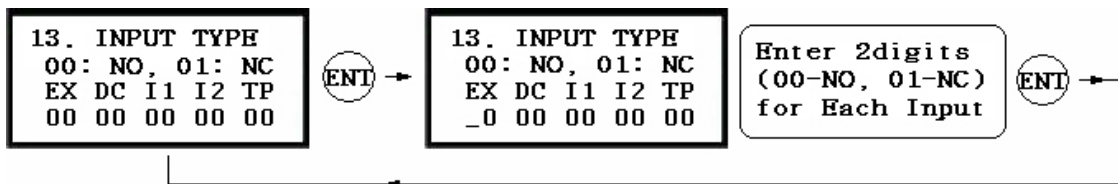

You can program each input for either NO(Normally Open) or NC(Normally Close) operation. '00' means NO while '01' means NC. The default setting is 00(NO).


12.6 F6 SETUP MENU

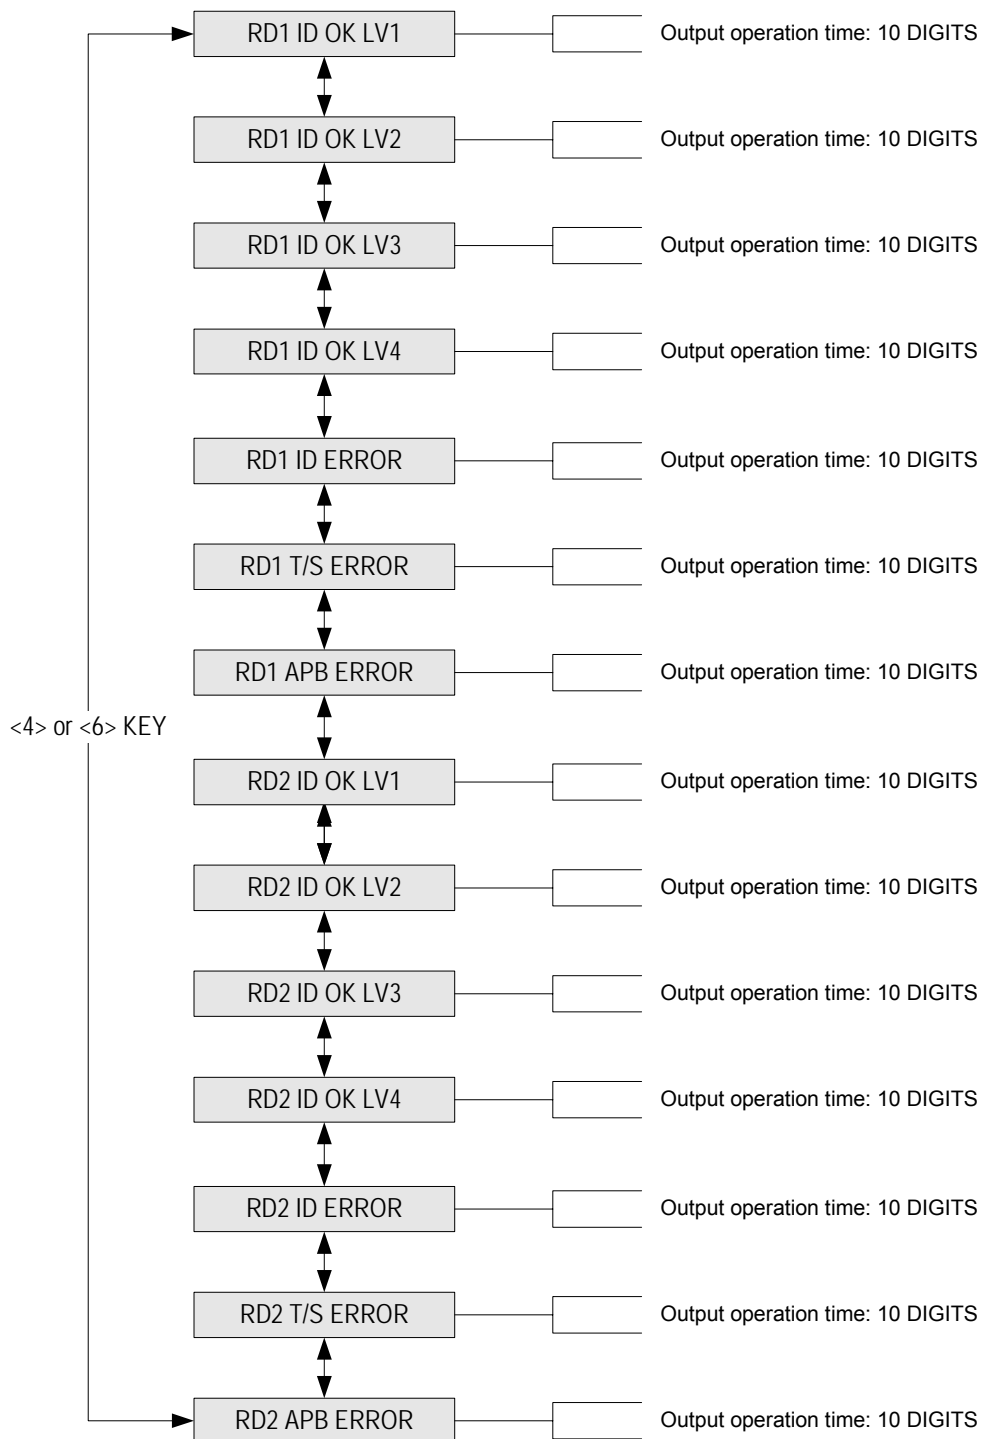

Default Output Setting for Different Inputs

OUTPUT	Door Relay (DR)	Alarm Relay (AR)	TTL#1 (T1)	TTL#2 (T2)	Buzzer (BZ)
[1] Reader#1 ID OK LV1	03	00	00	00	00
[2] Reader#1 ID OK LV2	05	00	00	00	00
[3] Reader#1 ID OK LV3	05	00	00	00	00
[4] Reader#1 ID OK LV4	05	00	00	00	00
[5] Reader#1 ID Error	00	03	00	00	00
[6] Reader#1 T/S Error	00	03	00	00	00
[7] Reader#1 APB Error	00	03	00	00	00
[8] Reader#2 ID OK LV1	03	00	00	00	00
[9] Reader#2 ID OK LV2	05	00	00	00	00
[10] Reader#2 ID OK LV3	05	00	00	00	00
[11] Reader#2 ID OK LV4	05	00	00	00	00
[12] Reader#2 ID Error	00	03	00	00	00
[13] Reader#2 T/S Error	00	03	00	00	00
[14] Reader#2 APB Error	00	03	00	00	00

12.6.1 Output Setting for Reader#1 ID OK Level 1

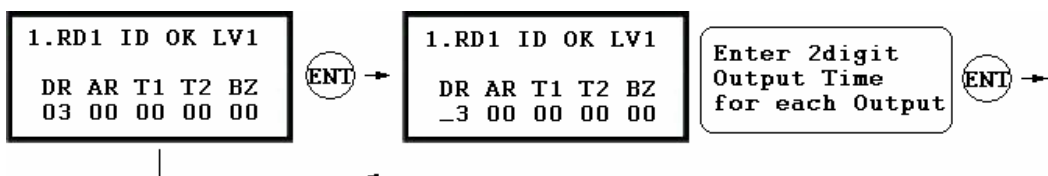

You can program the Output Activation Time, the length of time during which the output is activated after the EXIT button is pressed. The actual Output Activation Time equals either V seconds, provided that the Time Unit is set to 1 second, or V/10 seconds, provided that the Time Unit is set to 0.1 second. (V=Activation Time Value assigned for each output.)

You can set the time somewhere between 00 and 98 seconds (between 0.0 and 9.8 seconds if the Time Unit is set to 0.1 sec.) If you put "99", the corresponding output will be activated forever until you reset the Output.

- ✓ **DR:** Door Relay Output
- ✓ **AR:** Alarm Relay Output
- ✓ **T1:** TTL#1 Output
- ✓ **T2:** TTL#2 Output
- ✓ **BZ:** Buzzer Output

Output Time setting from 12.7.2 to 12.7.14 can be configured in the same way as 12.7.1 RD1 ID OK Level 1 Output setting.

12.6.2 Output Setting for Reader#1 ID OK Level 2

This output time is applied for the users registered with Level#2 output.

12.6.3 Output Setting for Reader#1 ID OK Level 3

This output time is applied for the users registered with Level#3 output.

12.6.4 Output Setting for Reader#1 ID OK Level 4

This output time is applied for the users registered with Level#4 output.

12.6.5 Output Setting for Reader#1 ID Error

This output time is applied when a user that is not registered in Reader #1 attempts access.

12.6.6 Output Setting for Reader#1 T/S Error

This output time is applied when a user attempts access before or after the time assigned by the applied time schedule.

12.6.7 Output Setting for Reader#1 APB Error

This Output Time is applied when a user who attempts access has violated the one-entry-one-exit rule of Anti-pass-back.

12.6.8 Output Setting for Reader#2 ID OK Level 1

This Output Time is applied for the users registered with Level#1 output.

12.6.9 Output Setting for Reader#2 ID OK Level 2

This Output Time is applied for the users registered with Level#2 output.

12.6.10 Output Setting for Reader#2 ID OK Level 3

This Output Time is applied for the users registered with Level#3 output.

12.6.11 Output Setting for Reader#2 ID OK Level 4

This Output Time is applied for the users registered with Level#4 output.

12.6.12 Output Setting for Reader#2 ID Error

This output time is applied when a user that is not registered in Reader #1 attempts access.


12.6.13 Output Setting for Reader#2 T/S Error

This output time is applied when a user attempts access before or after the time assigned by the applied time schedule.


12.6.14 Output Setting for Reader#2 APB Error

This Output Time is applied when a user who attempts access has violated the one-entry-one-exit rule of Anti-pass back.


12.7 F7 SETUP MENU

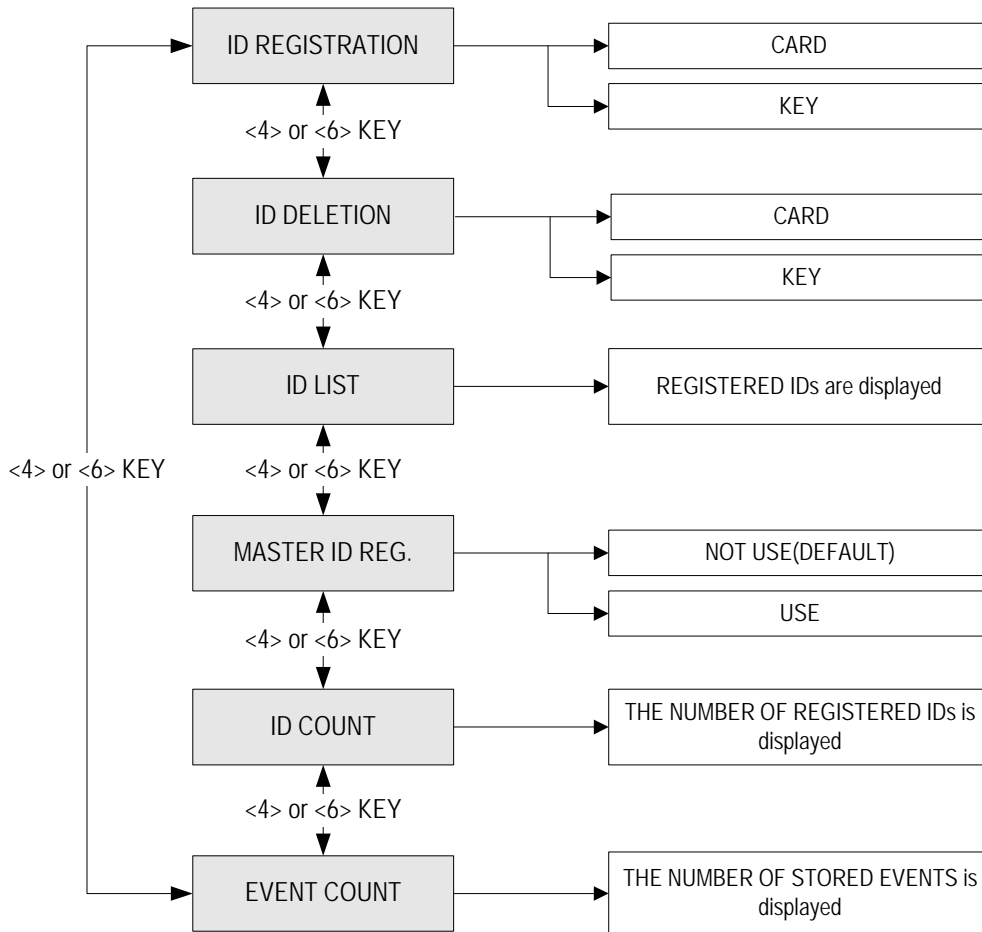


12.7.1 ID Registration

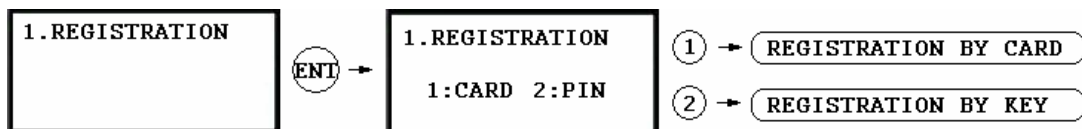

a) Registration by Card

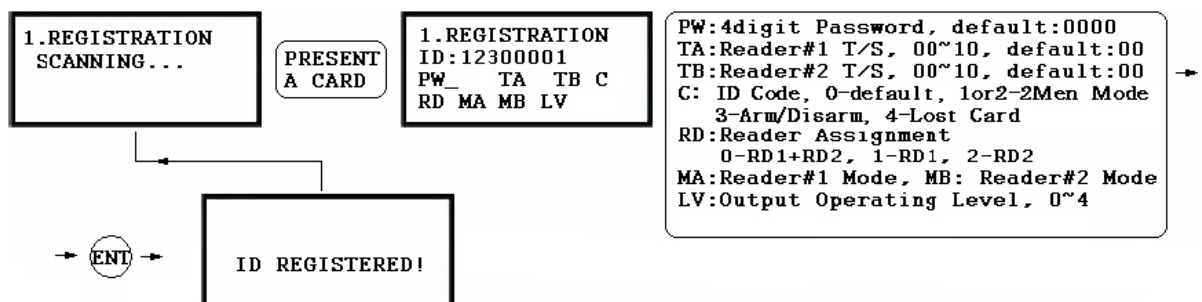

b) Registration Using Keypad

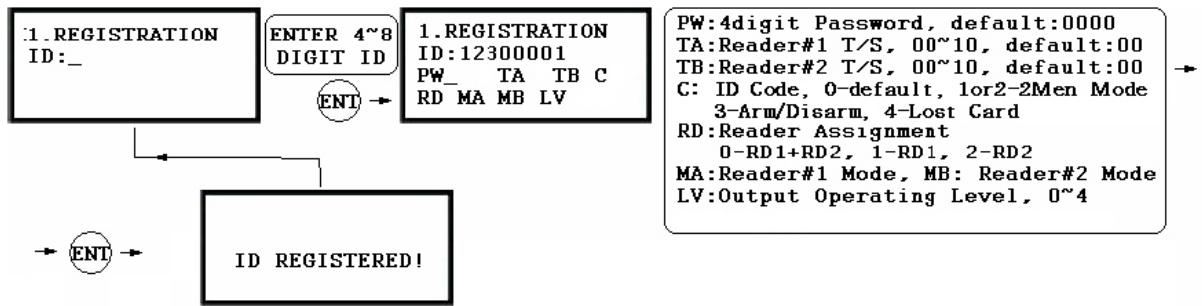

NOTE| In case you make a typing mistake during the registration process, you can press F1 button to erase your errors.

1. **Scanning** – means the reader is waiting for an ID number to be entered. The card number for the card will appear with a beep sound when you present the card.
2. **ID** – is a Personal Identification Number (PIN) that consists of 4-8 digits. Enter a 4-8digit ID number (PIN) and press <ENT> key. (For LX505SR, the ID number consists of 4-10 digits.
3. **PW** – stands for a password that is required for verification in the RF + Password operating mode.
4. **TA** – refers to the Time Schedule code ('00' ~ '10') for the Reader#1 (*i.e.* the built-in reader). Cardholders are granted access only during the Time Intervals of the Time Schedule code entered to this TA field. To set the Time Intervals for each Time Schedule code, refer to the instructions on the Time Schedule Setup in the **[F4 SETUP MENU]**. If you want allow the cardholder access to the door anytime, then enter the default Time Schedule code '00' for the value.
5. **TB** – refers to the Time Schedule code ('00' ~ '10') for the Reader#2 (*i.e.* Exit Reader). Cardholders are granted access only during the Time Intervals of the Time Schedule code entered to this TB field. To set the Time Intervals for each Time Schedule code, refer to the instructions on the Time Schedule Setup in the **[F4 SETUP MENU]**. If you want allow the cardholder access to the door anytime, then enter the default Time Schedule code '00' for the value.
6. **RD** – refers to the Reader Assignment code for the cardholder. Entering the code '0' assigns both readers (Built-in Reader and Exit Reader) to grant access to the user that is being registered, code '1' only assigns Reader#1 (Built-in Reader) and code '2' assigns Reader#2 (Exit Reader). If you enter '1' in the RD field(Only Reader#1 assigned) and try to exit through Reader#2 (Exit Reader) then LX505 generates an error message ("Access Door Error") on the LCD display.


7. **C** – stands for the ID code. Code '0' is default and code '1' or '2' is a code used for the TWO MEN MODE. Code '3' is used for the ARM/DISARM function and code '4' is assigned for lost cards.

8. **MA** – refers to the Operating Mode of the Reader#1 (*i.e.* the built-in reader) for the cardholder. If you enter '1' for MA, for example, Reader#1 will be operating always on RF Only Mode.
 - '0' – System Operating Mode (Path: [F1 SETUP MENU] > [READER#1 MODE])
 - '1' – ID Only Mode
 - '2' – ID + Password Mode

9. **MB** – refers to the Operating Mode of the Reader#2 (Exit Reader) for the cardholder. If you enter '1' for MB, for example, Reader#2 will be operating always on RF Only Mode.
 - '0' – System Operating Mode (Path: [F1 SETUP MENU] > [READER#1 MODE])
 - '1' – ID Only Mode
 - '2' – ID + Password Mode


10. **LV** – refers to the Output Operating Level for the cardholder. Output operating time can be set for each user. To configure an Output operating time for each level, refer to the instructions on Output Setting in the [F6 SETUP MENU].
 - '0' or '1' – Level #1
 - '2' – Level #2
 - '3' – Level #3
 - '4' – Level #4
 -

12.7.2 ID Deletion

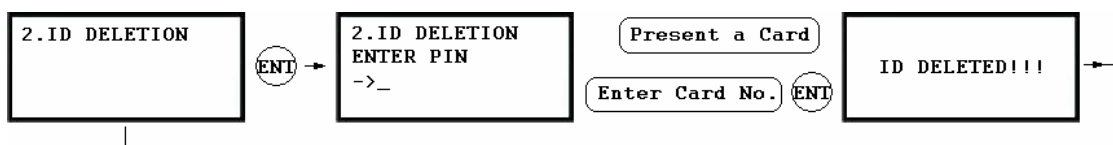


Registered IDs can be deleted from the LX505 by presenting the card or entering the ID number. After entering the ID DELETION mode, present the card you want to delete. Alternatively, you may enter an 8 digit ID number and press <ENT> key from the keypad. The ID number will appear on the LCD and that ID will be removed from the device and the "ID DELETED" message will be shown on the LCD. If the ID number is not found, the "UNREGISTERED ID" message will appear. You can delete multiple IDs by repeating this process.

12.7.3 ID List

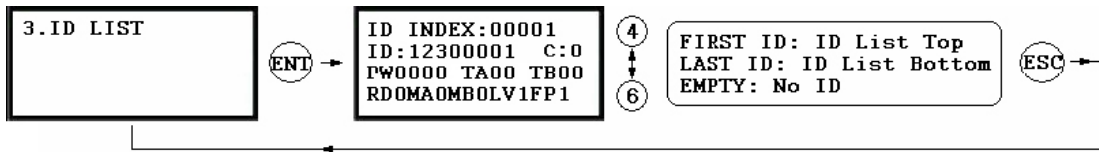



- ✓ The LCD will display the 5-digit ID Index, 8-digit ID number, 4-digit Password, Timeschedule for Reader#1(TA) and Reader#2(TB), ID code(C), accessible Readers(RD), operating mode for Reader#1(MA) and Reader#2(MB), and the output level(LV).
- ✓ The "EMPTY" message will appear if there is no registered user ID.
- ✓ The "FIRST ID" message will be appear if the ID on the LCD is on the top of the list.
- ✓ The "LAST ID" message will appear if the ID on the LCD is on the bottom of the list.

12.7.4 Master ID Registration

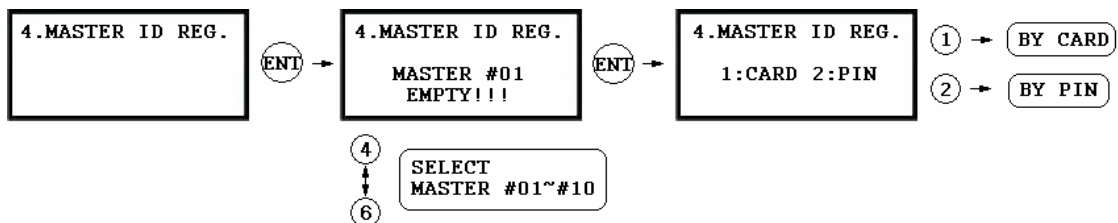

MASTER ID REGISTRATION BY CARD

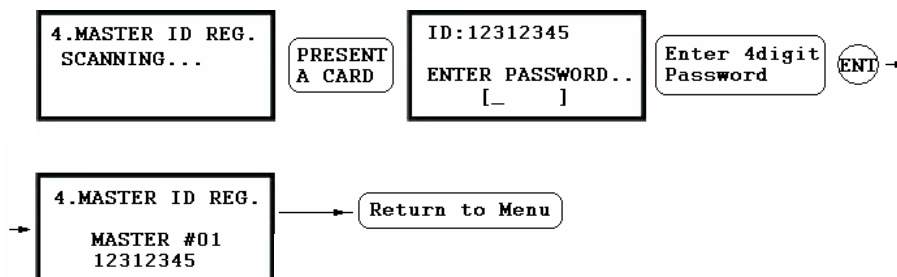

 MASTER ID REGISTRATION BY PIN

The default Master ID #01 is "00000000" without a password.
For the LX505SR, it is '0000000000'.
Up to 10 Master IDs (from "01" to "10") can be stored in the LX505.

12.7.5 ID Count

5.ID COUNT
00123

The number of registered user IDs is displayed. This count automatically increases or decreases as new IDs are registered or old IDs are deleted. The LCD in the left picture shows that the total of 123 user IDs are registered in the memory.

- ✓ 1,000 users in total can be registered (standard). You can optionally choose to register up to 2,000/4,000 user IDs


12.7.6 Event Count

6.EVENT COUNT
12345


The LCD displays the total number of events stored in the memory. The count automatically increases as a new event is recorded in the memory. The LCD in the left picture shows that a total of 12345 Events are stored in the memory.

- ✓ Up to 20,000 event buffers are available. When stored events are successfully uploaded to the host PC, they are automatically deleted from the device.

12.8 F8 SETUP MENU

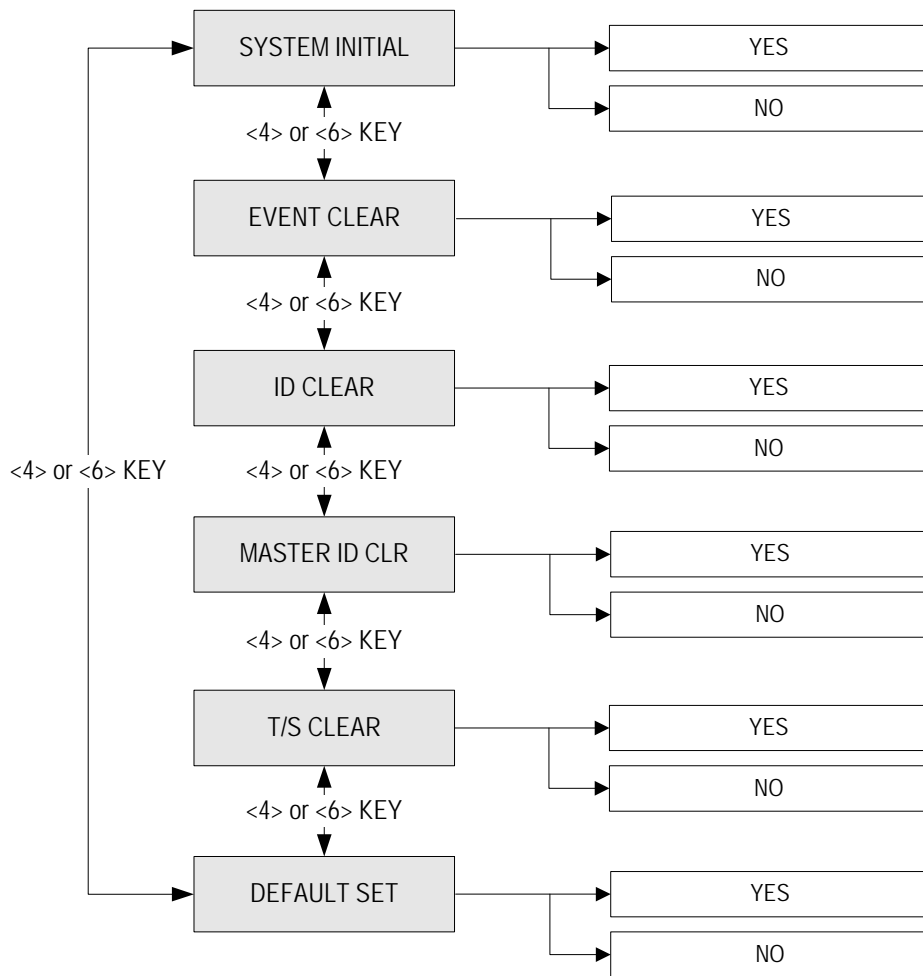

12.8.1 System Initialize

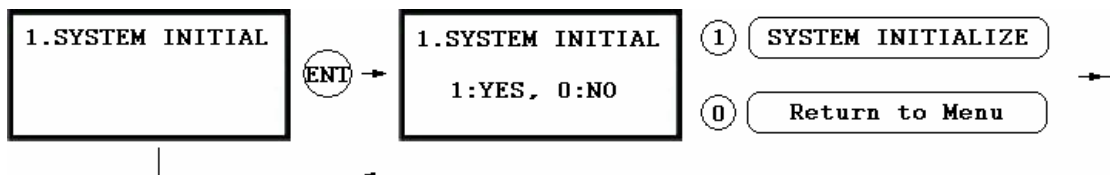


This operation is used to initialize the LX505 system. Press <ENT> key for initialization (when installing LX007 first or when resetting the system in the event of malfunction).

CAUTION: Initializing will erase all stored data in the memory.

- ✓ Press the <1> key to initialize or <0> key to cancel the operation.
- ✓ The "WAIT.." message appears while the system is being initialized. After the initialization is completed, the LX007 returns to the Setup menu.

12.8.2 Event Clear

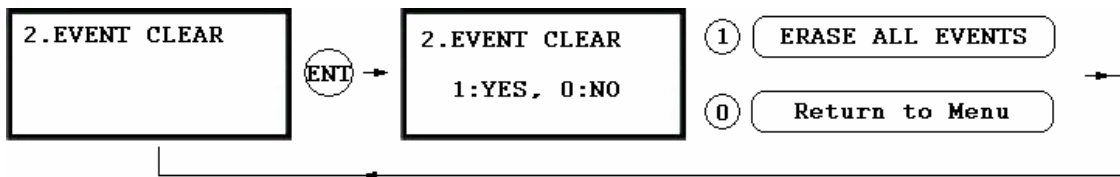


If the event memory is full or if you want to change the ID COUNT, you can clear the event memory here.

Press <ENT> key first, then press <1> key to clear event memory or <0> key to cancel the operation.

CAUTION: Before you clear the events, make sure if the stored events are really unnecessary and therefore you don't need to upload them to the host PC. Otherwise, you may lose important data.


12.8.3 ID Clear

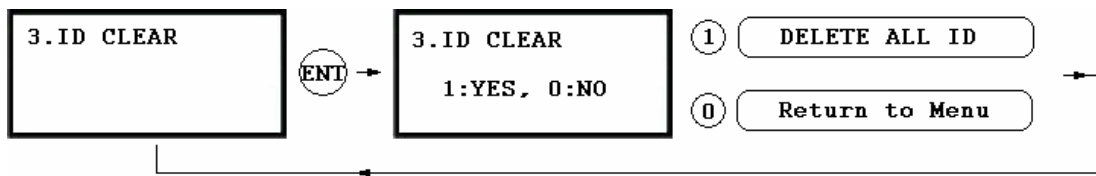

When you want to delete all the stored User IDs (Card IDs), you can do so in this menu. Press <ENT> key first, then press <1> key to clear all the registered User IDs or <0> key to cancel the operation.

CAUTION: Before clearing all the User IDs, make sure that the registered User ID is no longer used or necessary. Otherwise you may lose all the registered User IDs.


12.8.4 MASTER ID CLEAR

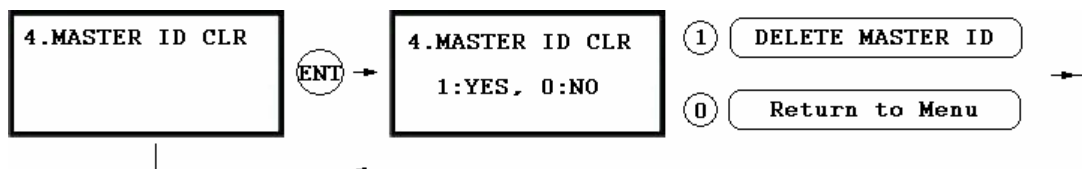

To delete all Master IDs, press <ENT> key first, then press the <1> key to clear all of the Master IDs or <0> key to cancel the operation.

CAUTION: Before clearing all Master IDs, make sure that registered Master IDs are no longer used. Otherwise, you may lose all registered Master IDs.


9.8.5 TIME SCHEDULE CLEAR

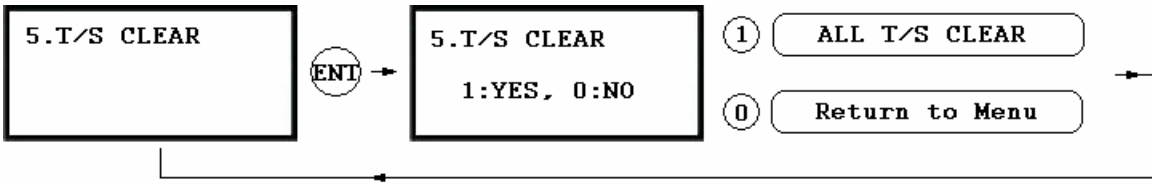

When you want to delete all the Time Schedules (01~10), Holiday schedules(01~10), Holiday code, Reader#1 Mode Time Schedule code and Reader#1 Mode Time Schedule code, you can clear them from the memory here. Press <ENT> key first and press the <1> key to clear all T/S or <0> key to cancel the operation.

CAUTION: Before you clear all Time Schedule data, make sure that the stored Time Schedule data are no longer used or necessary. Otherwise, you may lose all stored Time Schedule data in the memory including important ones.


9.8.6 DEFAULT SETTING

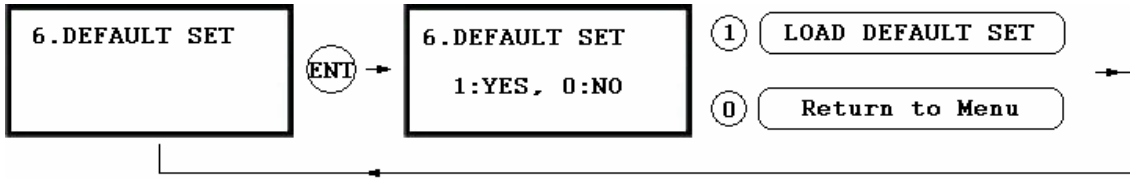

Here, you can restore the default settings of the LX505, if necessary. Press <ENT> key and press <1> key to restore the default setting values for all menus and or <0> key to cancel the operation.

CAUTION: Before restoring default values for all settings such as Reader Mode, Board ID etc, make sure that the stored setting values are not necessary. Otherwise, you may lose all system setting values in the memory and need to adjust the settings all over again.


12.9 F9 SETUP MENU

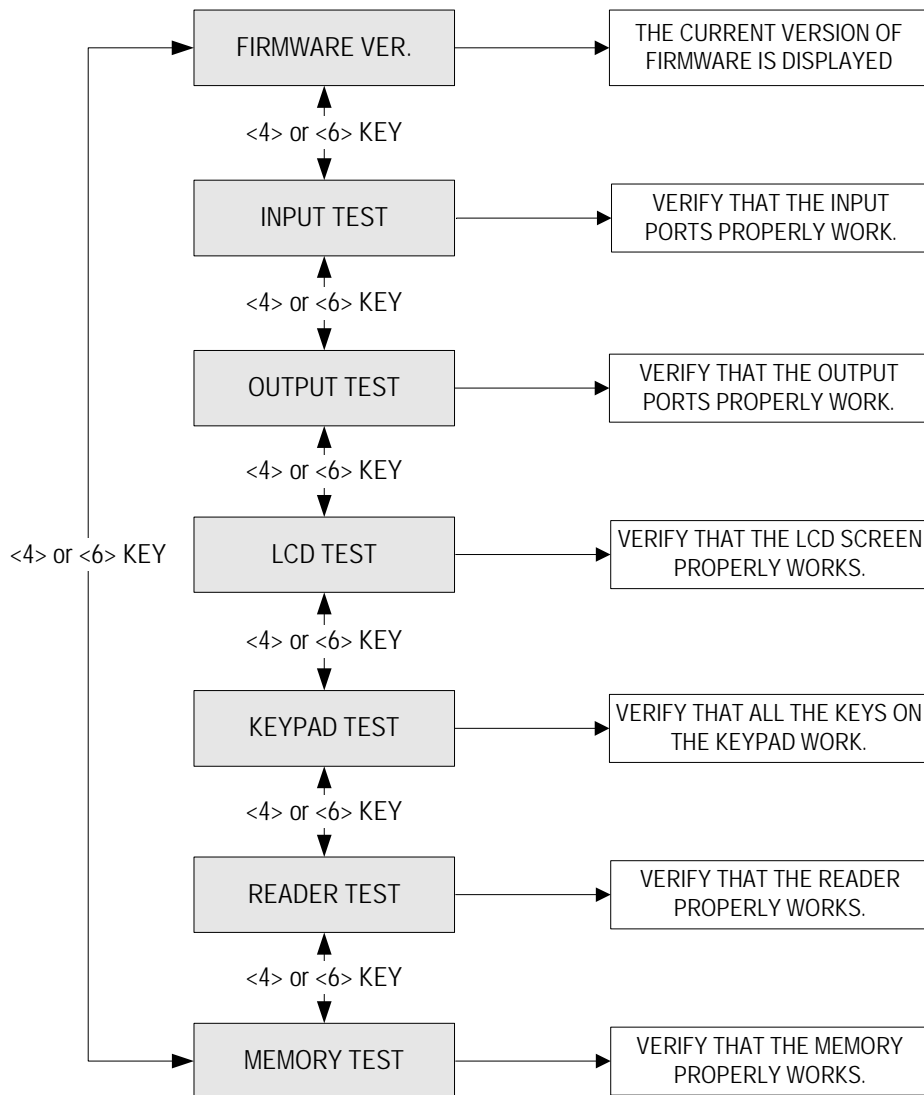

12.9.1 Version Check


<p>1. FIRMWARE VER. LX007 V1.0.0</p>	<p>The Firmware Version of the LX505 is displayed on the LCD. Press <4> or <6> key to take a look at other menus on [F9 SETUP MENU].</p>
---	---

12.9.2 Input Test

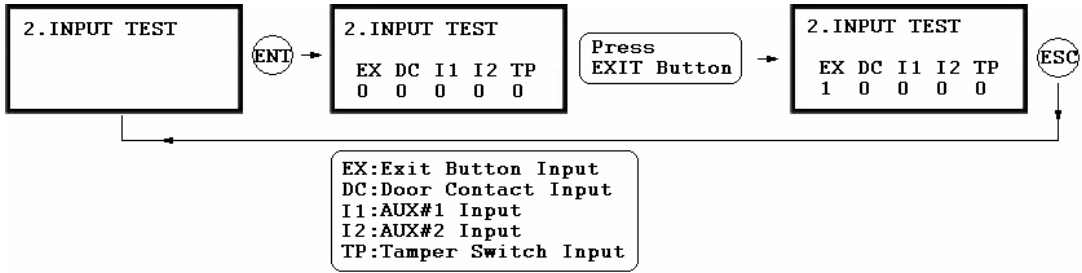


The 5-digit number shows the input status, where "0" indicates that the input port is open circuit, and "1" indicates that the input port is short circuit to the ground level, and, finally, "2" indicates that the input port is disconnected.

12.9.3 Output Test

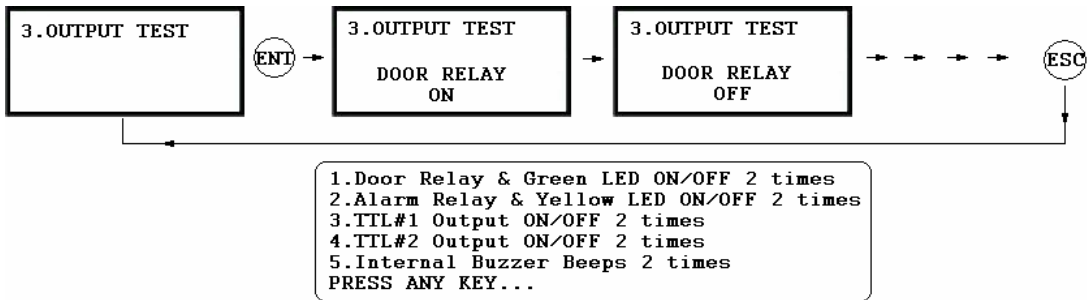


The first two tests verify the output relays (Door Relay and Alarm Relay) are working properly. You can hear the mechanical sound of relays and see the LED blink. The next two tests are to verify TTL#1 and TTL#2 outputs. Finally, the last test is for an Internal Buzzer test. You can hear two beeps during the test.

12.9.4 LCD Test

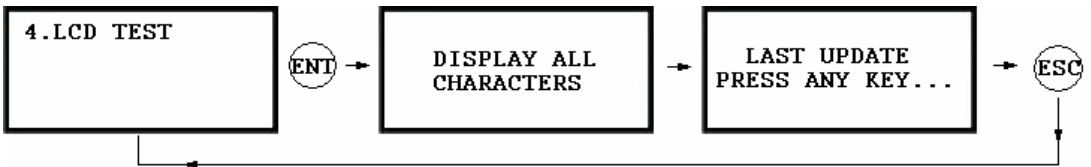


The LCD will display all possible characters on the screen. When the test is over, the LCD will show the "LAST UPDATE PRESS ANY KEY" message.

12.9.5 Keypad Test

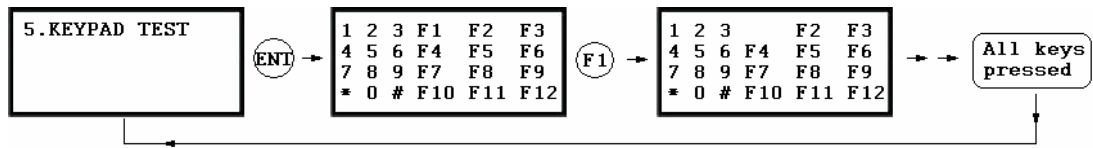


The LCD will display all the keys on the keypad. Press each key one by one and the depressed key will disappear from the screen. Note that ENT key is represented as “#” and ESC key as “*” on the LCD.

12.9.6 Reader Test

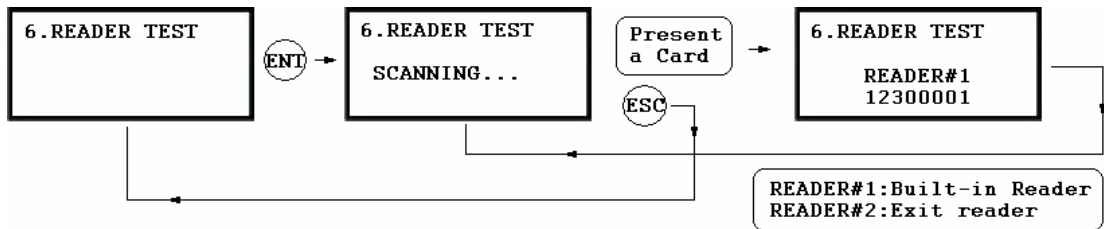

The LCD will display “Scanning...”, which means the LX505 is waiting for a card to be presented. Present a card to one of the readers. When the reader successfully reads the card, the LCD displays the Reader number and the 8-digit card number.

12.9.7 Memory Test

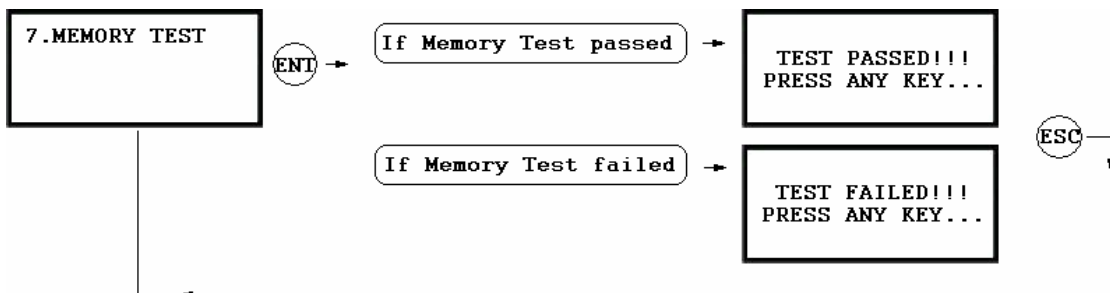

If the Data Memory has a problem, the LCD will show the “TEST FAILED” message. If this is the case, contact IDTECK or a nearby distributor for technical supports.

APPENDIX

A. THE RELATION BETWEEN INPUT AND OUTPUT (DEFAULT)

Default Output Settings for Input Sources

OUTPUT	Door Relay (DR)	Alarm Relay (AR)	TTL#1 (T1)	TTL#2 (T2)	Buzzer (BZ)
[1] EXIT BUTTON	03	00	00	00	00
[2] DOOR CONTACT	00	99	00	00	00
[3] AUX Input #1	00	00	00	00	00
[4] AUX Input #2	00	00	00	00	00
[5] TAMPER ALARM	00	99	99	99	99
[6] CUT OFF ALARM	00	00	00	00	00
[7] DURESS ALARM	00	00	00	00	00
[8] ARM/DISARM OUT	00	00	00	00	00
[9] DR TIME OUT	00	00	00	00	00
[10] OUTPUT TIME SCHEDULE	00	00	00	00	00
[11] INPUT TIME SCHEDULE	00	00	00	00	00
[12] CUT OFF CHECK	00	00	00	00	00
[13] INPUT TYPE	00	00	00	00	00

** Index No. [1] ~ [9]*

The values indicate the operating time (second) of each output for the input signal.

** Index No. [10]*

The values indicate the time schedule code (index) applied to each output operation.

** Index No. [11]*

The values indicate the time schedule code (index) applied to each input from #1(Exit button) to #5.

** Index No. [12]*

The values indicate whether or not to use the cut off check feature.
(0 – NOT USE, 1 – USE)

** Index No. [13]*

The values indicate whether the input type is NO(Normally Open) or NC(Normally Closed).
(0 – NO, 1 – NC)

Default Output Settings for Input Circumstance


INPUT \ OUTPUT	Door Relay (DR)	Alarm Relay (AR)	TTL#1 (T1)	TTL#2 (T2)	Buzzer (BZ)
[1] Reader#1 ID OK LV1	03	00	00	00	00
[2] Reader#1 ID OK LV2	05	00	00	00	00
[3] Reader#1 ID OK LV3	05	00	00	00	00
[4] Reader#1 ID OK LV4	05	00	00	00	00
[5] Reader#1 ID Error	00	03	00	00	00
[6] Reader#1 T/S Error	00	03	00	00	00
[7] Reader#1 APB Error	00	03	00	00	00
[8] Reader#2 ID OK LV1	03	00	00	00	00
[9] Reader#2 ID OK LV2	05	00	00	00	00
[10] Reader#2 ID OK LV3	05	00	00	00	00
[11] Reader#2 ID OK LV4	05	00	00	00	00
[12] Reader#2 ID Error	00	03	00	00	00
[13] Reader#2 T/S Error	00	03	00	00	00
[14] Reader#2 APB Error	00	03	00	00	00

* *Index No. [1] ~ [14]:* The values indicate the operations time (second) of each output for the input signal.


B. TROUBLE SHOOTING

 **A valid card became unregistered after batch-downloading IDs from PC.**


Cause	Wrong download procedure or a component defect.
Solution	<ol style="list-style-type: none"> 1. The card ID might be registered only to the controller and not in the PC. During the process of batch-downloading IDs from the PC, LX505 first erases the ID memory in it. That's why this deletion of certain IDs can happen if those IDs are not registered on the PC. 2. Check whether the card ID is registered in the PC. 3. If not, please register the number and try downloading again. 4. If the trouble remains after following the procedures above, contact a designated service center.

 **I entered the Master ID "00000000" but I still cannot enter the Setup Mode.**


Cause	The Master ID might have been changed or some components are defective.
Solution	<ol style="list-style-type: none"> 1. Try changing the Master ID through the application software. (The Master ID will be changed to the default value "00000000".) 2. When it is not feasible, initialize the unit as following: After the installation and connections are completed, supply power (+12V DC) to LX505 with the initialization button being held down. Then, the LCD will first display "Initialize OK? 0:No 1:Yes". Press <1> key if you want to initialize the system. After all the initialization process is completed, the system will be operating on the normal mode and the LCD will display "IDTECK, LX505 [F1], Date Time". 3. If the trouble remains after following the procedures above, contact a designated service center.


 **No problem with accessing by card, but cannot access via a manual PIN input.**


Cause	An error in the settings or possible component defect.
Solution	<ol style="list-style-type: none"> 1. Check whether a beep sounds when you press a key. If a beep sounds, the problem may be wrong settings. Proceed as followings: <ul style="list-style-type: none"> - Enter the Master ID (Default="00000000") to get into the Setup mode. - Press <F2> key. - [LANGUAGE] will appear on the LCD, then use the <6> key to choose [RD1_PIN_INPUT] and press [ENT] key to modify the value to 'USE' by using <4> or <6> key. 2. When there is no beep sound or the problem persists after the keypad has been enabled, contact a designated service center.

 **I suddenly go back from the Setup mode to the normal operations mode.**

Cause	Time-out error
Solution	LX505 is originally programmed to go back to the normal operations mode when no keys are pressed or no cards are read within 60 seconds.

 The buzzer keeps beeping; “beep~ beep ~ beep” or “beeeeeeeep~~~~”	
Cause	An error in the Installation, Door status or Internal circuits.
Solution	<ol style="list-style-type: none"> 1. Check the door status. It occurs when the door is opened over 3 sec (Default). 2. Check the door contact sensor type: it must be NO/NC type. 3. Check the 10 Time schedule code (01~10) values of output T/S, in [7. OUTPUT T/S] of F6 Setup Menu. This problem can occur If the time schedule code is set between 01 and 10 or if the present time is in the schedule. If the time schedule is set to a unintended value, change it to “00” (Programmable via PC software) 4. Check the Tamper switch of LX505. 5. If the trouble remains after checking the above, contact a designated service center.

 The “SCHEDULE ERROR” message shows when RFID card is read.	
Cause	An error in RFID card registration, time schedule setting or the system itself.
Solution	<ol style="list-style-type: none"> 1. If the LX505 used to be properly operating before, it is guessed that there has been an electric shock that damaged the internal memory and data. Please initialize the unit as instructed in the manual. 2. Check if the registered ID information has been configured incorrectly. <ul style="list-style-type: none"> * Register ID again and check the following points. <ul style="list-style-type: none"> - In order to restrict access of a user within a specific time zone as instructed in the manual, register time schedule in advance and apply the time schedule code(1~10) to the user during the registration process. - In order to allow the user to access at all times, put in “00”. 3. Use the software for time schedule settings if it LX505 is connected to PC as the software manual. 4. If the trouble remains after checking the above, contact a designated service center.

 The “ACCESS DOOR ERR” message shows when an RF ID card is read.	
Cause	Incorrect user setting or something wrong with internal circuits.
Solution	<ol style="list-style-type: none"> 1. If the LX505 used to operate properly before, it is guessed that there has been an electric shock that damaged the internal memory and data. Please initialize the unit as instructed in the manual. 2. Check if ID information has been put in incorrectly during its registration. <ul style="list-style-type: none"> * Register ID again and check the following points: <ul style="list-style-type: none"> - Since the controller has two reader ports, set the “RD” setting – the door to which the user will be allowed access – to an appropriate value. - If the value for RD is set to “1”, the door opens only when Reader 1 reads a card. If the card is presented to Reader 2, the “ACCESS DOOR ERROR” message appears. - If the value for RD is set to “2”, the door opens only when Reader 2 reads a card. If the card is presented to Reader 1, the “ACCESS DOOR ERROR” message appears. - If RD is set to “0 or 3”, both the reader 1 and 2 open each door. 3. If the trouble remains after checking the above, contact a designated service center.

The communication between the LX505 and the Host PC fails.

Cause

A defective cable may be used or errors in wiring, setting COMM ID of the controller, or damage on the communication port (either on the PC side or the controller side) may also cause the communication inability.

Solution

1. Please check the settings of the application software and the controller.
 - Check if the COMM ID of the controller is listed on the application software.
 - Set the different COMM ID when two or more controllers are installed.
 - Check if the communication speed (9600bps is default) is the same as the setting on the software.
 - Make sure that the PC's COM port is set correctly on the S/W.
 - The parameters in the software should be set as following:
 - Parity bit : NONE
 - Data bit : 8bit
 - Stop bit : 1bit
2. Check the line connection for communication.

RS232		RS485 (mono)		
LX505	PC	LX505	RS485/232 Converter	PC
RX	TX	RTX(-)	RTX(-)	The RS232 cable from the converter
TX	RX	RTX(+)	RTX(+)	
GND	GND			

RS485(Multi Drop)			
LX505	LX505	RS485/232 Converter	PC
RTX(-)	RTX(-)	RTX(-)	The RS232 cable from the converter
RTX(+)	RTX(+)	RTX(+)	

3. We recommend you to use line-end resistors of 120 Ohm between the RTX (+) and RTX (-) lines when you are using the RS485 communication,. Apply the same resistors to the converter RS485 lines. Consult a service center or an electric technician if you are not sure how to do it.
4. When a multi-drop communication doesn't work, test one-by-one communication first.
5. If the trouble remains after following the procedures above, contact a designated service center.

FCC REGISTRATION INFORMATION

FCC REQUIREMENTS PART 15

Caution: Any changes or modifications in construction of this device which are not expressly approved by the manufacturer for compliance could void the user's authority to operate the equipment.

NOTE: This device complies with **Part 15 of the FCC Rules**.

Operation is subject to the following two conditions;

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a **Class A Digital Device**, pursuant to **Part 15 of the FCC Rules**. These limits are designed to this equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the radio or television off and on, the user is encouraged to try to correct interference by one or more of the following measures.

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on another circuit.
4. Consult the dealer or an experienced radio/TV technician for help.

Warranty and Service

The following warranty and service information applies only to the United States of America and Republic of Korea. For the information in other countries, please contact your local distributor. To obtain in or out of warranty service, please prepay shipment and return the unit to the service facility listed below.

Headquarters: IDTECK Co., Ltd.

5F Ace Techno Tower B/D,
684-1 Deungchon-Dong, Gangseo-Gu,
SEOUL, KOREA 157-030

Tel: +82-2-2659-0055

Fax: +82-2-2659-0086

E-mail: webmaster@idteck.com

Website: www.idteck.com

U.S Branch: RF Logics Inc.

370 Amapola Ave, #106

Torrance, CA 90501

Tel: 310-782-8383

Fax: 310-782-8298

E-mail: rflogics@rflogics.com

Website: www.rflogics.com

Hong Kong Branch: IDTECK Hong Kong

12/F, B2B Centre, No.36 Connaught Road West, Hong Kong

Tel: 852-2581-9580

Fax: 852-2234-5150

E-mail: alchu@qala.com.hk

Website: www.ristarhk.com

Please use the original container, or pack the unit(s) in a sturdy carton with sufficient packing to prevent damage and include the following information:

1. A proof-of-purchase indicating model number and date of purchase.
2. Bill-to Address.
3. Ship-to Address.
4. Number and description of units shipped.
5. Name and telephone number of person to be contacted.
6. Reason for return and description of the problem (Should be as detailed as possible!)

NOTE: Damage occurring during shipment is the responsibility of the carrier, and claims should be made directly to the carrier.



The specifications contained in this manual are subject to change without notice at any time.

**5F, Ace Techno Tower B/D, 684-1, Deungchon-Dong,
Gangseo-Gu, Seoul, 157-030, Korea**

Tel : +82-2-2659-0055

Fax : +82-2-2659-0086

E-mail : webmaster@idteck.com