



find one, find all keyfinder

Your Find One, Find All Keyfinder comes in a set of two and helps you find up to six items within a range of up to 30 feet. Just attach the keyfinder to objects that are easily lost, such as keys, TV remote controls, or cell phones. Buttons on each key correspond to everyday household items.



installing your battery

Your keyfinder comes with two CR 2032 battery (uninstalled).

1. Pull out the battery tray.
2. Place the new battery on the tray, with the positive (+) side up.
3. Push the battery tray back in.



Your keyfinder beeps and goes directly into setup mode. The LED flashes for about 50 seconds until you press a button. Follow the steps in Programming the Keyfinder to program your settings.

Battery Notes:

- Use only fresh batteries of the required size and recommended type.
- If you do not use the keyfinder for a month or more, remove the battery.
- Dispose of the old battery promptly and properly. Do not burn or bury it.
- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.

attaching your keyfinder

Each keyfinder comes in a set. Use the supplied plastic cord or the supplied double-sided tape to attach one keyfinder to an object you don't want to misplace. Keep the other keyfinder to use when searching for lost objects.

Loop the plastic cord through the opening at the top of your cell phone and then slide the plastic cord onto the keyring of the keyfinder.

Please read this user's guide before installing, setting up and using your new product.
www.radioshack.com

finding lost objects

To find a lost object, press the button on the keyfinder that corresponds to the lost object. The LED flashes as the search signal is transmitted.

If the object is within range, the keyfinder beeps and the LED flashes. Move around the area and follow the sound until you find the lost object. The keyfinder attached to the object you are searching for emits a cluster of beeps, while the LED flashes continuously.

NOTE

You can use any keyfinder within the same set to search for lost objects. This includes keyfinders that are already attached to an item, such as your car keys or cell phone. If you lose your keyfinders, you can borrow someone else's keyfinder. Program the keyfinder to your set to locate your lost keyfinders.

caring for your keyfinders

- Keep your keyfinders dry; if they get wet, wipe them dry immediately.
- Use and store your keyfinders only in room temperature environments.
- Handle your keyfinders carefully. Do not drop them.
- Keep your keyfinders away from dust and dirt.
- Wipe the keyfinder with a damp cloth occasionally to keep it looking new.

programming your keyfinder

You can compose six sets of keyfinder systems. In each system, you can program up to six items. Each item must have a separate keyfinder attached to it.

1. Press a button on the keyfinder to program the set number. The keyfinder beeps and the LED flashes quickly.
2. Press a button to program the item number. The LED flashes and the keyfinder beeps to confirm your settings. For example, if you programmed your keyfinder as Set 1 and Item 2, the keyfinder will beep once, pause, and then beep twice.

Notes

- When the keyfinder stops working properly or the LED indicator dims, replace the battery. Your settings will be lost, so you must program the keyfinder again.
- If you do not program the keyfinders and press any key on the unit, all unprogrammed units may respond. If keyfinder units are placed too close together and you press a key on the keyfinder unit, you may receive a false beep from the other keyfinder.
- Do not attach the keyfinder closely to objects that contain large metal.
- Do not set both remotes with the same number for an object. They will not work properly. For example: If you set 1 on your wallet remote, you must select a different number on your keyfob.



changing your keyfinder

1. Press and hold 1 and 3 on your keyfinder for about three seconds to enter the setup mode. The keyfinder gives a warble beep and the LED flashes continuously.
2. Repeat Steps 1 and 2 under "programming your keyfinder."

checking your setup

You can check the set numbers and item numbers on each keyfinder at any time. Press and hold 5 and 6 at the same time. The LED flashes and a set of continuous beeps sound with a pause between each one. The first beep is the set number and identifies which keyfinder set you have. The last beep indicates the item number programmed for that keyfinder. **For example:** If the keyfinder gives two beeps with an interval, and then one beep, the keyfinder belongs to Set 2 and Item 1.

hints and tips

- For the best results, hold the keyfinder unit with the LED pointing away from you.
- Walk around your house while you repeatedly press the number associated with the item you are searching for in order to get a clear search signal.
- Keep the keyfinder away from large metal objects and other radio sources that might reduce its range.
- To avoid confusion, use only one keyfinder to search for the object you desire.
- Reduce or eliminate noises so you can identify the beeping sound from the object you are looking for.

FCC information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult your local RadioShack store or an experienced radio/TV technician for help. If you cannot eliminate the interference, the FCC requires that you stop using your phone. Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

limited one-year warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. For complete warranty details and exclusions, check with your local RadioShack store.

RadioShack Customer Relations
300 RadioShack Circle, Fort Worth, TX 76102
04/04