

# iFLYTEK Speech Transcriber S01


## Quick Start Guide




For more information  
scan the QR code and follow us on WeChat

### QuickStart


- 1 Open the cover and pull out the power plug, connect the power cord as shown by the arrow.

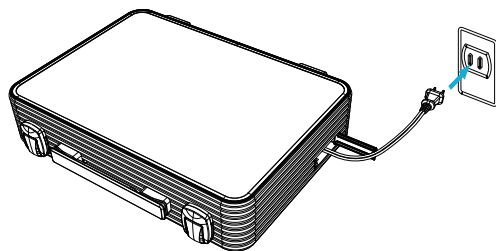

- 2 Press the power button to start.

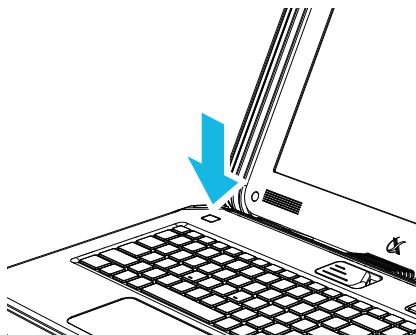


### Quick Look

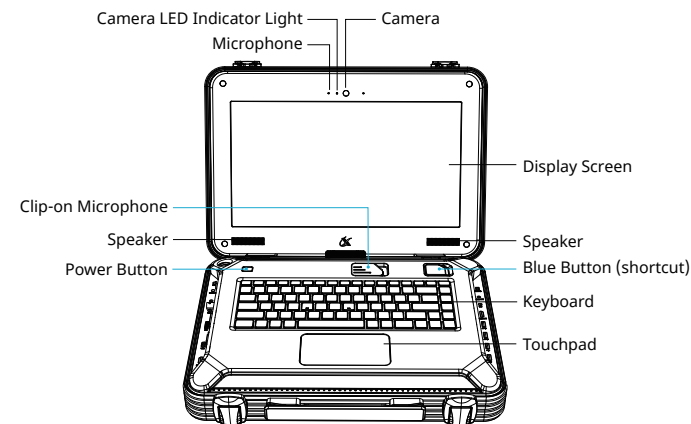


### Clip-on Microphone

Wear the Clip-on Microphone as instructed.

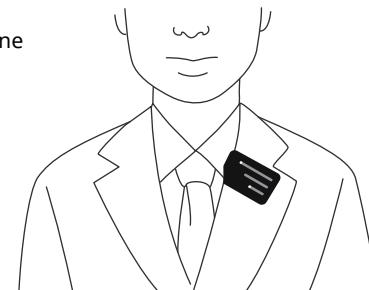


### Interfaces

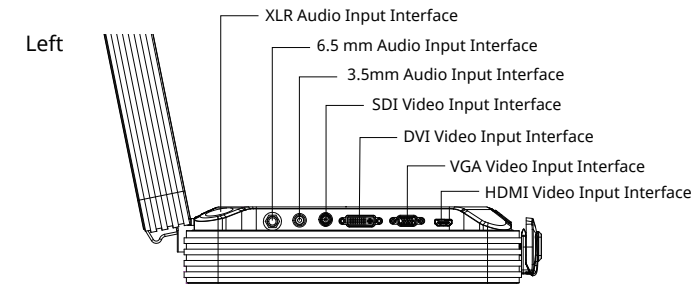

**Note:** HDMI cable featuring magnetic ring and shield is suggested when connecting HDMI interface.

Right

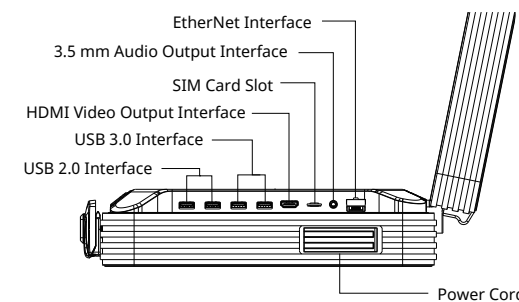

**Note:** SIM Card Slot is compatible with China Mobile and China Unicom. HDMI cable featuring magnetic ring and shield is suggested when connecting HDMI interface.

Name and Content of Hazardous Substance

Item	Hazardous Substance					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
PCBA	○	○	○	○	○	○
Plastic Parts	○	○	○	○	○	○
Metal Outer Box	○	○	○	○	○	○
LCD Module	○	○	○	○	○	○
Speaker	○	○	○	○	○	○
Cable and Connector	○	○	○	○	○	○
Antenna	○	○	○	○	○	○
Battery	○	○	○	○	○	○
Keyboard	○	○	○	○	○	○
Clip-on Microphone	○	○	○	○	○	○
Adapter	○	○	○	○	○	○
Winder	○	○	○	○	○	○
<p><b>Note:</b> This form is made according to SJ/T11364 stipulations.</p> <p>○ indicates that the content of hazardous substance in materials used for the parts is below GB/T26572 stipulated threshold.</p> <p>✖ indicates that the content of hazardous substance in at least one material used for the parts is above GB/T26572 stipulated threshold.</p> <p>However presently there is no industrial alternative to meet the EU RoHS restrictions.</p>						

Statement

This QuickStart Guide has been reviewed and authenticated. All descriptions and instructions are accurate as of the print date. Device and specifications after this date may change which will not be updated in this version of the guide. Any damages directly or indirectly caused by the inconformity or omission of this guide should not be borne by iFLYTEK.

Disposal of Device and Battery

Device should be disposed in compliance with applicable laws. For further information, please contact local authority. Rechargeable battery is used and will need to be replaced after reaching service expectancy. It may be illegal by certain laws and regulations to leave used batteries in trash bin. For details about how to properly dispose or recycle batteries, please contact your local administrative department.

Wireless Device

Same as other wireless devices, your transcriber sends electromagnetic wave, although at a much lower degree than those mobile phones and other devices. Under certain circumstances, the uses of wireless products may be restricted by building owners or government agencies, for instance, using wireless devices during flight may disturb the regular operation of other devices or services. Please be sure to request permission before using your wireless product if you are not certain about the rules of using them in particular situations (such as airport).

Caution

DO NOT disassemble or modify batteries because they may cause explosion or liquid leakage. Disassembled or modified batteries are instantly disqualified for the Warranty. Batteries may explore if not handled properly in replacement. Batteries contain hazardous substance. To avoid possible injuries please:  
**Keep batteries away from fire**  
**DO NOT attempt to disassemble batteries**

FCC Note

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-- Reorient or relocate the receiving antenna.  
-- Increase the separation between the equipment and receiver.  
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-- Consult the dealer or an experienced radio/TV technician for help.

**Note:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. such modifications could void the user’s authority to operate this equipment

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

Copyright

Copyright ©iFLYTEK Co., Ltd. 2018. All RIGHTS RESERVED.