

BT-870-TP-SLIM Operation Guide



Note:TheBT-870-TP-SLIM ships from iKey with the internal battery fully charged and ready to use out of the box.

Pairing Instructions

iKey's BT-870-TP-SLIM unit is compatible with any Windows or Android Operating System device that has built in Bluetooth® functionality.

- -POWER ON: Press and hold the Power Button for 3 seconds. Caps/Scroll/Num Lock Indicators will flash twice and the Power indicator will illuminate.
- -POWER OFF: Press and hold the Power Button for 3 second. All LED indicators will turn off
- 1. Power the keyboard ON.
- 2. Press and hold the Bluetooth Button until the BT Link indicator begins to rapidly flash. The BT-870-TP-SLIM is now is search mode.
- 3. Follow the Bluetooth pairing instructions provided by your host computer.
- The BT Link will become solid once a connection is made and will turn off after 30 seconds.

NOTE: A slow flashing BT Link indicates the keyboard is attempting to re-pair to the last connected Bluetooth host computer.

Sleep Mode

- The BT-870-TP-SLIM will go into sleep mode after 30 minutes of inactivity. To wake simply press any key.
- To wake the unit from sleep mode press any key. BT-870-TP-SLIM will automatically re-pair to the last connected Bluetooth host computer.

Charging Instructions

- To charge the keyboard, insert the provided Micro USB charging cable into the back of the keyboard and plug the other end of the cable into a powered USB port on any computer.
 The Charging LED indicator will illuminate orange when charging and will turn off when fully charged. In a fully discharged state, the battery takes 5-6 hours to completely recharge.
- With average usage of the keyboard, the anticipated battery life is three to four weeks.



BT-870-TP-SLIM Additional Features





Additional Features

- Switching to wired USB: In the event the Bluetooth connection is disrupted by interference, the BT-870-TP-SLIM can switch to being a wired USB keyboard by connecting the keyboard to the computer via the supplied MicroUSB cable. When connected via USB the keyboard will begin to charge and communicate over USB.
- Switching from USB to Bluetooth: Once the MicroUSB cable is removed, the keyboard will attempt to re-pair to the last connected Bluetooth host computer.

NOTE: Plugging the keyboard in via USB will not establish a Bluetooth connection. The Bluetooth menu on the host computer must be used to establish a Bluetooth connection.

- 10-Key: A 10-key number pad is imposed on the right hand side of the keyboard, indicated by the yellow secondary legend. To enable or disable these secondary keys press "Num Lock".
- Clean Mode: In order to facilitate easy cleaning, a Clean Mode can be enabled allowing the user to clean the keyboard without powering down or disconnecting it. To enter and exit Clean Mode press <FN>+<C>, the Scroll Lock indicator will begin to flash to indicate mode is active.



BT-870-TP-SLIM FCC Information

Notice

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE: To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

FCC Information

FCC INFORMATION The Federal Communication Commission Radio Frequency Interference Statement includes the following paragraph:

The equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1. Reorient or relocate the recieving antenna.
- 2. Increase the seperation between the equipment and reciever.
- 3. Connect the equipment into an outlet on a circuit different from that to which the reciever is connected.
- 4. Consult the dealer or an experienced radio/TV technician for help.
- ***The User should not modify or change this equipment without written approval from iKey, Ltd. Modification could void authority to use this equipment.***

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 0.5 centimeters between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. The antennas used for this transmitter must be installed to provide a separation distance of at least 0.5 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.