

A large red circular graphic, resembling a stylized clock face, is centered on the page. It consists of a thick red line forming a circle, with the top and bottom arcs being slightly thicker than the sides. The text is positioned within and below this graphic.

IF-W522T

# User Guide

**TIMEX®**

# Table of Contents

<b>Product Introduction</b>	<b>4</b>
<b>What's Included</b>	<b>5</b>
<b>TIMEX Watch Phone Overview</b>	<b>6</b>
<b>Wearing TIMEX watch phone</b>	<b>8</b>
<b>Charging TIMEX watch phone</b>	<b>9</b>
<b>Power On/Off</b>	<b>10</b>
<b>Pairing Your TIMEX Watch Phone</b>	<b>11</b>
<b>Launcher</b>	<b>12</b>
<b>WatchFace</b>	<b>13</b>
<b>WatchFace Setting</b>	<b>13</b>
<b>Notification List</b>	<b>13</b>
<b>Indicator</b>	<b>14</b>
<b>Missed Call &amp; Message Alert</b>	<b>14</b>
<b>Apps</b>	<b>15</b>
<b>Call</b>	<b>16</b>
<b>Message</b>	<b>20</b>
<b>Send My Location</b>	<b>23</b>
<b>Schedule</b>	<b>23</b>

<b>Pedometer</b>	<b>23</b>
<b>Game</b>	<b>24</b>
<b>Information</b>	<b>24</b>
<b>NightLight</b>	<b>24</b>
<b>Setting</b>	<b>25</b>
<b>S/W Upgrade</b>	<b>26</b>
<b>Bluetooth</b>	<b>27</b>
<b>Battery &amp; Temp Sensor</b>	<b>28</b>
<b>Specifications</b>	<b>29</b>
<b>Special Act on Safety of Product for Children</b>	<b>30</b>
<b>Battery Information</b>	<b>30</b>
<b>Customer Service Center</b>	<b>31</b>
<b>Registering the Product</b>	<b>31</b>
<b>A/S</b>	<b>32</b>
<b>Charging Cradle</b>	<b>33</b>
<b>Regulatory Statements</b>	<b>35</b>
<b>Safety Precautions</b>	<b>37</b>
<b>Warranty</b>	<b>41</b>

 
# Product Introduction

- ✓ The TIMEX watch phone is specially designed for a child to wear on his or her wrist and use conveniently.
- ✓ Your child can make/answer phone calls to/from parents or others by pressing any of the registered contacts or phone numbers. Also, a child can send/receive messages to/from registered contacts or phone numbers. Registered guardian can check your child's current location through "Send My Location" function. The TIMEX watch phone has the easy-to-use functions and menus your child needs.
- ✓ The SOS emergency call function allows you to handle emergency situations.
- ✓ All the settings for the TIMEX watch phone are controlled via the "TIMEX WATCH" app installed in the smartphone(s) of the parent(s) or guardian(s). You can check your child's location in real time through the "TIMEX WATCH" app.


## ※ Caution

- If the TIMEX watch phone is located in a building or a place where the transmission/reception frequency is unstable, the child's location may not be indicated precisely. (Note: A location error from 15m to 2Km or higher may occur, depending on the external environment.)
- In case of emergency, press and hold the SOS button for more than three seconds until the product beeps. The product will send an emergency call messages and can make phone calls to as many as six guardians, whom you designate. However, this function is just a way of calling a guardian. Therefore, it doesn't support rescue work.

# What's Included

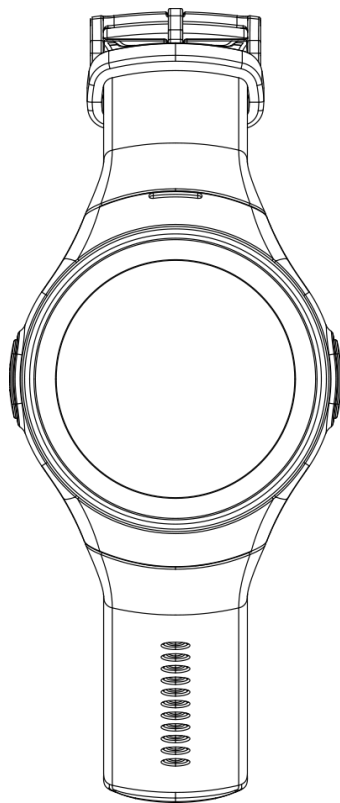


Main Body

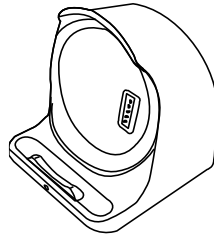


Charging  
Cradle



 
USB  
Cable

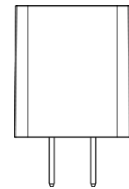


Adapter

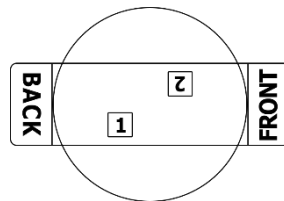 

Protective  
film

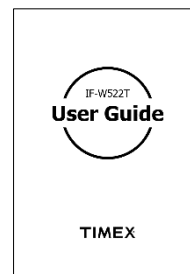 

Quick Guide

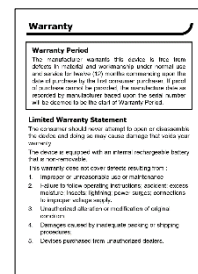 


Warranty

## ※ Caution


- If you use accessories that came with the product, you can enjoy the product's best capabilities. If you use unapproved accessories, the product's life span may be reduced. Be aware that the manufacturer isn't responsible for the product if it is damaged due to unapproved accessories.
- The cradle should be used with the provided micro USB cable.
- Specifications and other details of the product may be subject to change without prior notice for product improvement.
- Place a protective film on the front window of the phone. The protective film can protect you from shards of glass in the event of window breakage.

# TIMEX Watch Phone Overview


## Front

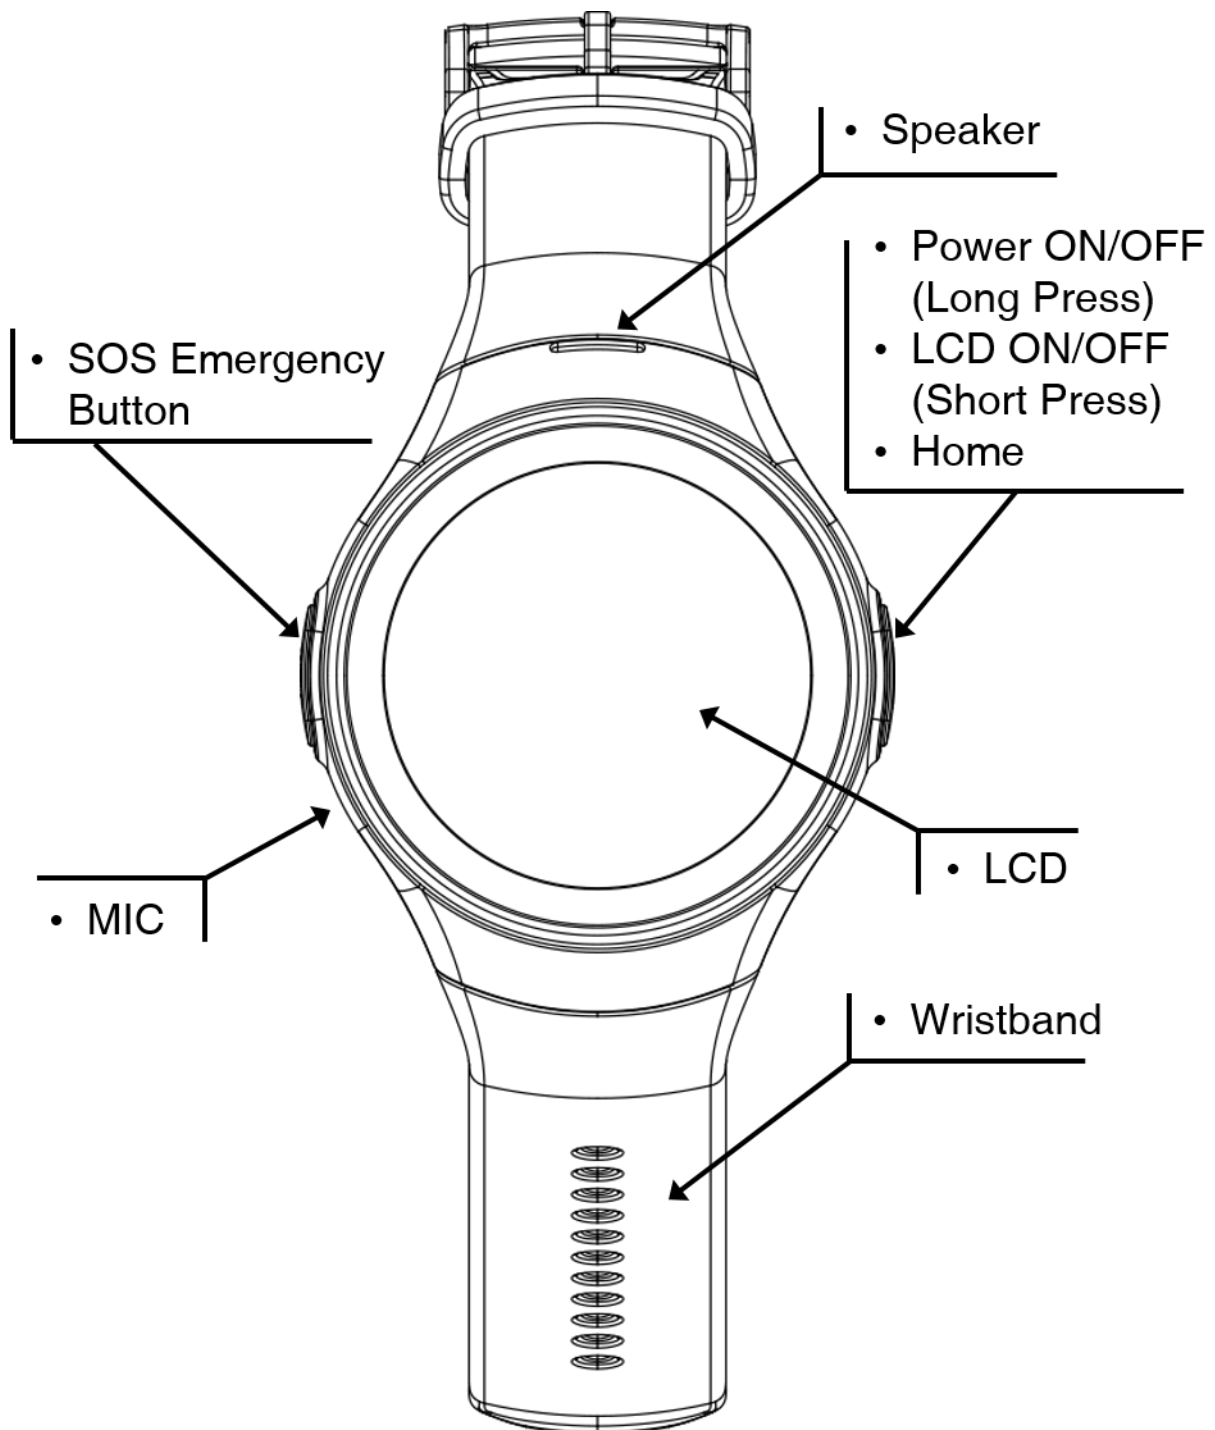

**Back**

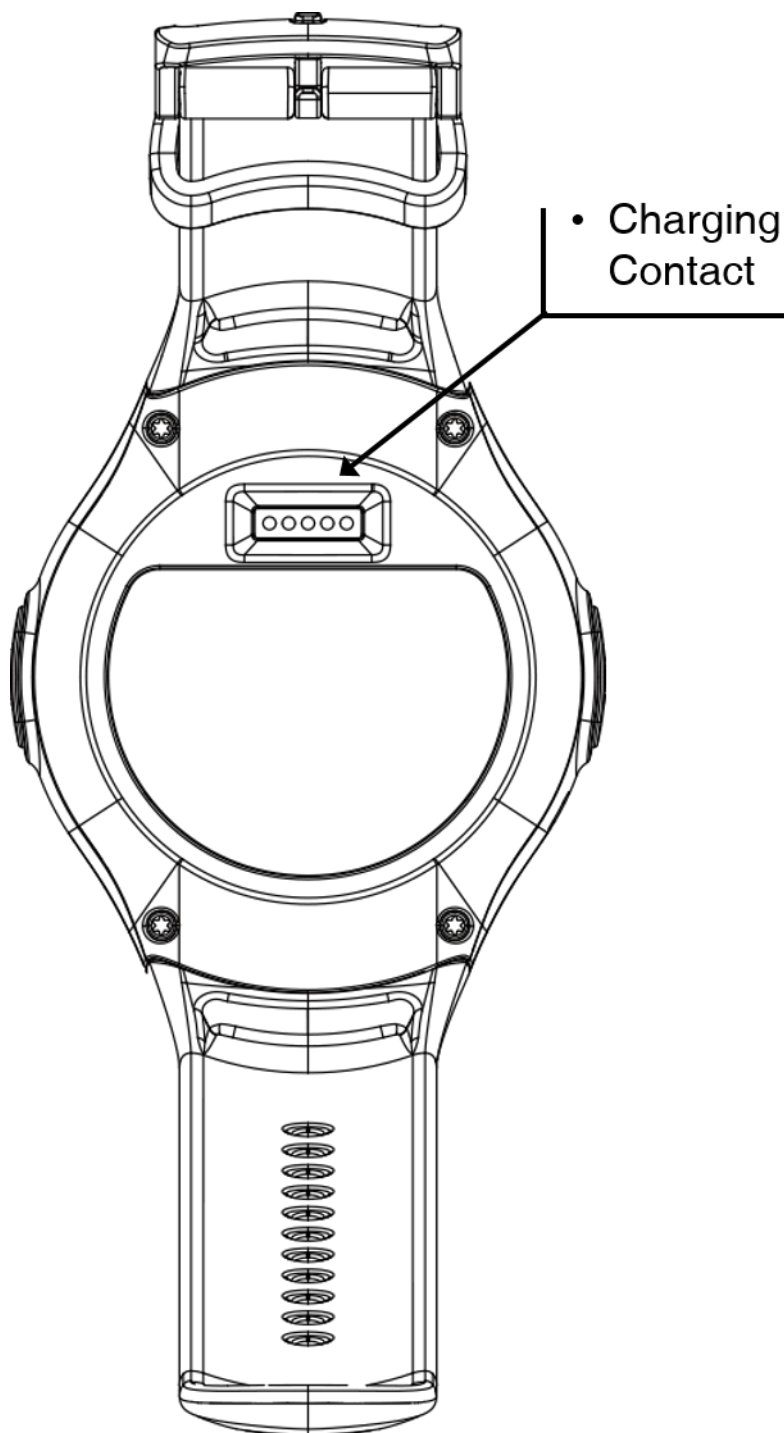

## Wearing TIMEX watch phone

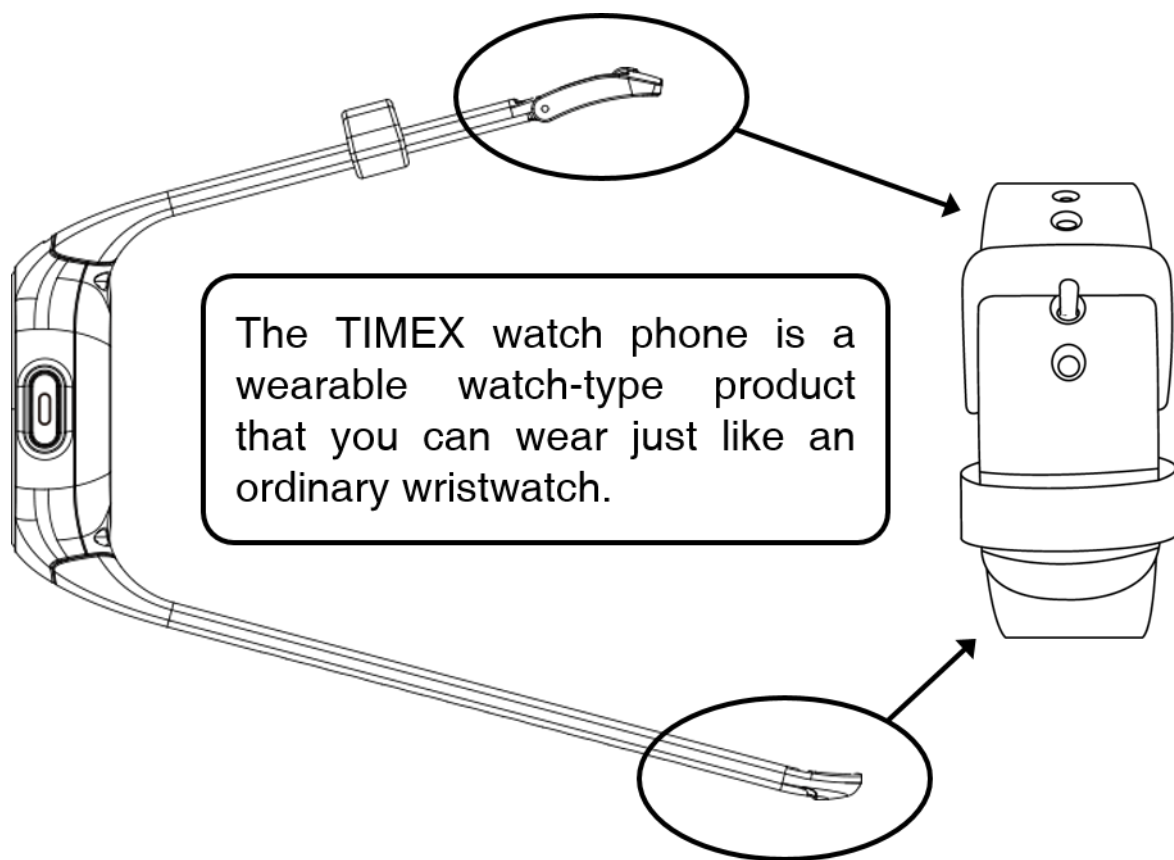 

### ※ Caution

- Because the watch strap of the TIMEX watch phone is made of rubber, it may be over-stretched or even break. Never pull the watch strap with excessive force or apply a sharp object such as a knife, a gimlet, etc. The strap may be loosened or broken. If the watch strap is broken or otherwise disassembled, the mobile phone may be lost.
- If fastening the watch strap with excessive force, kid's hand or wrist may be strained. Therefore, be careful when adjusting the watch strap.
- Keep in mind that the watch phone may be unlocked, removed from the wrist, and lost if user wears it loosely or incorrectly.



# Charging TIMEX watch phone

The TIMEX watch phone is a battery-integrated unit. To charge the battery, mount the IF-A522T exclusive charger on the mobile phone and connect the USB charging cable.

The TIMEX watch phone is designed to power-on automatically if its battery has at least a 10% charge.

## 1. LED Indicator of Exclusive Battery Charging Cradle

Charging	Fully Charged	Error
Red	Green	Orange (Flashing)

## 2. Charging Time

Required Time	2 hours 30min or less
---------------	-----------------------


### ※ Caution

- When LED indicator flashes in orange color, the battery isn't charged. In this case, make sure to connect the watch to the cradle properly.
- Be careful, because the temperature of the mobile phone and cradle may be increased while the battery is charging.
- The required charging time may differ, depending on the status of the mobile phone.
- If the temperature of the mobile phone is too high, it isn't powered on automatically. Additionally, if the ambient temperature is too high, mobile phone may be powered off automatically for self-protection.

# Power On/Off


## 1. LED Indicator

- Press and hold the button on the right for more than two seconds to turn on the TIMEX watch phone.

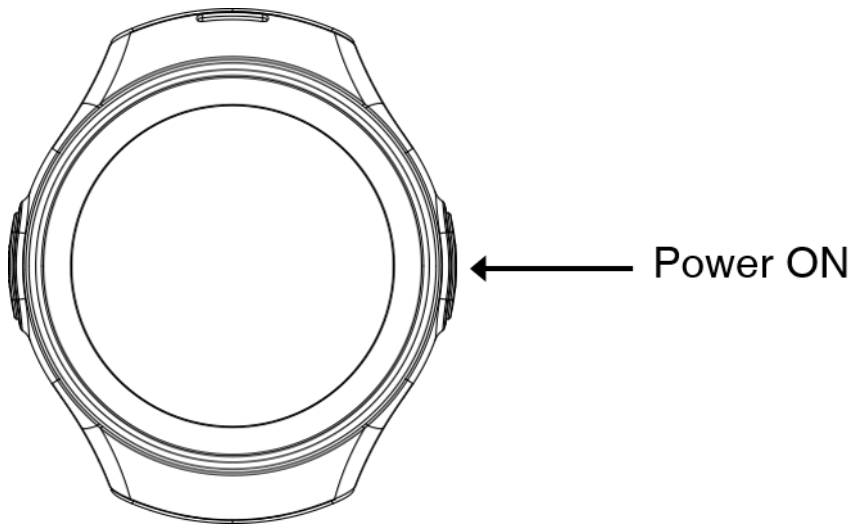

## 2. Powering Off

- To prevent your child from accidentally turning off, the TIMEX watch phone is designed to be turned off by pressing and holding the button on the right longer than usual.

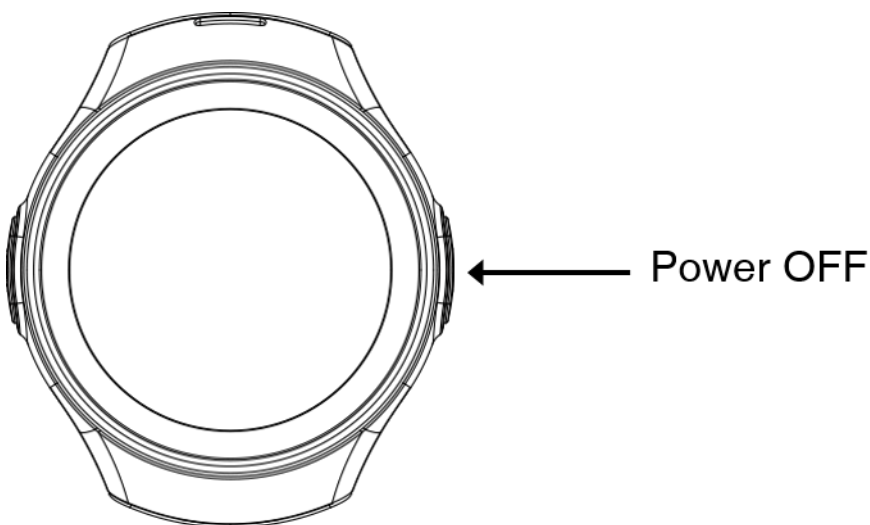







# Pairing Your TIMEX Watch Phone

- Make sure you're in an area with a strong wireless signal.
- Your TIMEX Watch Phone should start activating automatically the first time you turn it on.
- Follow the instructions in the app and on your watch to pair your TIMEX Watch Phone by scanning the QR code with guardian's phone camera or by entering the mobile number into the app.
- If you finish registering guardian(s) in "Smartcom" smart-phone app, the TIMEX watch phone automatically registers the phone number(s) of guardian(s) in its contact list.



# Launcher

- Your TIMEX Watch Phone has a touch screen. Just swipe the screen to switch pages.

Touch		Swipe Direction			
Short	Long	Right	Left	Down	Up
					



## WatchFace



- When the LCD screen isn't displayed, press any button on the TIMEX watch phone to display the screen.
- The LCD screen is turned and the default watch screen is displayed.

## WatchFace Setting



- Touch and hold the Watch screen to change the current screen.
- Slide left or right to display your desired watchFace and touch it to select.

## WatchFace Setting



- Slide the watch screen right to go to Notification List page.
- Notification List displays missed calls, unread messages, etc.
- Touch each notice on Notification List to go to corresponding menu window (call, message, etc.).

## Indicator

- You can check current status or go to settings by sliding down the watch screen.
- You can set Airplane mode, Sound / Vibration / No Sound, Volume and Brightness via the Indicator screen.
- Touch each icon to change the corresponding settings.



- 1** LTE Signal / Charge State
- 2** Airplane Mode
- 3** Sound / Vibration / No sound
- 4** Brightness Change
- 5** Volume / Brightness Control

## Missed Call & Message Alert



**Missed Call Alert**



**Message Alert**

# Apps

- Touch the Watch screen to go to Apps.
- Apps consists of the "Call," "Message," "Send My Location," and other icons. Touch your desired menu icon to go to its default screen.



- 1** Go to WatchFace
- 2** Call
- 3** Pedometer
- 4** Send My Location
- 5** Game
- 6** Schedule
- 7** Message



- 1** Go to WatchFace
- 2** Settings
- 3** Information
- 4** NightLight




# Call

## Call Menu Screen



  
Incoming Calls

  
Outgoing Calls

  
missed Calls

- If you turn off the Dialer Activated in the parent app, the Dial Pad does not appear.
- If you set the profile to kids or elderly in the parent app, the Dial pad does not appear.
- Icons on the left of the Call History List vary according to call type.

 


## Making a Call

1. Touch the "Telephone" icon to display registered contacts, and then touch a contact or input a phone number through the keypad to make a call.



2. Slide left from right side in the keypad to enter the Contact List menu. And touch a contact and then touch "Call" icon to make a call.
3. Slide right from left side in the keypad to enter the Call history menu. And touch a contact and then touch "Call" icon to make a call.

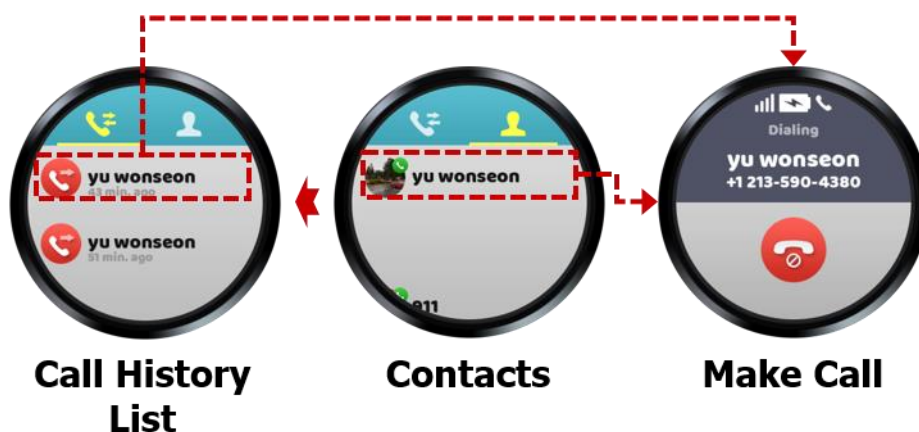

## Call Screen



### ※ Caution

- This product supports speakerphone mode by default. If putting the phone close to ear without switching into whispering mode, keep in mind that excessively loud sounds may cause hearing loss.

## Long Press SOS Button

- Press and hold the left SOS button for three seconds or longer to make a call to one of registered guardians automatically.
- The phone number of registered guardian is connected according to the settings of the TIMEX watch phone.
- The SOS emergency call message is sent to the phone numbers of up to six registered guardians.
- You can set the phone numbers for an emergency call on the "Smartcom" smartphone app.

 


## Call E911



- After completing a 911 call to the PSAP(Public Safety Answering or Access Point), for 7 minutes, the watch will be able to receive calls from PSAP or any caller.

# Message

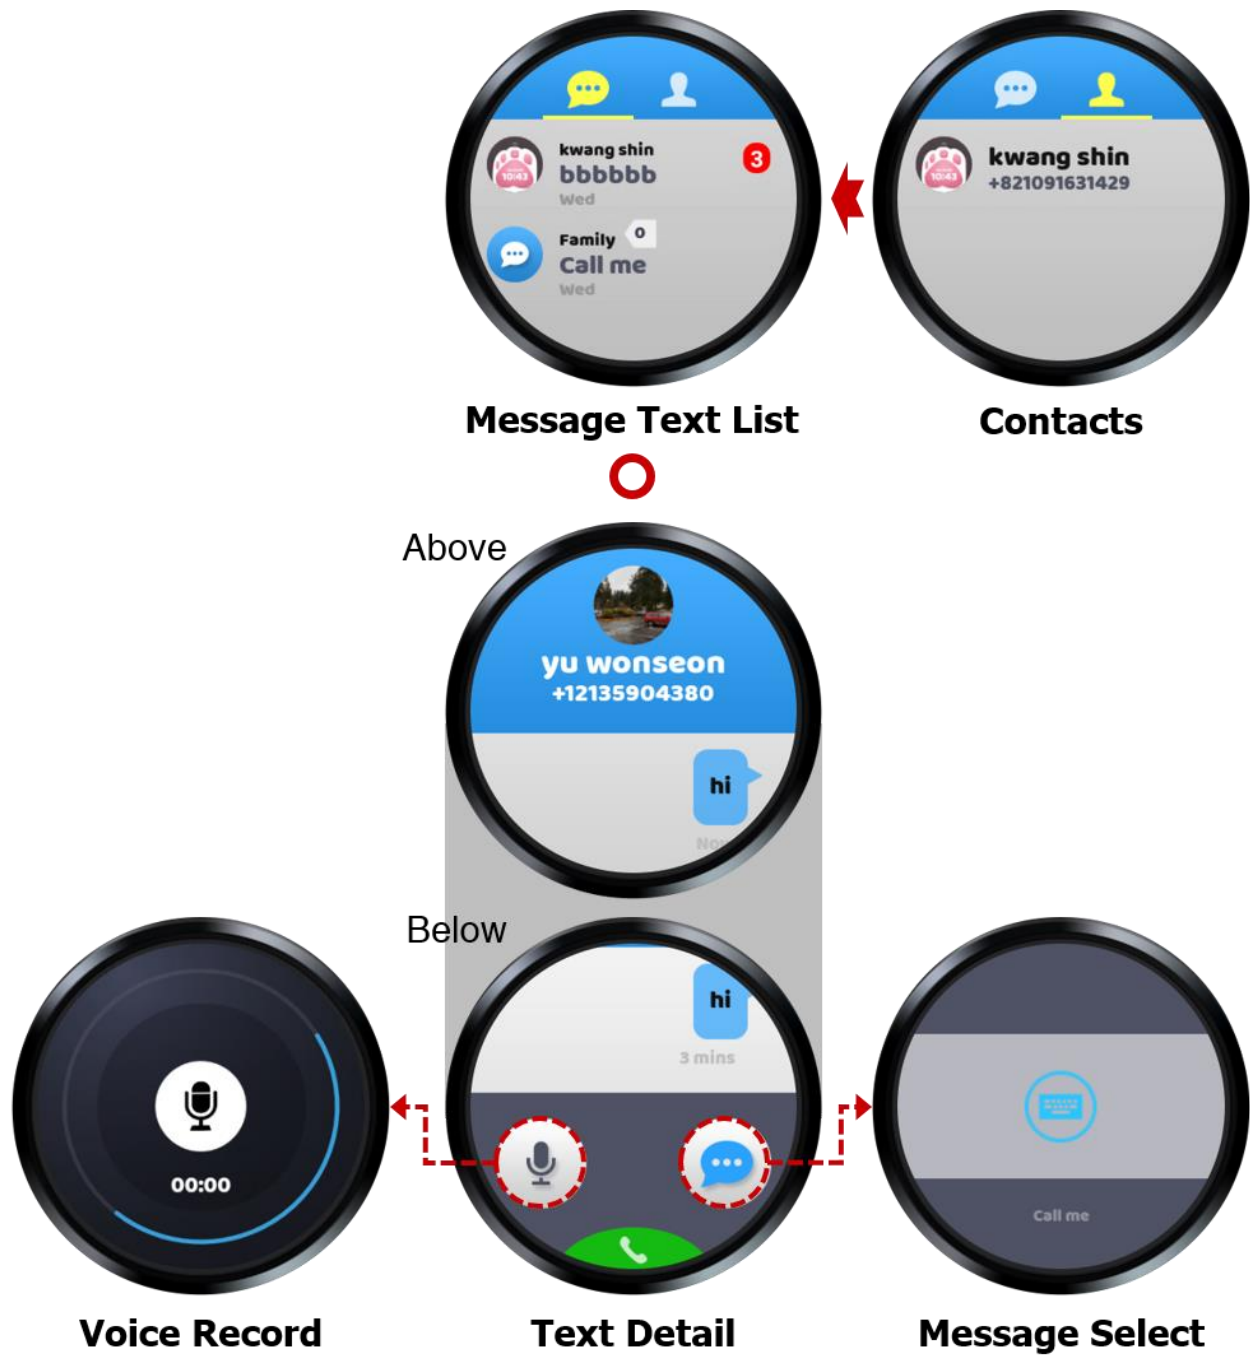

## Long Press SOS Button

- Slide left from the right side in Message History menu to enter the keypad menu. Input the phone no. and touch “Send” icon to enter the text keypad menu. Press “Confirm” icon to send the message



**Message Select**

 


**Message Input**




## Delete message

- Press the message for 2~3 seconds to display 'Del' and 'Del All' icon. Touch 'Del' to delete the selected message. Touch 'Del All' and 'OK' to delete all the message.

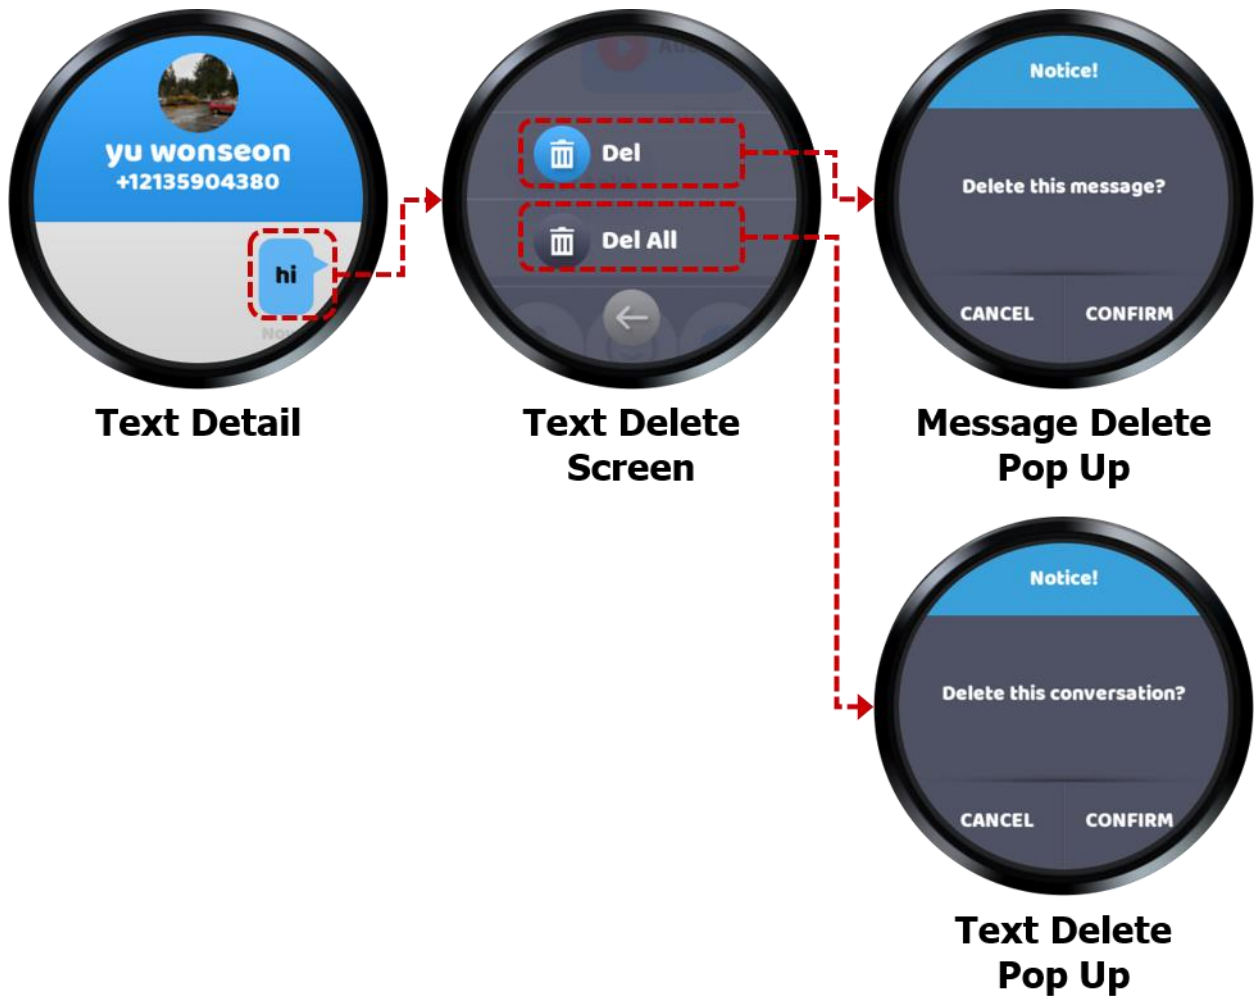


## Send My Location

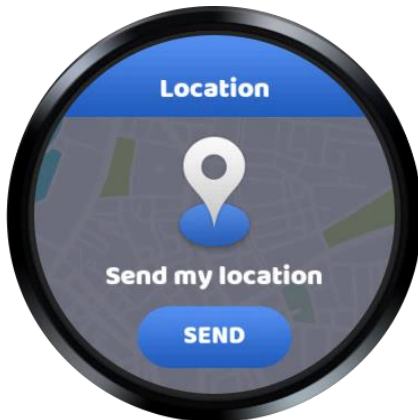 


- Touch the "Send My Location" icon on the menu screen, and then touch "Send My Location" to send location data messages to guardian(s).

## Schedule

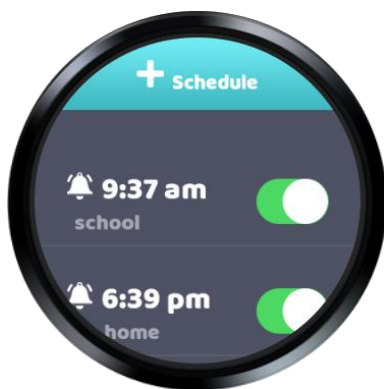 

**Schedule List**

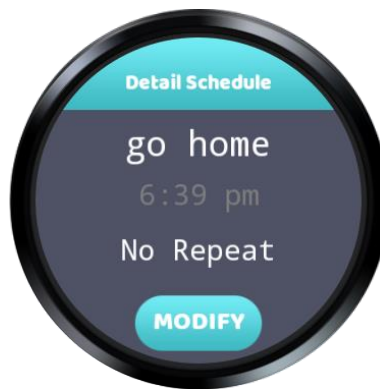 

**Detail Schedule**



**Schedule Add**

## Pedometer



**Today History**



**Previous History**

 


**Pedometer Setting**

## Game



Game select

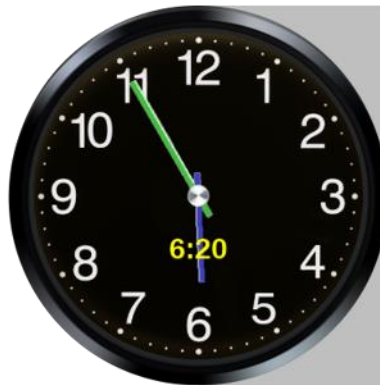

In Game



## Information



Profile



Detail Information

 
## NightLight



- If the Night Light option is on, nightlight will work when the watch is connected to the cradle.



# Setting

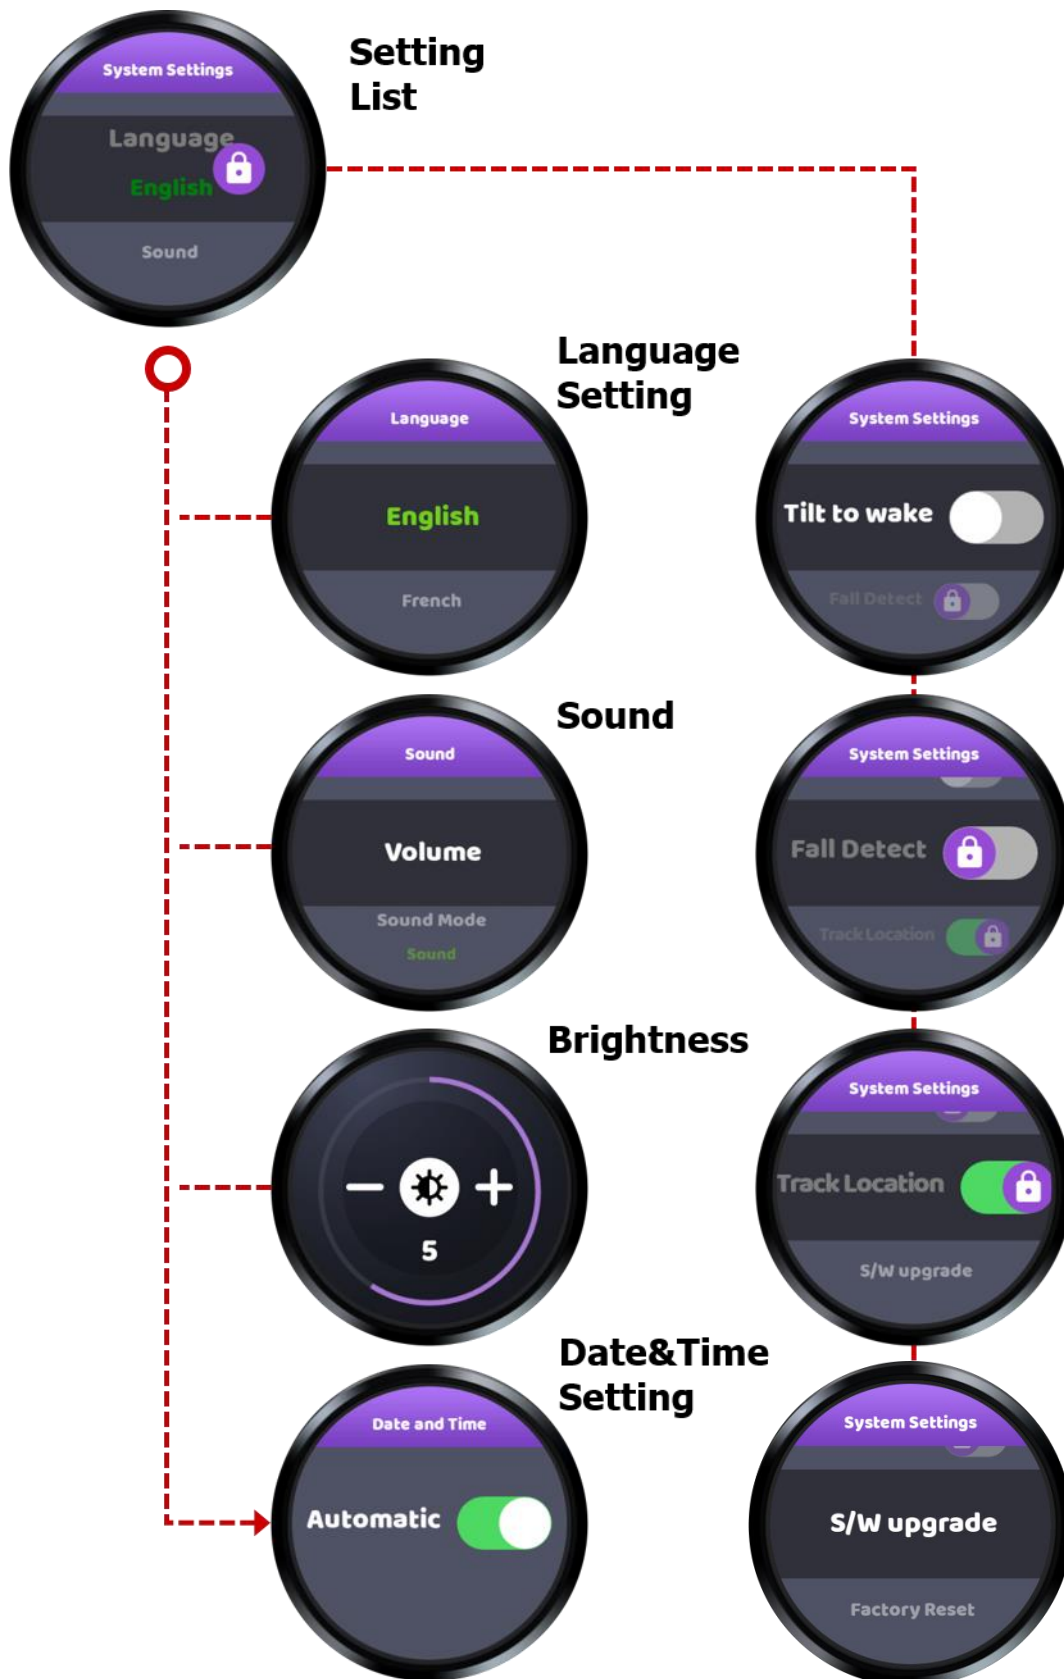

## S/W Upgrade



- Go to System Settings under the My INFO screen, and then touch "S/W Upgrade" to check if a new S/W version is released and upgrade S/W automatically if required.

### ※ Caution

- Make sure to connect your TIMEX watch phone to the charging cradle before upgrading S/W.
- The amount of required time to upgrade S/W may vary depending on your network status.
- Never disconnect the TIMEX watch phone from the charging cradle or control other functions during S/W upgrade process.
- S/W upgrading proceeds automatically and is completed by restarting the product two or three times.

# Bluetooth

Before using Bluetooth function, you should activate the Bluetooth function and pair the TIMEX watch phone with your desired device.



1. Go to Indicator screen to activate Bluetooth function.
2. From the list of available Bluetooth devices discovered, press your desired device to connect.
3. Once a device connected, it will be automatically connected to your device when available.
4. To go to the upper menu, press the SOS button on left slightly or slide the top of the screen downward.

## ※ Caution

- If Bluetooth function is activated, the battery runs out faster and needs charging more often.
- When you don't need the Bluetooth function anymore, turn it off to save battery power.
- Depending on Bluetooth devices such as manufacturer, pairing method may be different.

# Battery & Temp Sensor

- In airplane mode, 'High Temp Caution' is output when reaching high temperature, and 'High Temp Notify' is output when it is reached in normal mode.



**High Temp Shutdown**



**High Temp Caution**



**High Temp Notify**



**Device Overheated Notify**



 
**Normal Temp Notify**



**Low Temp Shutdown**



**High Temp Block Charging**

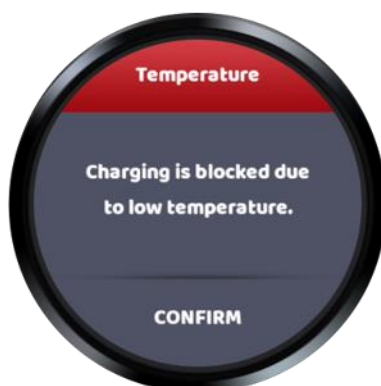

**Low Temp Block Charging**

# Specifications

LTE Frequency (B2 , B4, B12)	B2	1850 ~ 1910MHz (Transmitting) 1930 ~ 1990MHz (Receiving)
	B4	1710 ~ 1785MHz (Transmitting) 2110 ~ 2155MHz (Receiving)
	B14	699 ~ 716MHz (Transmitting) 729 ~ 746MHz (Receiving)
LTE Transmitting Output	Up to 200mW	
WLAN Frequency	2412~2462MHz (Transmitting/Receiving)	
WLAN Transmitting Output	Up to 16mW	
Bluetooth Frequency	2402~2480MHz (Transmitting/Receiving)	
Bluetooth Transmitting Output	Up to 10mW	
Operating Temperature	0°C ~ +50°C	
Product Size	46.2 x 51.8x 14.95mm	
Weight	48g (including battery and strap)	
Name of Equipment	Wireless Equipment for LTE Mobile Communication (transmitting/receiving device for land mobile station)	
Model No.	IF-W522T	
FCC Certification	YCOIFW522T	
Applicant	Timex	
Waterproof Level	IP67	
Manufacturer	Infomark	
Manufacturing Country	Republic of Korea	

- Because this wireless equipment may cause frequency interference, it isn't allowed to be used in any service related to the preservation of human life.
- This equipment is home use (Class B) electromagnetic wave suitability equipment and to be used mainly at home and it can be used in all areas.

## Special Act on Safety of Product for Children

Model No.	IF-W522T
Materials	PC, Silicon, etc.
Age	3+
Date of Manufacture	Marked separately
Manufacturer	Infomark
Tel. & Address	82-1566-4690 / 3rd Floor, Humax Village, 216, Hwangsaеul-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, 13595, Korea
Manufacturing Country	Republic of Korea
Directions of Use	Refer to Safety Precautions described separately.

## Battery Information

Battery Model No.	FT502526
Rated Power	3.8V, 380mAh
Certification No. of Battery UL	MH45586
Manufacturer	PowerLinx
Manufacturing Country	Republic of Korea

## **Customer Service Center**

---

- **If you want to learn more about the product on its use or get A/S, contact :**
- **Customer Service Center :**

## **Registering the Product**

---

- For detail information about joining, withdrawing, changing, rate system, and all the others, contact operator Customer Center You can also make a call to with your mobile phone.

## **Paid Service**

- If the warranty period is expired
- If the product isn't broken
- If the product broke due to user error
- If the product broke because the user attempted to repair or modify it
- If the product broke due to inappropriate connection
- If the product broke because it was not repaired by a technician designated by the manufacturer or an official third party
- If the product broke because the user didn't use a recommended genuine accessory
- If the product broke due to misuse
- All the other possible cases
- If the product broke due to a natural disaster such as fire, salt damage, flood damage, etc.
- If the life span of a consumable part was exceeded



# Charging Cradle

The IF-A522T charging cradle is a dedicated charging device (cradle) for the IF-W522Tmobile phone.

It is designed to charge IF-W522Tmobile phone only. Do not use it for any other purpose.

## LED Indicator of Charging Cradle

Charging	Fully Charged	Error
Red	Green	Orange (Flashing)

## Specifications

Rated Input	DC 5.0V / 1.0A
Rated Output	DC 4.3V / 0.35A
Operating Temperature	0°C ~ +58°C
Name of Equipment	Charging Equipment for Mobile Phone Battery
Model No.	IF-A522T
FCC Certification No.	YCOIFW522T
Company Name of Applicant	Infomark
Manufacturer	Infomark
Manufacturing Country	Republic of Korea

## ※ Caution

- Use the IF-A522T charging cradle in areas of sufficient ventilation. Do not use it in places with heat sources, flammable materials or risk of fire.
- Do not use the IF-A522T charging cradle in places of high humidity.
- Never disassemble or modify the IF-A522T charging cradle.
- Do not place magnetic materials such as a magnetic card, sharp metallic objects, etc., near the IF-A522T charging cradle.
- Magnetic parts are built into the contact terminals of the IF-A522T charging cradle. Therefore, magnetic force may cause your magnetic card to fail or malfunction. Be aware you may also be injured if a sharp metallic object pierces or is forced into the IF-A522T charging cradle.
- Before updating the software to the newest release, be sure to connect your TIMEX watch phone with the charging cradle.
- If mobile phone is powered off during software update process, the software update itself may be failed. Accordingly, the mobile phone may not work, either.

# Regulatory Statements

## **FCC Part 15.19 Statements**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions :

- this device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation.

## **FCC Part 15.105 Statements**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **FCC Part 15.21 statements**

- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

## **FCC RF EXPOSURE INFORMATION**

Your device is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for Radio Frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government.

For this device, the FCC SAR Limit for extremity SAR is 4.0 W/kg (10g) and head SAR is 1.6 W/kg (1g). This device does not exceed the FCC SAR limits. The FCC SAR limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

# Safety Precautions

---

Be sure to comply with the following safety precautions to keep you and your assets from being damaged and avoid accident and risk in advance. Additionally, always keep this user guide visible to refer to whenever necessary.

1. Do not manipulate the mobile phone while driving a car.
  - It may cause a car accident (in)directly.
  - If you use this product while driving a car, you may be fined or detained according to the traffic laws.
  - Do not place the product near an automobile airbag. If the airbag suddenly inflates, you may be injured.
2. Do not give a shock.
  - If the mobile phone is got a shock or dropped, it may be damaged or deformed. Additionally, understand that any external shock to the product may cause heat or fire.
3. Do not attempt to disassemble or repair the product.
  - Do not disassemble, repair or modify the product, as it may cause the product to fail. If the product is broken, contact the customer service center.
4. Turn off the product in places where mobile phone isn't allowed, such as in an airplane, at a hospital, etc.
  - If you use mobile phone on airplanes or in hospital, it may influence other devices.
5. Avoid exposure to highly magnetic materials.

- Do not leave the product near highly magnetic materials such as a TV, monitor, loudspeakers, etc., as doing so may cause the product to fail.

#### 6. Avoid exposure to metal products.

- If the metal area of the product's battery, mobile phone or charger is contacted with electric conductor, you may have risks of heat, electric shock, or explosion.

#### 7. Avoid exposure to fire or water.

- If your mobile phone is exposed to fire or dropped into fire, it may be deformed or failed.
- The mobile phone is fully waterproof, prevent the product from being exposed to liquid if possible. Liquids may damage the circuit or component part(s) of your mobile phone to cause failure.
- If you expose your mobile phone to heat radiated from heater, microwave, hot blast heater, etc., to dry, it may be deformed or broken. If the product is waterlogged, do not operate it and contact to Customer Service Center (xxxxxx). Please be aware that the product won't be eligible for free service if it is broken due to flooding or immersion.

#### 8. Do not use the product in locations with high/low temperature extremes or high humidity.

- This product is designed to work in appropriate operating temperature. Be careful when using it in locations with radically changing temperature. If you don't use the product under conditions of normal operating temperature, it may cause the product to fail. If you keep the product in a location subject to temperature extremes or radical swings in temperature, or in places of high humidity, product failure may result (recommended operating temperature: 0°C ~ +50°C).

9. To charge the product, use the same power supply with PC USB or USB power supply.
- If you don't use recommended genuine accessory, the product's life span may be reduced or it may even explode.
10. Do not use the product near chemicals.
- If you keep the product in a location with flammable materials such as a gas station, it may cause fire or explosion. When you're in such places, it is recommended that you not use the product and turn it off, thus ensuring your safety.
11. Do not use the product during thunderstorm activity.
- To keep the product from getting wet with rains, being struck by lightning, or getting shocked, you would be better not to use the product.
12. This product was tested under general conditions of use with a distance of 1cm between its front panel and the human body.
- With or without being used, more than 1.5cm of free space must be provided for the product's front panel. Be sure to keep more than 1cm distance from the front panel when using the product.
13. When you talk in speakerphone mode, keep the recommended distance from the product.
- You can talk on speaker of this product. If you hold the speaker to your ear to talk, your hearing may get damaged or headache may be induced. Additionally, if the product's microphone is too close to your mouth, howling noise may occur to harm your talking with clear sound. Use your mobile phone more than 20cm apart.

- When talking on speakerphone, howling noise is created if your counterpart doesn't have enough distance from his/her mobile phone. Be sure to check before talking on speakerphone.
  - Also, be careful not to interrupt others in public area.
14. Do not place magnetic materials such as magnetic card, sharp metallic objects, etc., near the product.
- This product incorporates built-in magnetic parts, including speakers, a charging cradle, contact terminals, etc. Therefore, magnetic force may cause your magnetic card to fail or malfunction. Carefully understand that you may also get injured if a sharp metallic object should pierce the product.
15. If you use the product for long periods of time, the product's surface temperature may raise. In this case, stop using the product.
16. LCD and window of the product's front panel are made of glass. Be careful since the product may be damaged by severe impact or chopping. If damaged, be careful not to get hurt by pieces of broken glass. If the product's window is damaged, immediately cease product use and contact the customer service center for repair.
17. For detail instructions, refer to the user guide in guardian app, "xxx" or [www.xxx](http://www.xxx).



# Warranty

## Warranty Period

The manufacturer warrants this device is free from defects in material and workmanship under normal use and service for twelve (12) months commencing upon the date of purchase by the first consumer purchaser. If proof of purchase cannot be provided, the manufacture date as recorded by manufacturer based upon the serial number will be deemed to be the start of Warranty Period.

## Limited Warranty Statement

The consumer should never attempt to open or disassemble the device and doing so may cause damage that voids your warranty.

The device is equipped with an internal rechargeable battery that is non-removable.

This warranty does not cover defects resulting from :

1. Improper or unreasonable use or maintenance
2. Failure to follow operating instructions; accident; excess moisture; insects; lightning; power surges; connections to improper voltage supply;
3. Unauthorized alteration or modification of original condition ;
4. Damages caused by inadequate packing or shipping procedures ;
5. Devices purchased from unauthorized dealers.
6. If the product is damaged because it was not repaired by a technician designated by the manufacturer or an official third party
7. If the product is damaged due to a natural disaster such as fire, salt damage, flood damage, etc.

During the warranty period, manufacturer will, at its sole option, (using new or refurbished replacement parts), repair any defective devices. Repaired devices will be warranted for a period equal to the remainder of the original Limited Warranty on the original device or for NINETY (90) days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of the manufacturer. The warranty is good only to the original purchaser of the device during the warranty period as long as it is in the US.

### **Disclaimer of Warranties; Exclusion of Liability**

Except as set forth in the express warranty contained on the warranty page enclosed with the device, the purchaser takes the device "AS IS," and manufacturer makes no express or implied warranty or any kind whatsoever with respect to the product, including but not limited to the merchantability of the product or its fitness for any particular purpose or use; the design, condition or quality of the device; the performance of the product; the workmanship of the product or the components contained therein; or compliance of the product with the requirements of any law, rule, specification or contract pertaining thereto. Nothing contained in the instruction manual shall be construed to create an express or implied warranty of any kind whatsoever with respect to the device. In addition, manufacturer shall not be liable for any damages of any kind resulting from the purchase or use of the device or arising from the breach of the express warranty, including incidental, special or consequential damages, or loss of anticipated profits or benefits. Manufacturer is not liable for performance issues or incompatibilities caused by your editing of registry settings, or your modification of operating system software. Using custom operating system software may cause your device and applications to work improperly. Your carrier may not permit users to download certain software, such as custom OS. If your carrier prohibits this, if you attempt to download

software onto the device without authorization, you will be notified on the screen that the device will no longer operate and be instructed to power down the device. You must then contact your carrier to restore the device to the carrier-authorized settings.

