



i3200 Pro

User's Manual

TABLE OF CONTENT

1 BASIC INFORMATION..... 1

1.1	BRIEF INTRODUCTION.....	1
-----	-------------------------	---

2 BEFORE USE 2

2.1	NAME AND EXPLANATION OF EACH PART.....	2
-----	--	---

2.1.1	Appearance Sketch Map	2
-------	-----------------------------	---

2.1.2	Description of the Standby Pictures.....	2
-------	--	---

2.2	INSTALL SIM CARD AND MEMORY CARD.....	3
-----	---------------------------------------	---

2.2.1	SIM Card.....	3
-------	---------------	---

2.2.2	Inserting and Taking out SIM Card	4
-------	---	---

2.2.3	Memory Card	5
-------	-------------------	---

2.3	BATTERY	5
-----	---------------	---

2.3.1	Install the Battery	5
-------	---------------------------	---

2.3.2	Charging.....	6
-------	---------------	---

2.4	SECURITY PASSWORD	7
-----	-------------------------	---

3 QUICK USER GUIDE 9

3.1	FEATURE FUNCTIONS.....	9
-----	------------------------	---

3.2	DIAL A CALL.....	10
3.3	REJECT A CALL.....	11
3.4	RECEIVE A CALL.....	11
3.5	END A CALL.....	11
3.6	EMERGENCY SERVICES.....	11
3.7	EXTENSION SPEED DIAL.....	12
3.8	DIALED CALLS/MISSED CALLS/RECEIVED CALLS/REJECTED CALLS	12
3.9	CALL FORWARD.....	12
3.10	CALL WAITING	13
3.11	CALL BARRING.....	13
3.12	POWER OFF THE PHONE	13
3.13	T-FLASH CARD	13

4 FUNCTION MENU..... 14

4.1	FILE MANAGER.....	14
4.2	PHONEBOOK	14
4.2.1	Addnewcontact.....	15
4.2.2	SMS.....	15
4.2.3	Call	15
4.2.4	Delete.....	15
4.2.5	Copy.....	16

4.2.6	Others.....	16
4.3	CALL CENTER	16
4.3.1	Missed calls.....	16
4.3.2	Dialed calls.....	16
4.3.3	Received calls	17
■	CALL WAITING: YOU CAN START UP OR SHUT DOWN THE FUNCTION. WHEN IT IS STARTED UP, EVEN WHEN YOU ARE MAKING A CALL, YOU CAN ALSO RECEIVE ANOTHER INCOME CALL.	18
■	CALL DIVERT: WHEN “CALL DIVERT” FUNCTION IS STARTED UP, YOU CAN TRANSFER THE INCOMING CALL TO VOICE INBOX OR OTHER PHONE NUMBER ACCORDING TO THE SCHEDULED “CALL DIVERT” CONDITIONS.	18
■	CALL BARRED: ALL OUTGOING CALLS, INCOMING CALLS, ROAMING INCOMING CALLS, INTERNATIONAL OUTGOING CALLS, ROAMING INTERNATIONAL OUTGOING CALLS ARE AVAILABLE.....	19
■	LINES SWITCHING: THERE ARE TWO LINES CAN BE SELECTED: LINE 1 AND LINE 2. BUT THE FUNCTION JUST FOR THE PHONE WHICH HAS ONE SIM CARD AND TWO NUMBERS. IF YOUR PHONE IS NOT THE TYPE LIKE THAT, PLEASE JUST SELECT LINE 1, BECAUSE IF YOU CHOOSE LINE 2, DIALING WILL BE LIMITED.	20

■	ADVANCED SETTINGS	20
4.4	MESSAGING.....	21
4.4.1	Write Message	21
4.4.2	Inbox	21
4.4.3	Drafts.....	22
4.4.4	Outbox.....	22
4.4.5	Sentbox	23
4.4.6	SMS Settings.....	23
4.5	MULTIMEDIA	24
4.5.1	Camera	24
4.5.2	Image viewer.....	25
4.5.3	Video recorder	25
4.5.4	Video Player.....	26
4.5.5	Audio Player	26
4.4.6	Sound Recorder	27
4.5.7	FM Radio	28
4.6	SERVICES.....	28
4.7	ORGANIZER	29
4.7.1	Calendar	29
4.7.2	Alarm	29
4.8	SETTINGS.....	30
4.8.1	PROFILES.....	30
4.8.2	Dual-SIM Settings	30

4.8.3	Phone settings	31
4.8.4	Network settings	31
4.8.5	Security settings	32
4.8.6	Restore factory settings: You can restore part of the phone settings as factory settings. The default code of restoring factory settings is: 1234.	33
4.9	TOOLS	33
4.9.1	Bluetooth.....	33
4.9.2	Calculator.....	34

5 TEXT INPUT 34

6 CARE AND MAINTENANCE 35

1 Basic Information

1.1 Brief Introduction

Thanks for selecting I3200 PRO color screen GSM digital mobile phone. Through reading the manual, you can fully know how to use I3200 PRO mobile phone, appreciate its complete function and simple operating method.

I3200 PRO color screen mobile phone is designed aiming at GSM network environment; the phone is Two Card Two Standby, but you can not call another SIM card when one SIM card is under phone call. Besides basic call functions, I3200 PRO also provides many kinds of practical functions, such as scene mode, message, audio and video player, camera and video, Bluetooth, alarm clock, calculator,, STK, time and date, auto power-on and shut-down and etc. so that convenient for your work and leisure activities. In addition, I3200 PRO adopts personalized human-computer interface design, its complete function can meet your different requirements.

I3200 PRO color screen mobile phone accords with GSM criterion, has obtained the certification of competent authority.

The company reserves the rights to revise the contents of the manual without prior notice.



2 Before Use





2.1 Name and Explanation of Each Part

2.1.1 Appearance Sketch Map

The picture is only for your reference.

2.1.2 Description of the Standby Pictures

	<p>Network signal strength</p> <p>The more the stripe is, the stronger the signal is. When SIM card 1s inserted in card slot 1, standby screen will show the icon.</p>
	<p>Network signal strength</p> <p>The more the stripe is, the stronger the signal is. When SIM card 1s inserted in card slot 2, standby</p>

	screen will show the icon.
	Battery strength The full the fill is, the more electric quantity is. Standby screen will show the icon.
	Silent mode When scene mode is set as mute mode, standby screen will show the icon.
	Meeting mode When scene mode is set as Vibration mode , standby screen will show the icon.
	Outdoor mode When scene mode is set as outdoor mode, standby screen will show the icon.

2.2 Install SIM Card and Memory Card

2.2.1 SIM Card

Before using the phone, you must insert valid SIM (Subscriber Identity Module) card in the phone. SIM card is provided by network supplier.

All the information related to network connection are

recorded in the chip of SIM card, also the names, telephone numbers and SMS that storing in the name card holder of SIM card. You can take out SIM card from your phone, and use it in any GSM mobile phone (new mobile phone can read SIM card automatically).

In order to avoid losing or damaging the information saves in SIM card, please don't touch the metal contact surface, and place SIM card in the place that away from electricity and magnetic force. Once SIM card is damaged, you can't use the phone normally.

Prompt: Please make sure to power off the phone before taking out SIM card. It is absolutely forbidden to insert or take out SIM card with external power supply; otherwise it may damage SIM card and the phone.

2.2.2 Inserting and Taking out SIM Card

Metal contact surface of SIM card is easily scratched. You must take out SIM card carefully before the assembly.

- Power off the phone, remove the rear cover, battery or other external power supply.
- Make the end of SIM card without cutting angle inside and aim at the card slot of the phone and metal surface of SIM card face downward, then insert SIM card to the card slot of

the phone, the other SIM card is also inserted in this way.

- When taking out SIM card, directly pull it outward and then can take out SIM card.

Prompt: Without special explanation inserting two SIM cards are defaulted in the manual. If you just insert one SIM card, maybe some options of the menu will not be shown.

2.2.3 Memory Card

Aim at the T card slot and push the T card gently, and the card will be inserted correctly.

Prompt: If the memory card is failed, please check whether it is correctly placed and good contact of metal point.

2.3 Battery

2.3.1 Install the Battery

- Take off the rear cover, of the mobile.
- Make one end of battery with metal surface aim at the battery connector.
- Then gently press the battery downward using the finger, and

then press the other end to install the battery.

Prompt: Please operate correctly to avoid damaging the battery connector.

Do not place the battery in fire ; follow local laws and ordinances in Disposing used battery.

Check the model number of the charger before using it to charge the mobile.

Only use approved battery , charger and accessories applicable to the specific mobile model . Using other types of battery , charger and accessories may violate the certification or warranty terms of the accessories may violate the certification or warranty terms of the equipment and may result in danger .

Return waste and used batteries to the supplier or specified recovery site .

CAUTION!

Risk of explosion if battery is replaced by an incorrect type .

Dispose of used batteries according to the instructions .

2.3.2 Charging

Insert the charger on the charging interface at the side end of the phone.

After inserting the charging plug, battery strength icon stripe at the top right corner of the screen is scrolling, which means that the charging is processing; when the stripe is full of the whole icon and stop scrolling, which means that the battery charging is completed; when the charging is completed, please pull out the plug.

When electric quantity is not enough, warning message will be sent; and electric quantity shows empty. When electric quantity is too low, the phone will power off automatically. Please don't make the battery in the status of not enough electric quantity for a long time; otherwise it may damage the battery quality and service life. Please don't charge the battery for a long time.

Prompt: In order to ensure normal operation of the phone, please make sure to use the designated charger.

2.4 Security Password

■ PIN

PIN (Personal Identification Number) is used to prevent your SIM card from being used illegally. PIN is usually provided with SIM card together. If you input wrong PIN for continuous three times, please input PUK to unlock it. Please contact with network operations company for more details.

■ PIN 2

You need to input PIN2 when entering some functions (such as call charge); if you input wrong PIN2 for continuous three times, you need to input PUK2 to unlock it. Please contact with network operations company for more details.

■ **PUK**

When changing the locked PIN, you need to input PUK (Personal Unlock Key). PUK is provided with SIM card together. If it is not provided, please contact with your service provider. If you input wrong PUK for continuous ten times, the SIM card can't be used again. Please contact with your service provider to buy new card. You can't change PUK. If you lose the code, please contact with your service provider.

■ **PUK2**

When changing the locked PIN2, you need to input PUK2. If you input wrong PUK2 for continuous ten times, you can't use the functions that need PIN2. Please contact with your service provider to buy new card. You can't change PUK 2. If you lose the code, please contact with your service provider.

3 Quick User Guide

3.1 Feature Functions

The phone has not only the basic functions of mobile phone, but also support rich, practical and rapid feature functions, can be briefly introduced as follows:

- **Contacts:** Each name card holder record stored in the phone can be related with several telephone numbers at most, the phone can store 100 records at most; can send SMS in the name card holder; you can copy name card holder record between SIM card and the phone.
- **Profiles:** Custom the ringtone (include ringtone settings, volume adjustment, incoming call prompt, message prompt, alarm clock prompt, key-press tone, low voltage warning tone, power-on and power-off tone) according to different events or environment.
- **Call log:** The phone will automatically store the information of call log for you to check; support to call the telephone number in the call log; support to save the telephone number in the call log to name card holder and set as rejected call; support the function of sending SMS and etc. to the telephone

numbers in the call log.

- **Message:** The phone supports the storing status of SMS in SIM card and the phone.
- **Multimedia:** Your phone provides all kinds of entertainment services including player, camera, FM radio and other functions.
- **Camera:** The phone supports camera and video function. You can customize the camera and video, and switch between prepositive and postpositive video captures through menu option.
- **Organizer:** The phone supports various practical functions. Supports alarm clock, calendar, calculator and other functions.
- **Settings:** You can customize the phone according to the needs, include phone settings, display settings, call settings, security settings and other functions.
- **Input method:** The phone supports various input modes, which is convenient for you to input English, letters, numbers, symbols, and etc.

3.2 Dial a Call

In standby mode, press numerical keys to input phone

number to dial phone number. When you finish inputting phone number, press the dial key to make a call. If you're making a long distance call, add the area code preceding the telephone number.

3.3 Reject a Call

You can press End key to reject an incoming call.

3.4 Receive a Call

When an incoming call arrives, the phone will give out the corresponding prompt (such as vibration, ringtone, and etc.); if network support, the phone screen will show the name and telephone number of the caller; at this time, you can press Dial key to receive an incoming call.

3.5 End a Call

After finishing a call, you can press End key to end a call.

3.6 Emergency Services

You can directly dial an emergency service call without SIM card.

Different network uses different emergency numbers, please

consult your network operations company for more details.

3.7 Extension Speed Dial

After inputting telephone number, if you want to input branch number, please press and hold “*”, input your extension number after the display screen shows “P”. After getting through the call, it will directly dial the extension.

3.8 Dialed Calls/Missed Calls/Received Calls/Rejected Calls

You can enter call log to check the relevant details of dialed calls, missed calls, received calls and rejected calls.

Prompt: The record of incoming call from blacklist number will be saved in Rejected Calls.

3.9 Call Forward

After call forward function is started, according to different forward conditions settings (Call Forward Unconditionally, Forward Busy, Forward No Answer, Forward Can Not Reach), you can select to switch the incoming call to voice inbox or other telephone numbers.

3.10 Call Waiting

After call waiting function is started, when you are calling, the other call can be put through.

3.11 Call Barring

After call barring function is started, according to different restricted conditions settings (all the dialed calls, all the incoming calls, incoming calls when roaming, dialed international calls, outgoing international calls when roaming), you can restrict the call under the corresponding conditions (need to apply to network operator for business).

3.12 Power off the Phone

In the standby mode, press and hold End key to power off the phone.

3.13 T-flash Card

Insert the T-Flash card into phone from the background. This will expand the Flash memory of the phone. Tap Multimedia menu, you can browse MP3, MP4, picture, video, photograph etc.

4 Function Menu

4.1 File manager

You can check the specific content and service condition of the SD memory via this function. Meanwhile.

Choose one folder and press left soft key, then you can operate as follows:

1. New folder: Create a new folder.
2. Delete: Delete the folder.
3. Rename: Rename the folder

Prompt: There is no own memory capacity in the phone.

4.2 Phonebook

This function could help you browse the name card holder, store, edit and delete the names and phone numbers in the phone and SIM card. The storage capacity of the SIM card varies and the maximum storage capacity of this phone is 100.

On the standby interface, press right soft key to enter the interface of the name card holder. When the record of the name card holder is not empty, press left soft key for the following operation:

Prompt: Take the records in SIM card 1 for example.

4.2.1 Addnewcontact

Create new name card holder records to SIM card or the mobile phone.

4.2.2 SMS

Send SMS message to this record.

4.2.3 Call

Dial this record directly or by means of call.

4.2.4 Delete

Delete this record.

4.2.5 Copy

Copy the record to SIM cards or phone.

4.2.6 Others

——Memory status: You could enquire the capacity of SIM1, SIM2 and the phone.

4.3 Call Center

Display your recent call log.

4.3.1 Missed calls

Display the list of your recent missed numbers. The operation is the same as the Dialed.

4.3.2 Dialed calls

Display the list of your recent dialed numbers.

On the interface of Dialed, choose one record, then press left

soft key “Option” to enter the Option interface and you could go on the following operations.

- View: Display the information of dial calls (Number, Date, Time,etc.)
- Call: Recall the number.
- Send SMS: You could send message to this number.
- Save to phone book: Add this number to the name card holder.
- Delete: Delete this record.

4.3.3 Received calls

Display the list of your recent answered numbers. The operation is the same as the Dialed.

4.3.4 Call settings

- **Call waiting:** You can start up or shut down the function. When it is started up, even when you are making a call, you can also receive another income call.

- **Call divert:** When “call divert” function is started up, you can transfer the incoming call to voice inbox or other phone number according to the scheduled “ call divert” conditions.
 - Call forwarding unconditional: All incoming calls will be transferred to voice inbox or other phone number according to the setup.
 - Call forwarding on busy: When your number is busy, the incoming calls will be transferred to voice inbox or other phone number according to the setup.
 - Call forwarding on no reply: When there are missed calls in your phone, they will be transferred to voice inbox or other phone number according to the setup.

- Divert If Unreachable: When your phone is power off or out of the service area, the incoming calls will be transferred to voice inbox or other phone number according to the setup.
- Cancel All Diverts: You can delete all settings of call divert.

■ **Call barred: All outgoing calls, incoming calls, roaming incoming calls, international outgoing calls, roaming international outgoing calls are available.**

- All outgoing calls: Activate/Deactivate/Check Status
- All incoming calls: Activate/Deactivate/Check Status
- Incoming calls when roaming: Activate/Deactivate/Check Status
- ISD calling: Activate/Deactivate/Check Status
- Dial when INTL roaming: Activate/Deactivate/Check Status
- Cancel all barring : Cancel all restrictions on the call.
- Change Password: You can consult your network

operator about the call barring password.

Prompt: The above-mentioned function will have to need network support. To use the function, please contact your network service provider.

- **Lines switching: There are two lines can be selected: line 1 and line 2. But the function just for the phone which has one SIM card and two numbers. If your phone is not the type like that, please just select line 1, because if you choose line 2, dialing will be limited.**

Select SIM1/SIM2

—Line 1

—Line 2

■ **Advanced settings**

— — Auto redial: Activate/ Deactivate

— — call time reminder

— — Answer mode: / any key answer/auto answer when headset mode

4.4 Messaging

4.4.1 Write Message

You could write message by using this function. When you input the message to be sent, press left soft key to send, to add contact person information and symbol, and to save, etc.

--Send to: Enter the interface of input number, you can input the phone number directly, or choose Add from Phone book to enter the name card holder and choose the number to send.

--Advanced: you can insert number or name to the message.

--Save: Save this message to the drafts.

4.4.2 Inbox

Store the SMS message you've received. The SMS message could be differentiated by different icons. The icons before the message list means whether this message is SMS message and which is stored in SIM1, SIM2 or the phone.

Choose one SMS press left soft key, then you will do several operations, for example, reply the SMS, delete, dial and mark.

Press OK key directly you can read this SMS.

- — Reply: You could choose to reply the addresser by SMS.
- — Delete: Delete this message.
- — Call: Call the addresser.
- — Delete all: Delete all the messages of the inbox

4.4.3 Drafts

Store the SMS you've edited. The SMS could be differentiated by different icons. The two icons before the message list means whether this message is SMS, and it is stored in SIM1, SIM2 or the phone.

Choose one SMS press left soft key, you could delete, edit, lock, mark, sort, and so on.

4.4.4 Outbox

Store the SMS you've sent in failure. The SMS could be differentiated by different icons. The two icons before the message list means whether this message is SMS, and it is stored in SIM1, SIM2 or the phone.

Choose one SMS and press left soft key, you could send,

delete, lock, mark, sort, and so on.

4.4.5 Sentbox

Store the SMS you've sent successfully. The SMS could be differentiated by different icons. The two icons before the message list means whether this message is SMS, and it is stored in SIM1, SIM2 or the phone.

Choose one SMS and press left soft key, you could delete, forward, lock, mark, sort, and so on.

4.4.6 SMS Settings

There are seven options: SIM 1 service center, SIM2 service center, Delivery report , Reply path, Voicemail server, etc..

--SIM1 msg center: Display the SMS service center number in SIM1.

--SIM2 msg center: Display the SMS service center number in SIM2.

4.5 Multimedia

4.5.1 Camera

The device is equipped with a webcam with high pixels. You can take photo at any time and save the photo in SD card. The photo can be used as wallpaper of your device or you can send it to your friends through Bluetooth.

You can view the photo on screen and press camera key to get a picture. On the photo preview interface (screen rotate), press up/down direction key to adjust focus; press OK key to get the picture;

- — Mode : You can change the DC or DV mode
- — Size: You can set the photo image size.
- — photos: Enter into image browser list.
- — Banding: You can set as 50Hz or 60Hz.
- — Delay: You can set up the timer as: Off, 5S ,10S and 15S.

- — Night mode: You can set up the image modes as Auto and night.
- — White balance: You can set as automatic white

balance, incandescent lamp, fluorescent lamp, daylight and cloud.

Prompt: Observe photographing related local laws and regulations. Do not use the function in illegal way.

4.5.2 Image viewer

Enter the images list interface, press left soft key, you could go on the following operations.

- view: look the images really
- Send: send this file to Bluetooth.
- Delete: delete this image.
- Set image as wallpaper: set this image as wallpaper
- Rename: rename the file
- Details: to show the images details.

4.5.3 Video recorder

In Video preview interface press left soft key you can enter options menu as follows:

- Banding: You can set as 50Hz or 60Hz.
- camcorder Settings: Quality Sharing

video\normal\good\high

4.5.4 Video Player

This phone supports the video format of 3GP and MP4.

Enter the video play list interface, press left soft key, you could go on the following operations.

- Play: to ply the video files.
- Send: send this file to Bluetooth.
- Rename: rename the file
- Delete: delete this image.

4.5.5 Audio Player

This phone could play the MP3 stored in SD card and support the background play.

Press the left soft key or "OK" key to enter and use the Navigation keys to operate the MP3 player.

Press” *” key and” #“ key to adjust volume. Press left soft key to access the MP3 list

On the audio player interface, move cursor to the shortcut keys on the screen, you could rapidly operate the MP3 functions.

Under the MP3 list interface, press left soft key, then you can do operations as follows:

- Play: to play the audio files.
- Details: to show the audio details.
- remove: delete this audio from the list
- settings: repeat\shuffle\background play

Prompt:

In the main interface of “Play MP3” press hang-up key to return, the background broadcasting status will remain and the standby interface will display the name of the music played in circulation.

4.4.6 Sound Recorder

Use this function you can record or listen to your own record. Press left soft key and select “record”. You can also do the following.

- new recording: Select “record” and continue the following steps;
- Record file list: Select “records list”.

4.5.7 FM Radio

You can listen to Fm radio freely. Enter the radio interface, search the frequency automatically by pressing the up and down direction keys, and change previous or next channel by pressing the left and right direction keys.

On the interface of the Radio playing, press left soft key you could enter the options menu and do operations as follows:

- Channel list: You can view all the broadcasting stations you saved.

- Manual search: Search the broadcasting station by input frequency manually.

- --Auto search and save: Search frequency available automatically and save it to broadcasting station list.

Prompt: Please connect with the earphone before you listen to the radio, for the device is equal to radio antenna. When the battery of your cell is insufficient, you may not enter the Radio channel.

4.6 Services

This function is provided by network supplier, such as mobile monternet, M-zone, global and some other

brand increment service. This function isn't available if it is beyond SIM card and network supplier's support. So please contact network supplier to get more.

4.7 Organizer

4.7.1 Calendar

You can use this feature to view the year, date and solar term easily. Use up/down/left/right direction key to navigator other date.

— — Jump to Date: Enter the Solar calendar and it can go to the date you want to check.

— — Go to today

— — Go to weekly view

4.7.2 Alarm

You can edit alarm, time, ring and repeated ring mode.

In “ alarm edit” mode, you can scroll up or down direction key, when the cursor goes to the desired option, press “OK”, then you can select desired settings.

The alarm clock feature sounds an alert or makes a vibration

alert at a time you specify.

- Alarm1
- Alarm2
- Alarm3

4.8 Settings

You can customize the settings, such as time and date, language, call settings etc.

4.8.1 Profiles

You could set different scene modes.

- General
- Silent
- Meeting
- Outdoor

You could active, customize or rename.

4.8.2 Dual-SIM Settings

- Standby mode: Only SIM1 enable/ Only SIM2 enable/
Dual SIM dual standby

4.8.3 Phone settings

- Select Language: You can select phone language.
- Display:
 - Wallpaper settings: You can set as default wallpaper image as well as more other wallpaper images.
 - Screen auto lock: You can set the time to auto lock phone
 - Show date and time: You can turn on/turn off the display of the date and time
- Misc.settings
 - LCD backlight: On the screen backlight interface you can set different lightness of your phone by pressing the left/right direction key.

4.8.4 Network settings

- —select network by sim1 or sim2
- —GPRS transferpref

4.8.5 Security settings

——PIN

You can start up, shut down or modify PIN code. Correct PIN code shall be input when you unlock or shut down PIN code. If PIN code verification is started up, each time when you switch on your phone, you will have to input PIN code. If you input mistaken PIN codes three times in a row, SIM card will be locked. You will have to get PUK1 code to unlock it. Please contact network operator to get PUK1 code when necessary.

——PIN2

You can review PIN2 code. For details, please contact network operator.

——Power-on password

You can start up or shut down “phone password” or revise it. When “phone password” is started up, you will have to input “password” each time when you use the phone. The default phone password is 1234.

4.8.6 Restore factory settings: You can restore part of the phone settings as factory settings. The default code of restoring factory settings is: 1234.

4.9 tools

4.9.1 Bluetooth

- **Open/Close Bluetooth**

You can choose to “open” or “close” Bluetooth.

- **Bluetooth visibility**

You can choose “show phone” or “hidden” Bluetooth. If the Bluetooth is hidden, others cannot search your phone.

- **Paired device**

You can search different Bluetooth equipments and find compatible ones (as long as the PIN codes of two Bluetooth equipments are identical with each other, the match will be successful. The PIN code of Bluetooth earphone is different due to different type, and you can find the code in operating manual of the

Bluetooth earphone.).

- My Bluetooth name

You can change the name of the phone.

4.9.2 Calculator

The function will make your device a calculator with which you can carry out simple math calculation.

Write by stylus to enter the numbers. Use following direction keys to calculate:

Up, down, left, right key: +, -, ×, /

OK key: Show the calculation result.

Key: Decimal point

5 Text Input

The device provides several text input modes so that you can write text or input data in your “contacts”, edit “contacts” record, search English names and write SMS .

In “text input” mode, if you want to change the input way, you can press “ #” key. The selected input way will appear on the top left of the screen.

6 Care and Maintenance

Maintenance of battery

- Your device is powered by a rechargeable battery. It is necessary to have the battery charged when it is going to wear out. The full performance of a new battery is achieved only when it is fully wore out.
- Unplug the charger from the electrical plug and the device when not in use. Do not leave fully a charged battery connected to a charger over a week, since overcharging may shorten its lifetime.
- Temperature tends to affect the limit of battery to be charged. Therefore, it is necessary for the battery to be cooled or warmed before it is charged. If the temperature of batter exceeds 40°C ,the battery cannot be charged.
- Use the battery only for its intended purpose and avoid short-circuiting. Accidental short-circuiting can occur when a metallic object causes direct connection of the positive (+) and negative (-) terminals of the battery.
- Do not use damaged battery.
- Leave the battery in hot or cold places will reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.

- Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations.

Care of maintenance of your device

The suggestions below will help you protect your warranty coverage.

- Keep the device and accessories out of the reach of small children.
- Keep the device dry. All types of liquids or moisture will corrode electronic circuits.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices and warp or melt certain plastics.
- Do not attempt to open the device other than as instructed in this guide. Non-professional handling may damage the device.
- Do not use harsh chemicals or strong detergents to clean the device.
- Use only the supplied or an approved replacement attachments, for the unauthorized ones could invalidate the warranty of maintenance.

When using any body worn accessory, please help to make sure it as least 1.5cm clearance between phone and human body. The body worn accessory should not contain any metal.

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure of measurement is known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is

1.6W/kg. Transmitting at its highest certified power level in all
Your mobile phone is a radio transmitter and receiver. It is at the
highest certified power level, the well below the maximum value.
The maximum sum of reported SAR values for GSM, and BT is
1.476W/kg (1g)

This is power levels so as to use only the power required to reach
the network. In general, the closer you are to a wireless base
station antenna, the available for sale to the public, it must be
tested and certified to the FCC that it does not exceed the limit
established by the government adopted requirement for safe
exposure. The tests are performed in positions and locations (e.g.,
at the ear and worn on the body) as required by the FCC for each
model. The FCC has granted an Equipment Authorization for
evaluated as in compliance with the FCC RF exposure guidelines.
SAR information on this model the Display Grant section of
<http://www.fcc.gov/oet/fccid> after searching on FCC ID:
PQ4IPROI3200.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with
the limits for a Class B digital device, pursuant to part 15 of the
FCC Rules. These limits are designed to provide reasonable
protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.