



# I3249 Pro

## User's Manual

---

### TABLE OF CONTENT

<b>1. Basic Information .....</b>	<b>5</b>
1.1. Brief Introduction .....	5
<b>2. Before Use .....</b>	<b>7</b>
2.1. Name and Explanation of Each Part.....	7
2.1.1. Appearance Sketch Map .....	7
2.1.2. Description of the Standby Pictures.....	7
2.1.3. Description of Keys .....	8
2.2. Install SIM Card and Memory Card.....	10
2.2.1. SIM Card.....	10

2.2.2.	Inserting and Taking out SIM Card .....	11
2.2.3.	Memory Card.....	12
2.3.	Battery .....	12
2.3.1.	Install the Battery .....	12
2.3.2.	Charging.....	13
2.4.	Security Password .....	14

### **3. Quick User Guide..... 15**

3.1.	Feature Functions .....	15
3.2.	Dial a Call.....	17
3.3.	Reject a Call .....	18
3.4.	Receive a Call.....	18
3.5.	End a Call .....	18
3.6.	Emergency Services .....	18
3.7.	Extension Speed Dial .....	18
3.8.	Dialed Calls/Missed Calls/Received Calls/Rejected Calls.....	19
3.9.	Call Forward.....	19
3.10.	Call Waiting.....	19
3.11.	Call Barring .....	20
3.12.	Power off the Phone .....	20
3.13.	T-flash Card .....	20

3.14. charging to another mobile phone .....	20
--	----

## **4. Function Menu ..... 21**

4.1. Dialpad .....	21
4.2. Contacts .....	21
4.2.1. New .....	22
4.2.2. Write message .....	22
4.2.3. Call .....	22
4.2.4. Delete .....	22
4.2.5. Delete multiple .....	22
4.2.6. Copy .....	23
4.2.7. Others .....	23
4.3. Call Logs .....	23
4.3.1. Missed calls .....	23
4.3.2. Dialed calls .....	24
4.3.3. Received calls .....	24
4.3.4. Rejected calls .....	24
4.3.5. Delete all .....	25
4.3.6. Call timer .....	25
4.3.7. GPRS counter .....	25
4.4 Image .....	25
4.5 Message .....	26

4.5.1	Chat mode .....	26
4.5.2	Write Message .....	26
4.5.3	Inbox .....	27
4.5.4	Outbox.....	28
4.5.5	Drafts.....	29
4.5.6	Sentbox .....	29
4.5.7	Templates.....	29
4.5.8	Settings.....	30
4.5.9	Message capacity .....	31
4.6	Camera.....	31
4.7	Audio .....	32
4.8	Multimedia .....	33
4.8.1	Video.....	33
4.8.2	Recorder .....	34
4.9	Games .....	34
4.10	FM Radio.....	34
4.11	DV .....	35
4.12	Bluetooth .....	36
4.13	STK .....	37
4.14	Organizer .....	37
4.14.1	Calendar .....	37
4.14.2	Calculator.....	38
4.14.3	Clock.....	38

4.15	My Files.....	38
4.16	Internet.....	39
4.17	Profiles.....	39
4.18	Settings.....	39
4.18.1	Phone settings .....	40
4.18.2	Display .....	40
4.18.3	Security settings.....	41
4.18.4	Call Settings.....	42
4.18.5	Network setting.....	45
<b>5</b>	<b>Text Input .....</b>	<b>46</b>
<b>6</b>	<b>Care and Maintenance .....</b>	<b>48</b>

## **1. Basic Information**

### **1.1. Brief Introduction**

Thanks for selecting I3249 PRO color screen GSM digital mobile phone. Through reading the manual, you can fully know

how to use I3249 PRO mobile phone, appreciate its complete function and simple operating method.

I3249 PRO color screen mobile phone is designed aiming at GSM network environment; the phone is Two Card Two Standby, but you can not call another SIM card when one SIM card is under phone call. Besides basic call functions, I3249 PRO also provides many kinds of practical functions, such as name card holder, scene mode, message, audio and video player, camera and video, game, Bluetooth, alarm clock, calculator,, STK, time and date, auto power-on and shut-down ,and etc. so that convenient for your work and leisure activities. In addition, I3249 PRO adopts personalized human-computer interface design, its complete function can meet your different requirements.

I3249 PRO color screen mobile phone accords with GSM criterion, has obtained the certification of competent authority.

The company reserves the rights to revise the contents of the manual without prior notice.




## 2. Before Use



 

### 2.1. Name and Explanation of Each Part

#### 2.1.1. Appearance Sketch Map

The picture is only for your reference.

#### 2.1.2. Description of the Standby Pictures

	<b>Network signal strength</b> The more the stripe is, the stronger the signal is. When SIM card 1s inserted in card slot 1, standby screen will show the icon.
	<b>Network signal strength</b> The more the stripe is, the stronger the signal is. When SIM card 1s inserted in card slot 2, standby screen will show the icon.
	<b>Battery strength</b> The full the fill is, the more electric quantity is. Standby screen will show the icon.

	<p><b>Silent mode</b></p> <p>When scene mode is set as mute mode, standby screen will show the icon.</p>
	<p><b>Vibrate mode</b></p> <p>When scene mode is set as Vibration mode, standby screen will show the icon.</p>
	<p><b>Indoor mode</b></p> <p>When scene mode is set as indoor mode, standby screen will show the icon.</p>
	<p><b>Outdoor mode</b></p> <p>When scene mode is set as outdoor mode, standby screen will show the icon.</p>

### 2.1.3. Description of Keys

Keys	Function
<p><b>Left soft key/ Right soft key</b></p>	<p>1. Execute functions that the left-down/right-down corner indicator shows.</p> <p>2. In the standby mode, press Left Soft key to access Menu, Right Soft key to</p>



	access Contacts.
<b>Navigation key</b>	On other interfaces, it equals to navigation key and direction key except for special functions.
<b>OK key</b>	Press it to confirm.
<b>Dial key</b>	<ol style="list-style-type: none"> <li>1. Press this key to dial or receive an incoming call.</li> <li>2. When in the standby mode, press this key to access Dialed Calls.</li> </ol>
<b>MP3 key</b>	In idle mode, Press it to access audio player directly.
<b>End key</b>	<ol style="list-style-type: none"> <li>1. Mainly used as power on/off.</li> <li>2. Press to return to standby screen in any interface.</li> <li>3. End calls or reject incoming calls.</li> </ol>
<b>Message key</b>	In the standby mode, press it to access message.
<b>Number key</b>	<p>It is used to dial and input numbers or characters.</p> <p>Press and hold Number key 1 or 2 to</p>

	get through the preset voice inbox.
<b># Key</b>	<ol style="list-style-type: none"> <li>1. In text editing interface, press "#" key to switch text the input method.</li> <li>2. On the standby interface Press and hold "#" key to transfer the profile of Normal/Silent/ Vibrate.</li> </ol>
<b>* Key</b>	On the standby interface, input *; after inputting telephone number, if you want to input extension number, please press twice asterisk key, after the display screen shows "+", please input your extension number.

## **2.2. Install SIM Card and Memory Card**

### **2.2.1. SIM Card**

**Before using the phone, you must insert valid SIM (Subscriber Identity Module) card in the phone. SIM card is provided by network supplier.**

All the information related to network connection are recorded in the chip of SIM card, also the names, telephone

numbers and SMS that storing in the name card holder of SIM card. You can take out SIM card from your phone, and use it in any GSM mobile phone (new mobile phone can read SIM card automatically).

In order to avoid losing or damaging the information saves in SIM card, please don't touch the metal contact surface, and place SIM card in the place that away from electricity and magnetic force. Once SIM card is damaged, you can't use the phone normally.

**Prompt: Please make sure to power off the phone before taking out SIM card. It is absolutely forbidden to insert or take out SIM card with external power supply; otherwise it may damage SIM card and the phone.**

### **2.2.2. Inserting and Taking out SIM Card**

Metal contact surface of SIM card is easily scratched. You must take out SIM card carefully before the assembly.

- Power off the phone, remove the rear cover, battery or other external power supply.
- Make the end of SIM card without cutting angle inside and aim at the card slot of the phone and metal surface of SIM card face downward, then insert SIM card to the card slot of the phone, the other SIM card is also inserted in this way.

- When taking out SIM card, directly pull it outward and then can take out SIM card.

**Prompt: Without special explanation inserting two SIM cards are defaulted in the manual. If you just insert one SIM card, maybe some options of the menu will not be shown.**

### 2.2.3. Memory Card

Aim at the T card slot and push the T card gently, and the card will be inserted correctly.

**Prompt: If the memory card is failed, please check whether it is correctly placed and good contact of metal point.**

## 2.3. Battery

### 2.3.1. Install the Battery

- Take off the rear cover, of the mobile.
- Make one end of battery with metal surface aim at the battery connector.
- Then gently press the battery downward using the finger, and then press the other end to install the battery.

**Prompt: Please operate correctly to avoid damaging the battery connector.**

**Do not place the battery in fire ; follow local laws and ordinances in Disposing used battery.**

**Check the model number of the charger before using it to charge the mobile.**

**Only use approved battery , charger and accessories applicable to the specific mobile model . Using other types of battery , charger and accessories may violate the certification or warranty terms of the accessories may violate the certification or warranty terms of the equipment and may result in danger .**

**Return waste and used batteries to the supplier or specified recovery site .**

**CAUTION!**

**Risk of explosion if battery is replaced by an incorrect type .**

**Dispose of used batteries according to the instructions .**

### **2.3.2. Charging**

Insert the charger on the charging interface at the side end of the phone.

After inserting the charging plug, battery strength icon stripe at the top right corner of the screen is scrolling, which means that

the charging is processing; when the stripe is full of the whole icon and stop scrolling, which means that the battery charging is completed; when the charging is completed, please pull out the plug.

When electric quantity is not enough, warning message will be sent; and electric quantity shows empty. When electric quantity is too low, the phone will power off automatically. Please don't make the battery in the status of not enough electric quantity for a long time; otherwise it may damage the battery quality and service life. Please don't charge the battery for a long time.

**Prompt: In order to ensure normal operation of the phone, please make sure to use the designated charger.**

## **2.4. Security Password**

### **■ PIN**

PIN (Personal Identification Number) is used to prevent your SIM card from being used illegally. PIN is usually provided with SIM card together. If you input wrong PIN for continuous three times, please input PUK to unlock it. Please contact with network operations company for more details.

### **■ PIN 2**

You need to input PIN2 when entering some functions (such as call charge); if you input wrong PIN2 for continuous three times,

you need to input PUK2 to unlock it. Please contact with network operations company for more details.

■ **PUK**

When changing the locked PIN, you need to input PUK (Personal Unlock Key). PUK is provided with SIM card together. If it is not provided, please contact with your service provider. If you input wrong PUK for continuous ten times, the SIM card can't be used again. Please contact with your service provider to buy new card. You can't change PUK. If you lose the code, please contact with your service provider.

■ **PUK2**

When changing the locked PIN2, you need to input PUK2. If you input wrong PUK2 for continuous ten times, you can't use the functions that need PIN2. Please contact with your service provider to buy new card. You can't change PUK 2. If you lose the code, please contact with your service provider.

### **3. Quick User Guide**

#### **3.1. Feature Functions**

The phone has not only the basic functions of mobile phone,

but also support rich, practical and rapid feature functions, can be briefly introduced as follows:

- **Contacts:** Each name card holder record stored in the phone can be related with several telephone numbers at most, the phone can store 300 records at most; can send SMS in the name card holder; you can copy name card holder record between SIM card and the phone.
- **Profiles:** Custom the ringtone (include ringtone settings, volume adjustment, incoming call prompt, message prompt, alarm clock prompt, key-press tone, low voltage warning tone, power-on and power-off tone) according to different events or environment.
- **Call log:** The phone will automatically store the information of call log for you to check; support to call the telephone number in the call log; support to save the telephone number in the call log to name card holder and set as rejected call; support the function of sending SMS and etc. to the telephone numbers in the call log.
- **Message:** The phone supports storing SMS and 200 pieces at most. The phone supports the storing status of SMS in SIM card and the phone.
- **Multimedia:** Your phone provides all kinds of entertainment services including player, camera, FM radio and other



functions.

- Camera: The phone supports camera and video function. You can customize the camera and video, and switch between prepositive and postpositive video captures through menu option.
- Tools: The phone supports various practical functions. Supports alarm clock, calendar, calculator and other functions.
- Settings: You can customize the phone according to the needs, include phone settings, display settings, call settings, security settings and other functions.
- Input method: The phone supports various input modes, which is convenient for you to input English, letters, numbers, symbols, and etc.

### **3.2. Dial a Call**

In standby mode, press numerical keys to input phone number to dial phone number. When you finish inputting phone number, press the dial key to make a call. If you're making a long distance call, add the area code preceding the telephone number.

### **3.3. Reject a Call**

You can press End key to reject an incoming call.

### **3.4. Receive a Call**

When an incoming call arrives, the phone will give out the corresponding prompt (such as vibration, ringtone, and etc.); if network support, the phone screen will show the name and telephone number of the caller; at this time, you can press Dial key to receive an incoming call.

### **3.5. End a Call**

After finishing a call, you can press End key to end a call.

### **3.6. Emergency Services**

You can directly dial an emergency service call without SIM card.

Different network uses different emergency numbers, please consult your network operations company for more details.

### **3.7. Extension Speed Dial**

After inputting telephone number, if you want to input branch

number, please press and hold “\*”, input your extension number after the display screen shows “P”. After getting through the call, it will directly dial the extension.

### **3.8. Dialed Calls/Missed Calls/Received Calls/Rejected Calls**

You can enter call log to check the relevant details of dialed calls, missed calls, received calls and rejected calls.

**Prompt: The record of incoming call from blacklist number will be saved in Rejected Calls.**

### **3.9. Call Forward**

After call forward function is started, according to different forward conditions settings (Call Forward Unconditionally, Forward Busy, Forward No Answer, Forward Can Not Reach), you can select to switch the incoming call to voice inbox or other telephone numbers.

### **3.10. Call Waiting**

After call waiting function is started, when you are calling, the other call can be put through.

### **3.11. Call Barring**

After call barring function is started, according to different restricted conditions settings (all the dialed calls, all the incoming calls, incoming calls when roaming, dialed international calls, outgoing international calls when roaming), you can restrict the call under the corresponding conditions (need to apply to network operator for business).

### **3.12. Power off the Phone**

In the standby mode, press and hold End key to power off the phone.

### **3.13. T-flash Card**

Insert the T-Flash card into phone from the background. This will expand the Flash memory of the phone. Tap Multimedia menu, you can browse MP3, MP4, picture, video, photograph etc.

### **3.14. charging to another mobile phone**

The phone can charge to another mobile phone.

## 4. Function Menu

### 4.1. Dialpad

Please refer pg18 the Dial a Call

### 4.2. Contacts

This function could help you browse the name card holder, store, edit and delete the names and phone numbers in the phone and SIM card. To facilitate the management of the records, this phone sets the group function, collecting the similar items into a group. The storage capacity of the SIM card varies and the maximum storage capacity of this phone is 300.

On the standby interface, press right soft key to enter the interface of the name card holder. When the record of the name card holder is not empty, press left soft key for the following operation:

**Prompt: Take the records in SIM card 1 for example.**

#### **4.2.1. New**

Create new name card holder records to SIM card or the mobile phone.

#### **4.2.2. Write message**

Send SMS to this record.

#### **4.2.3. Call**

Dial this record directly or by means of IP call.

#### **4.2.4. Delete**

Delete this record.

#### **4.2.5. Delete multiple**

Delete multiple records you selected.

#### **4.2.6. Copy**

Copy the record to SIM cards or memory card.

#### **4.2.7. Others**

- Speed dial: Set speed dial on/off and set number.
- Own number: Edit my number.
- Service number
- Memory status: You could enquire the capacity of SIM1, SIM2 and the phone.

### **4.3. Call Logs**

Display your recent call log.

#### **4.3.1. Missed calls**

Display the list of your recent missed numbers.

On the interface of Missed, choose one record, then press left soft key “Option” to enter the Option interface and you could go on the following operations.

- Details: Display the information of dial calls (Number, Date, Time, Duration, From, Style, and SIM Name)
- Call: Recall the number.
- Write message: You could send message to this number.
- Add to contacts: Add the number to Phone/SIM1/SIM2
- Add to blacklist: Add this number to the blacklist.
- Delete: Delete this record.
- Delete all: Delete all the records in the Missed list.

#### **4.3.2. Dialed calls**

Display the list of your recent dialed numbers. The operation is the same as the Missed.

#### **4.3.3. Received calls**

Display the list of your recent answered numbers. The operation is the same as the Missed.

#### **4.3.4. Rejected calls**

Display the incoming call records in the blacklist. The operation is



the same as the Missed.

#### **4.3.5. Delete all**

You could delete all the records of the Dialed, Received, Missed and Rejected.

#### **4.3.6. Call timer**

Display information details of SIM1/SIM2: Last Call, Received Calls, Dialed Calls, and All Calls. Press left soft key to "Reset".

#### **4.3.7. GPRS counter**

Display information details of SIM1/SIM2: Last sent, Last received, Total sent, and Total received. Press left soft key to "Reset".

### **4.4 Image**

Enter the images list interface, press left soft key, you could go on the following operations.

- Set as wallpaper: set this image as wallpaper
- Set as contact icon: set this image as contact icon
- Delete: delete this image.
- Share: send this file to Bluetooth.
- Mark: choose the image or all of the images.
- Rename: rename the file
- Slide play: view this file as full screen.
- Details: to show the images details.

## **4.5 Message**

### **4.5.1 Chat mode**

The Mobile phone support voice key display function.

### **4.5.2 Write Message**

You could write new message by using this function. When you input the message to be sent, press left soft key to send, to insert the templates, to add contact person information and symbol, and to save, etc.

--Send: Enter the interface of input number, you can dial the

phone number directly, or press left soft key to enter the name card holder and choose the number to send.

- Insert template: Enter the templates interface and you could insert the template to the message.
- Add contact info: Enter the Name card holder interface and you could insert the name card holder information to the message.
- Add phiz: Enter the symbol interface and add the symbols to the message.
- Save as drafts: Save this message to the drafts.
- Exit: Return to previous menu.

### **4.5.3 Inbox**

Store the SMS message you've received. The SMS message could be differentiated by different icons. The icons before the message list means whether this message is SMS message and which is stored in SIM1, SIM2 or the phone.

Choose one SMS press left soft key, then you will do several operations, for example, reply the SMS, delete, dial and mark. Press OK key directly you can read this SMS.

- Reply: You could choose to reply the addresser by SMS.

- — Delete: Delete this message.
- — Call: Call the addresser.
- — Lock/unlock: Lock the message or unlock it.
- — Mark: Choose this message or all messages in the inbox, or only choose the messages saved in SIM 1, SIM 2, SIM1 storage SMS or SIM2 storage SMS
- — Sort: Sort the messages in the inbox by time, contact person, theme or message type.
- — Delete repeated numbers: Delete all the messages of the same number.

#### **4.5.4 Outbox**

Store the SMS you've sent in failure. The SMS could be differentiated by different icons. The two icons before the message list means whether this message is SMS, and it is stored in SIM1, SIM2 or the phone.

Choose one SMS and press left soft key, you could send, delete, lock, mark, sort, and so on.

#### **4.5.5 Drafts**

Store the SMS you've edited. The SMS could be differentiated by different icons. The two icons before the message list means whether this message is SMS, and it is stored in SIM1, SIM2 or the phone.

Choose one SMS press left soft key, you could delete, edit, lock, mark, sort, and so on.

#### **4.5.6 Sentbox**

Store the SMS you've sent successfully. The SMS could be differentiated by different icons. The two icons before the message list means whether this message is SMS, and it is stored in SIM1, SIM2 or the phone.

Choose one SMS and press left soft key, you could delete, forward, lock, mark, sort, and so on.

#### **4.5.7 Templates**

You could edit or delete the templates.

#### 4.5.8 Settings

##### ■ SMS Settings

There are seven options: SIM 1 service center, SIM2 service center, service center validity period, status report, save sent message, prior storage medium.

--SIM1 msg center: Display the SMS service center number in SIM1.

--SIM2 msg center: Display the SMS service center number in SIM2.

--Message validity period: You could set the validity period of the message for 1 hour, 6 hours, 24 hours, 72 hours, 1 week and the maximum value.

**Prompt: This time is related with the services of the network operator.**

--Status report: May choose to start up or shut down the delivery report. After switching this function as on, when the receiver gets the message or doesn't get for some reason, the SMS service center will give you a delivery report, so you will know whether your message sent successfully or not conveniently.

--Save sent messages: There are three options: "prompt", "Save", "Not save".

Prompt: Before sending the message, you will be suggested to choose “Send and Save” or “Send only”.

Save: Save automatically your sent message.

Not save: Not to save automatically your sent message.

--Preferred storage: You could choose the preferential storage position at SIM card or phone.

#### **4.5.9 Message capacity**

You could view the capacity of SMS.

#### **4.6 Camera**

You can take photo at any time .The photo can be used as wallpaper of your device or you can send it to your friends through Bluetooth.

On the photo preview interface, press Middle key to get a picture. Press the left soft key, and you can carry out such operations as Store photos, DV mode and Settings. If you press settings you get the following options:

—Quality: There are three options in photo image quality: Advanced, Common and Low. The default mode will be “Common”.

—Flickers setting: You can set as 50Hz or 60Hz.

—Shutter sound: You can set up the sound of shutter as: Active or Off.

—Auto save: You can select “Active” or “Off”.

—Storage: You can save it to the memory card.

**Prompt: Observe photographing related local laws and regulations. Do not use the function in illegal way.**

#### **4.7 Audio**

This phone could play the MP3 stored in the phone memory and support the background play.

Press "MP3" key to enter and use the Navigation keys to operate the MP3 player.

Press up key and down key to adjust volume. Press left soft key to access Options:

On the audio player interface, move cursor to the shortcut keys on the screen, you could rapidly operate the MP3 functions.

Under the MP3 list interface, press left soft key, then you can do operations as follows:

--Music list: Display all the MP3 or the play list you've



saved.

--Add: Add the selected MP3 to the list.

--Set as ringtone: Set the selected MP3 as the call ring or alarm ring of the incoming call.

--Shuffle: Activated/off.

--Repeat: off/all/one.

--Settings: Set the music setting display, Equalizer, BT stereo output, BT stereo headset.

--Open review: You can choose to open or close A-B answer read function

--Exit: Return to previous menu.

## **4.8 Multimedia**

### **4.8.1 Video**

Use this function to play video files. By pressing the direction key can you control the playing process of video player: play/pause (OK key) ,switch to last video/next video (press left or right direction key) , fast forward (press and hold right direction key) and rewind (press and hold left direction key). In video player interface, you can press the Up/Down key to tune volume, number key 0 to switch to full screen play.

#### **4.8.2 Recorder**

Use this function you can record or listen to your own record. The phone support AMR\WAV. The recording file you stopped would be stored in file list automatically.

#### **4.9 Games**

The game of Sokoban will allow you to play very happy.

#### **4.10 FM Radio**

You can listen to Fm radio freely. Enter the radio interface, adjust volume by pressing the up and down direction keys, and change previous or next channel by pressing the left and right direction keys.

On the interface of the Radio playing, press left soft key you could enter the options menu and do operations as follows:

- Auto search and save: Search frequency available automatically and save it to broadcasting station list.

- Channel list: You can view all the broadcasting stations you saved.

- Save: Save the frequency you searched to the list.

- Manual search: Search the broadcasting station by input

frequency manually.

--Open/Close speaker: You can start up loudspeaker to make the sound louder.

--Background play: When the function is on, you can do other operations while listening to the radio.

--Record: You can record your favorite music or program. To record, make sure that the radio is powered ON.

-- Record File list: Select File list to check your previously stored files.

--Help

**Prompt: Please connect with the earphone before you listen to the radio, for the device is equal to radio antenna.**

## **4.11 DV**

The device is equipped with a video capture so that you can chat with your friends through it. A driver is needed to be installed when the video capture function is used. The details can be found in driver installation guide.

-- Size: You can set the photo image size.

-- Brightness: Six levels of brightness are available.

-- Contrast: Six levels of contrast are available.

-- Effect: The special effect can be classified into:

normal, black and white, red, green, blue, yellow, canvas and negative.

In camera preview interface press left soft key you can enter options menu as follows:

- — Settings:
- Flickers setting : You can set as 50Hz or 60Hz.

#### **4.12 Bluetooth**

- Activated/Close Bluetooth

- Bluetooth visibility

You can choose “Activated” or “close” Bluetooth visibility. If the Bluetooth visibility is close, others cannot search your phone.

- Paired device

You can search different Bluetooth equipments and find compatible ones (as long as the PIN codes of two Bluetooth equipments are identical with each other, the match will be successful. The PIN code of Bluetooth earphone is different due to different type, and you can find the code in operating manual of the Bluetooth earphone.).

- My Bluetooth name

You can change the name of the phone.

- Bluetooth file storage

■ Help

You can view the operating instruction of Bluetooth.

### **4.13 STK**

This function is provided by network supplier, such as mobile monternet, M-zone, global and some other brand increment service. This function isn't available if it is beyond SIM card and network supplier's support. So please contact network supplier to get more.

### **4.14 Organizer**

#### **4.14.1 Calendar**

You can use this feature to view the year and date easily. Use up/down/left/right direction key to navigator other date.

- — Add new schedule: Add a new schedule.
- — View Schedules : View the schedule.
- — All Schedules: Display all schedules.
- — Clear today is tasks: Delete today schedule.
- — Clear All: Delete all schedules.
- — Go to Date: Enter the Solar calendar and it can go to the

date you want to check.

#### **4.14.2 Calculator**

The function will make your device a calculator with which you can carry out simple math calculation.

#### **4.14.3 Clock**

You can edit alarm, time, ring and repeated ring mode.

In “ alarm edit” mode, you can scroll up or down direction key, when the cursor goes to the desired option, press “OK”, then you can select desired settings.

The alarm clock feature sounds an alert or makes a vibration alert at a time you specify.

#### **4.15 My Files**

You can check the specific content and service condition of the phone memory via this function. Meanwhile, you can format memory, too.

**Prompt: There is no own memory capacity in the phone.**

#### **4.16 Internet**

The device is compatible with WAP service. You can visit various WAP services, for instance, news, weather forecast and airlines etc. The services are specially designed for the device and are maintained by WAP service supplier.

WAP service requires network backup. You can consult the network operator or service supplier about the availability, rates and tax of WAP services.

Select SIM/SIM2 to enter:

#### **4.17 Profiles**

User profiles define how your phone reacts when you receive a call or a message, how your keypad sounds when you press the keypad, and more. Each of the available profiles can be left at their default setting or customized to suit your needs. Select and customize the most suitable profiles for your situation. The available modes are Normal, Silent, Meeting, Indoor and Outdoor.

#### **4.18 Settings**

You can customize the settings, such as time and date, language, call settings etc.

#### **4.18.1 Phone settings**

- Time & date: You can set up the date and time on the phone as well as their display mode.
- Language settings: You can select phone language.
- Auto Power on/off: You can set the time and repeat mode of power-on and power-off.
- Power : You can view the electric quantity of your battery.
- Restore factory settings: You can restore part of the phone settings as factory settings. The default code of restoring factory settings is: 1234.

#### **4.18.2 Display**

- Animation effect:
  - —Power on display
  - —Power off display
- Wallpaper settings: You can set as default wallpaper image as well as more other wallpaper images.
- Contrast: On the screen backlight interface you can set different lightness of your phone by pressing the left/right direction key.



- Keypad backlight time:
  - 20secs
  - 10secs
  - 5secs
  - night mode
  - Off

### 4.18.3 Security settings

#### — PIN

You can start up, shut down or modify PIN code. Correct PIN code shall be input when you unlock or shut down PIN code. If PIN code verification is started up, each time when you switch on your phone, you will have to input PIN code. If you input mistaken PIN codes three times in a row, SIM card will be locked. You will have to get PUK1 code to unlock it. Please contact network operator to get PUK1 code when necessary.

The default PIN code is 1234.

#### — Modify PIN2

You can modify PIN2 code. For details, please contact network operator.

——Phone locked

You can start up or shut down “phone locked” or revise it. When “phone locked” is started up, you will have to input “password” each time when you use the phone. The default phone password is 1234.

——Modify the cellphone password

——Privacy

You can review privacy protection password. Besides, you can also set passwords for some menus, in this way, you will have to input password each time when you desire to open the menus. The default password of privacy protection mode is 1234.

——Lock screen by end-key

— Activated

— Off

——Fixed dial number

——Blacklist

— Blacklist list

— Blacklist settings

#### **4.18.4 Call Settings**

■ Dual-SIM

- Standby mode: Only SIM1 enable/ Only SIM2 enable/  
Dual SIM dual standby
- Reply by original SIM: Call/SMS Reply by original  
SIM
- Set SIM name: You can set any name you like as the  
name of SIM card slot.
- Call divert: When “call divert” function is started up, you  
can transfer the incoming call to voice inbox or other phone  
number according to the scheduled “ call divert” conditions.
  - Call forwarding unconditional: All incoming calls  
will be transferred to voice inbox or  
other phone number according to  
the setup.
  - Call forwarding on busy: When your number is  
busy, the incoming calls will be  
transferred to voice inbox or other  
phone number according to the  
setup.
  - Call forwarding on no reply: When there are  
missed calls in your phone, they  
will be transferred to voice inbox or  
other phone number according to  
the setup.

——Divert If Unreachable: When your phone is power off or out of the service area, the incoming calls will be transferred to voice inbox or other phone number according to the setup.

——Cancel All Diverts: You can delete all settings of call divert.

■ Call waiting: You can start up or shut down the function. When it is started up, even when you are making a call, you can also receive another income call.

■ Call barring: All outgoing calls, incoming calls, roaming incoming calls, international outgoing calls, roaming international outgoing calls are available.

——All outgoing calls: Activate/Deactivate/Check Status

——All incoming calls: Activate/Deactivate/Check Status

——Incoming calls when roaming: Activate/Deactivate/Check Status

——ISD calling: Activate/Deactivate/Check Status

——Dial when INTL roaming: Activate/Deactivate/Check Status

——Cancel all barring : Cancel all restrictions on the

call.

——Change Password: You can consult your network operator about the call barring password.

**Prompt: The above-mentioned function will have to need network support. To use the function, please contact your network service provider.**

- Hide ID: This function must be supported by network.  
Select SIM1/SIM2
  - Hide ID
  - Display own ID
  - Display ID by Network
- Others:
  - IP shortcut key: In this function, you can set IP call to enter the number.
  - Call time minute reminder
  - Auto redial: Activate/ Deactivate
  - Vibration when connected: Activated/Off
  - Auto record voice call: Activated/Off

#### **4.18.5 Network setting**

- Network account

You can select network count which you want to use.

- GPRS Service

Activated/Off

- Data connection settings

You can select connect when needed, always connect.

- Network selection

This function can let you select the network manually or automatically when the phone is in the roaming state. You can use this function only after you have made an effective roaming.

Select SIM1/SIM2 and then access:

– Auto Select: Press the left key and Ok, the mobile phone will search various networks. This operation will let your phone register the most suitable network.

– Manual Select: Press the left soft key and Ok, the mobile phone will search various networks. You can select the suitable network from the listed networks.

## 5 Text Input

The device provides several text input modes so that you can

write text or input data in your “contacts”, edit “contacts” record, search English names and write SMS and to-do list.

In “text input” mode, if you want to change the input way, you can press “#” key. The selected input way will appear on the top left of the screen.

### **Letter (Capital, Normal)**

Enter edit page, press “#” and switch the input mode to “letter”, then press the keys on keypad, selected letters will appear on the screen.

Press the number key can get the first letter marked on the key, press twice quickly can get the second letter marked on the key. Similarly, if the letter you want to input have the same key with the former letter, please wait until the cursor appears again, then input the new letter.

For example, if you want to input “ok”, you need to press the “6” key three times continuously and get “o”, then press the key “5” twice, “k” will appear on the screen. Press right soft key, you can delete the text you input.

### **Number**

Enter “edit” mode, press “#” key you can change the input way to “number”. Then press the keys, number will appear on the screen. The key 0-9 separately represents the figure from 0 to 9.

You can press corresponding key to get desired number. Press right soft key can delete the number you input.

### **Punctuation**

Enter the “edit” mode, press key “\*”, the punctuations will appear. You can scroll the direction key so that the cursor can select desired punctuation. Press right soft key can select the desired punctuation.

## **6 Care and Maintenance**

### Maintenance of battery

- Your device is powered by a rechargeable battery. It is necessary to have the battery charged when it is going to wear out. The full performance of a new battery is achieved only when it is fully wore out.
- Unplug the charger from the electrical plug and the device when not in use. Do not leave fully a charged battery connected to a charger over a week, since overcharging may shorten its lifetime.
- Temperature tends to affect the limit of battery to be charged. Therefore, it is necessary for the battery to be cooled or warmed before it is charged. If the temperature of batter exceeds 40°C ,the



battery cannot be charged.

- Use the battery only for its intended purpose and avoid short-circuiting. Accidental short-circuiting can occur when a metallic object causes direct connection of the positive (+) and negative (-) terminals of the battery.
- Do not use damaged battery.
- Leave the battery in hot or cold places will reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.
- Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations.

Care of maintenance of your device

The suggestions below will help you protect your warranty coverage.

- Keep the device and accessories out of the reach of small children.
- Keep the device dry. All types of liquids or moisture will corrode electronic circuits.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices and warp or melt certain plastics.
- Do not attempt to open the device other than as instructed in this guide. Non-professional handling may damage the device.
- Do not use harsh chemicals or strong detergents to clean the

device.

·Use only the supplied or an approved replacement attachments, for the unauthorized ones could invalidate the warranty of maintenance.

### **FCC Caution.**

#### **§ 15.19 Labelling requirements.**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### **§ 15.21 Information to user.**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### **§ 15.105 Information to the user.**

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a

residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Specific Absorption Rate (SAR) information:**

This GSM Mobile Phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: i3249(FCC ID:

PQ4IPRO13249) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.70W/kg and when properly worn on the body is 0.91W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

#### **Body-worn Operation**

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.5 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.