

# I324S User's Manual

Dear customer:

Thank you for choosing this mobile phone. This mobile phone incorporates the latest world advanced functions, enabling simple and convenient operation, satisfying your special requirements.

The mobile phone supports T-FLASH (memory) card and Dual SIM standby. It integrates the following available functions: SMS, MP3, MP4, Camera, FM radio, Video recorder and Calendar, enabling you arranging your work, study and life freely; with long standby duration, as well as Alarm and Calculator, your communication will be easier and smoother; powerful File manager allows you managing the files conveniently. In addition, the chord ringtone allows you selecting music to set as ringtone; the personalized appearance also can satisfy your selection.

# Contents

Keys functions.....	3
Call.....	4
Smart assistant.....	4
Contacts.....	4
Call history.....	5
Multimedia.....	5
Messages.....	7
Games.....	7
Settings.....	8
File Manager.....	9
Organizer.....	9

## Keys functions

Keys	Functions
<b>Left soft key</b>	Press this key to enter the main menu under standby mode; Press this key to confirm the function you choose; Press this key to answer a call.
<b>Right soft key</b>	Press this key to enter phonebook list under standby mode; Press this key to go back to previous menu; Press this key to reject a call.
<b>Call key</b>	Press this key to call out; Press to pick up phone when there is an incoming call; Press to enter call logs under standby mode.
<b>End key</b>	Power Off: Long press to power off under standby mode; Power On: Long press to power on if the phone is power off; Press this key to go back to standby screen.
<b>Navigation keys</b>	Press them to scroll the options when browsing a function list. In edit state, press direction keys to navigate. Under standby mode, press a direction key to enter the specified function page. You can also customize direction keys to match the desired functions.
<b>OK key</b>	Press OK key to confirm, Standby mode, press "ok" button to enter the main menu
<b>Number keys</b>	Dial numbers under standby mode and enter numbers and characters in editing mode. Under standby mode, long press ‘0’ this key to open/close the torch.
<b>* key</b>	Under standby mode, press * key twice to display “+” to call international numbers;”P” and “W” to call extension numbers. Help to lock the keypad with pressing left soft key first.
<b># key</b>	Under standby mode, press and hold this key to switch between general mode ,Silent mode and meeting mode. Under players and FM mode, press # key to increase volume.

## **Call**

---

Under standby interface, input a phone number and press the Call key to make a call by SIM1/SIM2. To end or reject a receiving call, press the End key.

## **Smart assistant**

---

To enter this menu, you can see three options, Bluetooth, My device and Assistant message, Here provide the function of Bluetooth, can through Bluetooth, mobile phones do not insert SIM card, connect the other mobile phone, but can dial the phone.

## **Contacts**

---

Phone contact can store up to 200 phone numbers, Select Add new contact, you can create new contacts on the phone or SIM card, press Options, you can View: View, Send text message, Call, Edit, Delete, Copy, Send business card, Add to Blacklist, Mark several and Phonebook Settings. The Phonebook page right, can view the connection contacts in the mobile phone Bluetooth devices.

## **Call history**

---

In the main menu, you can view Call History and Call settings. Enter the Call History, There are Missed calls/Dialed calls/Received calls/All calls. You can also press call key to enter call logs.

## **Multimedia**

---

### **◆ Camera**

Camera supports photographing function .you can take pictures with the embedded camera and adjust the camera settings. The camera lens is in the rear side of the mobile phone and the screen is the viewfinder window. The pictures are taken in JPG format. After downloading to PC, please view with appropriate software. If the mobile phone memory is insufficient, please delete certain pictures or other files in “File manager”.

### **◆ Video recorder**

Press OK key to start video recording. The recording time depends on the time limit and the capacity of the memory card. Enter options to perform the following settings: Switch to camera, Camcorder setting, Video settings and Storage.

### ◆ **Audio player**

Press OK to play music, or so key to choose songs, Enter Audio player.

Press left soft key to enter options: Play, Details, Add, Remove, Remove all, Settings. You can also connect Bluetooth play music.

### ◆ **Video player**

Enter Video player. Press left soft key to enter options: Play, Send, Rename, Delete and Delete all files.

### ◆ **Gallery**

With this function, you can select any picture and press left soft key to perform the following operations: View, Send, Use as, Rename, Delete. Delete all files and Image information.

### ◆ **FM Radio**

To use the FM Radio, You can perform the followings operations as your need: Channel list, Manual input, Auto search, Settings, Record And File list. Don't put headphones can also searching.

### ◆ **Recorder**

Enter Sound recorder. press left soft key and you can do: New record, List .

It can record sound.

## **Messages**

---

Enter this menu, you can view: Write message, Inbox, Drafts, Outbox, Sent messages, SMS templates, SMS settings. The capacity of messages is due to maximum storage capacity built in mobile phone and external SIM cards. And you can check the memory status of the SIM cards or mobile phone.

## **Games**

---

In this menu, you can perform: Doodle Jump, Crossy Road, Bubble Party Mix, Super pet twist. In your leisure time, you can try to play the game, to relax your mood, the mobile phone provides you with Four small game, you can control the volume of the size of the game in the game Settings.

## Settings

---

- ◆ Profiles: This mobile phone is provided with several profiles. You can customize the ringtone according to events and environment. You can customize a profile and activate it. Available options are:
  - ❖ General
  - ❖ Silent
  - ❖ Meeting
  - ❖ Outdoor
- ◆ Phone settings: In this menu, you can perform: Time and date, Schedule power n/off, Language, Pref. input method, Display, Shortcuts, Dedicated keys, Flight mode and Misc. settings. It has four languages, Is the Russian and English, Spanish, Portuguese, French, The default language is English.
- ◆ Security settings: To protect personal privacy, you can set SIM security, Phone lock and Auto keypad lock. Can guarantee your safety performance of the phone.
- ◆ Network settings: In this menu, you can choose the network for the SIM card selection.
- ◆ Dual SIM settings: Due to dual SIM cards phone design, user can set SIM card by 'Dual SIM settings', Such as Dual SIM open, Only SIM1 open, Only SIM2 open.



- ◆ Connectivity: In this menu, You can choose and change your network parameters.
- ◆ Call settings: Enter this Call settings, you can view: SIM call settings, Advanced settings. Enter this Advanced, you can view: Blacklist, Auto call recorder, Call time reminder And Answer mode.
- ◆ Restore settings: To reset the factory setting, please input the password '1122'.

## **File Manager**

---

File Manager explores the files in phone and external memory card. In this menu, you can manage the pictures, MP3 files and other folders etc in this menu.

## **Organizer**

---

This function provides different kinds of services including, Alarm, Calendar, Calculator, SIM toolkit, World clock, Torch, Stopwatch. It is convenient and good for you to arrange your life orderly every day and make your life become lively and beautiful.

# FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.5cm must be maintained between the user's body and the device, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.