 


IPRODA

User Manual

10.1" Wi-Fi DIGITAL Photo Frame

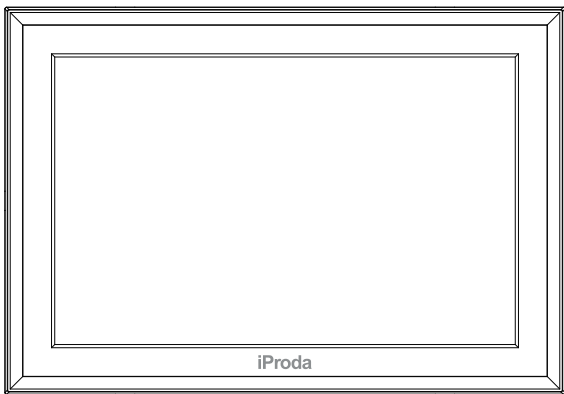

Model: F1044P0BP

iProda Tech support support1@iproda.com

(1 year warranty, 24/7 after-sales service)

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.


CATALOG

Product Specification	1
Package List	1
Ports and Product Overview	2
Installation Guide	3
Warm Tips	4
How to start using	5 - 6
Q&A	7


Product Specification :

Screen:	10.1 Inch IPS-LCD Screen, Touch Panel
Resolution:	1280×800
Aspect Ratio:	16: 10
Display Area:	21.6×13.5 CM
Solution(Chipset):	RK3126C, RAM 2G + ROM 16G
Software:	Uhale photo
WiFi-Connected:	2.4Ghz
Card Slot:	Micro SD(TF) Card
Interface:	Type-C
Power Supply:	DC 5V

 Package List:

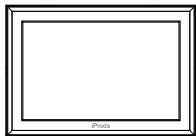

Main Part

 

DC Power Cord



Power Adapter

 


Photo Frame Bracket

 


User Manual

Ports and Product Overview:

1. POWER BUTTON

- After connecting the power adapter, the device system automatically starts up by default.
- Press and hold powerbutton 3 seconds to access reboot or power off menu.
- Short press onpower button will turn off / on screen (but leave the photo frame in on position).

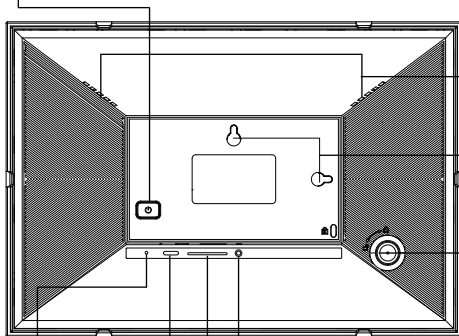

6. SPEAKER

audio playback for videos.

7. WALL MOUNT HOLES

8. STAND INSERT

slot to insert the included stand.

5. DC IN

connect DC adapter to power on the device.

4. MICRO SD SLOT

insert a Micro SD(TF) Card to import photos to the iProda photo frame.

 
3. TYPE- C SLOT - You can copy photos from the unit to the USB stick.

Note: The USB port is just for data transfer, not for charging.

2. RESET - use a needle or paper clip to reset unit.


Share photos

You can share photos/videos in four ways.

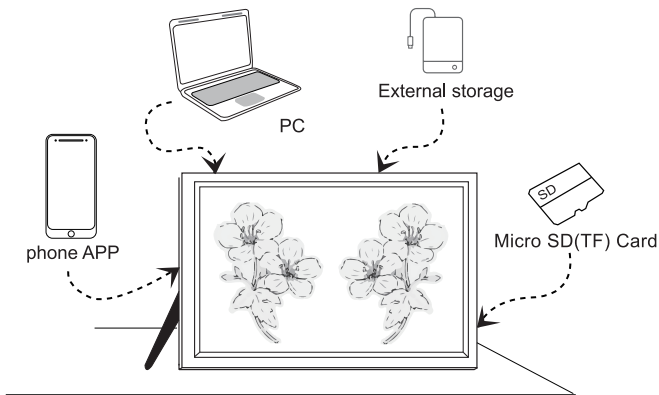

Installation Guide:

 Lay the device face down on a flat surface, and align the holes of base plate (A) with the holes on the back of the device.

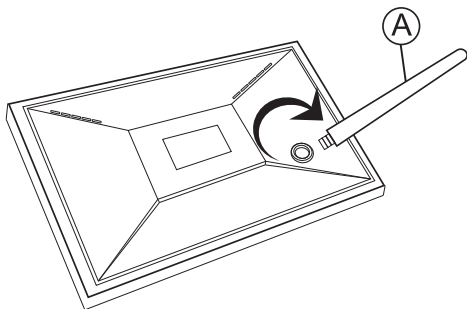

Warm Tips:

If you decide to return this device.

Please restore the device to factory settings and delete the username added in the mobile software to protect your privacy.

Note: *When the USB drive is inserted into the iProda photo frame, it will be recognized as an "SD card". If both the Micro SD card and USB drive are inserted, the frame can recognize both the Micro SD (TF) card and USB drive.*

How to start using:

Please insert the plug, and switch on the power.

STEP 1- Power it on

First Time Setup

1. Set language used for a iProda photo frame.
2. Select Wi-Fi.
3. Set time zone / name for a photo frame.

4. Click the "Add friend" icon  on your iProda frame.
A dialog will appear and show both QR code and pairing code (valid for 12 hours).

STEP 2 - Download APP

 
You can download "Uhale" app from Google Play or App Store.
Or scan the QR code below



STEP 3 - Connecting



Open Uhale App, click the frame tag, either scan the frame's QR code or enter the pairing code to add the frame.

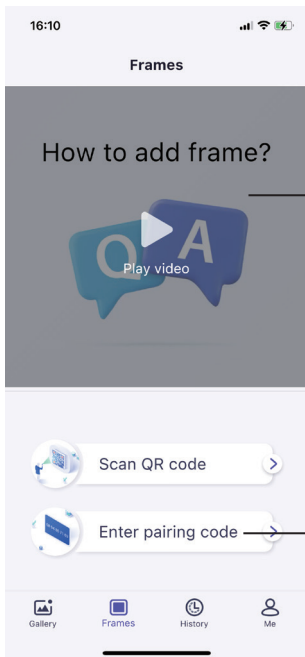

Watching the video for detailed operation steps

Enter the pairing code of the digital photo frame to connect

**Completed the above steps,
you can start uploading your photos and playing**

Q&A:

If you experience problems with your photo uhale, check below for advice.

If you don't find a solution here, contact iProda Tech support
support1@iproda.com (1 year warranty, 24/7 after-sales service)

Q: Cannot send photos?

A: Check that the photo uhale is connected to the uhale app with the generated code.

Q: Cannot send videos?

A: Video only supports up to 30 seconds. Videos from Micro SD card or USB to the photo uhale are not supported.

Q: Operation issues with uhale app?

A: Open the purchasing listing link to download the uhale application manual or the uhale application manual inside the package.

Q: Sound distortion?

A: Adjust to a lower volume level. Take the video through the uhale App.

Q: Cannot turn on the photo uhale?

A: Check that the DC IN connector is securely connected and the AC adaptor is securely connected to a wall socket. Reset the photo frame using a needle or paper clip, press the reset hole to reboot the photo uhale.

Q: Imported photo quality is low resolution/pixelated?

A: Photos that are imported will be automatically compressed. Please use the uhale app to keep the picture's original resolution.

Q: Cannot import videos?

A: Videos are only supported through the uhale app.

Q: React is not working?

A: React is only supported for photos through the uhale app. Imported photos will not work.

IPRODA



MADE IN CHINA