 





Function selection mode

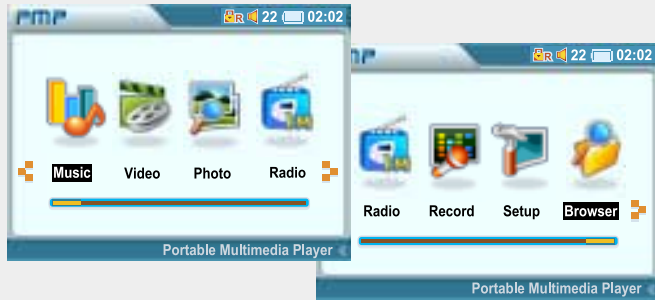

- ① Music : Playing music files.
- ② Video : Playing video files.
- ③ Photo : Viewing photo files.
- ④ Radio : FM radio listening.
- ⑤ Record: Recording from the Mic(Int/Ext) or connected equipment
- ⑥ Setup: Customizing the function setting.
- ⑦ Browser : Searching folders/files



 Music playback

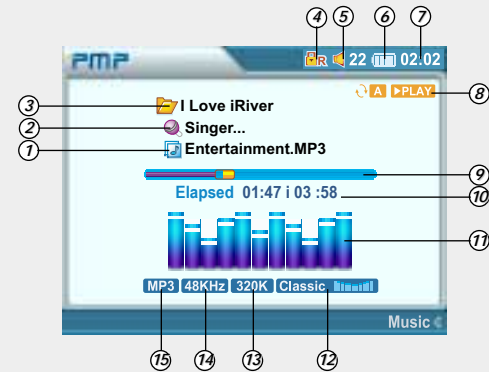

- | | |
|---|-------------------------------|
| ① File name | ⑧ Playback mode/status |
| ② Artist | ⑨ Progressive Bar |
| ③ Folder Name(Title) | ⑩ Play time(Elapsed Remain) |
| ④ Hold indicator
(Machine/Remote control/Both) | ⑪ Level Meter |
| ⑤ Volume level | ⑫ EQ mode |
| ⑥ Battery indicator | ⑬ Bit Rate |
| ⑦ Clock | ⑭ Sampling Rate |
| | ⑮ File Format |



Video playback



FM radio mode



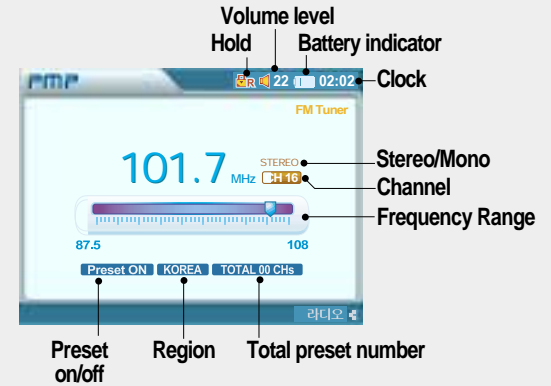 


Photo view

 

Recording Mode

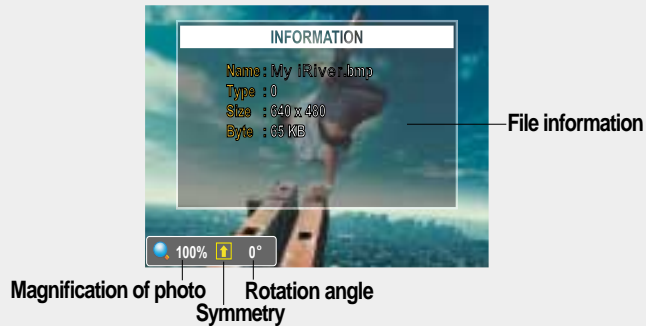 

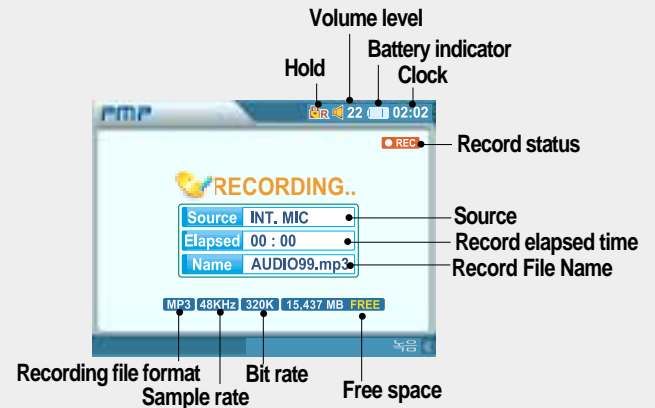

about battery indicator

1 If the battery is fully discharged...

If the battery is fully discharged, the red battery icon is blinked in the system LCD.

- The may not charge if you switch to playback mode during USB charging.

	Fully charged
	-
	used
	-
	Fully discharged

2 If the battery is all worn out...

If the battery is all worn out, the player turn off after "Low Battery" is displayed on the LCD.



 
- Note**
- If the player turn off because the battery is all worn out, please turn on the player after connect the AC adapter and charge over the 20 second.
 - If the battery is detached while the player is operated by AC adapter, the player is turn off for system protection.



Use only the AC Power Adapter supplied with the player.
The AC operating voltage of this player is 100~240V, 50/60Hz.

Charging at the power off mode


1 Charging by using AC adapter




- 1 Connect the AC adapter to the player's DC IN 5.0V connector.



 
- 2 Connect the AC adapter plug to a power socket. (AC adapter for this player is 120~240V, 50/60Hz.)
If a power source is connected when the player is turned off, a charging indicator light will illuminate while the player is charging.

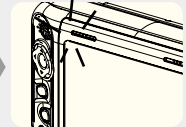

 - 3 The light will turn off when charging is complete.

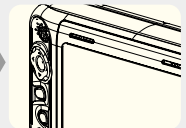

 - 4 Press the POWER button while charging to start the player in Function selection mode.

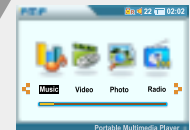

- Note**
- When AC adapter is connected to player without rechargeable battery the player will not operate.



Charging at the power off mode

 
② Charging by using USB cable




1 Push the USB lock to open the protective cover.



2 Connect the USB cable to the player's USB Port.



 3 Connect the USB cable to the PC's USB port. A charging indicator light will illuminate while the player is charging.

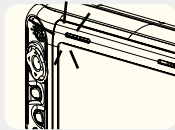

4 The light will turn off when charging is complete.



Charging at power on mode

① Charging by using AC adapter

 
1 If the battery is fully discharged, the red battery icon is blinked in the system LCD.




2 If the battery is all worn out, turn off the power after "Low Battery" is displayed on the LCD.




3 Connect the AC adapter to the player's DC IN 5.0V connector.



 4 Connect the AC adapter plug to a power socket. If a power source is connected when the player is turned off, a charging indicator light will illuminate while the player is charging.

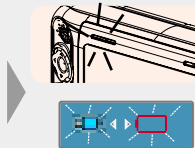

 5 The light will turn off when charging is complete.

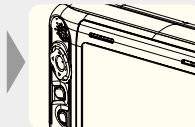

- The charging time : Approx. 2.5~3 hours (At full discharge)
- The discharging(play) time : Approx. 4 hours (At video playback)

2-3. Connecting and installation

Getting started

 


You can detach or attach the battery to for the new battery is changed.

About the Rechargeable battery

1 Battery detach

Press the lock to release the battery and slide it out of the player.

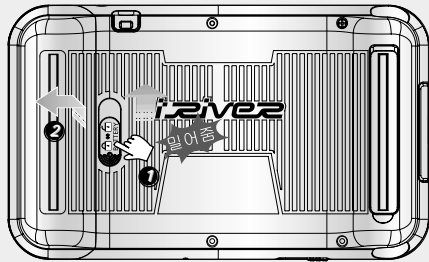

2 Battery attach

Slide the battery onto the player until it locks into place.

- Note**
- Charge and store the battery at room temperature. It may not charge properly in hot or cold temperature environments.

- !**
- Do not attempt to disassemble the battery. Do not expose the battery to open flame.
 - These activities could cause the battery to explode resulting in serious injury.
 - Do not contact the connectors of the battery to metal objects, or an electrical shock may occur.

 
2-3. Connecting and installation

Getting started



Connecting the remote control/earphones


1. Connect the remote control to the socket on the top of the player.
2. Connect the earphones jack to the earphone socket of the remote control.

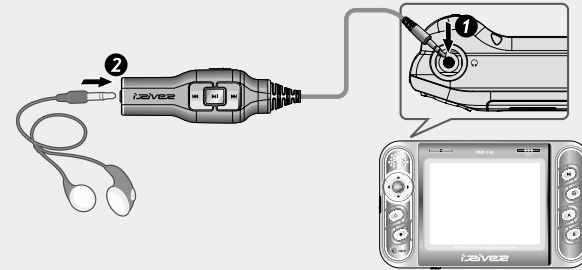

Connecting to audio equipment

Line-In : Connects external input devices for Line-In recording.

 
1. Connect the Line-Out or earphone socket of the external device to the Line-In socket of the player with the Line In/Out cable.
2. Use the recording feature to record with the desired setting.

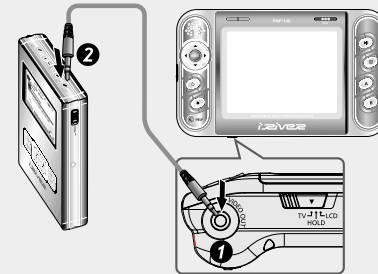




Connecting to a TV

 1. Select TV from "TV/HOLD/LCD" switch.
2. Connect AV cable with player as shown on the diagram below.
3. Connect RCA jack to the TV as shown on the diagram below.
(Yellow - Video, White - Audio L.ch, Red - Audio R.ch)

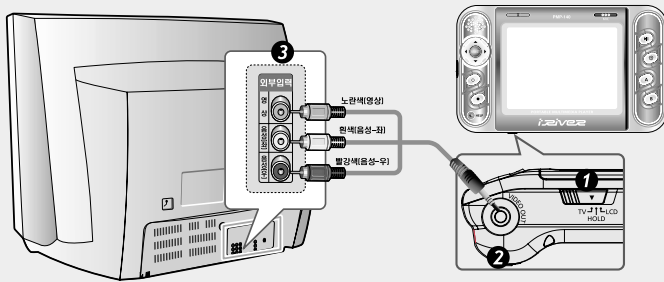

Connecting to external microphone

 To use an external microphone for recording, connect the external microphone cable to the Line-In/Video Out socket.

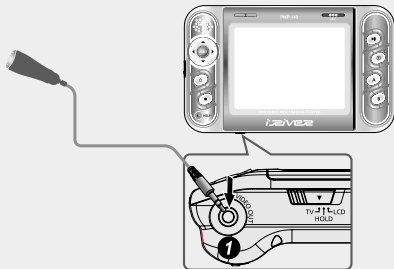

Operate the software

Windows ME, Windows 2000 and Windows XP will recognize the PMP-100 as a USB drive automatically and you can use the player with out installing PMP Manager.

For Windows 98 SE users, the PMP Manager must be installed for the computer to recognize the player.

All users must install PMP Manager to use the Database function.

① PMP Manager installation

- 1 Insert the Installation CD into the CD-ROM drive.
The installation will start automatically.



- 2 Click "Next" to continue installation.



- 3 If the product is connected, disconnect it from the PC and press the "OK"



- 4 Select the folder to Install.
Click "OK".





Operate the software

- 5** Click "Next" after confirming the installation folder.
The installation is in processing.



- 6** Click "Finish" after the installation is completed.

 


Complete the driver installation after installing the PMP Manager software.

Operate the software

2 Connecting to a PC


- 1** Connect the USB cable (provided) to the USB port of your

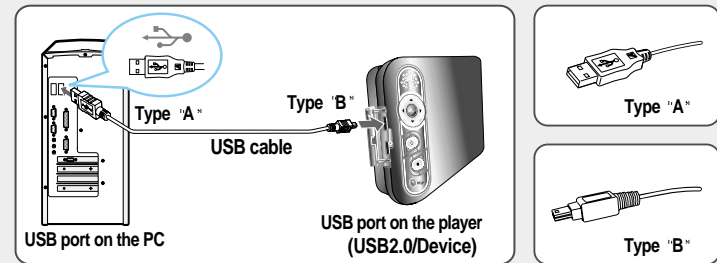

- 2** Turn on the player, open the protective cover of the USB port, and connect the USB cable. "CONNECTED" icon will appear on the LCD screen of the player.



 - 3** After installing iRiver Music Manager from the CD and connecting the player to your PC, "Found New Hardware" screen is displayed.



- 4** Select "Install the software automatically (Recommended)" and





Operate the software

- 5** If a "Hardware Installation" warning message appears, click "Continue Anyway". (Windows XP)
The iRiver software driver will not cause any damage to your computer.

 


- 6** Windows XP and Windows 2000 will display a "Device Attached" icon.

Note Windows may ask to install a driver for the PMP. Please follow the provided driver installation guide on the following page.



- 7** Once installed, open Windows Explorer and an additional drive should be listed called "PMP-100".

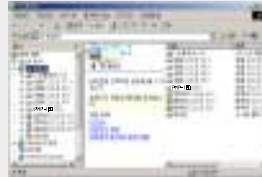

Complete the driver installation after installing the PMP Manager software.

Operate the software

3 Installing the device driver manually (Windows98 SE only)

- 1** If the player is not recognized by the PC, an "Add new hardware wizard" window is opened. Click the "Next" button.



- 2** Click the "Search for the best device driver (recommended)" and click the "Next" button.



- 3** Click 'the specify a location' option and click the "Browse" button.



- 4** Select the installation folder that includes the iRiverH.inf file (C:\Program Files\iRiver\PMP100\drivers) and click the "OK" button.





Operate the software

5 When the folder is located, click the "Next" button.



6 Click the "Next" button.



 
7 Click the "Finish" button to finish the installation.




Operate the software

4 To copy/delete files/folders


1 The player will show up as a new drive in Windows Explorer.

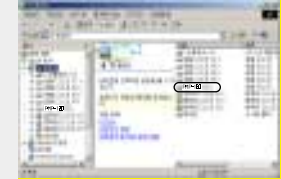

 2 To copy files/folders
Click and Drag files from the PC to the player.

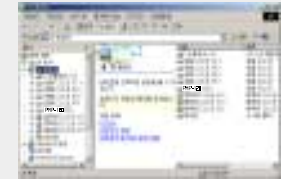

 3 To delete files/folders
To delete files or folders from the player, select the files (folders) to be deleted and press "Delete" on the keyboard. Click "Yes" when asked to confirm the delete.

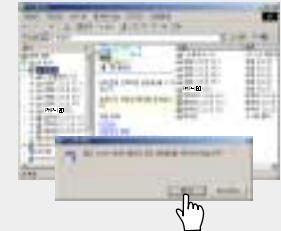

NOTE • When the player is attached to a computer for an extended period of time, be sure to plug in the AC adapter. Low batteries can prevent the proper functioning of the player.





Operate the software

5 Safely Removing the player from the PC

 
1 Click the “Safely removing device” icon in the PC tray.



2 Click “Stop iRiver PMP-100-Driver(X)” or “Safely Remove TOSHIBA MK1—3GAL USB Disk - Drive(X):”. (Where X is the drive letter assigned to the PMP)



3 Click the Confirm button in the hardware safe removal window



4 Disconnect the USB cable between the player and host PC. The following message is displayed in the LCD screen.



- Note**
- The tray icon may be hidden in some Windows XP operating system settings. Click the “Display hidden icon” to view the hidden icon.
 - Hardware safe removal may not be available while using some applications such as Windows Explorer or Windows Media Player. Please close all applications using the player before the hardware safe removal process.
 - In some Windows XP operation system settings, hardware safe removal is temporarily unavailable due to some internal system communication. Please wait and try again.

 


Turning on/off the player

1 Turning on the player



1 Connect the remote control or earphones.



2 Put the HOLD switch to “LCD”



3 Press the POWER button to turn on the player.



- Note**
- The following icons are displayed to indicate HOLD status.
 - M : The HOLD function is set in both the player and the remote controller.
 - R : The HOLD function is set in the player.
 - B : The HOLD function is set in the remote controller.
 - When stopped or in recording standby mode, the player automatically turns off according to the setting of “STOP POWER OFF” on the Setup.