

3. Press **▲ (VOL)▼** key to enter your area code.
The cursor appears on the display as you press the keys.
If you make a mistake, press **"DELETE"**, and reenter the area code.
4. Press **"PGM"** to finish or press **(review) ►#** key the next programming sequence.

STEP 9. SET DIALLING MODE

The MRS1100 phone can dial in either tone or pulse/rotary mode.

1. Press **(review) ►#** key.
2. Press **▲ (VOL) ▼** key to set **TONE** or **PULSE**.
3. Press **"PGM"** to finish or press **(review) ►#** key to finish.

DIAL METHOD

_T P

STEP 10. SELECTING YOUR LANGUAGE

You can choose between two different languages, English or Spanish.

The screen **SELECT LANGUAGE** appears

1. Press **(review) ►#** key.
2. Press **▲ (VOL) ▼** key to set **SELECT LANGUAGE** to **ENG** or **ESP**.
3. Press **"PGM"** to finish or press **(review) ►#** key the next programming sequence.

SELECT LANG

_ENG ESP

STEP 11. Turning on Call waiting ID

If you subscribe to **CALL WAITING ID**, turn this position ON

1. Press **(review) ►#** key.
2. Press **▲ (VOL) ▼** key to set **CALL WAITING ID ON** or **OFF**.

CALL WAITING

_ON OFF

Setting this feature does not subscribe or cancel **CALL WAITING ID** service. You must contact your local-telephone company to request a change in services.

3. Press **"PGM"** to finish or press **(review) ►#** key the next programming sequence.

STEP 12. ANSWER PHONE WHEN PICKED UP

There are two ways that the MRS1100 can answer a call. The MRS1100 can instantly answer incoming calls when you remove it from the cradle, or the phone can be set to answer after pressing the **TALK** key.

1. Press **(review) ►#** key.
2. Press **▲ (VOL) ▼** key to set **AUOT ANSWER** to **ON** or **OFF**.
3. Press **"PGM"** to finish.
or press **(review) ►#** key the next programming sequence.

AUTO ANSWER

ISV CO., LTD.
FCC ID: PE3ISD-210
JOB #: 594U0
EXHIBIT #: *BK*

If you set **AUTO ANSWER** to **ON**, MRS1100 automatically answer incoming calls when removed from the cradle and also you could press any key to connect after incoming calls.

If you set **AUTO ANSWER** to **OFF**, press only **TALK** key before answering incoming calls.

STEP 13. SET RING ON or OFF

If you don't need to hear the ring sound and select **RING OFF**

1. Press (review) ►# key.
2. Press ▲ (VOL) ▼ key to set **RING** to **ON** or **OFF**.
3. Press "PGM" to finish
or press (review) ►# key the next programming sequence.

RING
_ON OFF

If you select Ring to off position,
you will see a display at st-by mode like following this.

RINGER OFF

STEP 14. COMPLETED SETUP

Once you have finished installing your PHONE,
you will hear a confirmation tone and see a "COMPLETED" on the display.

COMPLETED

USING YOUR PHONE

You can make calls many different ways with the MRS1100.

DIALING

1. Press **TALK** key on the handset.
2. Use the number pad to dial the phone number.

The phone number appears on the display as you enter the number.

You also hear beeps for each digit as you dial.

3. Listen for a connection.
4. Press **TALK** to end your call.

REDIALING

Redial is a really fast method of calling your last number. Redial dials the last number you called whether you dialed it manually, or it was from a Call Record or the directory list.

For more information on dialing from call records, See *Dialing From Call Records* on page 17.

Redial is two-ways with the MRS1100

☛ **1ST method:** Press **TALK** and press **R/P**

☛ **2nd method:** Press **R/P** key, your phone is automatically connected and redialed

USING SPEED DIALING

Another short cut for dialing is using speed dialing. First, create a speed dial list, as described in *Creating Speed Dialing List* on page 13. Then:

1. Press **PGM** key,
 “ **PGM, DIR** ” appears on the screen.
 When you make a selection, the check mark, “_” moves to the selection you have made to use **▲ (VOL) ▼** key.
2. Press **▲ (VOL) ▼** key to select **DIR** mode.
3. After making a selection a **DIR** mode, press (review) **▶#** key and it displays “NAME” and “NUMBER” in DIRECTORY
4. Press **TALK** key to dial which you want to call.

The phone automatically dials out whatever is shown on the display.

PGM _DIR

03
SMITH JOHN
5557778888

USING FLASH

To access your custom calling services, like Call Waiting, while you are on the telephone, press **FLASH** key.

USING PAUSE

ISV CO., LTD.
FCC ID: PE3ISD-210
JOB #: 594U0
EXHIBIT #: 8m.

If you want to add a two-second pause to number in your speed dialing list, press **R/P** key while creating the speed dial entry. For example, if you had a memory location dedicated to your voice mailbox, you might want add a pause in a dialing string for your PIN number. For more information about programming speed dialing numbers, see *Creating a speed Dialing List* on page 13.

FINDING CLEAR RECEPTION

Your MRS1100 automatically selects 1 of 20 channels at the beginning of the call for the best reception.

REACHING MAXIMUM RANGE


The MRS1100 handset and base communicate up to a certain maximum range.
Weather, power lines, or other cordless telephones can affect this distance.
The MRS1100 beeps whenever you are on the phone and the handset moves out of range from the base.
If you do not move back within range in 30 seconds, you lose your connection.

CREATING A SPEED DIALING LIST

In addition to your Call Records, you can store up to 20 speed dial names and numbers in directory.
You can either enter name and number, or you can transfer a Call Record into your speed-dialing list.


MANUAL METHOD

- 1. Press **PGM** key,
“ **PGM, DIR** ” appears on the screen.
When you make a selection, the check mark, “ **_** ” moves
to the selection you have made to use **▲ (VOL) ▼** key.

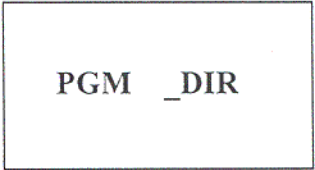

- 2. Press **▲ (VOL) ▼** key to select **DIR** mode.



- 3. Press **PGM** key to edit a character and number
It displays like this.
The cursor is blinking on the number field.

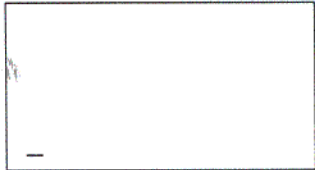

- 4. Enter the telephone number, area code first, using the dialing keypad. (The 3'rd Line number field)
You can have up to 32 digits in the number field,
If you make a mistake entering the telephone number, you must press “ **DELETE** ” key.
and re-enter the telephone number.

- 5. Enter the name, character by character. You can have up to 21 characters in the name field,(The 2'nd Line)

DIRECTORY ADDRESS
NAME FIELD
NUMBER FIELD

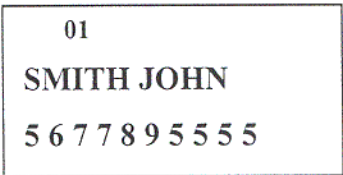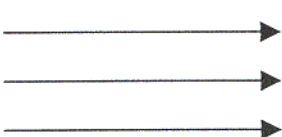

- a. Use the **▲ (VOL) ▼** keys to move up (the 2'nd line) and down (the 3'rd line).
- b. Locate the character on the dialing keys 2 through 9.
- c. Press once to enter the first character, twice for the second character

- press PQRS7 once, but to select an S, press PQRS7 four times.
- d. Use the *◀ (review) ▶# key to move back and forth through the name.
Use the ▲ (VOL) ▼ keys to move up and down.
 - e. Create a space between names or words, by pressing the (review) ▶# key twice after the last character.
 - f. Special Symbols
You can also use the 1 key to get the following symbols in the name field:

* ⇒ # ⇒ ' ⇒ (⇒) ⇒ . ⇒ 1

6. Press **PGM** key to store the complete record. The phone gives you a confirmation tone to let you know that the record is stored.

STORED

CALLER ID METHOD

A quick way to add to your speed dial list is to copy a *Caller ID* Call Record.

At the st-by mode.

1. Locate the Call Record that you want to copy
using *◀ (review) ▶# key

CALL 25 10 / 25 10 : 35 PM

SMITH JOHN

5 5 5 5 5 5

2. Press **PGM** key. You now see some of the information from the Call Record and displays "STORED" and displays call record again.

STORED

3. The number of the memory location automatically is entered.

DELETING SPEED DIALING NUMBERS

You can erase unwanted speed dial number at-a-one-time.

1. Press **PGM** key,
"PGM, DIR" appears on the screen.
When you make a selection, the check mark, "✓" moves to the selection you have made to use ▲ (VOL) ▼ key.

PGM _DIR

2. Press ▲ (VOL) ▼ key to select **DIR** mode.

3. After making a selection a **DIR** mode, press (review) ▶# key and it displays "NAME" and "NUMBER" in DIRECTORY

03

SMITH JOHN

5557778888

4. Use *◀ (review) ▶# key to find the memory location you want.

5. Press **DELETE** key once, and the MRS1100 asks if you want to delete this entry.

6. Press **DELETE** key again to delete the speed dial number.

The MRS1100 clears the number, gives you a confirmation beep.

If you do not wish to delete the number, press **PGM** key to cancel.

03**DELETE ?****5557778888**

ADJUSTING THE HANDSET VOLUME

1. Press **TALK** key

2. Press the **▲ (VOL) ▼** key to increase or decrease the **VOLUME**.

The handset sounds a double beep tone when it reaches the upper or lower limits.

ADJUSTING HANDSET RINGER VOLUME

Press the **▲ (VOL) ▼** key on the handset while the phone is not in-use.

You hear the sound of the ringer as you adjust the volume between the two levels.

USER SLECTABLE RINGER TONES

There are four user-selectable ringer tones available for this phone.

1. While in the Stand-by mode, press the **FLASH** button

2. Press a key (1 to 4) to select a ringer tone mode.

FLASH KEY + 1 key Ring tone 1

FLASH KEY + 2 key Ring tone 2

FLASH KEY + 3 key Ring tone 3

FLASH KEY + 4 key Ring tone 4