

 
TREK™ Flex

A28

English

Refer to the included Important Safety Instructions. Please read and save this Quick Start Guide, Important Safety Instructions and Warranty. For additional information, please go to TDKperformance.com.

LOCATION OF CONTROLS

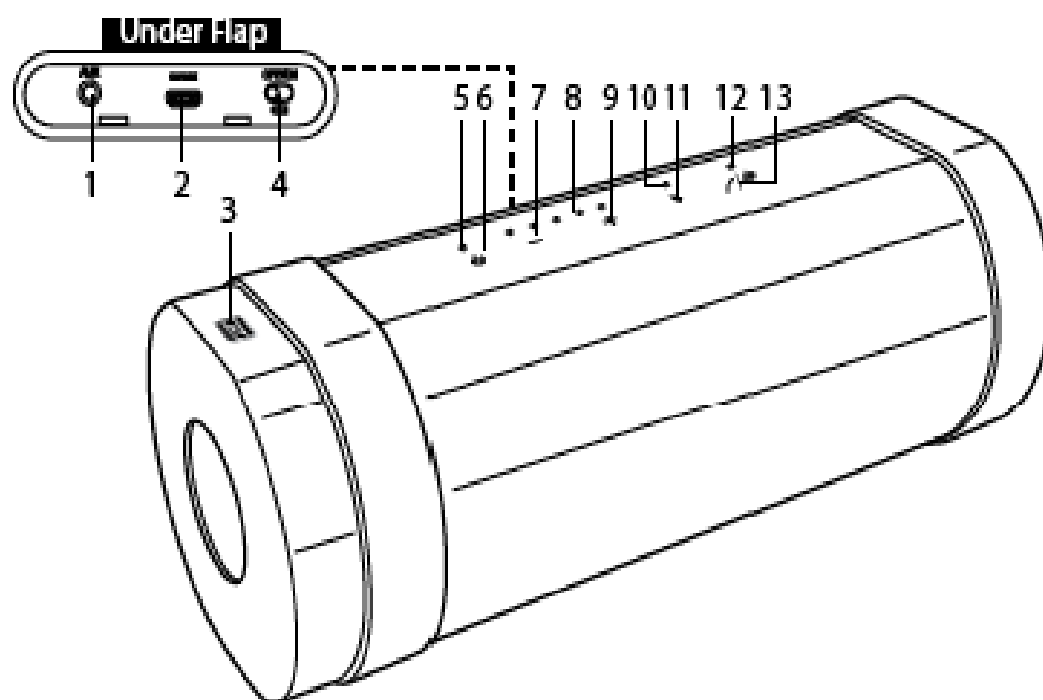


- | | |
|-----------------------------------|-------------------------------------|
| 1. Aux Jack | 8. Volume Indicators |
| 2. Charge Micro USB Jack | 9. Volume + Button |
| 3. NFC (Near Field Communication) | 10. <i>Bluetooth</i> Indicator |
| 4. Battery OFF/ON Switch | 11. <i>Bluetooth</i> Button |
| 5. Power Indicator | 12. Phone/Play/Pause/Skip Indicator |
| 6. Power Button | 13. Phone/Play/Pause/Skip Button |
| 7. Volume - Button | |

RECHARGING THE BATTERY

Connect the smaller end of the supplied USB cable to the Charge Micro USB Jack ② (under flap) and the other end to a powered USB jack on your computer or an AC power supply (not included).

 When the speaker's power is on and charging, the Power/Battery Indicator will light red, and light amber when fully charged. When the unit is off and charging, the Power/Battery Indicator will light red and turn off when fully charged. The Power/Battery Indicator will blink red when it is in need of charging.

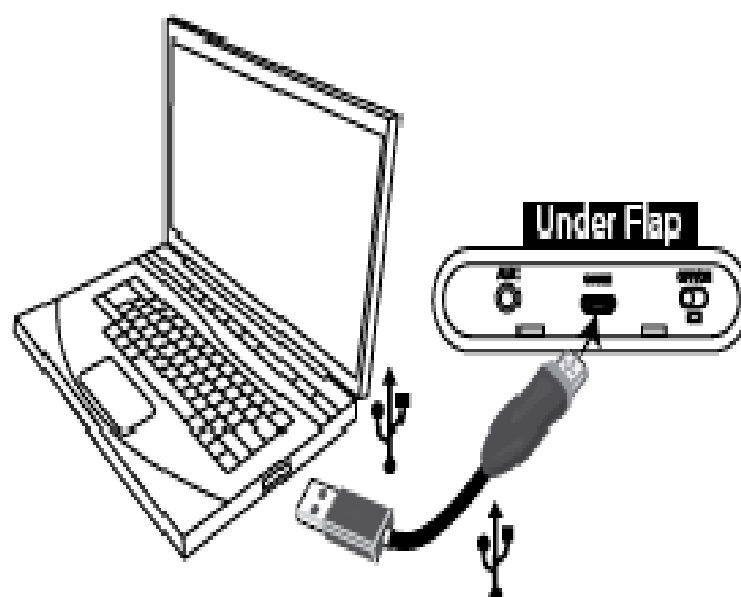

To check battery status (when the unit is on), press and hold the Power button for three seconds; the Volume Indicators will blink to indicate the battery charge as follows:

One LED = 0-20%, Two LEDs = 21-40%, Three LEDs = 41-60%, Four LEDs = 61-80%, Five LEDs = 81-100%.

 
Note: The battery will provide approximately eight hours of operation at normal listening level.

Rechargeable Battery Notes:

- Each time you charge and discharge the battery (charge cycles), battery capacity slightly diminishes. Rechargeable batteries have a limited number of charge cycles and need to be replaced eventually.
- You may wish to replace your battery when, or before, the battery does not supply enough power to function your device. Also, proper disposal is essential from environmental and safety point of view. Putting any battery directly in the trash will harm the environment.
- Do not incinerate.
- If you do not plan on using the battery for a month or more, turn off the main power (OFF/ON) switch and store it in a clean, dry, cool place away from heat and metal objects. Rechargeable batteries will self-discharge during storage; remember to recharge the batteries every three months and before use.
- If battery has not been charged for more than 4-6 months, perform a couple of full charge/discharge cycles to improve battery capacity.
- It is recommended to charge the batteries for more than eight hours before first use.

Replacing the Rechargeable Battery:

If the battery does not supply enough power, visit www.tdkperformance.com for instructions on battery replacement.

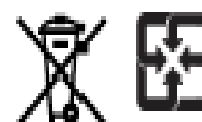


PAIRING A BLUETOOTH DEVICE

1. With the unit on, press the *Bluetooth* button **9** to select *Bluetooth* mode.
2. Press and hold the *Bluetooth* button **9** for approximately three seconds until the *Bluetooth* indicator blinks quickly to make the speaker "discoverable".
3. On the *Bluetooth* device, enable *Bluetooth* and select "TREK Flex" from the Device List. If the *Bluetooth* device asks for a passkey, use "0000". Some


Bluetooth devices will ask you to accept the connection. If the units are paired properly, the speaker will beep and the *Bluetooth* indicator will light solid blue. If it failed, the *Bluetooth* indicator will blink slowly. **Note:** After you pair a device, this TREK Flex will remember it for future use.

 When in *Bluetooth* mode, the *Bluetooth* indicator will light blue if connected to a *Bluetooth* device. If not connected to a *Bluetooth* device, the *Bluetooth* indicator will blink slowly, about once every 2-3 seconds.

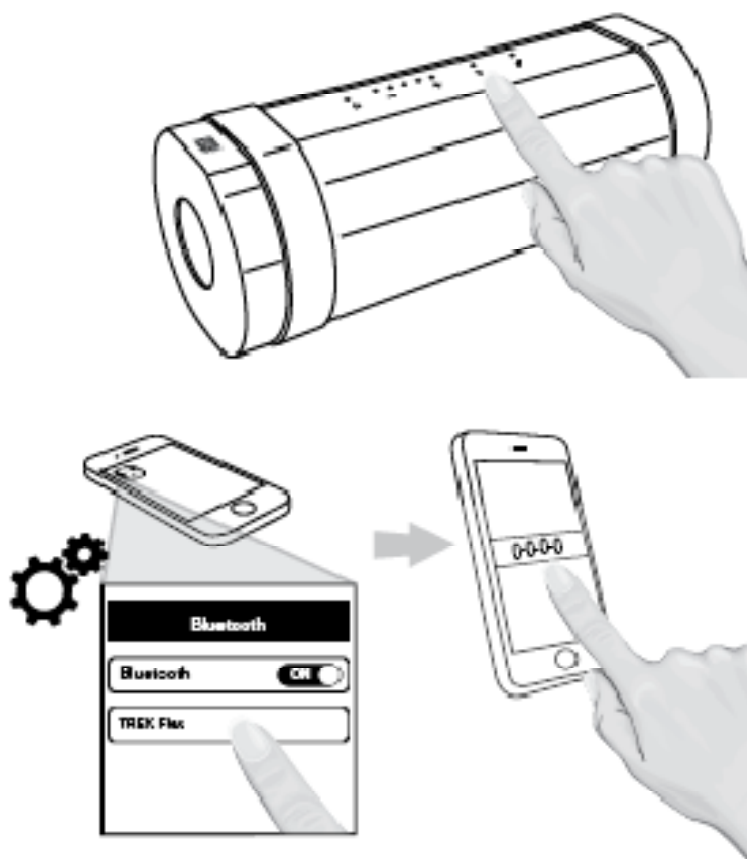

PAIRING WITH NFC (Requires NFC Enabled Phone)

 NFC offers a simple setup method for your TREK Flex speaker. Simply turn on the TREK Flex speaker and hold the NFC enabled device (NFC on the device must be "on") within a few centimeters of the NFC symbol **11** on top of the TREK Flex speaker to pair and establish a *Bluetooth* connection. It's just that simple.

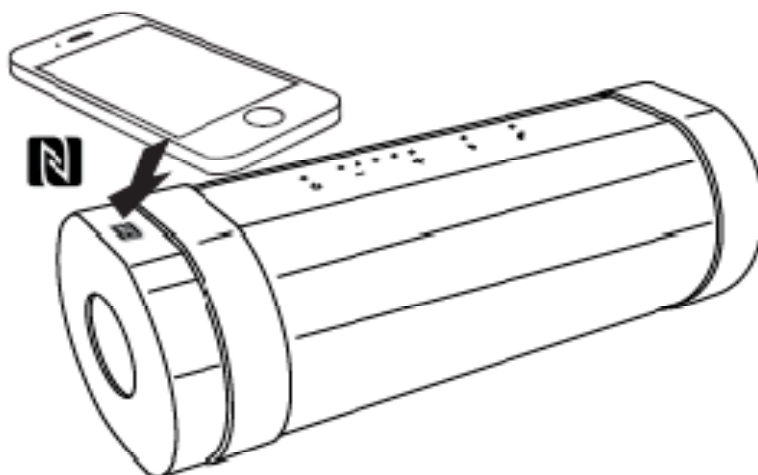

OPERATION

1. Slide the Battery OFF/ON switch **4** to the ON position; the unit will enter the Standby mode.
2. Press the Power button **5** to turn the unit on; the Power indicator will light amber (if battery charged).
3. Connect the unit via NFC (see above) or pair with a *Bluetooth* device (see previous column).
4. Press the Phone/Play/Pause/Skip button **10** to start playback. Press the Phone/Play/Pause/Skip button **10** again to pause or resume playback.
5. Press the Volume + **6** / - **7** buttons to adjust the volume.
6. Press the Phone/Play/Pause/Skip button **10** TWICE to advance to the next track.
7. Press the Phone/Play/Pause/Skip button **10** THREE TIMES to go back to the previous track.
8. To turn the unit off, press the Power button **5** again. To save the rechargeable battery, slide the Battery OFF/ON switch **4** to the OFF position.

USING THE AUX IN JACK

 
Insert one end of an audio cable (not included) into the LINE OUT jack on your external audio unit and the other end into the AUX IN jack under the flap. The Aux device will automatically be selected when the audio cable is connected. Start playback of the external unit and the external audio unit's output sound will be heard through the TREK Flex's speakers.

The Phone/Play/Pause/Skip button will not function when using the Aux In Jack.




ANSWERING A PHONE CALL

When receiving a phone call on your paired Bluetooth device, press the Phone/Play/Pause/Skip button **⏮** to answer (the indicator will light amber), and use the built-in microphone on this TREK Flex to take the call. Press twice to disconnect/end the call.

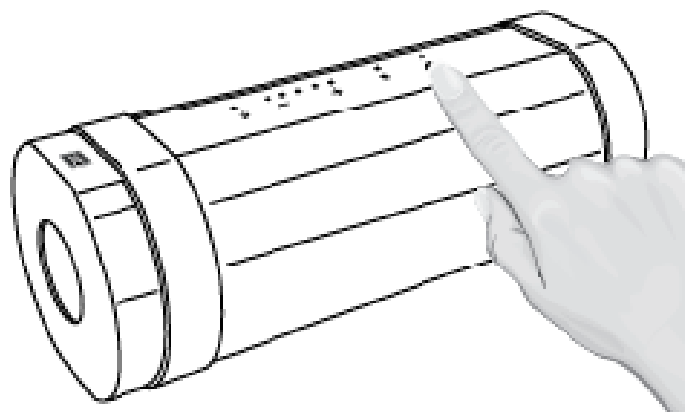

SPLASH RESISTANT

 The TREK Flex is splash resistant, but cannot be submerged in water or be subjected to a constant flow of water. In order to ensure the product is splash resistant, close the rubber flap on the TREK Flex, then smooth out entire flap until flap is flush with the sides of the unit.

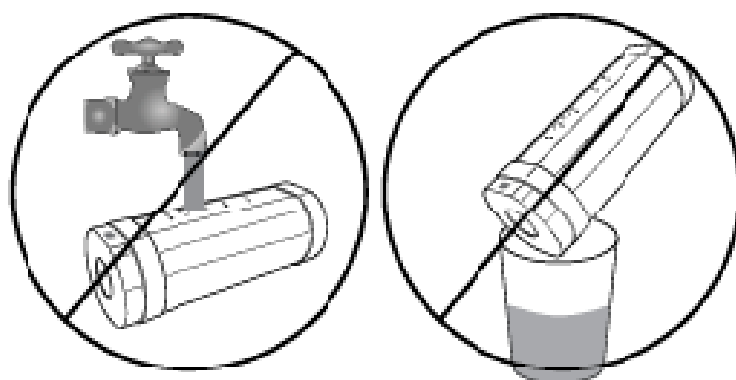

SHOCK RESISTANT

Certified to an IK07 under international standard IEC62262 for protection against external mechanical impacts. However, it is still advised to protect the TREK Flex when using to avoid possible damage.

AUTO POWER OFF

If the TREK Flex has no audio signal for twenty minutes, the TREK Flex will turn itself off. To "wake" the TREK Flex, simply press the Power button **⏻**.

SPECIFICATIONS

Power Source (DC)..... Internal NiMH
.....rechargeable battery
Dimensions7.8 (W) x 2.7 (H) x 2.9 (D) inches
.....197 (W) x 69 (H) x 75 (D) mm
Weight.....1.25 lb
Speaker Size 2 x 40 mm full-range drivers,
..... 1 x 90 x 42 mm oval shape passive radiator

Speaker Power Output.....3 W x 2
Wireless Audio.....Bluetooth, A2DP, AVRCP, HFP, HSP
Line-Input Audio..... 3.5 mm stereo jack,
.....up to 1 Vrms input signal
USB Port.....5V @ 1A charge only
IP Grade IP65

Specifications are subject to change without notice.

TREK is a trademark of Imation Corp. The TDK Life on Record Logo is a trademark of TDK Corporation and is used under license. The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Imation Corp. is under license. The N Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and other countries. All other trademarks and logos are property of their respective owners.



CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



ATTENTION: Users of this product are cautioned not to make modifications or changes that are not approved by Imation Corp. Doing so may void the compliance of this product and may result in the loss of the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The rating information is located at the bottom of the apparatus.

SURGE PROTECTORS: It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.

This Class B digital apparatus complies with Canadian ICES-003.

This Class B digital apparatus complies with European Union CE – EMC Directive (2004/108/EC) and European Union CE – Low Voltage Directive (2006/95/EC). This Bluetooth module is in compliance with the essential requirements and other relevant provisions of R&TTE Directive (1999/5/EC). This product is marked with the CE logo and uses radio frequency bands that are harmonized throughout the European Community.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT AND FULLY INSERT.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all Instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. The AC mains plug is used as the power disconnect device and it should remain readily accessible and operable during intended use. In order to completely disconnect the apparatus from power, the mains plug should be completely removed from the AC outlet socket.
16. **CAUTION:** To reduce the risk of fire or explosion, do not expose batteries to excessive heat such as sunshine, fire or other heat sources.

PORTABLE CART WARNING
(symbol provided by RETAC)



BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

1. Warning – Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
2. Use only the size and type of batteries specified.
3. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. A reversed battery may cause damage to the device.
4. Do not mix different types of batteries together (e.g. Alkaline, Rechargeable and Carbon-zinc) or old batteries with fresh ones.
5. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
6. Do not try to recharge a battery not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's directions.)
7. Remove batteries promptly if consumed.
8. Clean the battery contacts and also those of the device prior to battery installation.



1. Discard button batteries carefully.
2. Do not allow children to play with button batteries, and keep button batteries out of your child's reach.
3. Never put button batteries in your mouth for any reason as they are easily swallowed accidentally.
4. Always check medications before ingesting them. Adults have swallowed button batteries mistaken for pills or tablets.
5. Keep electronics out of your child's reach if the battery compartments do not have a screw to secure them. Use tape to help secure the battery compartment.
6. If a button battery is ingested, immediately seek medical attention.