 


AC CONNECTION / RECHARGING THE BATTERY

1. Select the appropriate plug for your country and connect it to the AC power adapter.
2. Connect the AC power adapter plug to the DC IN Jack **9** on the rear of the unit and then connect the plug to a 100V~240V wall outlet.

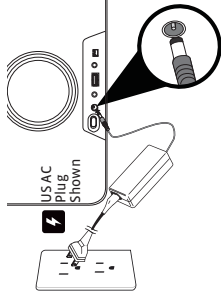

This unit has a built-in rechargeable battery that will automatically be charged as long as the indicator will turn off.

If the battery is low, the Battery indicator will light red. When fully charged,

Note: The battery will provide approximately 6 hours of operation at 50% volume or 2 hours at 100% volume.

Notes:

- Only use the supplied AC adapter.
- Remove both the DC plug and AC-IN plug to disconnect AC adapter when not in use.
- Disconnect the AC cord to use with DC power (rechargeable battery).

Replacing the Rechargeable Battery:

If the battery does not supply enough power (see note in Rechargeable Battery Notes box below), replace the rechargeable battery as follows:

1. Remove the screws on the bottom of the unit and remove the bottom plate.
2. Unplug the rechargeable battery and replace with battery pack with the following specs. (xxxx-xxxx-xxxx ADVISE SPECS)
3. Replace the bottom plate and tighten the screws.


Rechargeable Battery Notes:

- Each time you charge and discharge the battery (charge cycles), battery capacity slightly diminishes. Rechargeable batteries have a limited number of charge cycles and need to be replaced eventually.
- You may wish to replace your device. Also, proper disposal is essential from environmental and safety point of view. Putting any battery directly in the trash will harm the environment.
- Do not incinerate.


Replacing the Remote Control Battery:

1. Remove the Battery Compartment by pressing in on the tab and then sliding the compartment out.

2. Install a CR2025 battery, paying attention to the polarity diagram in the compartment (positive side up).
3. Replace the Battery Compartment.

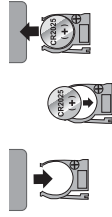


LOCATION OF CONTROLS

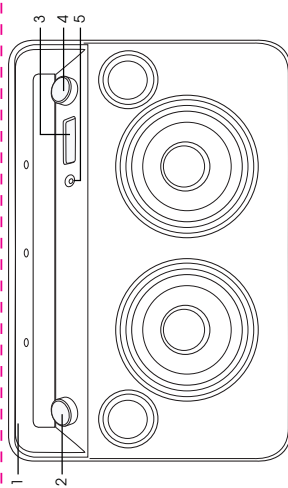

1. Carrying Handle
2. Power/Volume Control
3. Display
4. Source/Select Control
5. Remote Sensor

LOCATION OF CONTROLS (CONTINUED)

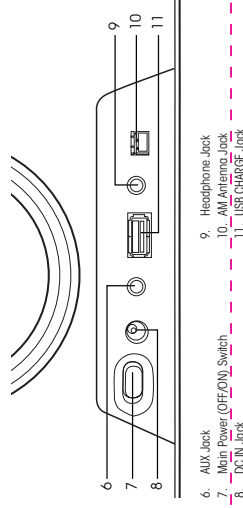

Press one of the Mode buttons (Bluetooth, AUX, FM or AM) to access the respective mode.


OPERATION

Headphone Jack (Rear of Unit)

For private listening, simply plug headphones into the Headphone Jack **9** on the rear of this unit. The speaker's sound will be muted when headphones are inserted.

AUX Jack (Rear of Unit)

Insert one end of an audio cable (not included) into the LINE OUT jack on your external audio unit and the other end into the AUX Jack **6** on the rear of this unit. To listen to the external audio unit, turn this unit on and turn on the external unit as well. Press the Source/Select control **4** once so all the modes light. Rotate the Source/Select control **4** to the AUX position to select the Line In mode. Start playback of the external unit and the external audio unit's output sound will be heard through this unit's speakers.

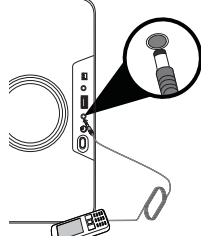

Turning the Unit On and Off:

1. The main power switch is on the rear of the unit. Slide to the ON position to turn the unit on and activate the Power/Volume control on the main unit and the Power button on the remote.
2. Once the main power switch is turned on, you can turn the unit on or off by pressing the Power/Volume control **2** on the main unit. **4** Using the remote, press the Power button **5** to turn the unit on. Press the OFF button **2** to turn the unit off.

Putting a Bluetooth Device

1. Turn the unit on; the previously listened to source and volume will be selected.
2. Press the Source/Select control **4** once so all the modes light. Rotate the Source/Select control **4** to the Bluetooth (B) position to select the Bluetooth mode.
3. Press and hold the Source/Select control **4** for approximately 3 seconds until the Bluetooth indicator blinks quickly to make the speaker "discoverable".
4. On the Bluetooth device, enable Bluetooth and select "A2DP" from the Device List. If the Bluetooth device asks for a PIN number, use "0000". Some Bluetooth devices will ask you to accept the connection. If the unit is paired properly, the speaker will beep and the Bluetooth indicator will light solid. If it failed, the Bluetooth indicator will blink slowly.

Note: After you pair a device, this unit will remember it for future use.

Using a Bluetooth Device

1. Turn the unit on; the previously listened to source and volume will be selected.
2. With a unit paired (see previous section), press the Source/Select control **4** once so all the modes light. Rotate the Source/Select control **4** to the Bluetooth (B) position to select the Bluetooth mode.
3. Operate your Bluetooth device and its sound will be heard through this unit's speakers.
4. Adjust the volume using the Power/Volume control **2** on this unit, or the Volume

OPERATION (CONTINUED)

control on the Bluetooth device, and adjust the Bass and Treble as described later in this guide.

5. To mute the sound, press the Mute button **19** on the remote control.

IMPORTANT: After step 2, you have two minutes to pair the units.

Charging a Bluetooth Device with this Unit

On the rear of the unit is a USB jack that can be connected to a USB device, which will charge if the unit is connected to AC power.

Using the AM or FM Radio

1. Rotate the Volume/Power control **2** to turn the unit on; the previously listened to source and volume will be selected.
2. Press the Source/Select control **4** once so all the modes light. Rotate the Source/Select control **4** to the AM or FM position to select the radio mode.
3. When AM or FM appears in the display, the unit is in tuner mode, so use the Source/Select control **4** to select a station. If all the indicators appear around the Source/Select control, the unit is in Select mode; in this case press the Source/Select control **4** to make it operate as a tuning control.
4. To have the unit automatically scan for the next strong station, press the SEEK Up or Down button **15** on the remote control.
5. Adjust the volume using the Volume/Power control **2** and adjust the Bass and Treble as described later in this guide.
6. To select another source, press the Source/Select control **4** to enter the Select mode and make it operate as a mode selector.
7. To mute the sound, press the Mute button **19** on the remote control.

AM Antenna: Insert the AM Antenna plug into the AM Antenna jack on the rear of the unit for best AM reception. Assemble the stand by rotating and inserting the tabs until they click.



Setting the FM Presets

1. Turn the unit on and select a station as described in steps 1 through 3 above.
2. Press and hold the desired Preset button **20** on the remote control for three seconds. The Preset number will blink three times in the display to confirm setting.
3. To call up a preset, simply press and release the Preset number **20** on the remote control.

Changing the FM region

This unit allows you to set the desired radio region as follows:

With the power on, press and hold the Volume/Power **2** and Source/Select **4** controls simultaneously for at least four seconds to enter the radio region setting mode.


Scroll through the menu using the Source/Select control **4** to select the desired region, then press the Source/Select **4** control to confirm.

When finished, scroll using the Source/Select control **4** to select "EXIT", then press the Source/Select control **4**.

Region 1 – United States (87.5MHz to 108MHz)

Region 2 – Europe (87.5MHz to 108MHz)

Region 3 – Japan (76MHz to 108MHz)

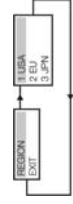

Setting the EQ and Bass

1. Press the Source/Select control **4** once so all the modes light. Rotate the Source/Select control **4** to the BAS (Bass) or TRE (Treble) position.
2. Adjust the setting using the Volume/Power control **2**.

Note: If no setting has been taken place for five seconds, the unit will exit the Bass/Treble setting mode and will revert to the previous mode.

Auto Power Off

If the unit has no audio signal, and/or a USB device is not charging, for 20 minutes, the unit will turn itself off.

SPECIFICATIONS AND COMPATIBILITY

GENERAL:

Power Source	DC 18V/2A Adapter (Center Pos.)
Power (DC)	Internal NiMH rechargeable battery
Dimensions	17 (W) x 11.5 (H) x 4 (D) inches
Weight	2.2 (W) x 1.5 (H) x 1.5 (D) inches
Input	2 x 2 inch full-range drivers: 1 x 5.25 inch subwoofer, 2 x 5.25 inch passive radiators
Frequency (range)	87.5-108MHz (FM)
Frequency (range)	530-1710KHz (AM)

Specifications are subject to change without notice.

The TDK Life on Record Logo is a trademark of TDK Corporation and is used under license. All other trademarks and logos are property of their respective owners.

63952712-A

FCC NOTE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

The antenna used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operated in conjunction with any other antenna or transmitter.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.*

Greg,
The contact info is on the second page.

THIS WILL GO AT THE END OF THE MANUAL

Imation Enterprises Corp.
1 Imation Way, Oakdale, MN 55128-3414 USA
www.tdkperformance.com

Imation Europe B.V.
Silviusdreef 46-52
2132 WT, Hoofddorp
The Netherlands
www.tdkperformance.eu

Imation Singapore Pte. Ltd.
Unit 02-02 New Tech Park 151 Lorong Chuan
Singapore 556741
www.tdk-media.com.sg

Imation ANZ Pty Ltd
Unit 2, 1 Coronation Avenue Kings Park, NSW 2148
www.tdkperformance.com.au

イメーション株式会社
〒150-0001
東京都渋谷区神宮前5-52-2 青山オーパビル
www.tdk-media.jp/

怡敏信（上海）有限公司
中国 上海徐汇区淮海中路1325号美高大厦1202室
www.imation.com.cn/

怡敏信香港有限公司
香港北角英皇道338號華絲交易廣場11樓30字樓
www.imation.com.hk/

(주)메이선 코리아 TDK LoR 사업부
서울시 마포구 양진동 141-4 디지털빌딩 9층
고객상담실:
www.imation.co.kr

Technical Assistance
Assistance technique
Technische Hilfe
Technische assistentie
Assistenza tecnica
Asistencia técnica
Assistência técnica
Техническая помощь
Pomoc techniczna
Technická pomoc
技術支援

기술 지원/技術支援/技術协助:

US 800-285-2783
DE/AT/CH +49 2131 226 311
IT +39 022 1043 818
ESP +34 900 993 166
UK/IE +44 (0)1344 402201
NL/Other EU +31 (0)23 521 2605
SG +65 6499-7199
AU/NZ 800-225-013
JP 0120-81-0536
CN 8621-6121-2122
KR 02-2012-999
HK 852-2161-2888