



TANGO™ TRX

USER'S GUIDE



IPU-TRXD-11

Made for



iPod



iPhone



iPad



Congratulations on your purchase!

Thank you for purchasing Tango TRX with dock, the 2.1 wireless high fidelity audio system. The following pages explain the features and operation of the Tango TRX with dock. Please take a few moments to read through this manual.



For enhanced functionality and control, download the free XtremeMac Tango TRX app from the iTunes app store.

Note: app only works with iPhone and iPod touch models.

PACKAGE CONTENTS

- *Tango TRX*
- *Wireless remote*
- *AC power adapter*
- *iPod space adapter **
- *Powered charging dock*
- *Back support and screw*
- *AC power adapter*
- *User guide*
- *Warranty statement*

* INCLUDES ONE ADAPTER FOR IPOD CLASSIC, TOUCH AND NANO. ADAPTER NOT NEEDED FOR USE WITH IPHONE.

** WALL ADAPTERS INCLUDED IN THE INTERNATIONAL VERSION ONLY

IMPORTANT

Please read all safety instructions before proceeding. The answers to most set up and performance questions can be found in this manual or in the Troubleshooting Tips. If you have any further questions about the operation or use of this product please contact our consumer care team for assistance before returning it to the place of purchase.

CUSTOMER SERVICE



Email:

support@xtrememac.com

Telephone number:

1-866-392-9800 (Toll free within the United States)

Hours of operation:

Monday through Friday, 12pm – 9pm EST

PRODUCT SAFETY

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference.



The lightning flash with arrowhead, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



Caution: To prevent the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION: To prevent electric shock do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

WARNING: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.



XtremeMac™

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water - This apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. The apparatus should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. No naked flame sources, such as lighted candles, should be placed on the apparatus.
10. Protect the power cord from being walked on or pinched—particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Do not install in an area which impedes the access to the power plug. Disconnecting the power plug is the only way to completely remove power to the product and must be readily accessible at all times.
12. Power source—Use only the power supply that is included with this unit. Do not substitute with any other power supply.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. For service, refer to qualified service personnel, return to the dealer, or call the XtremeMac service line for assistance.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This class B digital apparatus complies with Canadian ICES-003.

Note: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

GETTING STARTED

1. Remove unit, AC adapter and remote from the box and properly dispose of any plastic or foam packaging material.
2. Place unit on a level surface close to a power outlet following the precautions listed in the safety warnings.
3. If located in the US, skip to step 6. If located outside the US, select the appropriate wall adapter. If already attached to the unit, skip to step 6.
4. Press the button labeled "open" under the wall adapter to release the adapter.
5. Gently slide in the appropriate wall adapter. You will hear a click when it is properly locked into place.
6. Connect the AC adapter jack to the back of the unit labeled "power" and then connect the other end of the adapter to a power outlet.

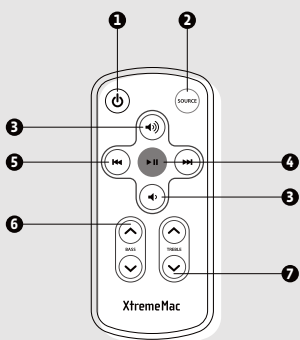

1. Power
2. Source
3. Volume controls
4. Play/pause
5. Next/previous track
6. Bass control
7. Treble control

System Specifications

 
- *Total Power:*
30W RMS
- *Line-in Sensitivity:*
500mV RMS
- *Bass Control@100Hz:*
+/- 8dB
- *Treble Control@10kHz:*
+/- 8 dB
- *SNR:*
>80dB

 
Speaker Specifications

- Dual 2.75" ported drivers
- Dual 1.4" dome tweeters
- Downward firing subwoofer 3.5"

Unit Dimensions

- 13.75" w x 4.25" d x 5.90" h

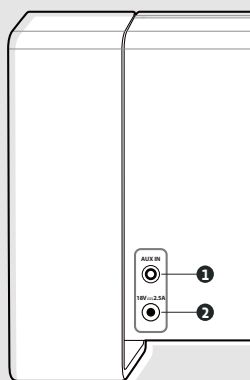

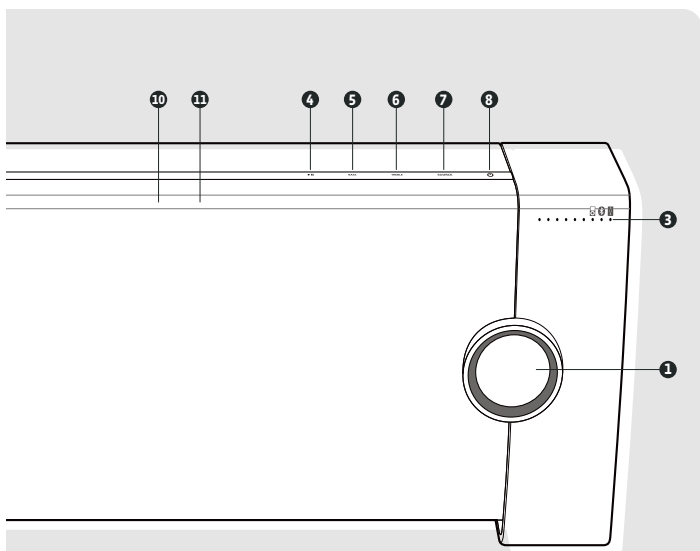

1. Volume control knob
2. Dock connector
3. LED status indicators - source, volume, bass/treble
4. Play/pause control
5. Bass control
6. Treble control
7. Source control - iPod / iPhone, Bluetooth, Aux
8. Power button
9. iPod adapter insert holes
10. IR remote sensor
11. Built-in microphone


1. Line in jack
2. AC power jack

 XtremeMac™ | TANGO™ TRX




THE DOCK WILL ALLOW YOU TO POWER AND CHARGE YOUR IPOD/IPHONE/IPAD WHILE TRANSMITTING OVER BLUETOOTH

 1. Remove the dock, back support, screw and AC adapter from the packaging and properly dispose of any packaging materials.
2. Place unit on a level surface close to a power outlet following the precautions listed in the safety warnings.
3. Place the back support with the tall edge facing outward on the top of the dock aligning the center slit over the screw hole.
4. Place the screw over the slit and align with the hole on the unit. Gently tighten about half way by turning the screw clockwise. The back support should be able to slide to the front and back loosely.
5. Carefully place your device into the dock connector and slide the back support to fit snugly against your device.
6. Gently tighten the screw all the way to secure the back support into place.
7. If located in the US, skip to step 10. If located outside the US, select the appropriate wall adapter. If already attached to the unit, skip to step 10.
8. Press the button under the wall adapter to release the adapter.
9. Gently slide in the appropriate wall adapter. You will hear a click when it is properly locked into place.
10. Connect the AC adapter jack to the back of the unit and then connect the other end of the adapter to a power outlet.

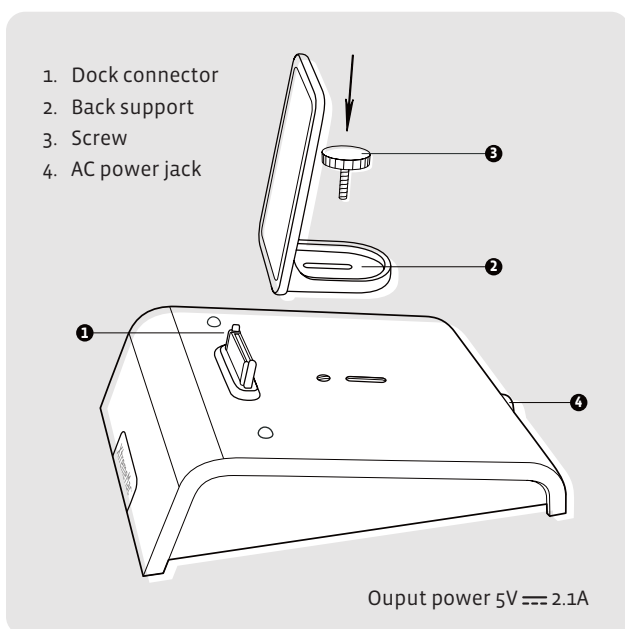




LISTENING TO YOUR IPOD/IPHONE THROUGH THE DOCK CONNECTOR

1. If playing an iPhone, skip to the next step 3.
2. If playing an iPod classic, touch or nano, insert the included adapter into the two holes behind the dock connector and press firmly to ensure a proper connection.
3. Carefully place your device into the dock connector.
4. Press the  on the top of the unit or the remote to power on Tango TRX.
5. Press the source button on the top of the unit or on the remote until the iPod logo is illuminated as the source.
6. Press play on the on the unit or on the remote. Use the controls on the unit or the included remote to adjust the volume and iPod functions.

Note: The unit will charge your device while docked.

LISTENING TO YOUR DEVICE WIRELESSLY OVER BLUETOOTH

To listen to your music over the Bluetooth wireless connection, you need to pair your device with Tango TRX.

1. Make sure your device has Bluetooth capability.
2. Press the  on the top of the unit or the remote to power on Tango TRX.
3. Follow the instructions listed in the manual of your device to turn on the Bluetooth functionality to pair your device with the unit.
4. Pair your device with the unit by selecting Tango TRX from your Bluetooth listings on your device or selecting yes. If prompted, enter 0000 as the passcode.
5. Press the source button on the top of the unit or the remote until the LED under the Bluetooth logo is illuminated as the source.
6. Press play on your device and use the control dial on the unit or the remote to adjust the volume.
7. Use your device or the remote (for iPod/iPhone only) to control music functions.

Note: Once you have successfully paired your device with Tango TRX, you will not need to repeat the above steps. For each use, ensure that the unit source is set to Bluetooth and that Bluetooth is enabled on your device.

RECEIVING A CALL WHILE TRANSMITTING MUSIC OVER BLUETOOTH

The music will automatically stop when the phone begins to ring and the ringer will sound over the speakers. If you would like to continue the call over Bluetooth using Tango TRX as a speakerphone, answer the phone and select Tango TRX as the phone source. Next, make sure you are close enough to the unit to speak into the microphone which is located behind the center of the speaker grill. Use the control dial on the unit or the remote to adjust the volume.




XtremeMac™

USING THE XTREMEMAC APP

For enhanced functionality and control, download the Tango TRX app. It will allow you to control volume, EQ settings, play/pause and other iPod functions directly from your iPhone or iPod touch.

LISTENING TO YOUR DEVICE THROUGH THE AUXILIARY LINE-IN JACK

1. Connect a 3.5mm audio cable (available at www.xtrememac.com) to the headphone or line out jack of an audio device and plug the other end of the cable into the Aux jack on the back of the unit.
2. Press the  on the top of the unit or the remote to power on Tango TRX.
3. Press the source button on the unit until the LED under the Aux icon is illuminated.
4. Press play on the device. Use the control knob on the unit to control the volume.

ADJUSTING BASS AND TREBLE

While playing audio, press the bass or treble control on the unit and use the control knob to adjust the setting. The LEDs on the unit will illuminate from the center to indicate the level of bass and treble at +/- 4 for each setting. You may also adjust the bass and treble with the remote.

LED INDICATORS

SOURCE

The LED under the source icon will illuminate when pressing the source control to indicate the source selected. Once selected the LED will remain illuminated.

VOLUME

The LEDs will illuminate in sequence when adjusting the volume to indicate volume level. The LEDs for volume will time out after 2 seconds and only the LED for the source will remain illuminated.

BASS/TREBLE

The LEDs on the unit will illuminate from the center to indicate the level of bass and treble at +/- 4 for each setting. The LEDs for volume will time out after 2 seconds and only the LED for the source will remain illuminated.

TROUBLESHOOTING TIPS

NO POWER

Check AC adapter connection on unit

Connect the AC adapter into the jack in the back of the unit labeled "18V === 2.5A" and then plug the AC adapter into the wall outlet.



XtremeMac™

Check AC adapter connection on powered dock

Connect the AC adapter into the jack in the back of the charging dock labeled "5V \equiv 2.1A" and then plug the AC adapter into the wall outlet.

Check wall outlet function

Plug another device into the same outlet to confirm the outlet is working.

NO SOUND FROM SPEAKERS

Check audio source

Push the source button on the top of the unit or on the remote to select the desired audio source.

Check volume level

Turn the control dial or use the remote to adjust the volume.

Check iPod/iPhone connection

Remove your iPod/iPhone from the dock connector and re-dock to ensure a proper connection.

Check the iPod/iPhone

Try restarting your device and then re-docking to ensure a proper connection.

BLUETOOTH CONNECTIVITY

Check Bluetooth connectivity

Make sure your device is correctly paired with "Tango TRX" as the device. You may need to consult the manual for your device for further instructions on correctly pairing the device to Tango TRX.

Check pairing of multiple devices

Tango TRX can recognize only one device at a time. Make sure that no other devices within range of the unit are currently paired with Tango TRX. If you want to use a different device, you must disable the Bluetooth on the device you do not wish to use.

Check Bluetooth range

Wall construction may interfere with the Bluetooth range. If you are getting poor Bluetooth connectivity, try moving the unit to different locations. For more information regarding Bluetooth technology, visit the official Bluetooth Technology site at www.bluetooth.com

Poor sound quality from playing via a computer

The Bluetooth from some computers is meant for use with headphones and may not have high enough quality for high-fidelity audio systems. For best results, plug your computer in through the auxiliary line-in jack on the back of the unit.



XtremeMac.com

Imation Europe BV, Siriusdreef 46-52, 2132 WT Hoofddorp, The Netherlands



Made in China | Fabriqué en Chine. Designed in the USA. © Imation Corp. XtremeMac, Tango and the “X” logo are trademarks of Imation Corp. “Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. iPhone, iPod, iPod classic, iPod nano and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. iPad is a trademark of Apple Inc. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by XtremeMac is under license.

Distributed by Imation Enterprises Corp., Oakdale, MN, USA. Imation shall not be liable for any lost data or incidental or consequential damages related to this product.

Printed in China

05262010