



SCR Assembly Instructions

This document contains the assembly instructions and outer dimensions of the Slim Card Reader (SCR).
The dimensions can be found on page 2.



1. Remove the protection from the foil.



2. Stick the bracket base to the MFP. Make sure to feed the cable through the hole in the bracket.



3. Apply the double-sided tape to the reader. Make sure to stay within the serial sticker area!



4. Put the reader to the bracket base. Align the cylinders with the holes.



5. Click the cover on the base.



1. Make sure the foam tape is applied to the bracket base. Stick and / or screw the bracket base to the MFP.
2. Apply the double-sided tape to the reader. The double-sided tape should be inside the sticker area.
3. Put the SCR on the base, align it with the cylinders of the base. Make sure the cable is pulled trough the bracket and connected to the SCR.
4. Click the cover over the reader and the base.

PRELO UMBREIFUNGSGEZEIGT DIMENSIONEN IN MILLIMETERN TOLERANZEN L: LINEAR ± 0,2 mm - 0,3 mm R: RADIAL ± 0,20 mm		ZEICHEN UND BEZUGSHILFEN BEZUGS INEPRO B.V.	DO NOT SCALE DRAWING REVISION: 1.2
NAME BESCHREIBUNG DATUM ZEICHNER C.A.P. 10/10/2014 DYP/ST 12/12/2014 01.1 01.1	NAME BESCHREIBUNG DATUM ZEICHNER C.A.P. 10/10/2014 DYP/ST 12/12/2014 01.1 01.1	SCR708 + Bracket ARTIKEL-NR. 400000 A3 SHEET 1 OF 2	

PRELO UMBREIFUNGSGEZEIGT DIMENSIONEN IN MILLIMETERN TOLERANZEN L: LINEAR ± 0,2 mm - 0,3 mm R: RADIAL ± 0,20 mm		ZEICHEN UND BEZUGSHILFEN BEZUGS INEPRO B.V.	DO NOT SCALE DRAWING REVISION: 1.2
NAME BESCHREIBUNG DATUM ZEICHNER C.A.P. 10/10/2014 DYP/ST 12/12/2014 01.1 01.1	NAME BESCHREIBUNG DATUM ZEICHNER C.A.P. 10/10/2014 DYP/ST 12/12/2014 01.1 01.1	SCR708 + Bracket ARTIKEL-NR. 400000 A3 SHEET 2 OF 2	